

MAX31825 Evaluation System

Evaluates: MAX31825

General Description


The MAX31825 evaluation system (EV system) demonstrates the MAX31825 1-Wire® temperature sensor with hardware-selectable address and alarm. The MAX31825 EV system includes the MAX31825 evaluation kit (EV kit) and the USB2PMB2 module. Windows® 7/8/8.1/10-compatible software provides a user-friendly interface that demonstrates the features of the MAX31825.

The MAX31825 EV kit contains an on-board DS2482 I²C to 1-Wire converter and comes with the 6-pin WLP MAX31825ANT+ installed.

Features

- On-Board I²C to 1-Wire Converter (DS2482)
- Proven PCB Layout
- Fully Assembled and Tested
- Windows XP, Windows 7/8/8.1/10-Compatible Software

MAX31825 EV System Photo

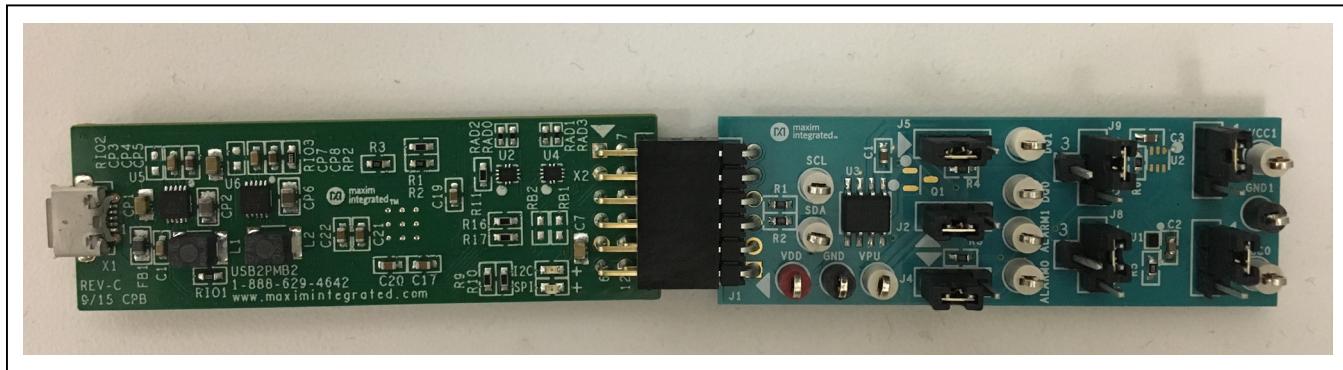

- 3) Verify that the shunts are in the default position as shown in [Table 1](#).
- 4) Connect the USB cable from the PC to the USB2PMB2 board.
- 5) Open the EV kit GUI, MAX31825EVKit.exe ([Figure 2](#)).
- 6) Click the **Scan Adapters** button. Then select the option **PMODxxxxxx** (where **xxxxxx** is numeric) and click the **Connect** button.
- 7) Click the **Detect Address** button, and the **0b111110** bits appear in the **A5-A0** edit box.
- 8) Adjust the **Conversion to 111-125ms** within the **Configuration Register** group box.
- 9) Click the **Write Scratchpad** button.
- 10) Verify the configuration register is set by clicking the **Read Scratchpad** button.
- 11) Start evaluating the MAX31825 by clicking the **Sample Continuously** button. [Figure 3](#) shows the MAX31825 measuring temperature.

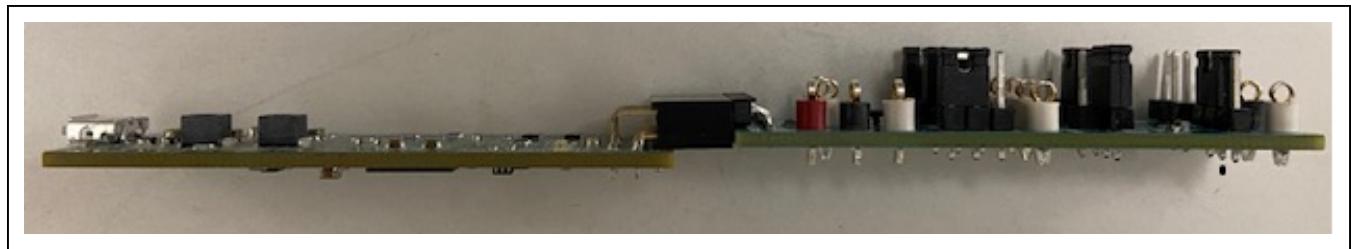


Figure 1. MAX31825 Side View

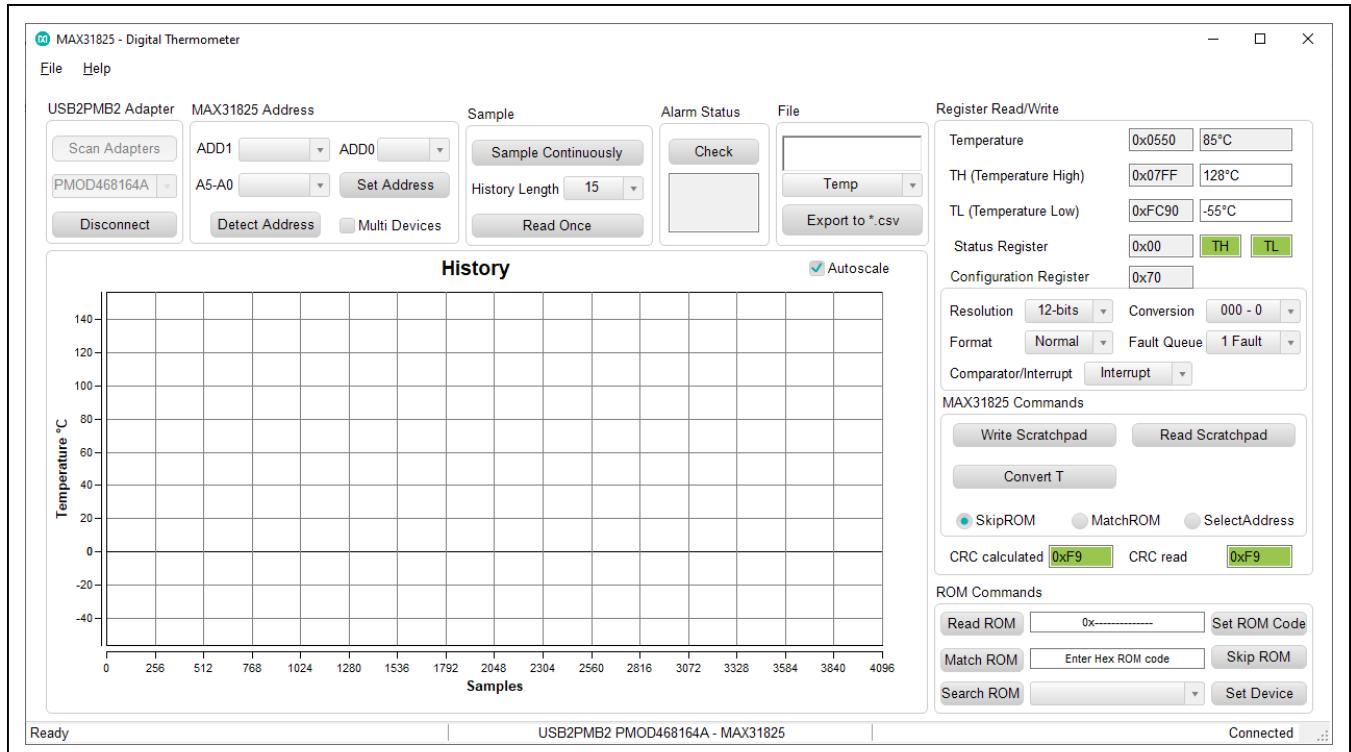


Figure 2. MAX31825 Main Window

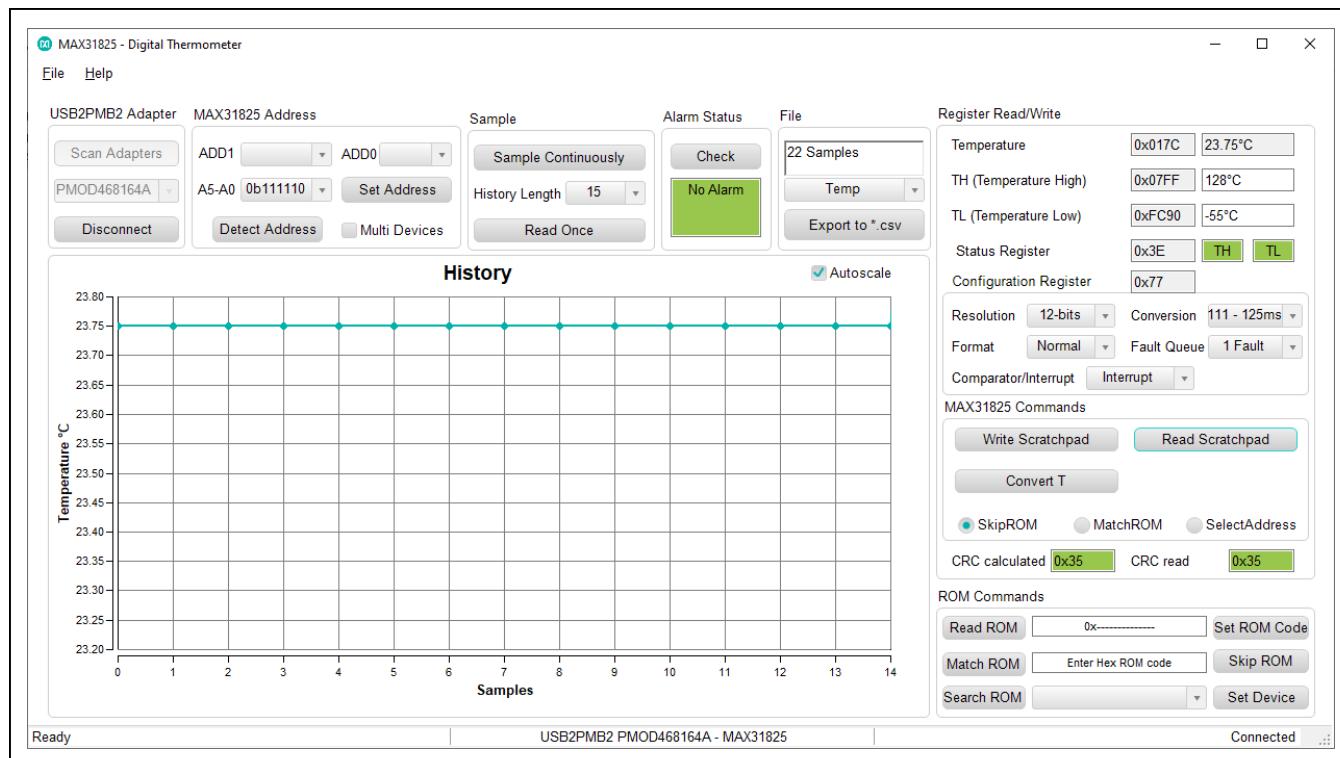


Figure 3. Measuring Temperature on the MAX31825

Table 1. Jumper Descriptions

| JUMPER | SHUNT POSITION | DESCRIPTION |
|--------|----------------|---|
| J2 | 1-2* | Connects VDD to the pullup resistors for DQ and ALARM. |
| | 2-3 | User-supplied VPU. Connects VPU to the pullup resistors for DQ and ALARM. |
| J4 | 1-2* | Connects ALARM signal from the USB2PMB2 to the MAX31825 (U1). |
| | 2-3 | Connects ALARM signal from the USB2PMB2 to the IC (U2). |
| J5 | 1-2* | Connects DQ signal from the DS2482 to the MAX31825 (U1). |
| | 2-3 | Connects DQ signal from the DS2482 to the IC (U2). |
| J6 | 1-2* | Connects VDD to power the MAX31825 (U1). |
| | 2-3 | Connects VPU to power the MAX31825 (U1). |
| | Not installed | User-supplied VDD. Connect power to VCC0 test point. |
| J7 | 1-2* | Not in Use |
| | 1-3 | Not in Use. |
| J8 | 1-2* | Connects ADD1 to PU pullup voltage for address selection for the MAX31825 (U1). |
| | 1-3 | Parasite Power Mode Only. Connects ADD1 to DQ signal for address selection for the MAX31825 (U1). |
| | 1-4 | Connects ADD1 to ground for address selection for the MAX31825 (U1). |
| J9 | 1-2* | Connects ADD1 to PU pullup voltage for address selection for the IC (U2). |
| | 1-3 | Connects ADD1 to DQ signal for address selection for the IC (U2). |
| | 1-4 | Connects ADD1 to ground for address selection for the IC (U2). |

*Default position.

General Description of Software

The main window of the MAX31825 EV kit software contains controls to evaluate the MAX31825 IC.

Configuration Register

The **Configuration Register** groupbox allows the user to select the resolution, conversion rate, format, and fault queue. Use the **Resolution** drop-down list to select between 9-, 10-, 11-, and 12-bits resolution. With each resolution, the user can set the desired sampling rate using the options in the **Conversion** drop-down list. The temperature can be adjusted between normal and extended format. In addition, users can set the fault queue from 1 or 4 consecutive faults. When the desired configuration is set, click the **Write Scratchpad** button to apply.

High and Low Fault

Adjust the **TH (Temperature High)** and **TL (Temperature Low)** edit boxes to the desired temperature threshold. When the desired setting is set, click the **Write Scratchpad** button to apply.

When the **ALARM** output asserts in comparator mode, the **TH** or **TL** fault status bits displays red until the temperature returns within the threshold range.

When the **ALARM** output asserts in interrupt mode, the **TH** or **TL** fault status bits displays red until the read is performed on any registers.

The **ALARM** also appears at the **ALARM** pin of the IC. To check if the signal is high or low, use the **Check** button for the alarm status.

Address

The address is determined by the resistor/connection on ADD0 and ADD1 pins of the MAX31825. **Detect Address** loads bits to status register. Refer to the IC data sheet for the list of addresses. When multiple devices are on the 1-Wire bus, check the **Multi Devices** checkbox before clicking the **Detect Address** button. Addresses are displayed on the **A5-A0** drop-down list. Once the desired address is selected, click the **Set Address** button before sending function commands (**Write Scratchpad**, **Read Scratchpad**, and **Convert T**).

ROM

Within the **ROM Command** groupbox, the controls include **Read ROM**, **Match ROM**, **Skip ROM**, and **Search ROM**.

MAX31825 Commands

Within the **MAX31825 Command** groupbox, the controls include **Read Scratchpad**, **Write Scratchpad**, and **Convert T**.

Temperature

The temperature is displayed in the graph, hexadecimal code, and converted temperature by clicking on the **Sample Continuously** or **Read Once** button.

Logging Data

The temperature and raw code can be saved to a file. Click the **Export to *.CSV** button before collecting data.

General Description of Hardware

The MAX31825 EV system demonstrates the MAX31825, 1-Wire temperature sensor with address and alarm. The USB2PMB2 module and the EV kit complete the system. The DS2482 acts as the 1-Wire master for the MAX31825 and as an I²C slave for the USBPMBP2.

User-Supplied I²C and I/O

To evaluate the EV kit with a user-supplied I²C bus, the connector J1 is a PMod™-compatible connector. If the master does not have a PMod-compatible connector, then make connection directly to the SCL, SDA test points. Make sure the return ground is the same as the DS2482. See [Table 1](#) for jumper position.

User-Supplied 1-Wire

To evaluate the EV kit with a user-supplied 1-Wire bus, See [Table 1](#) for jumper position.

User-Supplied VDD

The MAX31825 is powered through USB by default when a PMod-compatible master module is connected to the J1 connector of the EV kit. If the user-supplied VDD is used, a PMod master module is not allowed on the J1 connector. In this case, remove the shunt from J6 jumper and apply a voltage between +1.6V and +3.6V at the VCC0 test point and ground is connected at the GND1 test point.

User-Supplied VPU

The J2 jumper allows the user to apply their own pullup voltage. When a shunt is on the 2-3 position, apply a voltage between +2.3V and +3.6V at the VPU test point and verify the return path is connected at the GND test point.

Pmod is a trademark of Digilent Inc.

Ordering Information

| PART | TYPE |
|-----------------|-----------------------------------|
| MAX31825EVSYS1# | EV system (EV kit + Master Board) |
| MAX31825EVKIT# | EV kit |
| USB2PMB2# | Master Board |

#Denotes RoHS compliance.

MAX31825 EV System Bill of Materials

| ITEM | QTY | REF DES | VAR STATUS | MAXINV | MFG PART # | MANUFACTURER | VALUE | DESCRIPTION | COMMENTS |
|-------|-----|---|------------|----------------------|---|---------------------------------------|-------------------|--|----------|
| 1 | 9 | ALARMO, ALARM1, DQ0, DQ1, SCL, SDA, VCC0, VCC1, VPU | Pref | 02-TPCOMP5007-00 | 5007 | KEYSTONE | N/A | TEST POINT: PIN DIA=0.125IN; TOTAL LENGTH=0.35IN; BOARD HOLE=0.063IN; WHITE; PHOSPHOR BRONZE WIRE SILVER PLATE FINISH; RECOMMENDED FOR BOARD THICKNESS=0.062IN; NOT FOR COLD TEST; NOTE: SET TO OBSOLETE DUE TO CORRECTION IN STEP MODEL COLOR | |
| 2 | 3 | C1-C3 | Pref | 20-000U1-BA63 | GCJ188R71H104KA12; GCM188R71H104K; CGA3E2X7R1H104K080AA | MURATA;MURATA;TDK | 0.1UF | CAPACITOR; SMT (0603); CERAMIC CHIP; 0.1UF; 50V; TOL=10%; TG=55 DEGC TO +125 DEGC, TC=X7R; AUTO | |
| 3 | 2 | GND, GND1 | Pref | 02-TPCOMP5006-00 | 5006 | KEYSTONE | N/A | TEST POINT; PIN DIA=0.125IN; TOTAL LENGTH=0.35IN; BOARD HOLE=0.063IN; BLACK; PHOSPHOR BRONZE WIRE SILVER PLATE FINISH; RECOMMENDED FOR BOARD THICKNESS=0.062IN; NOT FOR COLD TEST; NOTE: SET TO OBSOLETE DUE TO CORRECTION IN STEP MODEL COLOR | |
| 4 | 1 | J1 | Pref | 01-TSW10608SSRA6P-19 | TSW-106-08-S-S-RA | SAMTEC | TSW-106-08-S-S-RA | CONNECTOR; MALE; THROUGH HOLE; 0.025 INCH SQUARE POST HEADER; RIGHT ANGLE; 6PINS | |
| 5 | 5 | J2, J4-J7 | Pref | 01-TSW10307TS3P-17 | TSW-103-07-T-S | SAMTEC | TSW-103-07-T-S | CONNECTOR; THROUGH HOLE; TSW SERIES; SINGLE ROW; STRAIGHT; 3PINS | |
| 6 | 2 | J8, J9 | Pref | 01-PEC04SAAN4P-21 | PEC04SAAN | SULLINS ELECTRONICS CORP. | PEC04SAAN | CONNECTOR; MALE; THROUGH HOLE; BREAKAWAY; STRAIGHT; 4PINS | |
| 7 | 4 | R1-R4 | Pref | 80-004K7-19 | CRCW06034K70FK | VISHAY DALE | 4.7K | RESISTOR; 0603; 4.7K; 1%; 100PPM; 0.10W; THICK FILM | |
| 8 | 2 | R5, R6 | Pref | 80-04K99-CA18 | RNCP0603FTD4K99 | STACKPOLE ELECTRONICS INC | 4.99K | RESISTOR; 0603; 4.99K OHM; 1%; 100PPM; 0.125W; THIN FILM | |
| 9 | 8 | SU1-SU8 | Pref | 02-JMPFS1100B-00 | S1100-B;SX1100-B;STC02SYAN | KYCON;KYCON;SULLINS ELECTRONICS CORP. | SX1100-B | TEST POINT; JUMPER; STR; TOTAL LENGTH=0.24IN; BLACK; INSULATION-PBT; PHOSPHOR BRONZE CONTACT=GOLD PLATED | |
| 10 | 1 | U1 | Pref | 00-SAMPLE-03 | MAX31825ANT+ | MAXIM | MAX31825ANT+ | EVKIT PART - IC; 1-WIRE TEMPERATURE SENSOR WITH ADDRESS AND ALARM; +/- 1 DEGREE CELCIUS ACCURACY; PACKAGE OUTLINE: 21-100395; PACKAGE CODE: N61A1+1; WLP6 | |
| 11 | 1 | U3 | Pref | 10-DS2482S100-S | DS2482S-100+ | MAXIM | DS2482S-100+ | IC; INF/C; SINGLE-CHANNEL 1-WIRE MASTER; NSIOIC8; NOTE: SET TO OBSOLETE TO UPDATE TO MAXIM STANDARD FOOTPRINT; KINDLY USE PART WITH JEDEC TYPE MAXIM_90-0096 | |
| 12 | 1 | VDD | Pref | 02-TPCOMP5005-00 | 5005 | KEYSTONE | N/A | TEST POINT; PIN DIA=0.125IN; TOTAL LENGTH=0.35IN; BOARD HOLE=0.063IN; RED; PHOSPHOR BRONZE WIRE SILVER PLATE FINISH; RECOMMENDED FOR BOARD THICKNESS=0.062IN; NOTE: SET TO OBSOLETE DUE TO CORRECTION IN STEP MODEL COLOR | |
| 13 | 1 | PCB | - | EPCB31825 | MAX31825 | MAXIM | PCB | PCB:MAX31825 | - |
| TOTAL | 40 | | | | | | | | |


DO NOT PURCHASE(DNP)

| ITEM | QTY | REF DES | VAR STATUS | MAXINV | MFG PART # | MANUFACTURER | VALUE | DESCRIPTION | COMMENTS |
|-------|-----|---------|------------|----------------|--------------|---------------------|--------------|--|----------|
| 1 | 1 | Q1 | DNP | EQ111000002627 | BSS84Q-7-F | DIODES INCORPORATED | BSS84Q-7-F | TRAN; PCH; MOSFET; SOT-23; PD-(0.3W); I(-0.13A); V(-50V) | DNI |
| 2 | 1 | U2 | DNP | N/A | MAX31825ALT+ | MAXIM | MAX31825ALT+ | EVKIT PART - IC; 1-WIRE TEMPERATURE SENSOR WITH ADDRESS AND ALARM; +/- 1 DEGREE CELCIUS ACCURACY; PACKAGE OUTLINE: 21-0164; PACKAGE CODE: LC622+1; UDFN8 | |
| TOTAL | 2 | | | | | | | | |


PACKOUT (These are purchased parts but not assembled on PCB and will be shipped with PCB)

| ITEM | QTY | REF DES | VAR STATUS | MAXINV | MFG PART # | MANUFACTURER | VALUE | DESCRIPTION | COMMENTS |
|-------|-----|---------|------------|--------|------------|--------------|-------|-------------|----------|
| TOTAL | 0 | | | | | | | | |


MAX31825 EV System Schematic

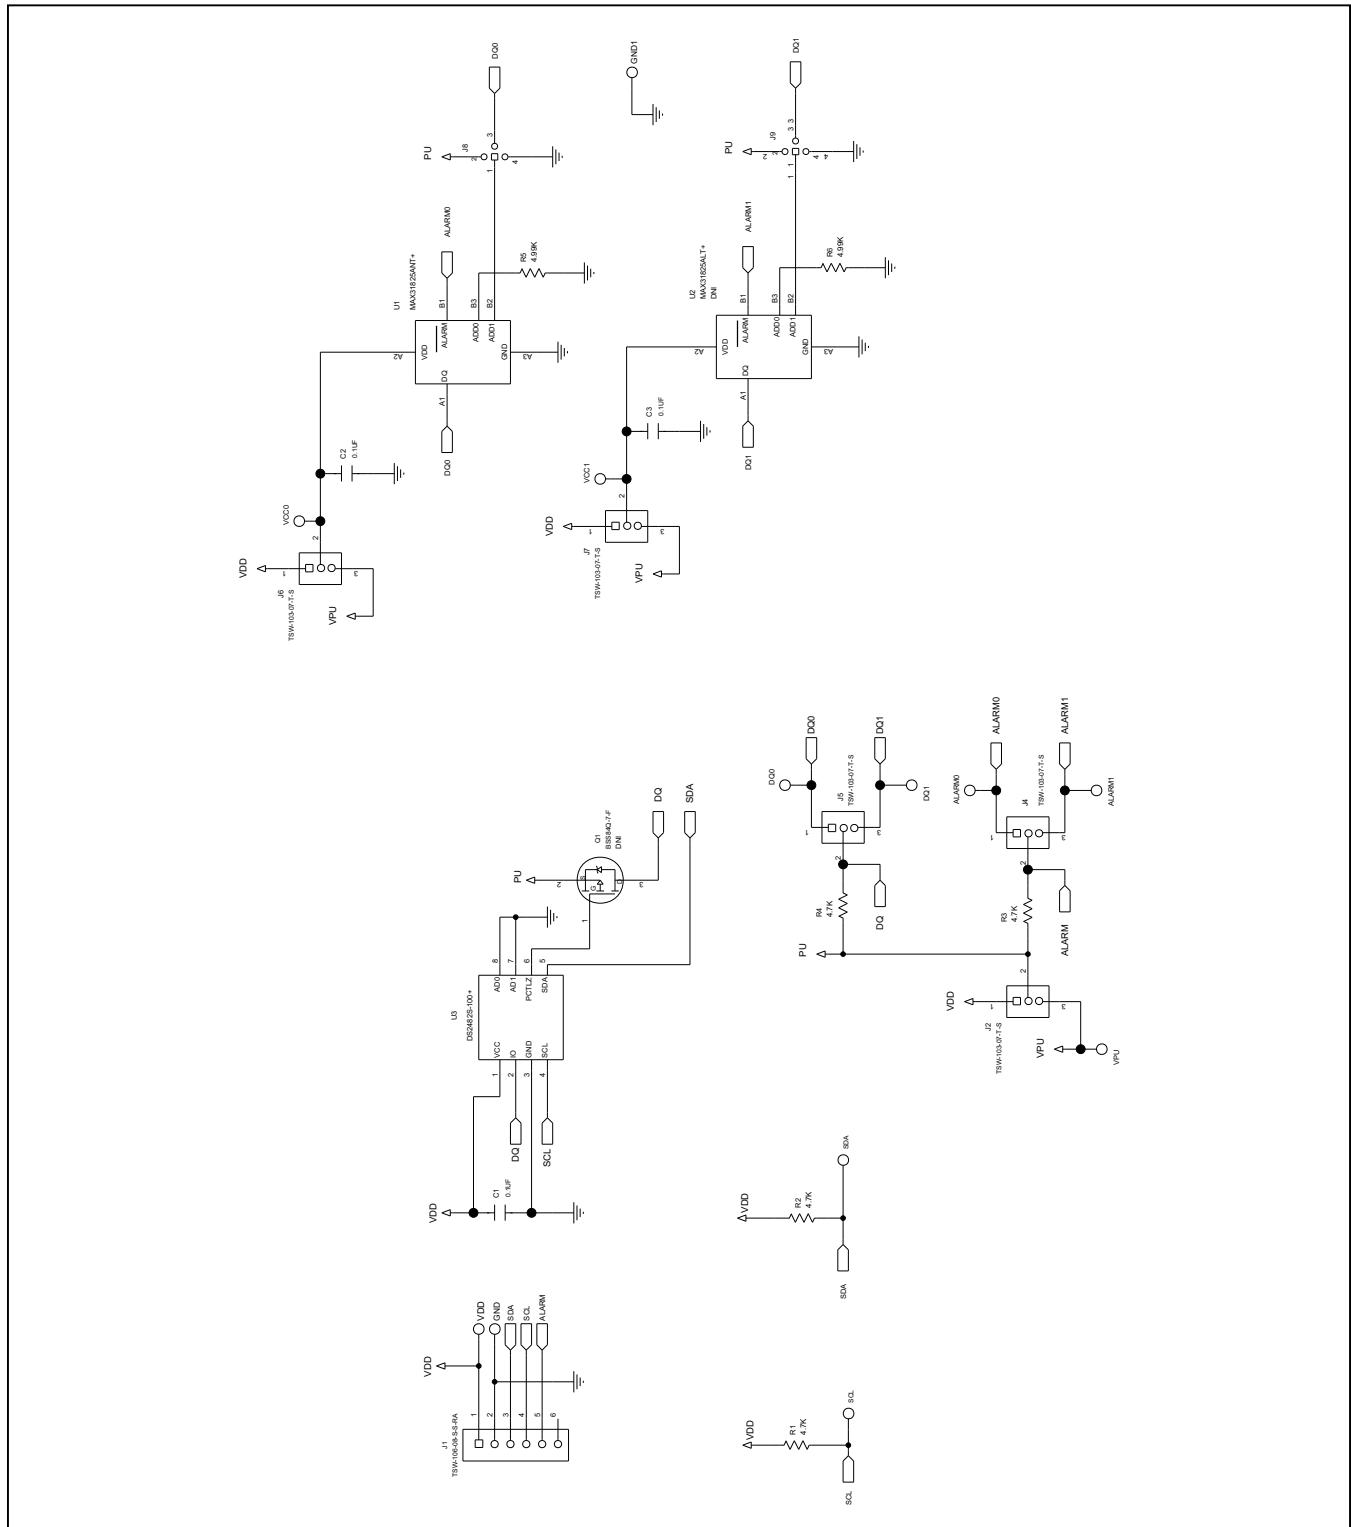


MAX31825 EV System PCB Layouts

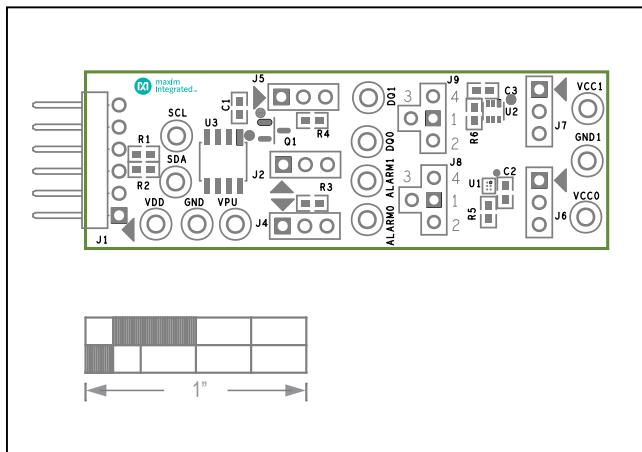


MAX31825 EV System Component Placement Guide—Top Silkscreen

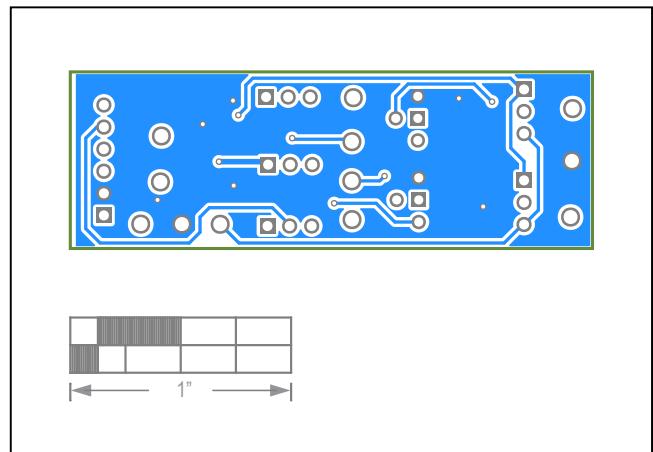

MAX31825 EV System PCB Layout—Bottom

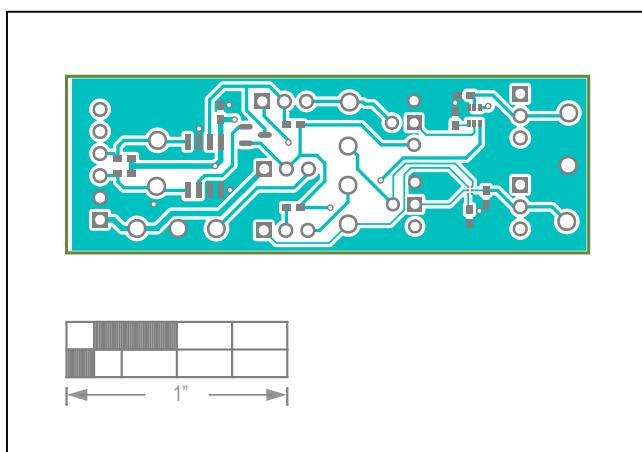

MAX31825 EV System PCB Layout—Top

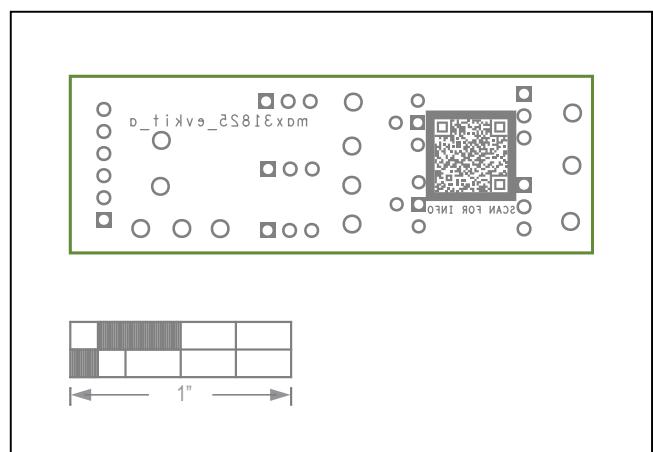

MAX31825 EV System PCB Layout—Silk Bottom

Revision History

| REVISION NUMBER | REVISION DATE | DESCRIPTION | PAGES CHANGED |
|-----------------|---------------|-----------------|---------------|
| 0 | 3/20 | Initial release | — |

For pricing, delivery, and ordering information, please visit Maxim Integrated's online storefront at <https://www.maximintegrated.com/en/storefront/storefront.html>.

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Maxim Integrated:](#)

[MAX31825EVSYS1#](#)