

## Evaluates: MAX77542 in WLP Package

## MAX77542 Evaluation Kit

### General Description

The MAX77542 evaluation kit (EV kit) is a fully assembled and tested printed circuit board (PCB) that demonstrates the MAX77542 four-phase configurable step-down regulator. The board is equipped with test points and jumpers for testing all pins on the device. Six potentiometers allow for adjusting the SEL1/2/3/4 and CFG1/2 configuration pins at will. There are also probe sockets on critical nodes (VOUTx, Lxx) for precise measurements. The board also comes with some spare inductors (L5–L12) for testing out efficiency/performance tradeoffs. The PCB is designed with Analog Devices, Inc.'s, recommended layout of the IC and external components. The IC sets default output voltages by way of R15, R17, R19, and R21 but can be changed with the potentiometers or through I<sup>2</sup>C communication. Analog Devices' GUI can be used by connecting a Windows®-based PC to J1 through a USB Type-A to Micro-USB cable.

*Ordering Information* appears at end of data sheet.

### Features

- Probe Sockets for High-Accuracy Measurements
- Test Points for All Features (MFIO, CE, IRQB)
- Default Output Voltage Adjustable Via SEL1/2/3/4
- Default MFIO Function and I<sup>2</sup>C Slave ID Set Via CFG1
- Default Peak Current Limit and FSW Set Via CFG2
- Connector for Custom I<sup>2</sup>C Host

### EV Kit Contents

- The MAX77542 EV kit
- USB Type-A to Micro-USB Cable
- Windows-based GUI software is available for use with the EV kit and can be downloaded from Analog Devices website at [www.analog.com/max77542evkit](http://www.analog.com/max77542evkit) (under the **Design Resources** tab). Windows 7 or newer is required to use with the EV kit GUI software.

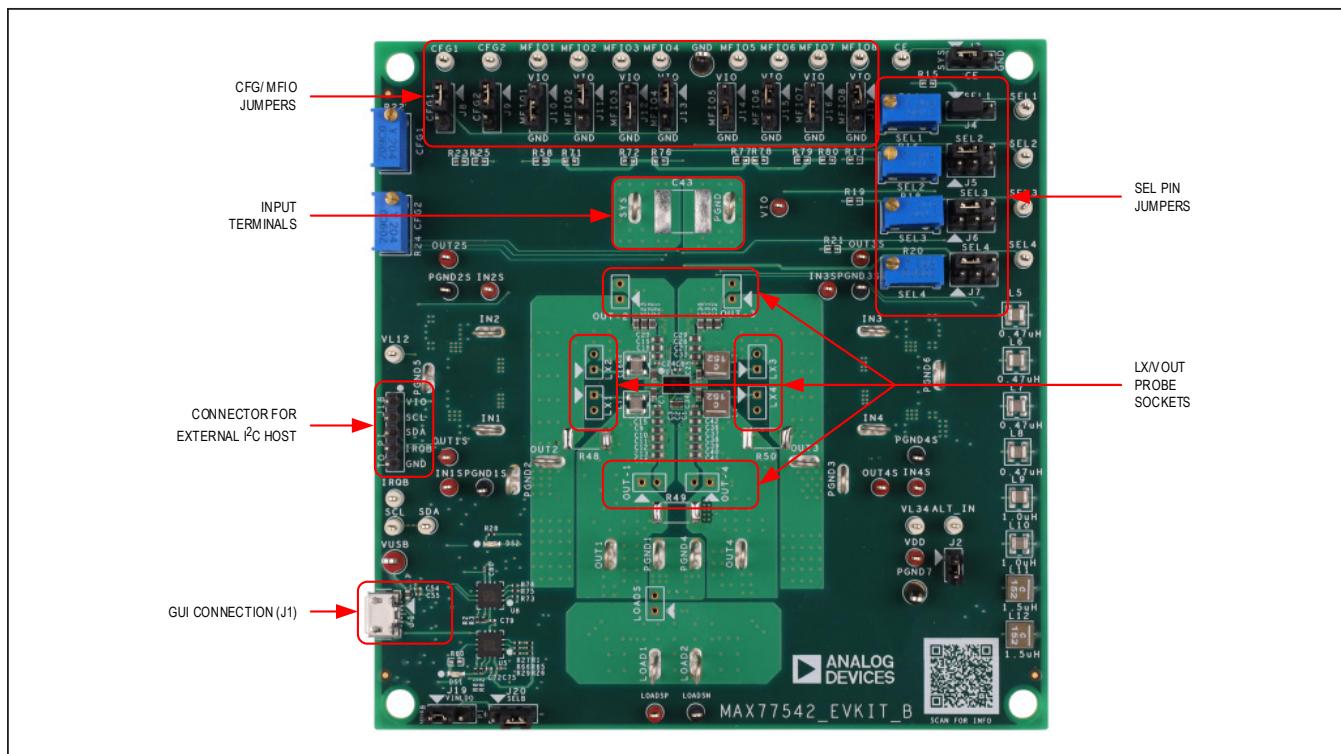


Figure 1. MAX77542 Evaluation Board

319-100989; Rev 2; 11/24

## EV Kit Specifications and Default Configuration

The MAX77542 EV kit comes with the following default settings:

- $V_{OUT1} = 1.0V$
- $V_{OUT2} = 1.8V$
- $V_{OUT3} = 3.3V$
- $V_{OUT4} = 5.0V$
- $F_{SW} = 1.0MHz$
- Skip Mode
- Soft-Start and DVS Ramp-Up Rate =  $5.0mV/\mu s$
- Soft-Stop and DVS Ramp-Down Rate =  $-0.15mV/\mu s$
- $100\Omega$  Active Discharge Enabled ( $1\Omega$  is Disabled)
  - Peak Current Limit = 5.5A
  - MFIO1-8 set to EN inputs and POK outputs
  - MFIO1: EN1
  - MFIO2: POK1
  - MFIO3: EN2
  - MFIO4: POK2
  - MFIO5: EN3
  - MFIO6: POK3
  - MFIO7: EN4
  - MFIO8: POK4
- MAX77542BAWU+ Installed

## Quick Start

### Required Equipment

- Adjustable DC Power Supply or Applicable Battery
- Multimeter
- USB Type-A to Micro-USB Cable (optional)
- Windows-based PC with MAX77542 EV kit GUI

### Setup Overview

[Figure 2](#) depicts a simplified block diagram of a typical EV kit setup. Attach more meters and scope probes as necessary. [Figure 3](#) depicts a typical application circuit of the MAX77542.

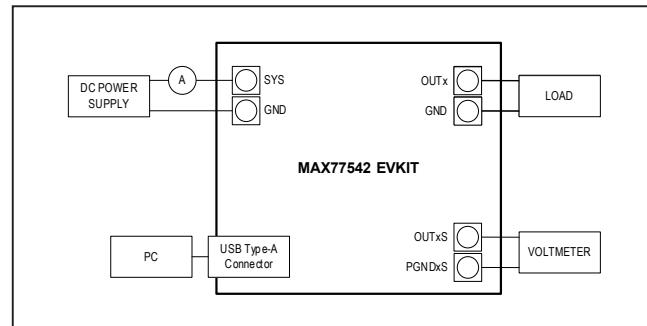


Figure 2. Simplified Setup Block Diagram

Table 1. EV Kit Default Specifications

SPECIFICATIONS	TEST CONDITIONS	MIN	TYP	MAX	UNIT
Input Voltage		2.8		16.0	V
Output Voltage	Configurable by SEL or through I <sup>2</sup> C	0.3		5.2	V
Output Current	Per Phase	0		4	A
Switching Frequency			1		MHz
Peak Current Limit			5.5		A

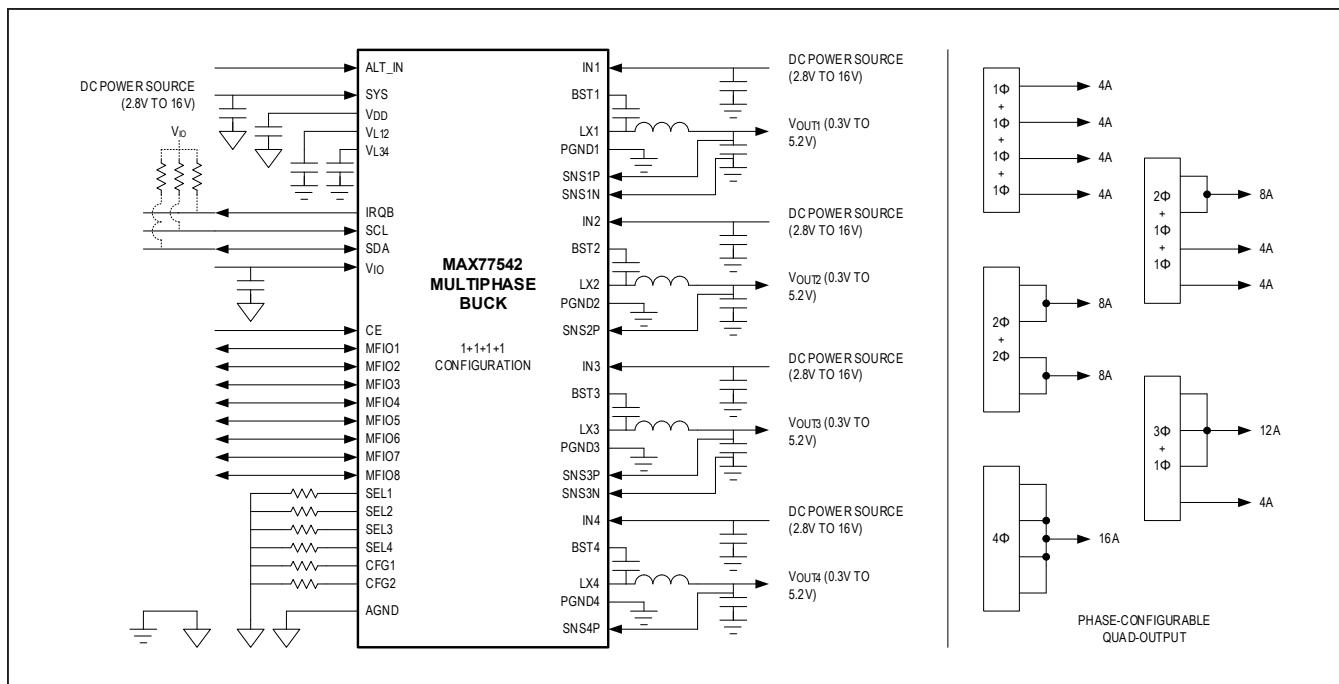



Figure 3. Typical Application Circuit

## Procedure

Follow this procedure for first time evaluation:

- 1) Install GUI software. Visit the product webpage at <https://www.analog.com/max77542evkit> and navigate to Design Resources to download the latest version of the EV kit software. Save the EV kit software installation file to a temporary folder and decompress the ZIP file. Run the .EXE file and follow the on-screen instructions to complete installation.
- 2) Ensure that the jumpers are configured as per [Table 2](#).
- 3) Apply a valid voltage (like 7.6V) from a power supply to the SYS and PGND terminals of the EV Kit. Do not enable the power supply yet.

- 4) **Important:** Make sure that the phase configuration is correct. See the [Phase Configuration](#) section.
- 5) Connect a USB cable between your PC and J1 USB port on the EV kit.
- 6) Turn on the input power supply.
- 7) Open the GUI and click **Device** in the menu bar. Click **Connect** in the **Device** drop-down list. Wait for the device to respond, and in the **Synchronize** window, press **Connect**. The GUI takes a few seconds to read the device registers after pressing **Connect**.
- 8) Navigate to the **Buck 1 Configuration** tab. Drag the slide bar in **Buck Normal Output Voltage** section to change the output voltage and click **Write**.

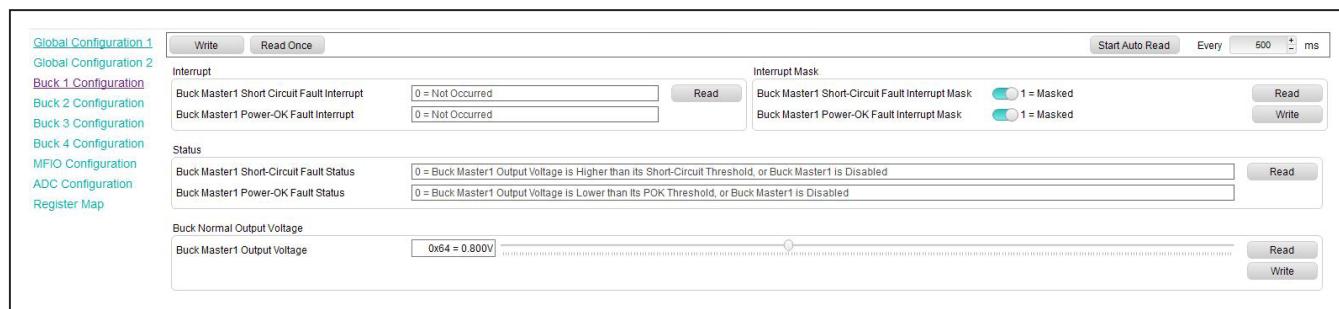

9) Navigate to the **Global Configuration 2** tab. Toggle Buck Master1 Enable Control to Enable and press **Write**.

10) Measure OUT1 with a voltmeter. It should read the voltage set in the GUI in Step 8.

11) Use the GUI to exercise the various features of the MAX77542.

This concludes the Quick Start procedure. Users are now encouraged to further explore the device and its register settings with the GUI software. For more information on the GUI, see [Detailed Description of Software](#) section.

**Table 2. Default Shunt Positions and Jumper Descriptions**

JUMPER	NODE OR FUNCTION	SHUNT POSITION	FUNCTION
J1	USB Connector (GUI)	N/A	GUI USB Connector
J2	ALT_IN	1-2*	Connects ALT_IN to GND. Leave disconnected if ALT_IN functionality is used.
J3	CE	1-2*	Connects CE to SYS (Enables internal bias)
		2-3	Connects CE to GND (Disables internal bias)
J4	SEL1	1-2*	Connects SEL1 to fixed 1.87k $\Omega$ resistor (1.0V <sub>OUT</sub> default)
		2-3	Connects SEL1 to the potentiometer for adjustable default V <sub>OUT</sub>
J5	SEL2	2-4*	Connects SEL2 to fixed 30.9k $\Omega$ resistor (1.8V <sub>OUT</sub> default)
		3-4	Connects SEL2 to GND (enables multiphase operation)
		4-6	Connects SEL2 to the potentiometer for adjustable default V <sub>OUT</sub>
J6	SEL3	2-4*	Connects SEL3 to fixed 64.9k $\Omega$ resistor (3.3V <sub>OUT</sub> default)
		3-4	Connects SEL3 to GND (enables multiphase operation)
		4-6	Connects SEL3 to the potentiometer for adjustable default V <sub>OUT</sub>
J7	SEL4	2-4*	Connects SEL4 to fixed 100k $\Omega$ resistor (5V <sub>OUT</sub> default)
		3-4	Connects SEL4 to GND (enables multiphase operation)
		4-6	Connects SEL4 to the potentiometer for adjustable default V <sub>OUT</sub>
J8	CFG1	1-2*	Connects CFG1 to fixed 0 $\Omega$ resistor (Sets MFIO default functions. Refer to the device data sheet for more information.)
		2-3	Connects CFG1 to the potentiometer for adjustable MFIO functions
J9	CFG2	1-2*	Connects CFG2 to fixed 0 $\Omega$ resistor (Sets default Mx_ILIM and Mx_FREQ values. Refer to the device data sheet for more information.)
		2-3	Connects CFG2 to the potentiometer for adjustable Mx_ILIM and Mx_FREQ
J10	MFIO1	1-2	MFIO1 pulled up to VIO through 10k $\Omega$ resistor
		2-3*	MFIO1 tied to GND
		N/A	MFIO1 left disconnected (Hi-Z)
J11	MFIO2	1-2*	MFIO2 pulled up to VIO through 10k $\Omega$ resistor
		2-3	MFIO2 tied to GND
		N/A	MFIO2 left disconnected (Hi-Z)
J12	MFIO3	1-2	MFIO3 pulled up to VIO through 10k $\Omega$ resistor
		2-3*	MFIO3 tied to GND
		N/A	MFIO3 left disconnected (Hi-Z)

**Table 2. Default Shunt Positions and Jumper Descriptions (continued)**

JUMPER	NODE OR FUNCTION	SHUNT POSITION	FUNCTION
J13	MFIO4	1-2*	MFIO4 pulled up to VIO through 10kΩ resistor
		2-3	MFIO4 tied to GND
		N/A	MFIO4 left disconnected (Hi-Z)
J14	MFIO5	1-2	MFIO5 pulled up to VIO through 10kΩ resistor
		2-3*	MFIO5 tied to GND
		N/A	MFIO5 left disconnected (Hi-Z)
J15	MFIO6	1-2*	MFIO6 pulled up to VIO through 10kΩ resistor
		2-3	MFIO6 tied to GND
		N/A	MFIO6 left disconnected (Hi-Z)
J16	MFIO7	1-2	MFIO7 pulled up to VIO through 10kΩ resistor
		2-3*	MFIO7 tied to GND
		N/A	MFIO7 left disconnected (Hi-Z)
J17	MFIO8	1-2*	MFIO8 pulled up to VIO through 10kΩ resistor
		2-3	MFIO8 tied to GND
		N/A	MFIO8 left disconnected (Hi-Z)
J18	I <sup>2</sup> C Header for External I <sup>2</sup> C Bus	N/A	Test points for I <sup>2</sup> C signals to be connected to an external I <sup>2</sup> C Bus
J19	VIN_LDO	1-2*	VIO LDO powered from VUSB
		2-3	VIO LDO powered from VIO_PI (External I <sup>2</sup> C Bus)
J20	VIO Level	1-2	VIO is set to 1.2V
		2-3*	VIO is set to 1.8V

\*Default position.

## EV Kit Hardware

### GUI Interface

The MAX77542EVKIT# can be connected to the GUI by connecting a USB cable to J1 on the EV kit.

### External I<sup>2</sup>C Bus

To use a different I<sup>2</sup>C host, disconnect the USB cable and attach I<sup>2</sup>C wires to J18 on the EV kit. Move the jumper on J19 to position 2-3. The J19 jumper sets the input of the LDO that provides VIO to either the USB input voltage or the voltage applied to VIO on J18. Jumper J18 is the input to a level shifter rather than an input to the actual pins on the IC.

### Phase Configuration

The SEL2, SEL3, and SEL4 are used to set the phase configuration of the MAX77542. R48, R49, R50, and R57 are used to connect the outputs together for multiphase configuration. The default configuration is four outputs (1 $\phi$  + 1 $\phi$  + 1 $\phi$  + 1 $\phi$ ). See [Table 3](#) to configure the MAX77542 according to the correct phase configuration.

### Buck Feedback Configuration

Buck feedback configuration is specific to the selected phase configuration. Each of the four bucks have their own feedback inputs (SNSxP and SNSxN for Buck 1 and Buck 3; SNSxP alone for Buck 2 and Buck 4). Only the master feedback pins need to connect to the output voltage to ensure regulation (see [Table 4](#)). Unused or slave feedback pins can connect to the output voltage during evaluation at no consequence.

For example, a 2 $\phi$  + 2 $\phi$  configuration creates Buck 1 (using L1 and L2) and Buck 3 (using L3 and L4). Buck 1's feedback is SNS1P and SNS1N. Buck 3's feedback is SNS3P and SNS3N. In this example, Buck 2 and Buck 4 are not configured as stand-alone channels. Therefore, SNS2P and SNS4P are do not care but can connect to their corresponding multiphase outputs with no consequence.

Each inductor under a single buck's control must be the same value. Refer to the device data sheet for recommendations on which inductor to use for each output voltage range.

**Table 3. Phase Configuration Truth Table for Local Sensing**

PHASE CONFIGURATION	SEL2	SEL3	SEL4	R48	R49	R50	R57
4 Outputs (1 $\phi$ + 1 $\phi$ + 1 $\phi$ + 1 $\phi$ )	>200 $\Omega$	>200 $\Omega$	>200 $\Omega$	Open	Open	Open	Open
3 Outputs (2 $\phi$ + 1 $\phi$ + 1 $\phi$ )	0 $\Omega$	>200 $\Omega$	>200 $\Omega$	0 $\Omega$	Open	Open	Open
2 Outputs (2 $\phi$ + 2 $\phi$ )	0 $\Omega$	>200 $\Omega$	0 $\Omega$	0 $\Omega$	Open	0 $\Omega$	Open
2 Outputs (3 $\phi$ + 1 $\phi$ )	0 $\Omega$	0 $\Omega$	>200 $\Omega$	0 $\Omega$	Open	Open	0 $\Omega$
1 Output (4 $\phi$ )	0 $\Omega$	0 $\Omega$	0 $\Omega$	0 $\Omega$	0 $\Omega$	0 $\Omega$	0 $\Omega$

**Table 4. Buck Output Naming Convention and Feedback**

PHASE CONFIGURATION	NAMING CONVENTION AND PHASES USED	FEEDBACK INPUTS
4 Outputs (1 $\phi$ + 1 $\phi$ + 1 $\phi$ + 1 $\phi$ )	Buck 1 (1 $\phi$ ) uses L1	SNS1P, SNS1N
	Buck 2 (1 $\phi$ ) uses L2	SNS2P
	Buck 3 (1 $\phi$ ) uses L3	SNS3P, SNS3N
	Buck 4 (1 $\phi$ ) uses L4	SNS4P
3 Outputs (2 $\phi$ + 1 $\phi$ + 1 $\phi$ )	Buck 1 (2 $\phi$ ) uses L1, L2	SNS1P, SNS1N
	Buck 3 (1 $\phi$ ) uses L3	SNS3P, SNS3N
	Buck 4 (1 $\phi$ ) uses L4	SNS4P
2 Outputs (2 $\phi$ + 2 $\phi$ )	Buck 1 (2 $\phi$ ) uses L1, L2	SNS1P, SNS1N
	Buck 3 (2 $\phi$ ) uses L3, L4	SNS3P, SNS3N
2 Outputs (3 $\phi$ + 1 $\phi$ )	Buck 1 (3 $\phi$ ) uses L1, L2, L3	SNS1P, SNS1N
	Buck 3 (1 $\phi$ ) uses L3	SNS4P
1 Output (4 $\phi$ )	Buck 1 (4 $\phi$ ) uses ALL (L1, L2, L3, L4)	SNS1P, SNS1N

### Buck Feedback Sense Location

The EV kit uses additional  $0\Omega$  resistors to modify the feedback routing between the IC and the output voltage sense location. In general, single-phase configurations should take feedback close to the corresponding output capacitor as close to the IC as possible (this is the default EV kit configuration). However, the MAX77542 supports remote sensing in addition to local sensing. The EV kit includes a LOAD plane for testing remote sensing on the EV kit. [Table 5](#) describes which resistors to install depending on whether local or remote sensing is being evaluated.

Buck 1, Buck 2, Buck 3, and Buck 4 can be connected to the remote LOAD plane by installing R45, R44, R46, and R47, respectively. These resistors are for the high current connections.

### Change Default Setup with RSEL1/RSEL2/ RSEL3/RSEL4/CFG1/CFG2

Note that the MAX77542 EV kit is default configured for four output, single-phase operation, with VOUT1 set to 1.0V, VOUT2 set to 1.8V, VOUT3 set to 3.3V, and VOUT4 set to 5.0V (by way of R15, R17, R19, and R21). The CFG1 sets MFIO1-8 to EN\_M1, POK\_M1, EN\_M2, POK\_M2, EN\_M3, POK\_M3, EN\_M4, and POK\_M4 through R23. CFG2 sets Mx\_ILIM to 5.5A and Mx\_FREQ to 1.0MHz through R25. To evaluate other default configurations (for different voltages/ranges upon first powerup),

change the resistance at SEL1/2/3/4 and CFG1/2 with the potentiometers or R15, R17, R19, R21, R23, and R25. Refer to the device data sheet for more information.

### Alternative Low-Voltage Input (ALT\_IN) Functionality

The ALT\_IN pin can be accessed through Jumper J2. When ALT\_IN functionality is unused, either install a jumper on J2 to tie ALT\_IN to GND or leave J2 open to leave ALT\_IN disconnected. To power ALT\_IN using one of the buck outputs or another alternative power source, use a wire to tie pin 1 of J2 or the ALT\_IN test point to the desired power source. Refer to the device data sheet for more information on the operation of the ALT\_IN pin.

### Test Points and Critical Node Measurement (VOUT and LX)

The EV kit comes with test points where sockets can be soldered onto the board for measuring the critical nodes VOUT1-4 and LX1-4. Use these probe sockets to eliminate as much noise as possible when measuring the critical nodes. To ensure best results, use a very short ground wire from the ground sleeve of the scope probe to the GND side of the probe test point, and use the bare tip of the probe directly to the signal side of the probe socket. Following these guidelines give the most accurate results when measuring parameters like output voltage ripple, switching waveforms, and load transient response.

**Table 5. Multiphase Buck Feedback Recommended Routing**

BUCK	LOCAL SENSING		REMOTE SENSING	
	SNSxP	SNSxN	SNSxP	SNSxN
Buck 1 (1 $\phi$ , 2 $\phi$ , 3 $\phi$ , 4 $\phi$ )	R5	R6	R38	R42
Buck 2 (1 $\phi$ )	R8	N/A	R39	N/A
Buck 3 (1 $\phi$ , 2 $\phi$ )	R10	R11	R40	R43
Buck 4 (1 $\phi$ )	R13	N/A	R41	N/A

**Table 6. Test Point Selection for Measurement**

LOAD TRANSIENT, OUTPUT RIPPLE	EEFICIENCY, LOAD REGULATION, LINE REGULATION, VOUT ACCURACY		SWITCHING NODE
	OUTPUT VOLTAGE	INPUT VOLTAGE	
OUT-1-4 SOCKET	OUTxS, PGNDxS	INxS, PGNDxS	LX1-4 SOCKET

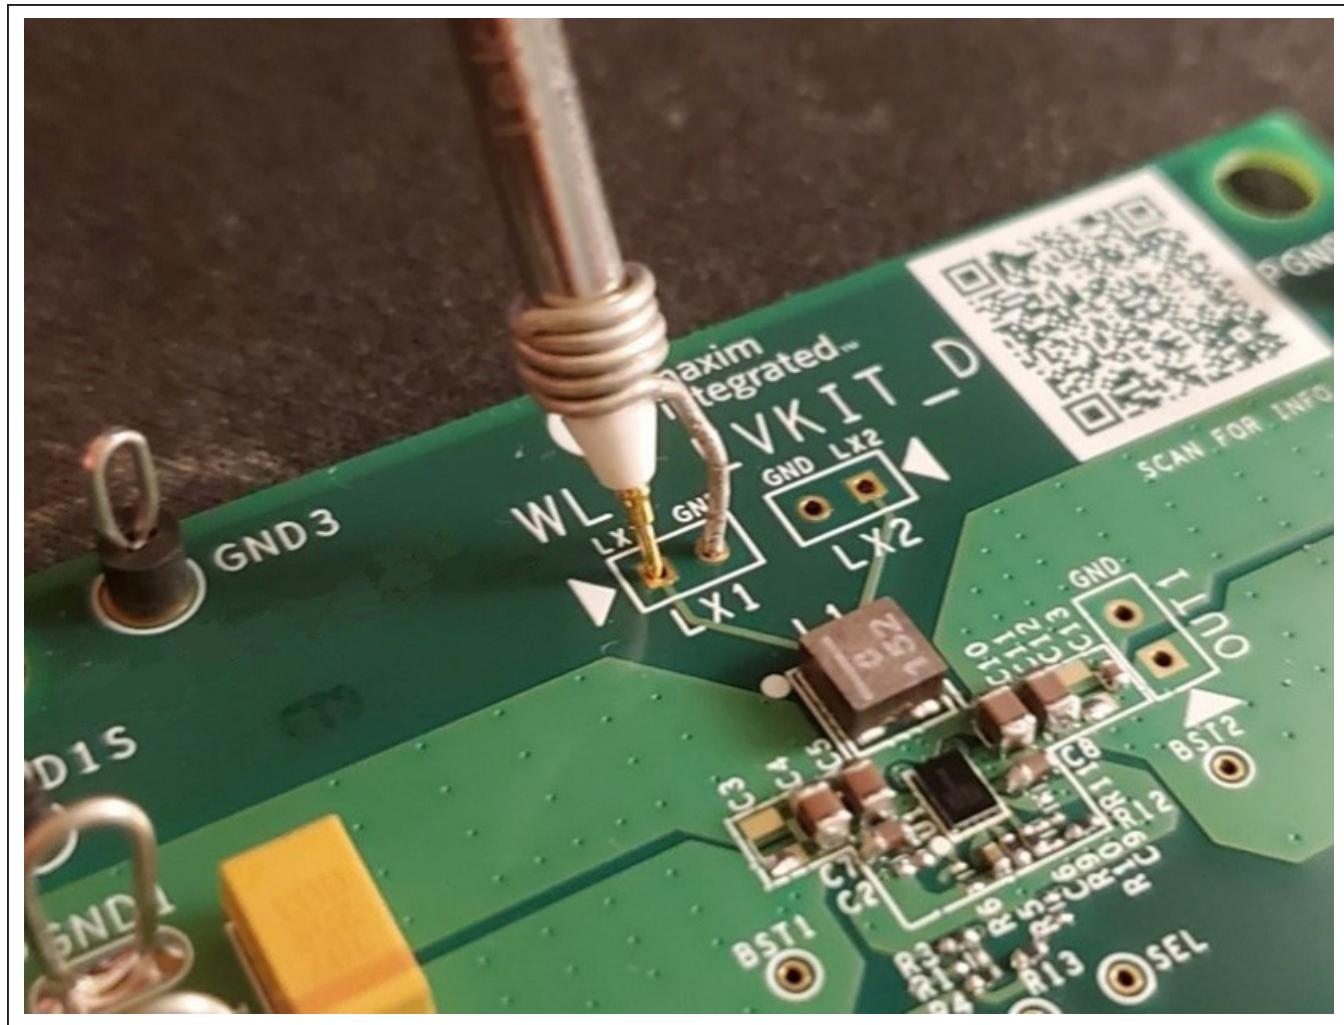


Figure 4. Example of Probing Sensitive Node

## Detailed Description of Software

The GUI software allows for quick, easy, and thorough evaluation of the MAX77542. The GUI drives I<sup>2</sup>C communication with the EV kit. Every control in the GUI corresponds directly to a register within the MAX77542. Refer to the *Register Map* section of the MAX77542 IC data sheet for a complete description of the registers. See [Figure 5](#) for a screenshot of the GUI upon first opening.

## Installation

Visit the product webpage at <https://www.analog.com/max77542evkit> and navigate to Design Resources to download the latest version of the EV kit software. Save

the EV kit software installation file to a temporary folder and decompress the ZIP file. Run the .EXE installer and follow the on-screen instructions to complete the installation.

## Windows Driver

After plugging in the MAX77542EVKIT# to the PC with a Micro-USB cable for the first time, wait about 30 seconds for Windows to automatically install the necessary drivers.

## Connecting GUI

After opening the GUI, click **Device** in the upper left corner of the GUI window. Click **Connect** in the drop-down menu.

# MAX77542 Evaluation Kit

Evaluates: MAX77542 in WLP Package

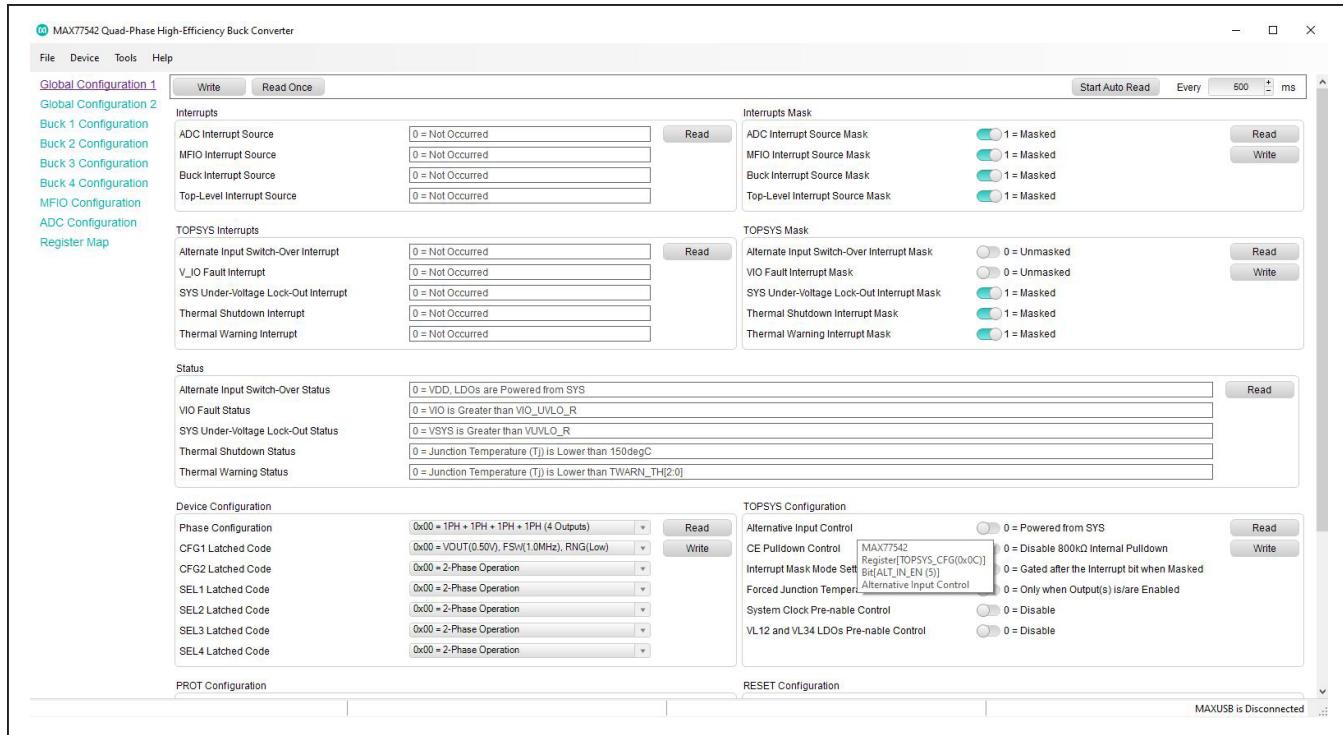


Figure 5. MAX77542 Evaluation Kit GUI Top-Level Interface (Before Connecting)

The **Device Synchronization** menu opens (Figure 6) once the MAX77542 IC responds (voltages on SYS pin, V<sub>IO</sub> pin, and CE pin must be valid on the MAX77542 IC for it to respond). The I<sup>2</sup>C address shown is the MAX77542 IC's 7-bit slave address. The address shown changes depending on the EV kit's CFG1 configuration. Click **Connect and Read**. The text at the bottom right of the GUI window changes from *MAXUSB\_INTERFACE# is Disconnected* to *MAXUSB\_INTERFACE# is Connected*.

## Global Configuration Tabs

The GUI has two tabs for global configuration of the bucks (**Global Configuration 1** and **Global Configuration 2**). Global Configuration 1 displays high-level information about the IC such as the interrupts, interrupt masks, status bits, and device configuration. Figure 7 shows a snapshot of the **Global Configuration 1** tab.

Global Configuration 2 is used to enable and disable the buck outputs, enable and disable low power mode, and change the flexible power sequencer settings. Figure 8 shows a snapshot of the **Global Configuration 2** tab.

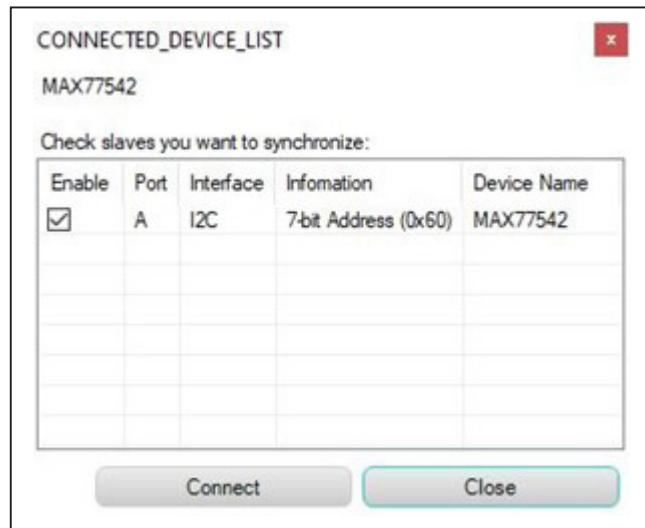


Figure 6. Port Synchronization Menu

## MAX77542 Evaluation Kit

Evaluates: MAX77542 in WLP Package

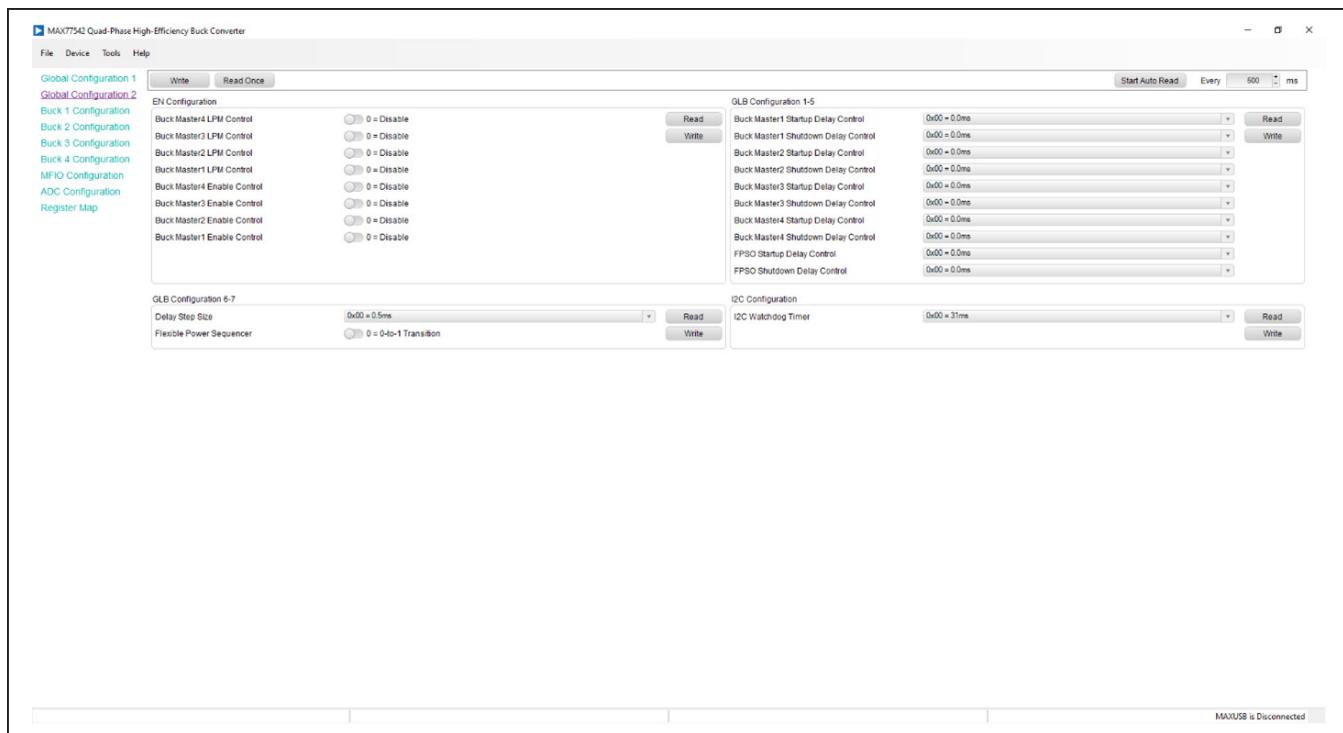


Figure 7. Global Configuration 1 Window

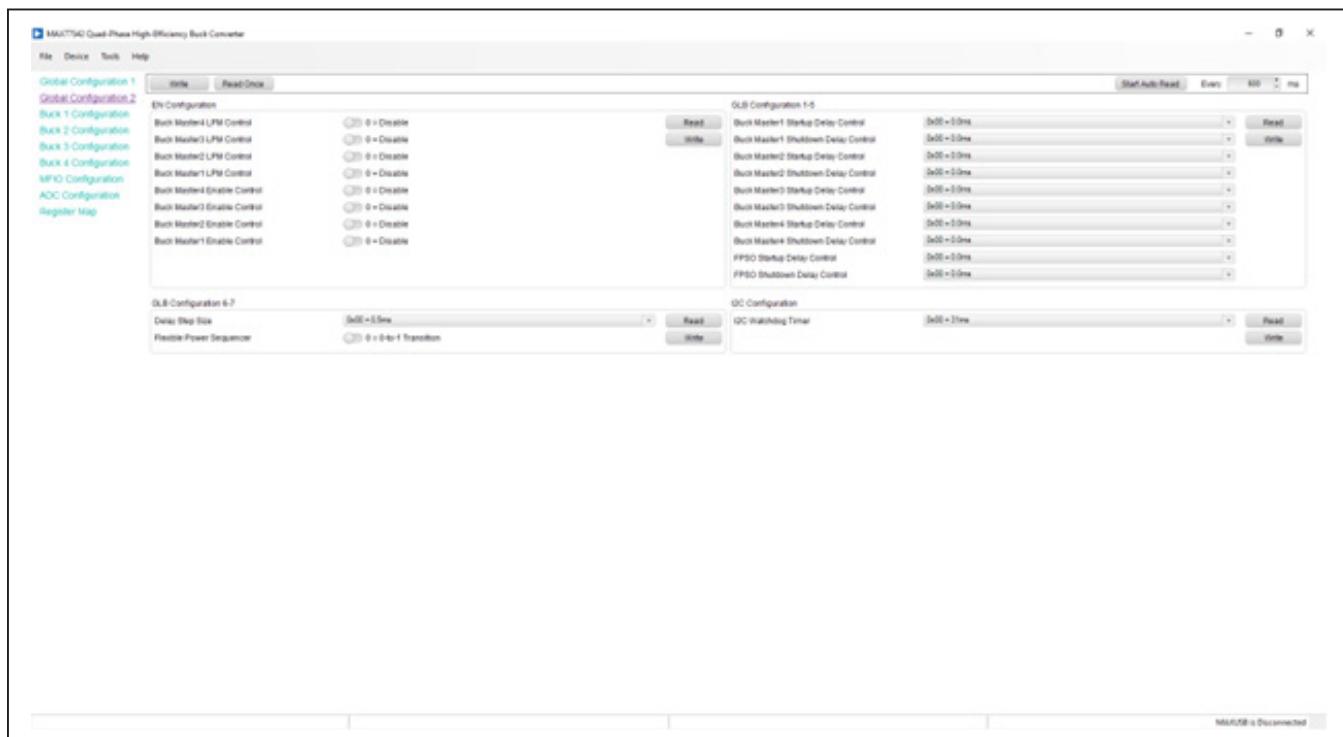


Figure 8. Global Configuration 1 Window

## Configuring the Regulator

The GUI has a configuration tab for each buck (Buck 1-4 Configuration). Use these to adjust the various parameters of each buck. Note that Buck 2, Buck 3, and Buck 4 Configuration is disabled when those phases are configured as slave phases in multiphase configuration.

[Figure 9](#) shows a snapshot of the Buck 1 Configuration tab. To use the GUI, select the desired option in one of the interactable fields (button, slider, drop-down list) and press **Write** next to it. Use the *Read* command to refresh the current state of the registers.

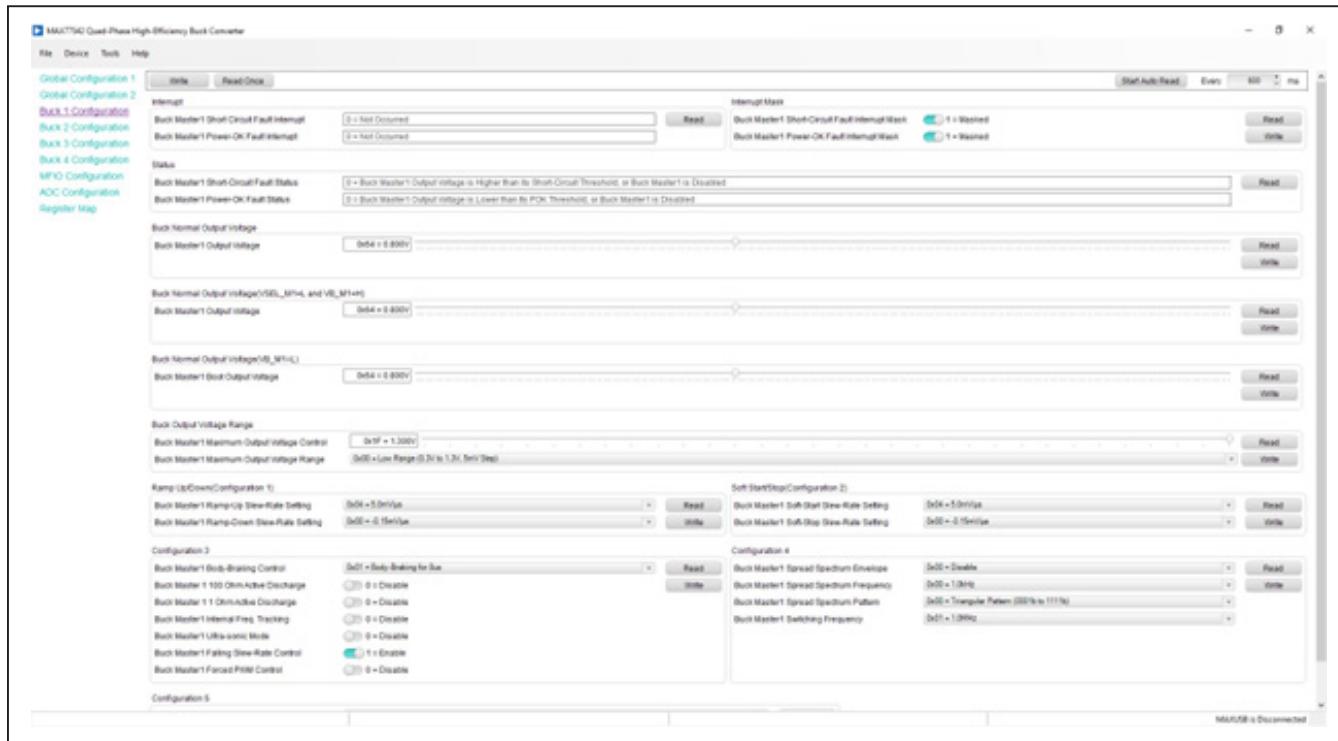


Figure 9. Buck 1 Configuration Window

# MAX77542 Evaluation Kit

Evaluates: MAX77542 in WLP Package

## Configuring the Multifunction I/Os

The GUI has a configuration tab for the MFIOs. The tab includes the interrupt bits, interrupt mask bits, and status

bits. It also includes the configuration registers for each MFIO pin to set its functionality. [Figure 10](#) shows a snapshot of the **MFIO Configuration** tab.

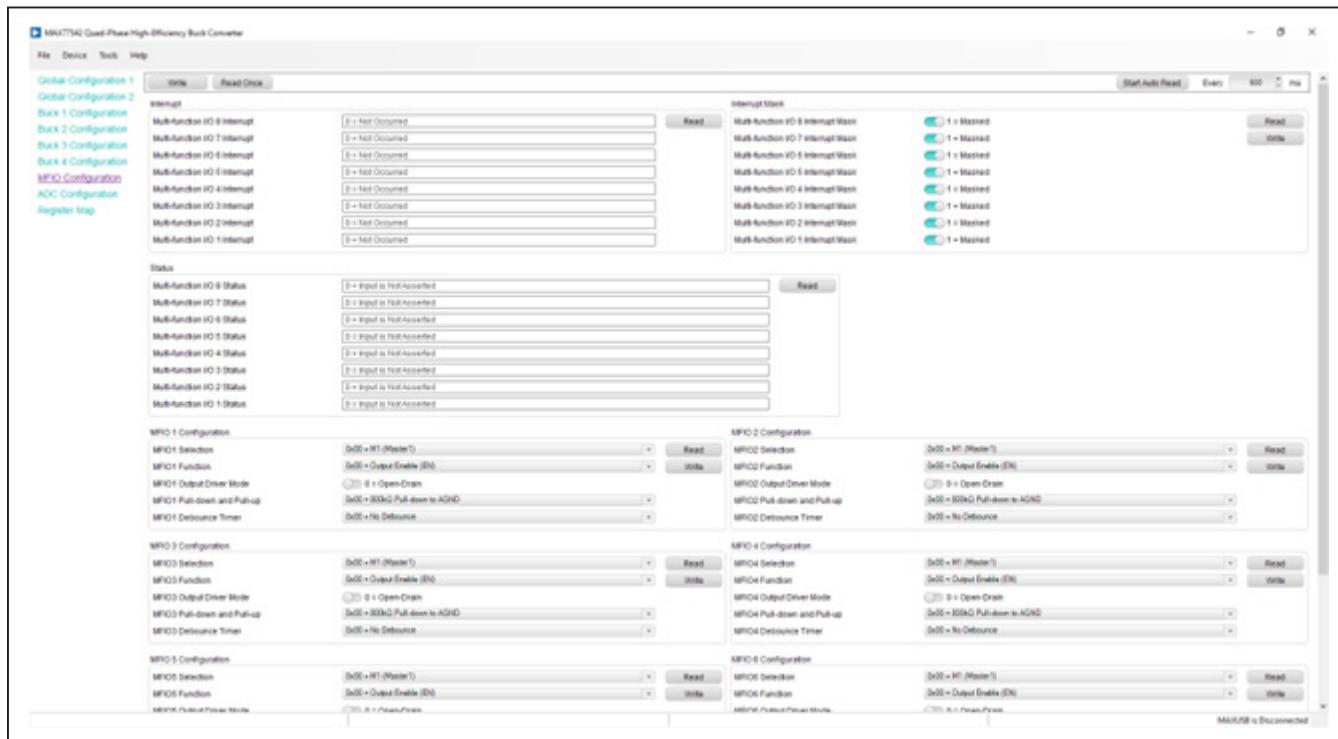


Figure 10. MFIO Configuration Window

# MAX77542 Evaluation Kit

Evaluates: MAX77542 in WLP Package

## Configuring the ADC

The GUI has a configuration tab for the ADC. The **ADC** tab includes the interrupt bits, interrupt masks, and status

bit for each ADC channel. It also includes the readback control bits, averaging control bits, measurement settings, and readback values. [Figure 11](#) shows a snapshot of the **ADC Configuration** tab.

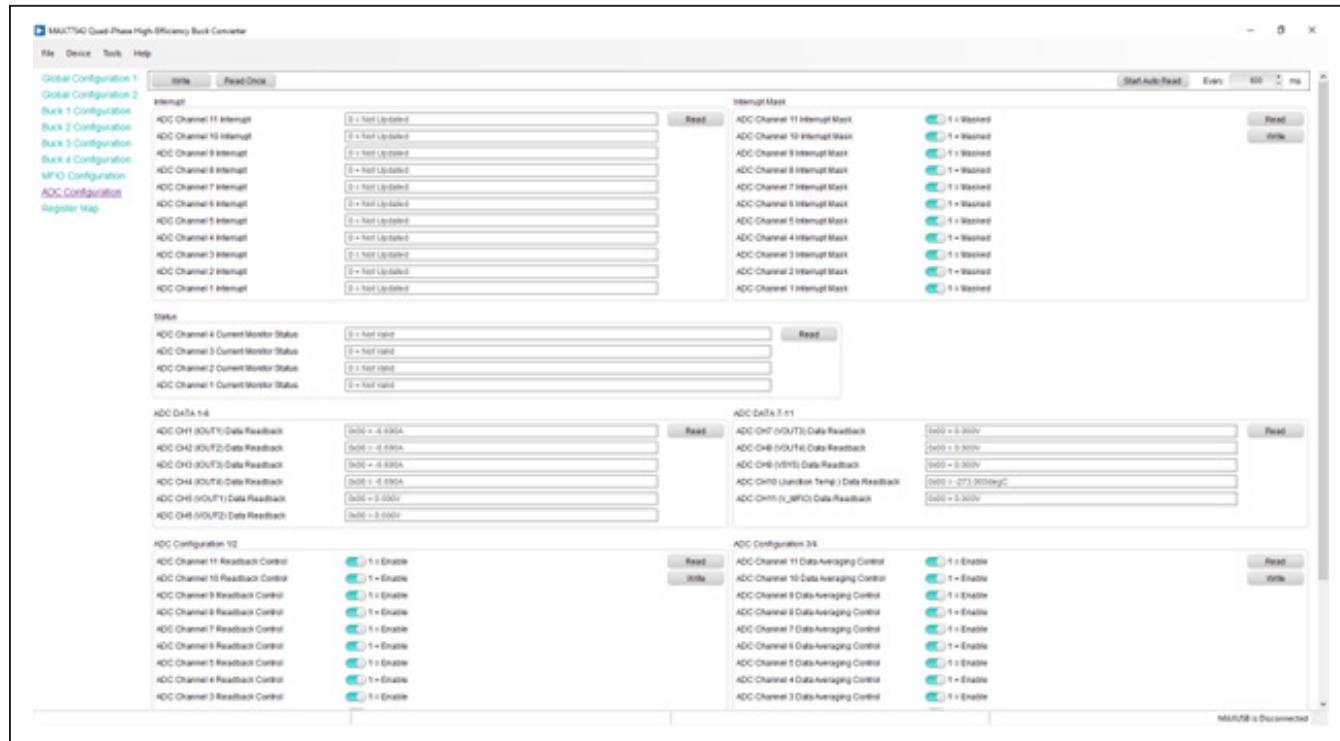


Figure 11. ADC Configuration Window

## PCB Layout Guidelines

Careful circuit board layout is critical to achieve low switching power losses and clean, stable operation. Refer to the *PCB Layout Guidelines* of the MAX77542 data sheet at <https://www.analog.com/max77542evkit>

## Ordering Information

PART	TYPE
MAX77542EVKIT#	EV Kit

#Denotes RoHS compliance.

## MAX77542 Evaluation Kit

Evaluates: MAX77542 in WLP Package

### MAX77542 EV Kit Bill of Materials

REF_DES	QTY*	MFG PART #	MANUFACTURER	VALUE	DESCRIPTION
C1, C4, C5	3	C1005X7S1A225K050BC	TDK	2.2µF	CAP; SMT (0402); 2.2µF; 10%; 10V; X7S; CERAMIC
C2	1	C1005X5R1E225K050; GRM155R61E225KE11	TDK;MURATA	2.2µF	CAP; SMT (0402); 2.2µF; 10%; 25V; X5R; CERAMIC
C3, C6	2	C1005X7S1A105K; GRM155C71A105KE11	TDK;MURATA	1µF	CAP; SMT (0402); 1µF; 10%; 10V; X7S; CERAMIC
C7, C16, C25, C34	4	C1608X5R1E106M080AC; CL10A106MA8NRNC; GRM188R61E106MA73; ZRB18AR61E106ME01; GRT188R61E106ME13	TDK;SAMSUNG ELECTRONICS; MURATA; MURATA;MURATA	10µF	CAP; SMT (0603); 10µF; 20%; 25V; X5R; CERAMIC
C8, C17, C26, C35	4	C1005X7R1C104K050BC; ATC530L104KT16; 0402YC104KAT2A; C0402X7R160-104KNE; CL05B104K05NNNC; GRM155R71C104KA88; C1005X7R1C104K; CC0402KRX7R7BB104; EMK105B7104KV; CL05B104K05	TDK;AMERICAN TECHNICAL CERAMICS;AVK; VENKEL LTD.;SAMSUNG ELECTRONICS; MURATA; TDK;YAGEO PHICOMP;TAIYO YUDEN;SAMSUNG ELECTRONICS	0.1µF	CAP; SMT (0402); 0.1µF; 10%; 16V; X7R; CERAMIC
C9-C14, C18-C23, C27-C32, C36-C41	24	C1608X5R1A226M080AC; GRM188R61A226ME15; CL10A226MPCNUBE; CL10A226MPMNUB; GRM187R61A226ME15	TDK;MURATA; SAMSUNG; SAMSUNG;MURATA	22µF	CAP; SMT (0603); 22µF; 20%; 10V; X5R; CERAMIC
C15, C24, C33, C42, C53, C55, C58-C60, C63, C65-C67, C69-C71, C75, C80	18	GRM155R71E104KE14; C1005X7R1E104K050BB; TMK105B7104KVN; CGJ2B3X7R1E104K050BB	MURATA;TDK;TAIYO YUDEN;TDK	0.1µF	CAP; SMT (0402); 0.1µF; 10%; 25V; X7R; CERAMIC
C44-C47	4	TMK325ABJ476MM	TAIYO YUDEN	47µF	CAP; SMT (1210); 47µF; 20%; 25V; X5R; CERAMIC
L1, L2	2	DFE252012F-1R0M	MURATA	1UH	EVKIT PART - INDUCTOR; SMT (1008); METAL; 1UH; 20%; 3.3A
L3, L4	2	XEL4020-152ME	COIL CRAFT	1.5UH	INDUCTOR; SMT; N/A; 1.5UH; 20%; 7.5A
U1	1	MAX77542BAWU+	ANALOG DEVICES	MAX77542BAWU+	EVKIT PART-IC; MAX77542BAWU+; PACKAGE OUTLINE: 21-100610; PACKAGE CODE: W602A4Z+1; WLP60
COMPONENTS BELOW THIS LINE ARE OUTSIDE OF THE IMMEDIATE MAX77542 EVALUATION CIRCUIT AND SOLUTION SILKSCREEN.					
ALT_IN, CE, CFG1, CFG2, IRQB, MFIO1-MFIO8, SCL, SDA, SEL1-SEL4, VL12, VL34	21	5002	KEYSTONE	N/A	TEST POINT; PIN DIA=0.1IN; TOTAL LENGTH=0.3IN; BOARD HOLE=0.04IN; WHITE; PHOSPHOR BRONZE WIRE SILVER;

## MAX77542 Evaluation Kit

Evaluates: MAX77542 in WLP Package

### MAX77542 EV Kit Bill of Materials (continued)

REF_DES	QTY*	MFG PART #	MANUFACTURER	VALUE	DESCRIPTION
C50-C52	3	ANY	ANY	10µF	CAPACITOR; SMT (0603); CERAMIC CHIP; 10µF; 16V; TOL=20%; MODEL=GRM SERIES; TG=-55 DEGC TO +85 DEGC; TC=X5R; FORMFACTOR
C54, C61, C64	3	C1005X5R1A475K050	TDK	4.7µF	CAP; SMT (0402); 4.7µF; 10%; 10V; X5R; CERAMIC
C56, C57	2	C0402C0G500270JNP; GRM1555C1H270JA01	VENKEL LTD.;MURATA	27PF	CAP; SMT (0402); 27PF; 5%; 50V; C0G; CERAMIC
C72-C74, C79	4	C0402C105K8PAC; CC0402KRX5R6BB105	KEMET;YAGEO	1µF	CAP; SMT (0402); 1µF; 10%; 10V; X5R; CERAMIC
C76, C78	2	ZRB15XR61A475ME01; CL05A475MP5NRR; GRM155R61A475MEAA; C1005X5R1A475M050BC	MURATA;SAMSUNG; MURATA;TDK	4.7µF	CAP; SMT (0402); 4.7µF; 20%; 10V; X5R; CERAMIC
C77	1	C0402C103K5RAC; GRM155R71H103KA88; C1005X7R1H103K050BE; CL05B103KB5NNN; UMK105B7103KV	KEMET;MURATA;TDK; SAMSUNG ELECTRONIC;TAIYO YUDEN	0.01µF	CAP; SMT (0402); 0.01µF; 10%; 50V; X7R; CERAMIC
DS1, DS2	2	LTST-C190CKT	LITE-ON ELECTRONICS INC.	LTST-C190CKT	DIODE; LED; STANDARD; RED; SMT (0603); PIV=5.0V; IF=0.04A; -55 DEGC TO +85 DEGC
GND, PGND7	2	5011	KEYSTONE	N/A	TEST POINT; PIN DIA=0.125IN; TOTAL LENGTH=0.445IN; BOARD HOLE=0.063IN; BLACK; PHOSPHOR BRONZE WIRE SILVER PLATE FINISH;
IN1-IN4, LOAD1, LOAD2, OUT1-OUT4, PGND, PGND1-PGND6, SYS	18	9020 BUSS	WEICO WIRE	MAXIMPAD	EVK KIT PARTS; MAXIM PAD; WIRE; NATURAL; SOLID; WEICO WIRE; SOFT DRAWN BUS TYPE-S; 20AWG
IN1S-IN4S, LOADSP, OUT1S-OUT4S, VDD, VIO	11	5000	KEYSTONE	N/A	TEST POINT; PIN DIA=0.1IN; TOTAL LENGTH=0.3IN; BOARD HOLE=0.04IN; RED; PHOSPHOR BRONZE WIRE SILVER PLATE FINISH;
J1	1	10118193-0001LF	FCI CONNECT	10118193-0001LF	CONNECTOR; FEMALE; SMT; MICRO USB B TYPE RECEPTACLE; RIGHT ANGLE; 5PINS
J2	1	PBC02SAAN	SULLINS ELECTRONICS CORP.	PBC02SAAN	CONNECTOR; MALE; THROUGH HOLE; BREAKAWAY; STRAIGHT; 2PINS
J3, J4, J8-J17, J19, J20	14	TSW-103-07-T-S	SAMTEC	TSW-103-07-T-S	CONNECTOR; THROUGH HOLE; TSW SERIES; SINGLE ROW; STRAIGHT; 3PINS

## MAX77542 Evaluation Kit

Evaluates: MAX77542 in WLP Package

### MAX77542 EV Kit Bill of Materials (continued)

REF_DES	QTY*	MFG PART #	MANUFACTURER	VALUE	DESCRIPTION
J5-J7	5	TSW-102-26-T-T	SAMTEC	TSW-102-26-T-T	CONNECTOR; THROUGH HOLE; TSW SERIES; TRIPLE ROW; STRAIGHT; 6PINS
J18	1	PBC05SAAN	SULLINS ELECTRONICS CORP.	PBC05SAAN	CONNECTOR; MALE; THROUGH HOLE; BREAKAWAY; STRAIGHT; 5PINS; -65 DEGC TO +125 DEGC
L9, L10	2	DFE252012F-1R0M	MURATA	1UH	EVKIT PART - INDUCTOR; SMT (1008); METAL; 1UH; 20%; 3.3A
L11, L12	2	XEL4020-152ME	COIL CRAFT	1.5UH	INDUCTOR; SMT; N/A; 1.5UH; 20%; 7.5A
L5-L8	4	DFE252012F-R47M	MURATA	0.47UH	EVKIT PART - INDUCTOR; SMT (1008); METAL; 0.47UH; 20%; 4.9A
L13-L15	3	BLM18AG601SN1	MURATA	600	INDUCTOR; SMT (0603); FERRITE-BEAD; 600; TOL=+/-; 0.5A
LOADSN, PGND1S-PGND4S	5	5001	KEYSTONE	N/A	TEST POINT; PIN DIA=0.1IN; TOTAL LENGTH=0.3IN; BOARD HOLE=0.04IN; BLACK; PHOSPHOR BRONZE WIRE SILVER PLATE FINISH;
MH1-MH4	4	9032	KEYSTONE	9032	MACHINE FABRICATED; ROUND-THRU HOLE SPACER; NO THREAD; M3.5; 5/8IN; NYLON
R1, R58, R71, R72, R76-R80	9	RC0402FR-0710KL; CR0402-FX-1002GLF	YAGEO;BOURNs	10K	RES; SMT (0402); 10K; 1%; +/-100PPM/ DEGC; 0.0630W
R2, R3, R61, R62	4	ERJ-2GEJ472	PANASONIC	4.7K	RES; SMT (0402); 4.7K; 5%; +/-200PPM/ DEGC; 0.1000W
R4, R7, R9, R12, R44-R50, R57, R67-R70	14	RC0402JR-070RL; CR0402-16W-000RJT	YAGEO PHYCOMP;VENKEL LTD.	0	RES; SMT (0402); 0; 5%; JUMPER; 0.0630W
R5, R6, R8, R10, R11, R13, R23, R25, R29, R56, R59, R66, R73, R75	14	RC0402JR-070RL; CR0402-16W-000RJT	YAGEO PHYCOMP;VENKEL LTD.	0	RES; SMT (0402); 0; 5%; JUMPER; 0.0630W
R14, R16, R18, R20, R22, R24	6	3296Y-1-204LF	BOURNs	200K	RESISTOR; THROUGH HOLE-RADIAL LEAD; 3296 SERIES; 200K OHM; 10%; 100PPM; 0.5W
R15	1	ERJ-2RKF1871	PANASONIC	1.87K	RES; SMT (0402); 1.87K; 1%; +/-100PPM/ DEGC; 0.1000W
R17	1	CRCW040230K9FK	VISHAY DALE	30.9K	RES; SMT (0402); 30.9K; 1%; +/-100PPM/ DEGC; 0.0630W
R19	1	CRCW040264K9FK; RC0402FR-0764K9L	VISHAY;YAGEO	64.9K	RES; SMT (0402); 64.9K; 1%; +/-100PPM/ DEGK; 0.0630W
R21, R64	2	CRCW0402100KFK; RC0402FR-07100KL	VISHAY;YAGEO	100K	RES; SMT (0402); 100K; 1%; +/-100PPM/ DEGC; 0.0630W

## MAX77542 Evaluation Kit

Evaluates: MAX77542 in WLP Package


### MAX77542 EV Kit Bill of Materials (continued)

REF DES	QTY*	MFG PART #	MANUFACTURER	VALUE	DESCRIPTION
R26, R65	2	RC0402FR-072K2L	YAGEO	2.2K	RES; SMT (0402); 2.2K; 1%; +/-100PPM/ DEGC; 0.0630W
R27, R74	2	RC0402FR-0722RL	YAGEO PHYCOMP	22	RES; SMT (0402); 22; 1%; +/-100PPM/ DEGC; 0.0630W
R28	1	CRCW0402470RFK	VISHAY DALE	470	RES; SMT (0402); 470; 1%; +/-100PPM/ DEGC; 0.0630W
R51, R52	2	RC0402FR-0727RL	YAGEO	27	RES; SMT (0402); 27; 1%; +/-100PPM/ DEGC; 0.0630W
R53	1	ERJ-2RKF1202	PANASONIC	12K	RES; SMT (0402); 12K; 1%; +/-100PPM/ DEGC; 0.1000W
R54	1	CRCW04021M00FK	VISHAY DALE	1M	RES; SMT (0402); 1M; 1%; +/-100PPM/ DEGC; 0.0630W
R55	1	ERJ-2RKF1001	PANASONIC	1K	RES; SMT (0402); 1K; 1%; +/-100PPM/ DEGC; 0.1000W
R60	1	RC0402FR-07150RL	YAGEO	150	RES; SMT (0402); 150; 1%; +/-100PPM/ DEGC; 0.0630W
R63	1	CRCW0402169KFK	VISHAY DALE	169K	RES; SMT (0402); 169K; 1%; +/-100PPM/ DEGC; 0.0630W
U3	1	MAX38902A-ATA+	MAXIM	MAX38902A-ATA+	EVKIT PART - IC; MAX38902A-ATA+; PACKAGE OUTLINE DEVICE: 21-0168; PACKAGE CODE XXXX
U4	1	MAX8512EXK+	MAXIM	MAX3395EETC	IC; TRANS; 15KV ESD-PROTECTED HIGH-DRIVE CURRENT QUAD-LEVEL TRANSLATOR WITH SPEED-UP CIRCUITRY; TQFN12 4X4
U5, U8	2	MAX3395EETC+	MAXIM	MAX3395EETC	IC; TRANS; 15KV ESD-PROTECTED HIGH-DRIVE CURRENT QUAD-LEVEL TRANSLATOR WITH SPEED-UP CIRCUITRY; TQFN12 4X4
U6	1	FT2232HL	FUTURE TECHNOLOGY DEVICES INTL LTD.	FT2232HL	IC; MMRY; DUAL HIGH-SPEED USB TO MULTIPURPOSE UART/FIFO; LQFP64
VUSB	1	5010	KEYSTONE	N/A	TEST POINT; PIN DIA=0.125IN; TOTAL LENGTH=0.445IN; BOARD HOLE=0.063IN; RED; PHOSPHOR BRONZE WIRE SIL;
Y1	1	7M-12.000MAAJ	TXC CORPORATION	12MHZ	CRYSTAL; SMT; 12MHZ; 18PF; TOL = +/-30PPM; STABILITY = +/-30PPM

## MAX77542 Evaluation Kit

Evaluates: MAX77542 in WLP Package


## MAX77542 EV Kit Schematic

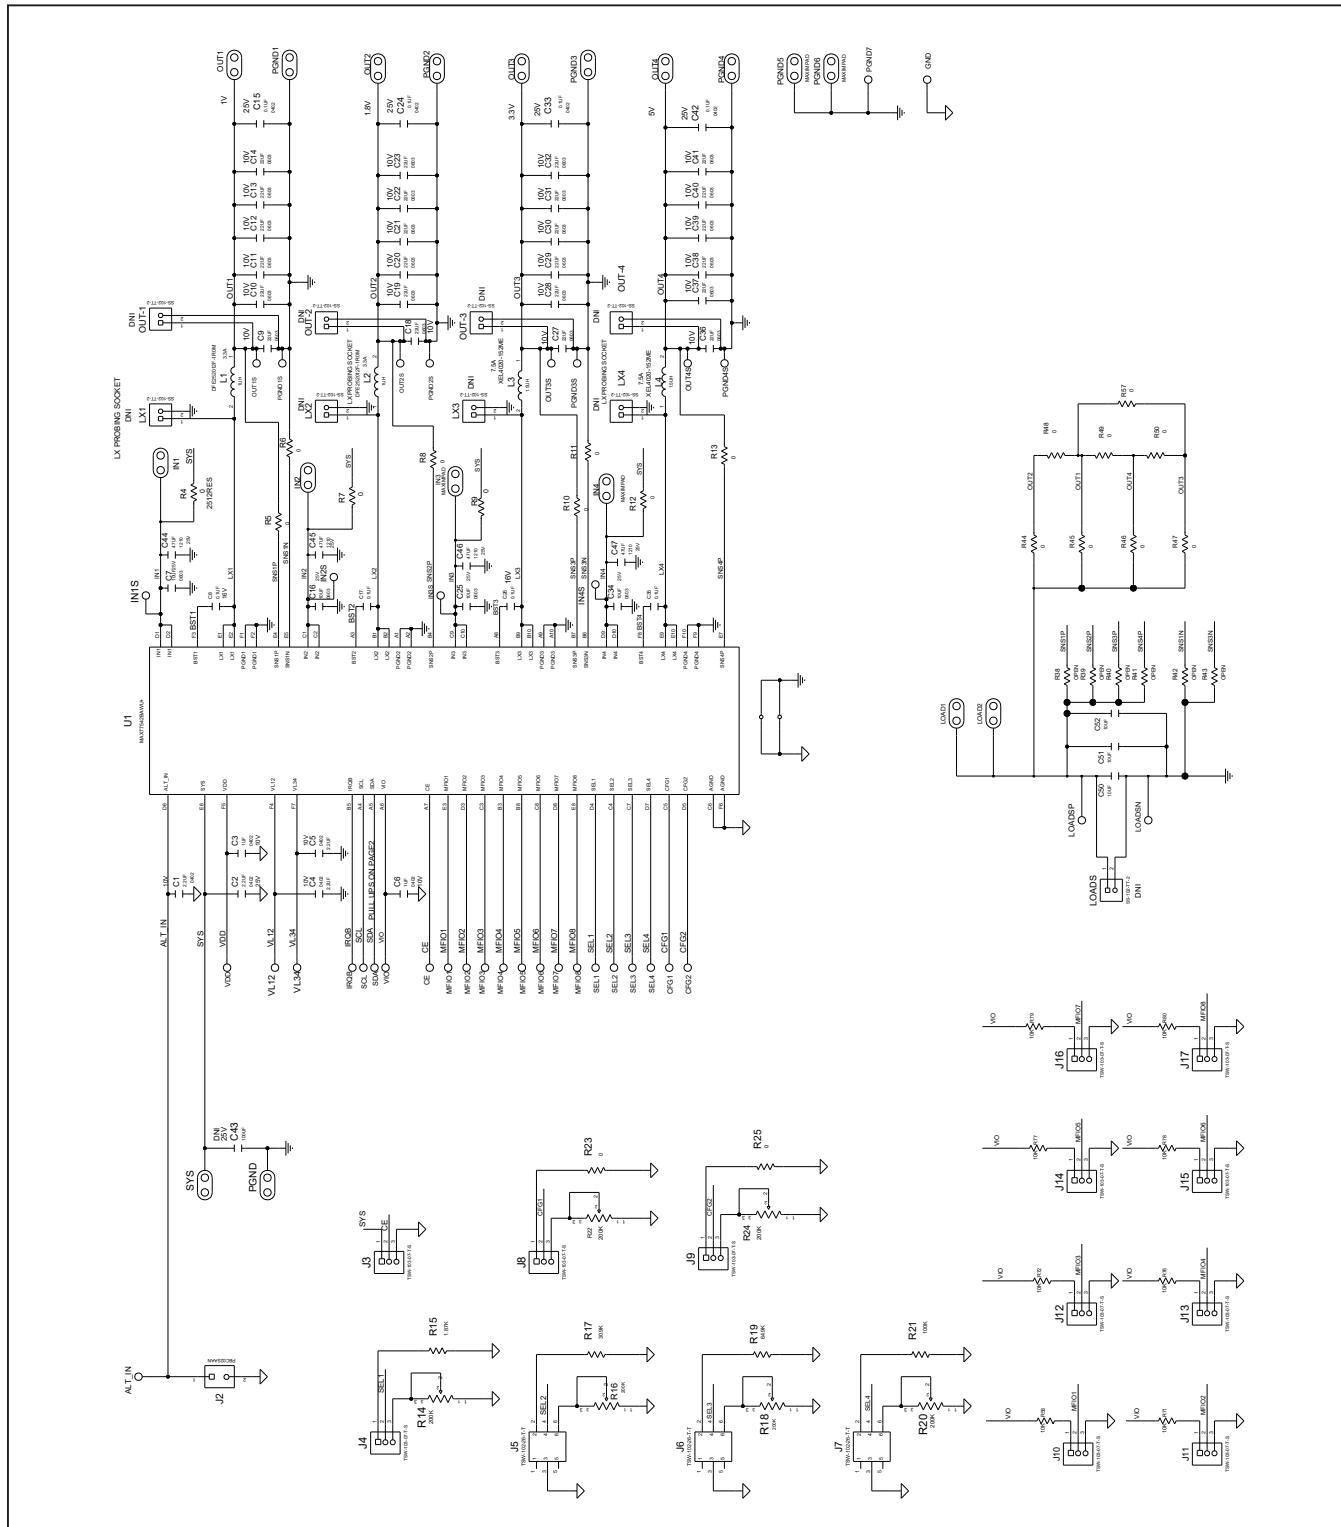

## MAX77542 Evaluation Kit

Evaluates: MAX77542 in WLP Package


## MAX77542 EV Kit Schematic (continued)

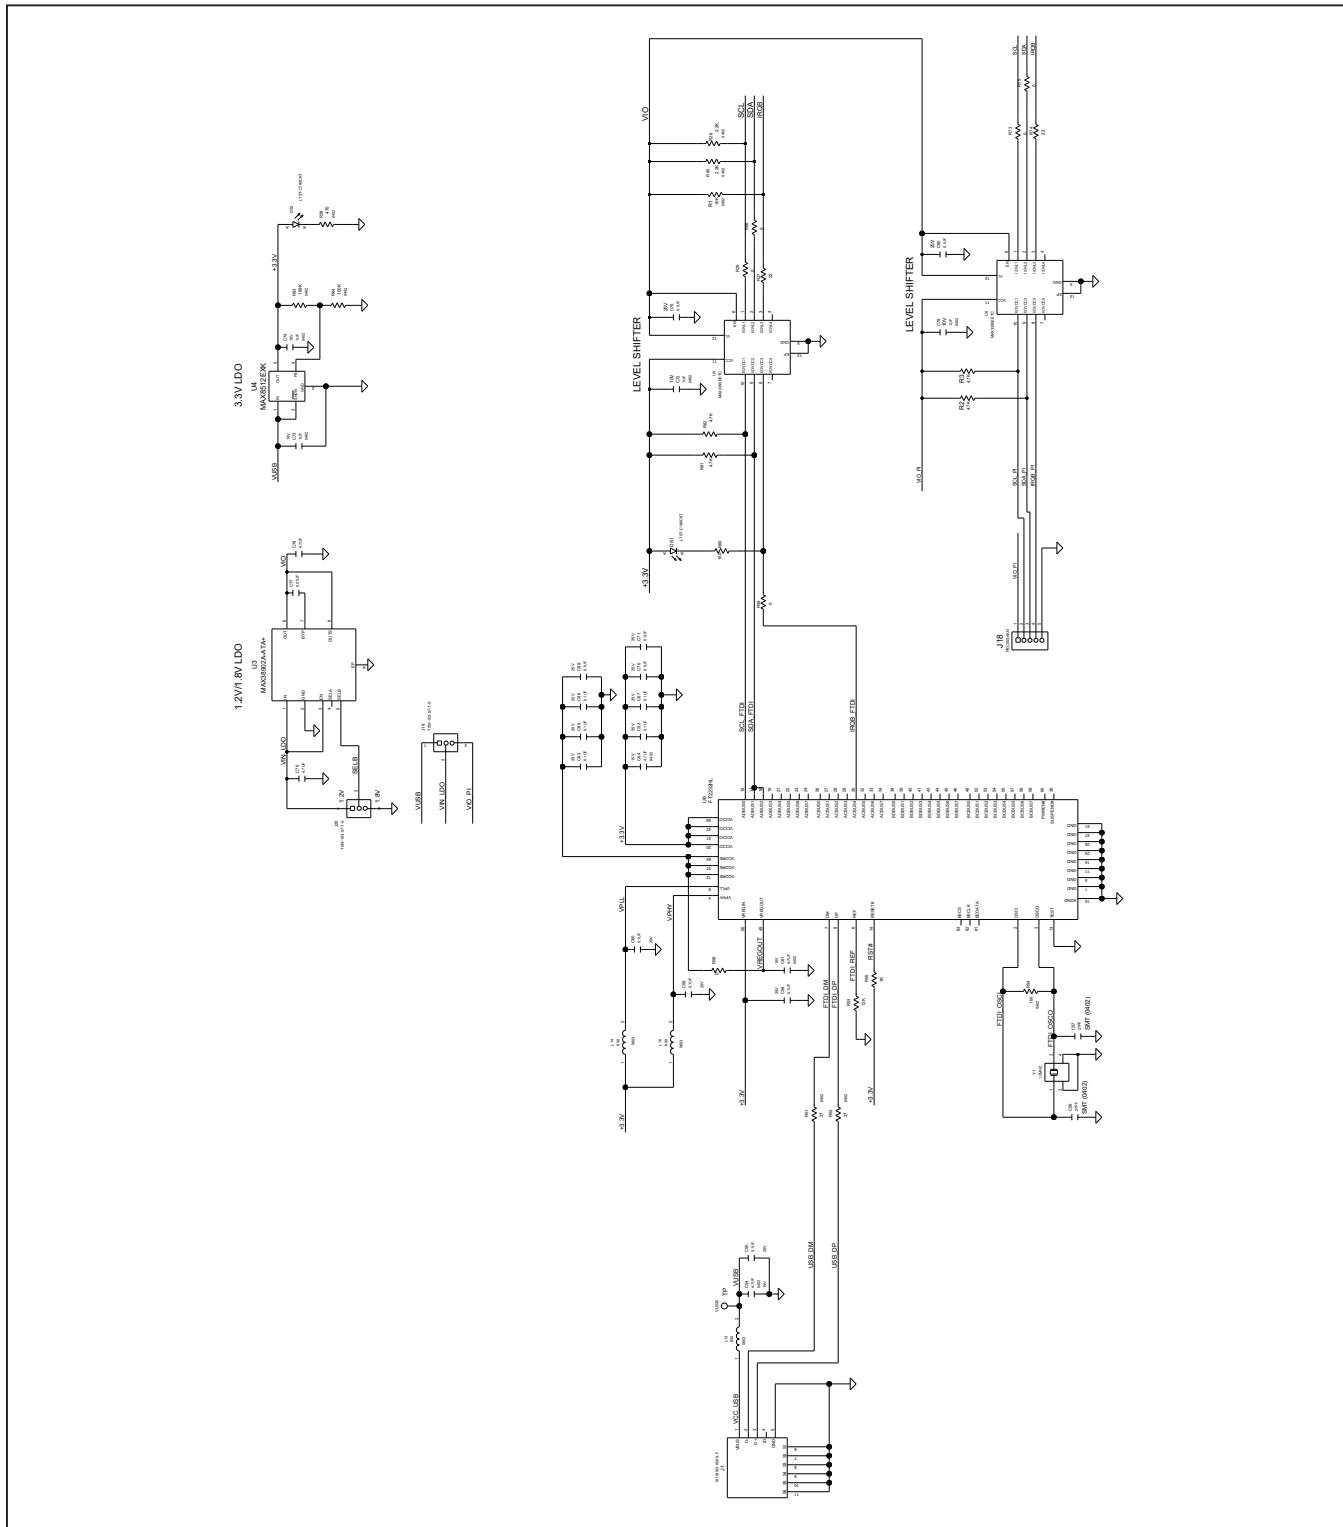

## MAX77542 Evaluation Kit

Evaluates: MAX77542 in WLP Package


### MAX77542 EV Kit Schematic (continued)

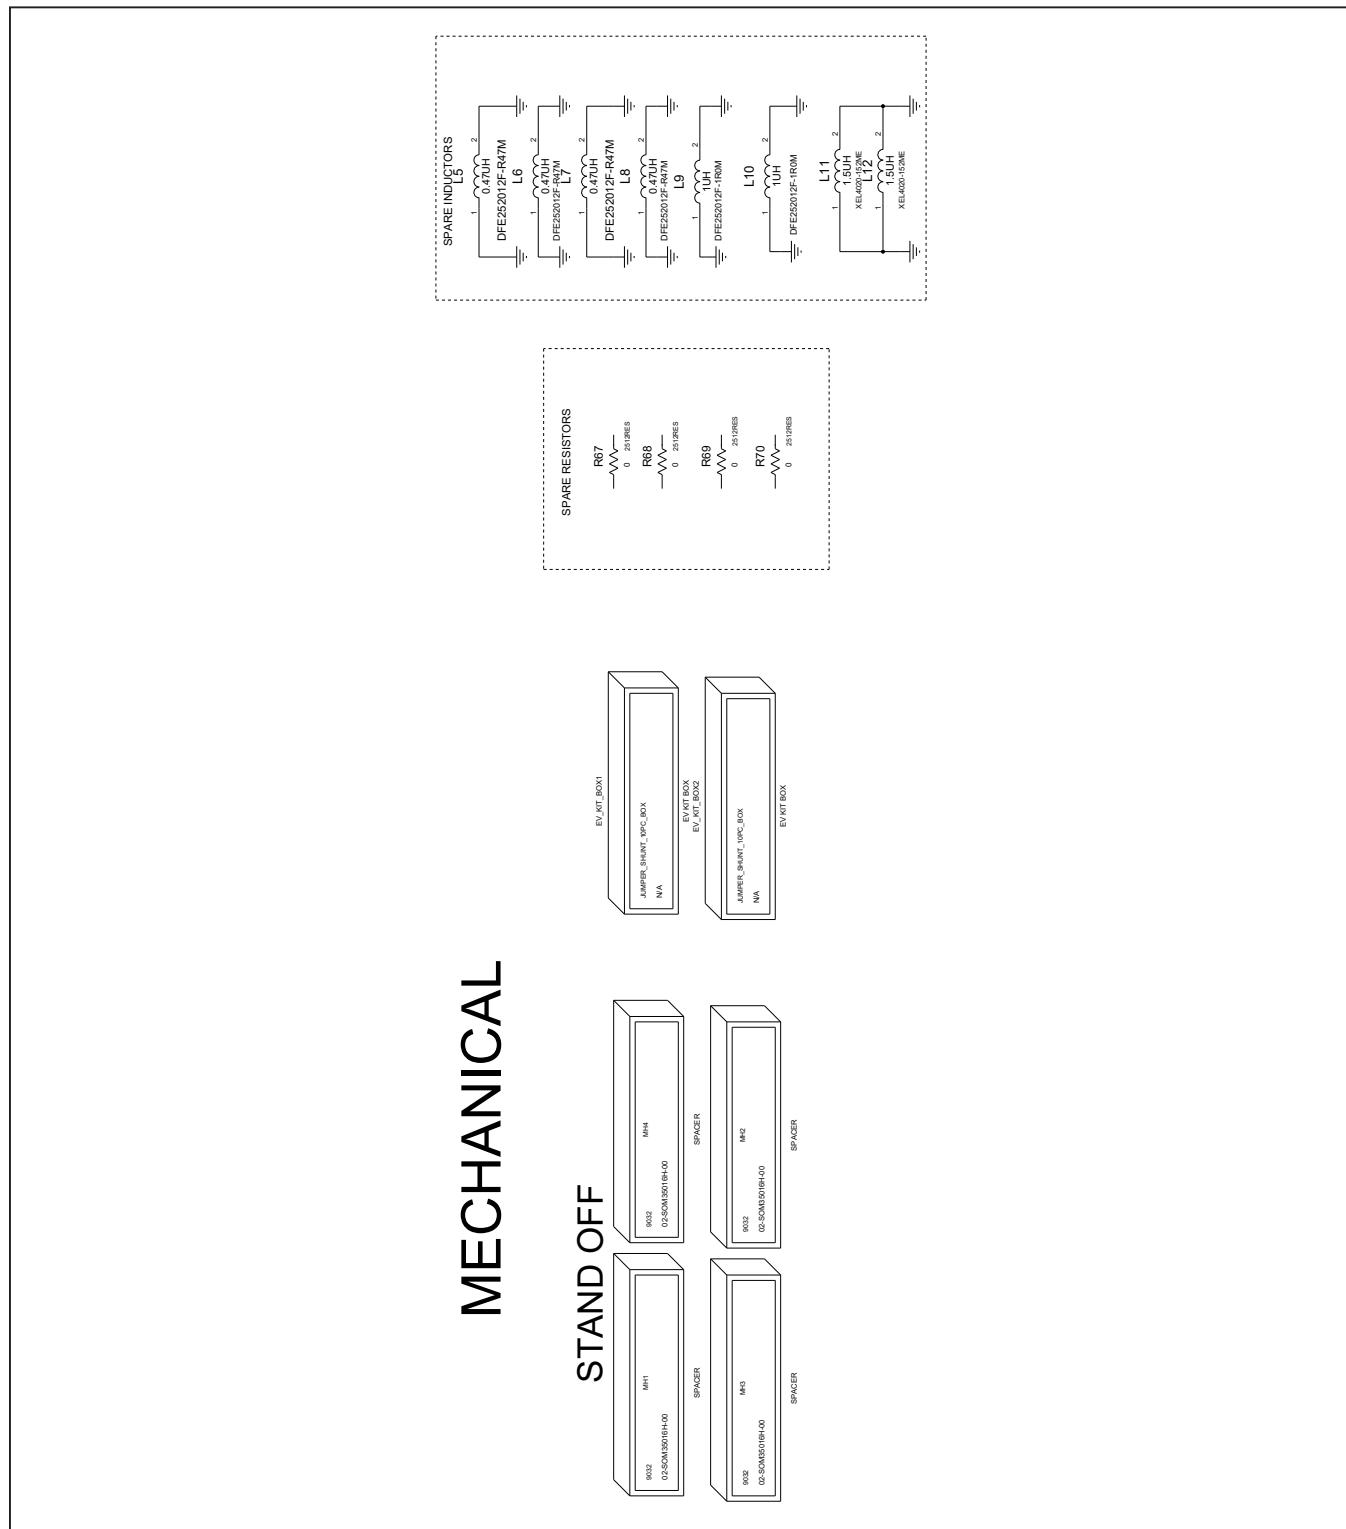

## MAX77542 Evaluation Kit


Evaluates: MAX77542 in WLP Package

## MAX77542 EV Kit PCB Layout

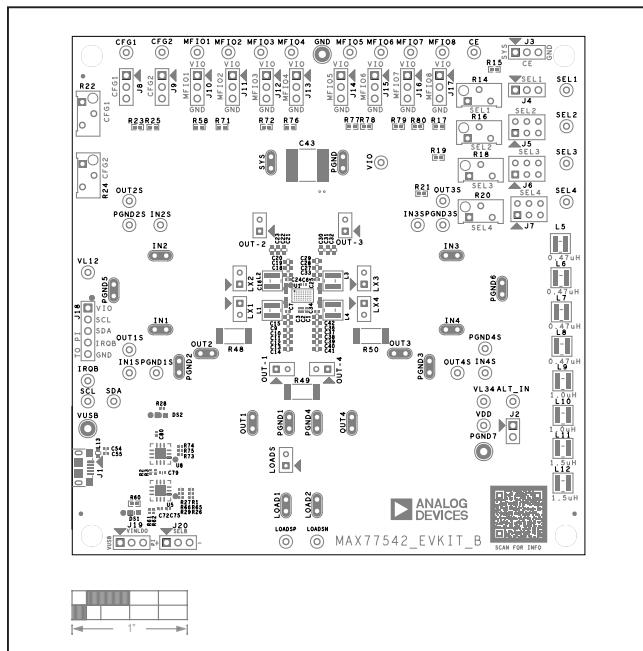


---

MAX77542 EV—Silk Top

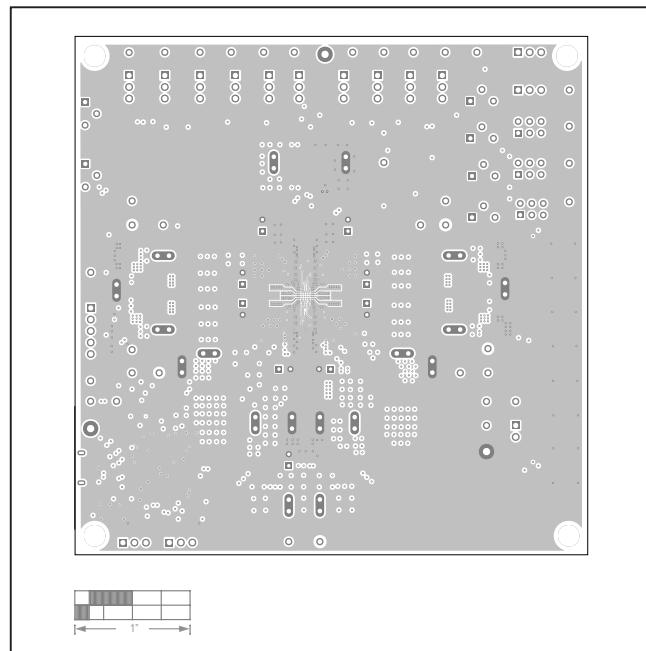


---

MAX77542 EV—Internal2

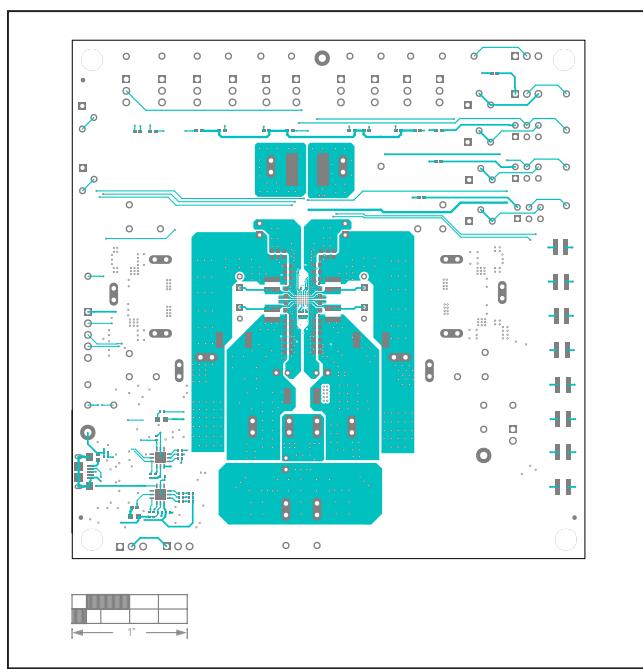

---

MAX77542 EV—Top

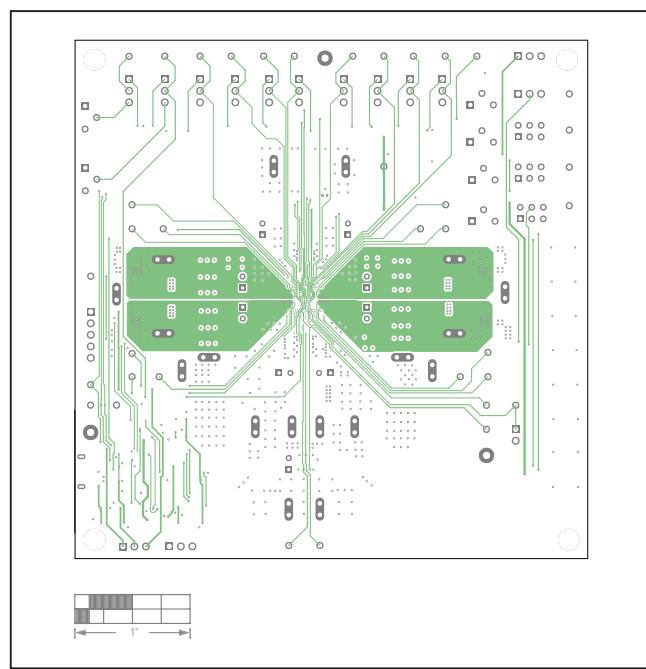


---

MAX77542 EV—Internal3


## MAX77542 Evaluation Kit

Evaluates: MAX77542 in WLP Package


### MAX77542 EV Kit PCB Layout (continued)

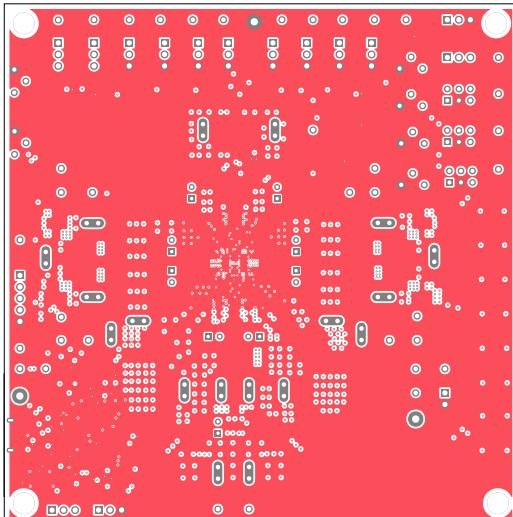


MAX77542 EV—Internal4

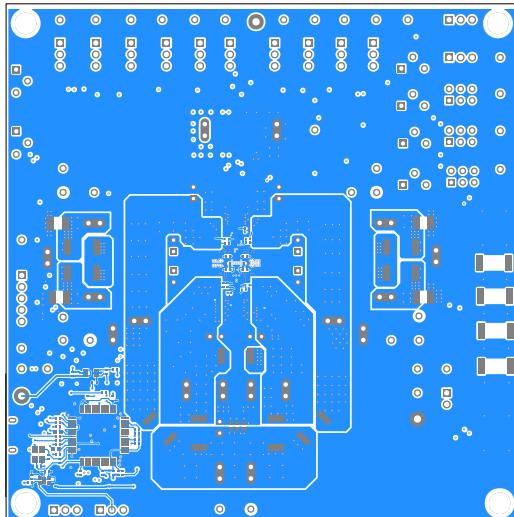

MAX77542 EV—Bottom

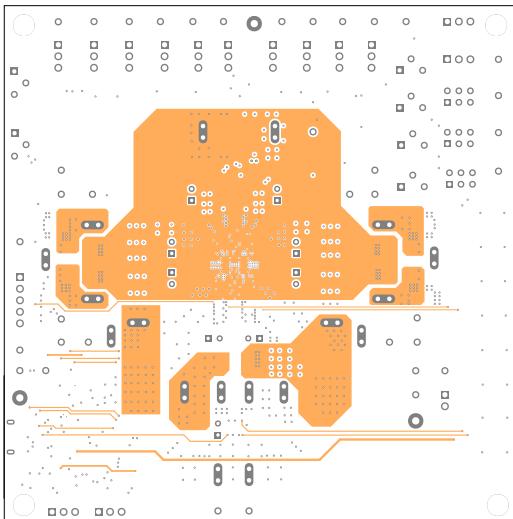

MAX77542 EV—Internal5

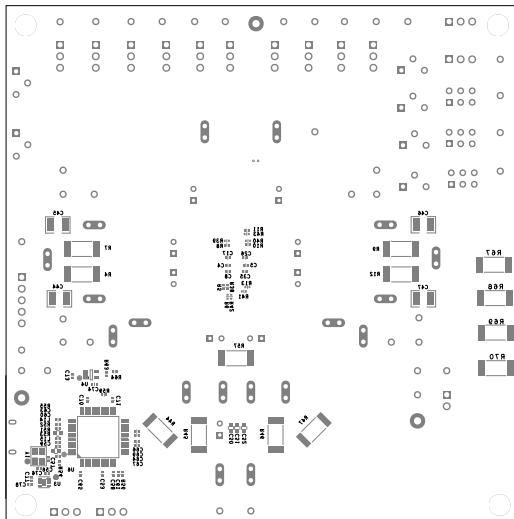

MAX77542 EV—Silk Bottom

**Revision History**

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	03/23	Initial release	—
1	10/24	Update <i>EV Kit Specifications and Default Configuration</i> section, MAX77542 EV Kit Bill of Materials, and MAX77542 EV Kit Schematic	2, 14, 18
2	11/24	Update MAX77542 EV Kit Bill of Materials	14

Windows is a registered trademark and registered service mark of Microsoft Corporation.



Information furnished by Analog Devices is believed to be accurate and reliable. However, no responsibility is assumed by Analog Devices for its use, nor for any infringements of patents or other rights of third parties that may result from its use. Specifications subject to change without notice. No license is granted by implication or otherwise under any patent or patent rights of Analog Devices. Trademarks and registered trademarks are the property of their respective owners.