


Rheostat and Tap Switch Hardware

Knobs, Dials, Mounting Fasteners

KNOBS

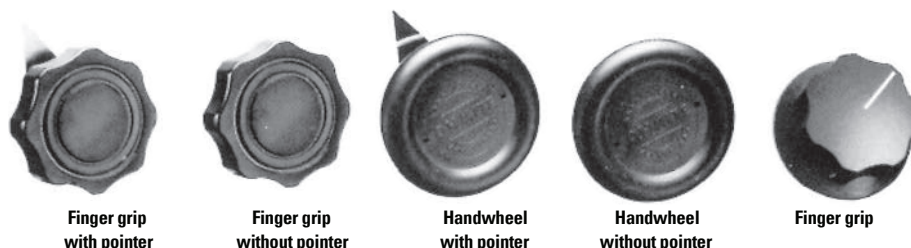

Finger grip
with pointer

Finger grip
without pointer

Handwheel
with pointer

Handwheel
without pointer


Finger grip

Any knob can be used with any rheostat and tap switch model which has the corresponding shaft diameter.

Knobs are fastened to shafts with slot ted set screws.

Slotted set screw*	Hex socket set socket*	Description	Knob dia.	Hole dia.	Fits model
✚ 5102 E	—	Bar knob, 57.15 long	—	6.35 (1/4")	H, J, G, K, L
✓ 5103 E	✓ 5103AE	Bar knob, 31.75 long	—	6.35 (1/4")	H, J, G, K, L
✓ 5104 E	✓ 5104AE	Handwheel with pointer	82.55 (3 1/4")	9.52 (3/8")	P, N, R, U
✓ 5105 E	—	Handwheel without pointer	82.55 (3 1/4")	9.52 (3/8")	P, N, R, U
✓ 5106 E	✚ 5106AE	Handwheel with pointer	82.55 (3 1/4")	6.35 (1/4")	H, J, G, K, L
✚ 5107 E	—	Handwheel without pointer	82.55 (3 1/4")	6.35 (1/4")	H, J, G, K, L
✓ 5109 E	✓ 5109AE	Finger-grip with pointer	41.27 (1 1/8")	6.35 (1/4")	H, J, G, K, L
✓ 5110 E	✚ 5110AE	Finger-grip without pointer	41.27 (1 1/8")	6.35 (1/4")	H, J, G, K, L
✓ 5111 E	✓ 5111AE	Finger-grip with pointer	60.32 (2 3/8")	6.35 (1/4")	H, J, G, K, L
✚ 5112 E	✚ 5112AE	Finger-grip without pointer	60.32 (2 3/8")	6.35 (1/4")	H, J, G, K, L
✓ 5150 E	✚ 5150AE	Finger-grip	38.1 (1 1/2")	6.35 (1/4")	H, J, G, K, L
✓ 5151 E	—	Finger-grip	19.05 (3/4")	3.17 (1/8")	C, E
—	5152AE	Like 5104 (shorter pointer)	82.55 (3 1/4")	6.35 (1/4")	H, J, G, K, L

RHEOSTAT TANDEM COUPLING KITS

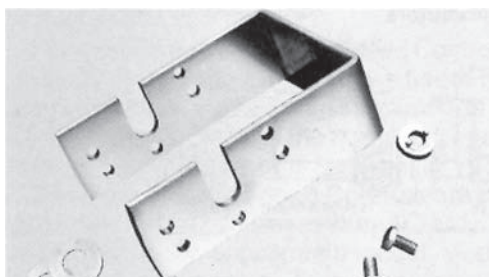

Ohmite coupling kits permit tandem mounting of two rheostat units. A coupling fastens to the shaft of the back unit; projections on the coupling engage the recesses in the driving hub of the front unit.

Each kit consists of a steel "U" frame, a coupling with set screw, mica washer, allen wrench and instructions.

Part No.*	Front mount models	Rear mount models	Max. panel thickness
✓ 6532 E	H, J	H, J, G, K, L	3.97 (3/16")
✓ 6533 E	G, K, L	H, J, G, K, L	3.17 (1/8")
✚ 6591 E	E	E	1.58 (1/16")

* Part available in RoHS (with "E" suffix) and non-RoHS version

✓ = Standard values

✚ = Non-standard values subject to minimum handling charge per item

(continued)

Rheostat and Tap Switch Hardware

Knobs, Dials, Mounting Fasteners

DIALS



For rheostats

For tap switches

Handsomely finished, black-enameled, aluminum dials for Ohmite rheostats and tap switches. Figures and lines are etched on a black background for contrast and ease of readability. On rheostat dials, divisions indicating approximate percentage of rheostat resistance in circuit are marked from 0 to 100. On tap switch dials, Number of dial positions are identical with number of switch positions.

Part No.*	For model	For knob	Dial dia.
5007 E	C, E	5151	38.10 (1 1/4")
5000 E	H, J, G, K, L	5150, 5116, 5103	55.56 (2 1/8")
5001 E	P, N, R, U	5104, 5106	139.7 (5 1/2")
5002 E-†	111, 212 (single), 312 (single)	5109, 5116, 5150	69.85 (2 3/4")
5003 E-†	212 (tandem), 312 (tandem), 412	5111, 5152A	95.25 (3 3/4")
5004 E-†	608	5104	139.7 (5 1/2")

† Specify number of positions as suffix.

RHEOSTAT REPAIR KITS

Electrical contact replacement kit. Kit includes contact/slip ring assemblies (for round and ribbon wire rheostats), copper graphite washer, spring arm and hub. Instructions included.



Part No.*	Rheostat model
7070 E	P
7071 E	N
7072 E	R
7074 E	U

EXTRA MOUNTING HARDWARE

Kit contains 25 each, nuts and lock washers for panel mounting units.

Part No.*	For model
✓7090 E	E
✓7091 E	H, J, G, K, L, 111, 212, 711

* Part available in RoHS (with "E" suffix) and non-RoHS version

✓= Standard values

✱= Non-standard values subject to minimum handling charge per item