

Modbus DO Sensor Adapter Datasheet



1 Introduction

The Modbus **Dissolved Oxygen (DO)** Sensor Adapter is designed to work with an analog galvanic probe to form a complete DO sensor. A BNC connector is built into the adapter for attaching such a probe.

The adapter and probe are calibrated using a single-point calibration procedure and the resulting sensor supports DO measurements ranging from 0 to 20 mg/L with a resolution of 0.01mg/L.

The sensor is suitable for use in water quality measurement applications such as nutrient tanks, fisheries and hatcheries, water treatment and sewage treatment plants, swimming pools, aquariums, and many other applications. Monitoring, alerting, and controlling the system can be done in real-time.

1.1 Features

- DO Sensor Adapter integrates directly with Analog Galvanic Dissolved Oxygen probe via BNC connector
- DO measurement range of 0 to 20 mg/L with linearized output and 0.01mg/L resolution
- Single point step-by-step guided calibration
- Implements Modbus protocol
- High report rate of 1 report every 5 seconds
- Low power consumption 88mW (5V)
- Operating temperature range: 0°C to +70°C
- Flush mount and DIN Rail Mount options



Neither the whole nor any part of the information contained in, or the product described in this manual, may be adapted, or reproduced in any material or electronic form without the prior written consent of the copyright holder. This product and its documentation are supplied on an as-is basis and no warranty as to their suitability for any particular purpose is either made or implied. Bridgetek Pte Ltd will not accept any claim for damages howsoever arising as a result of use or failure of this product. Your statutory rights are not affected. This product or any variant of it is not intended for use in any medical appliance, device, or system in which the failure of the product might reasonably be expected to result in personal injury. This document provides preliminary information that may be subject to change without notice. No freedom to use patents or other intellectual property rights is implied by the publication of this document. Bridgetek Pte Ltd, 1 Tai Seng Avenue, Tower A, #03-05, Singapore 536464. Singapore Registered Company Number: 201542387H

2 Part Numbers / Ordering Information

Part Number	Description
MS-1001-01A	Modbus Dissolved Oxygen (DO) Sensor Adapter
MA-0102-01A	Modbus RS485-RJ11 Cable (30cm)
LA-1201-01A	LDSBus DIN Rail Mount Set

Table 1 - Part Numbers / Ordering Information

Table of Contents

1	Introduction	1
1.1	Features	1
2	Part Numbers / Ordering Information	2
3	Specifications	4
4	FCC Compliance Statement	5
5	Hardware Features	6
6	Sensor Adapter Configuration and Installation	8
6.1	Connection Diagram for Standard Modbus Power Supply	8
6.2	RS485-RJ11 Cable(30cm)	9
7	Mounting Instructions	10
7.1	Flush Mount	10
7.2	DIN Rail Mount	10
8	Modbus Registers	11
9	Mechanical Dimensions	12
10	System Status LED Indicators	13
11	Probe Selection	14
12	Contact Information	15
Appendix A – References		16
Document References		16
Acronyms and Abbreviations		16
Appendix B – List of Figures and Tables		17
List of Figures		17
List of Tables		17
Appendix C – Revision History		18

3 Specifications

Features	Interface	BNC – DO probe connector RS485 Modbus RTU
	LED Indicator (RGB)	System Status Indicator (Please refer to LED section)
	Mounting	Flush Mount DIN Rail Mount
Power	Modbus Voltage	9-24V DC Bus Power
	Device Input Voltage	5V DC Bus Power
	Typical Power	5V, 88mW
	Max. Power	223mW
DO Sensor input module	Detection Range	0– 20 mg/L
	Resolution	0.01mg/L
	Response Time	<1Minute
	Calibration	1 Point Calibration
Physical Characteristics	Color	White
	Housing	Polycarbonate
	Dimensions	L117.6mm x W42.9mm x H29.7mm
Environmental Limits	Operating Temperature	0 to 70°C
	Storage Temperature	-20 to 85°C
	Ambient Relative Humidity	5 to 95% (non-condensing)
Package Contents	Device	1x Modbus Dissolved Oxygen Sensor Adapter
	Wire Assembly	1x Modbus RS485-RJ11 Cable(30cm)
Optional	Mounting Accessories	1x LDSBus DIN Rail Mount set

Table 2 - Modbus Dissolved Oxygen Sensor Adapter Specifications

4 FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) These devices may not cause harmful interference, and
- (2) These devices must accept any interference received, including interference that may cause undesired operation.

NOTE: The equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF exposure guidelines, at least 20cm of separation distance between the device and the user's body must be always maintained.

FCC Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with the instructions provided and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



5 Hardware Features

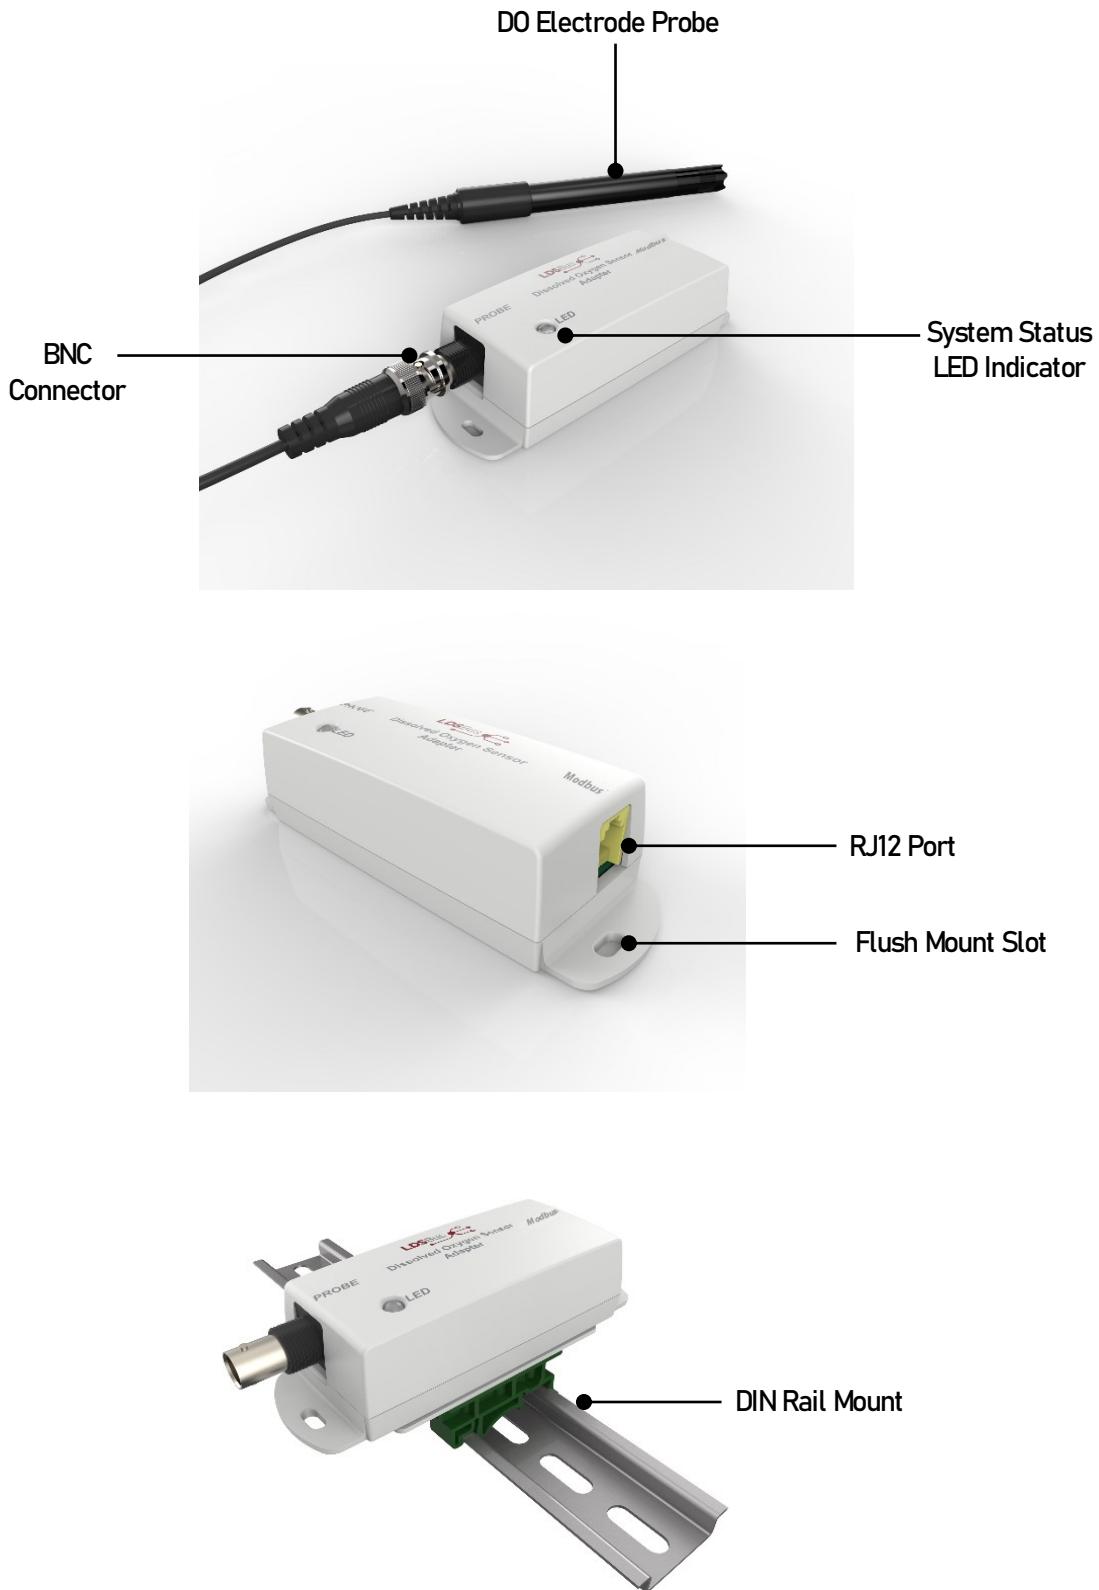


Figure 1 - Modbus Dissolved Oxygen Sensor Adapter Hardware Features

Function	Labels	Description
BNC Connector	Probe	Probe Interface
System Status LED Indicator	LED	Modbus status LED
RJ12 Port	Modbus	Modbus data and power interface port. The physical port is RJ12. The connection interface can be RJ11/RJ12.

Table 3 - Modbus DO Sensor Adapter Hardware Features

6 Sensor Adapter Configuration and Installation

Please visit <https://brtsys.com/resources/software/utility-tools> to access the Modbus Configuration Utility guide on how to configure the device name, device address and termination settings before using it for your specific application.

6.1 Connection Diagram for Standard Modbus Power Supply

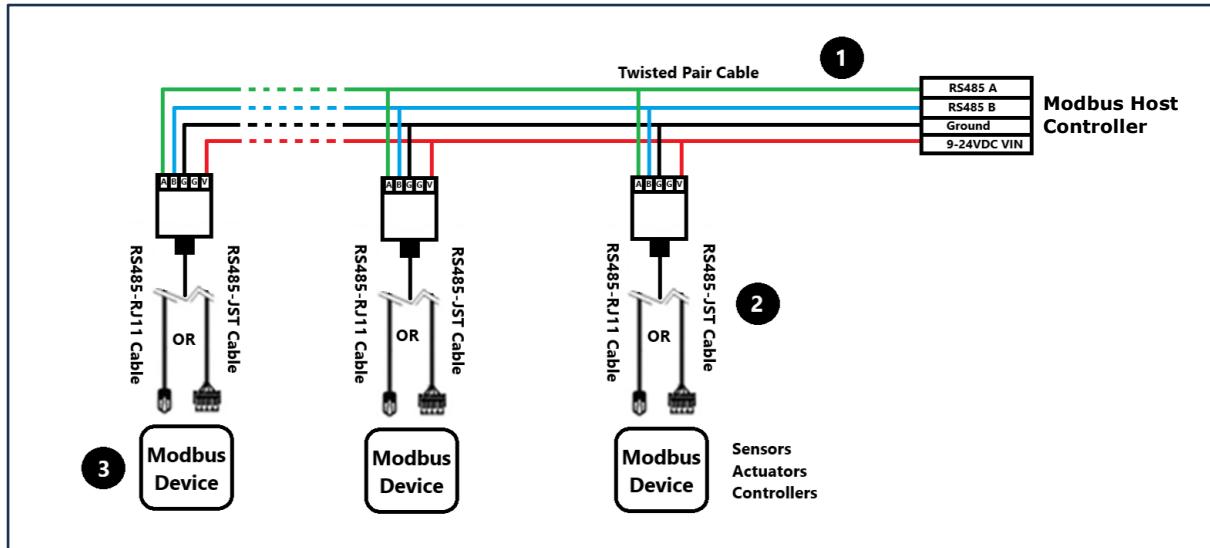


Figure 2 - Connection Diagram for Standard Modbus Power Supply

Setup Instructions:

1. Use a Cat5e/Cat6e RJ45 Twisted Pair Cable to connect the Modbus controller (Host) to the network for RS485 communication and power.
2. Connect each Modbus device to the network using either an RS485-JST cable or an RS485-RJ11 cable, as provided with the device.
3. Modbus devices have built-in bus termination resistors. These resistors can be enabled or disabled by using the [Modbus Configuration Utility](#). When installing the device as the last device on the bus, these terminations may be used to terminate the bus.

6.2 RS485-RJ11 Cable(30cm)

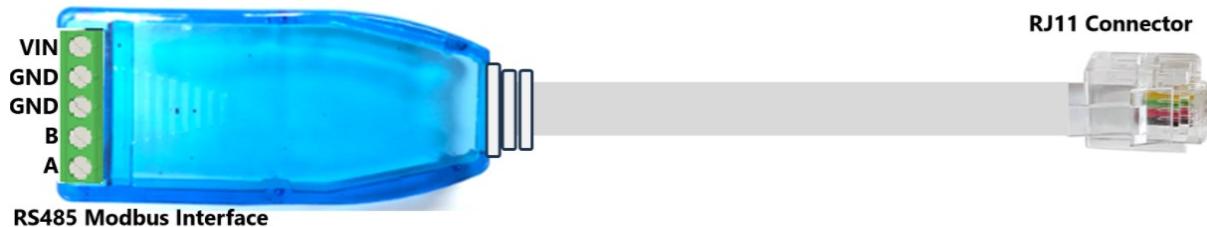


Figure 3 - RS485-RJ11 Cable(30cm)

PIN Legend	Function
VIN	Modbus Input Voltage 9-24VDC
GND	Ground
GND	Ground
B	RS485-B
A	RS485-A

Table 4 - RS485-RJ11 Cable(30cm) Pin Configuration

7 Mounting Instructions

7.1 Flush Mount

The Modbus DO Sensor Adapter can be flush mounted directly on a wall or any flat surface using 2 M3.5*16mm (thread) screws.

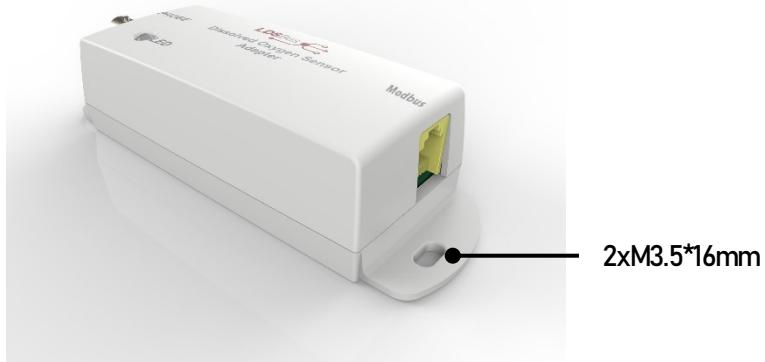


Figure 4 - Modbus Dissolved Oxygen Sensor Adapter Flush Mount

7.2 DIN Rail Mount

The DIN Rail Mount can be fixed using a DIN Rail bracket that has two mounting holes. The package includes mounting screws and a backplate. (The DIN Rail Bracket is not included in the package).

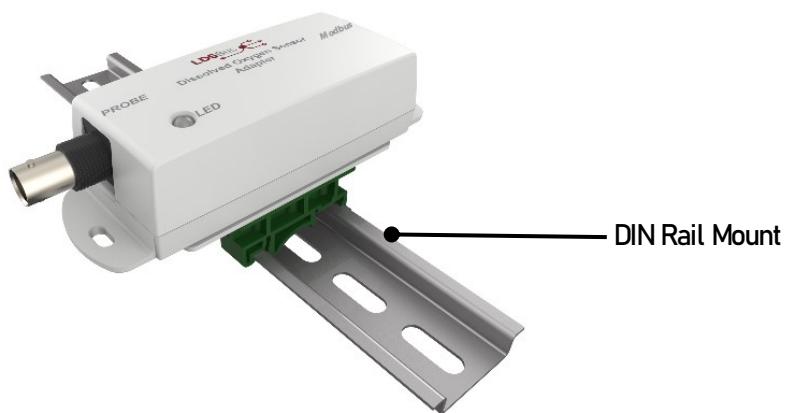


Figure 5 - Modbus Dissolved Oxygen Sensor Adapter DIN Rail Mount

8 Modbus Registers

Parameter	Starting Address	Quantity of Registers	Supported Function Code	Parameter Range and Description	Default
Address⁽¹⁾	0000H	1	0x03/0x10	1 to 126	126
RS485 Termination⁽¹⁾	0001H	1	0x03/0x10	0 - Termination OFF 1 - Termination ON	Termination OFF
Baud Rate⁽¹⁾	0002H	1	0x03/0x10	0 - 1200 bps 1 - 2400 bps 2 - 4800 bps 3 - 9600 bps 4 - 19200 bps 5 - 38400 bps 6 - 115200 bps	9600 bps
Parity⁽¹⁾	0003H	1	0x03/0x10	0 - None 1 - Odd 2 - Even	Even
Status LED Enable⁽¹⁾	0004H	1	0x03/0x10	0 - LED OFF 1 - LED ON	LED ON
Environment Temperature	0005H	1	0x03/0x10	Environment temperature 0 to 40 °C	N/A
Sensor Calibration Version	0006H	1	0x03/0x10	0x0090 - if calibrated, 0xFFFF no calibration available	0xFFFF
Sensor Calibrated Date	0007H	2	0x03/0x10	Calibration date YYYYMMDD 0x20221203	N/A
Sensor Calibrated Constant	0009H	1	0x03/0x10	Constant value = 0x0004	0x0004
Sensor Calibrated Voltage	000AH	1	0x03/0x10	In millivolt (mV)	N/A
Sensor Calibrated Temperature	000BH	2	0x03/0x10	Temperature	N/A
Cal XOR Checksum Value	000DH	1	0x03/0x10	XOR Checksum from registers 06H to 0CH	N/A
Device UUID	0026H	8	0x03	MSxxxxxxxxxx where x is ASCII character and yy is 16-bit running number	N/A
Device Firmware Version	002EH	1	0x03	0xXXMN XX - Not concerned M - Major N - Minor	N/A
Device Part Number	002FH	1	0x03	Device ID	0x800C
Reserved	0030H	N/A	N/A	Reserved	N/A
DO	0031H	1	0x03	0 - 20000 (0 - 20 mg/L)	N/A
Sensor ADC data	0032H	1	0x03	0-1023	N/A
Reset	0150H	1	0x06	Write 1 to reset	N/A
Reserved	0151H	N/A	N/A	Reserved	N/A
Identify	0152H	1	0x06	Write 1 to start blinking the device @1Hz for 10 seconds	N/A

Table 5 - Modbus Registers

⁽¹⁾This indicates that any updates to these communication/status register(s) will only take effect after the device has been rebooted.

9 Mechanical Dimensions

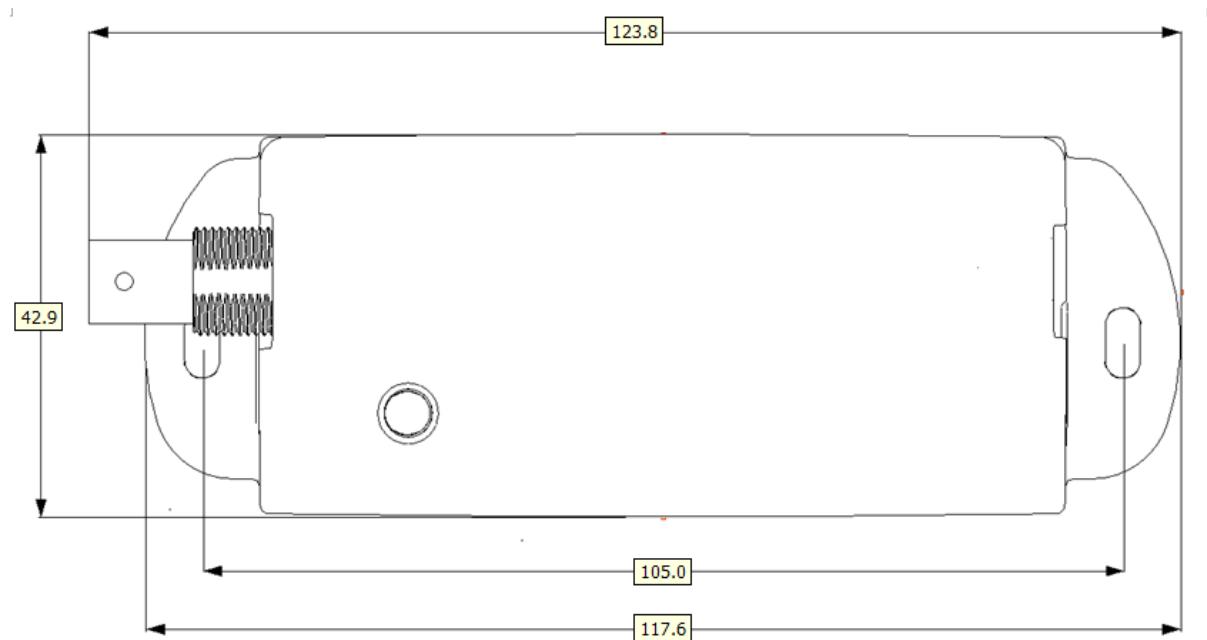


Figure 6 - Modbus Dissolved Oxygen Sensor Adapter Dimension – Top View



Figure 7 - Modbus Dissolved Oxygen Sensor Adapter Dimension – Side View

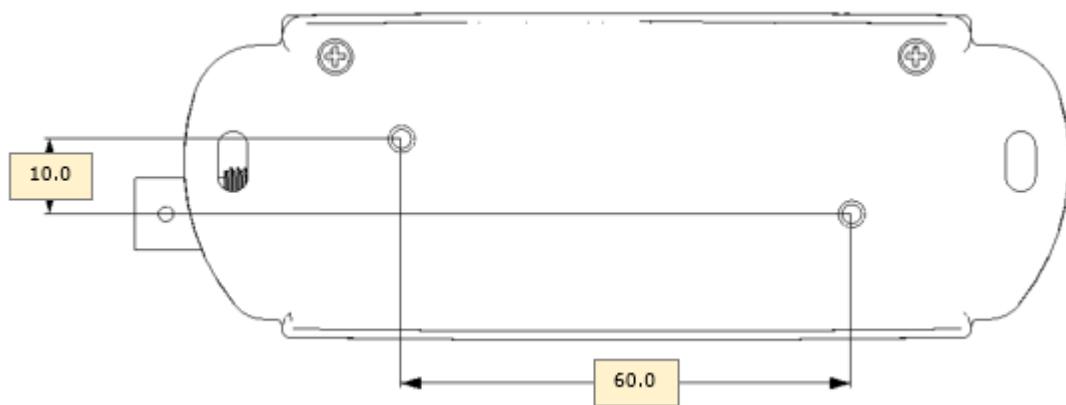


Figure 8 - Modbus Dissolved Oxygen Sensor Adapter Dimension – Bottom View

Note: All dimensions are in millimetres.

10 System Status LED Indicators

Device Status	LED Color	Flashing Frequency	Description
Termination ON	BLUE		Steady – Non-flashing
Termination OFF	GREEN		Steady – Non-flashing
Device Configuration Error	RED		Steady – Non-flashing
Communication	RED/GREEN/BLUE/YELLOW	-	Blink twice (Short blink)
Firmware update	YELLOW		Steady – Non-flashing

Table 6 - System Status LED Indicators

Note:

1. For reliable communication, ensure that the power supply and the RS485 termination settings are correct.
2. Ensure that the Modbus address and baud rate are configured correctly before deployment.

11 Probe Selection

The following specifications are recommended for selecting Dissolved Oxygen Probe -

Type	:	Galvanic Probe
Detection Range	:	0-50mg/L
Connector	:	BNC

12 Contact Information

Refer to <https://brtchip.com/contact-us/> for contact information.

Distributor and Sales Representatives

Please visit the Distribution Network – IC & Module (brtchip.com) page for the contact details of our distributor(s) and sales representative(s) in your country.

System and equipment manufacturers and designers are responsible to ensure that their systems, and any Bridgetek Pte Ltd (BRTChip) devices incorporated in their systems, meet all applicable safety, regulatory and system-level performance requirements. All application-related information in this document (including application descriptions, suggested Bridgetek devices and other materials) is provided for reference only. While Bridgetek has taken care to assure it is accurate, this information is subject to customer confirmation, and Bridgetek disclaims all liability for system designs and for any applications assistance provided by Bridgetek. Use of Bridgetek devices in life support and/or safety applications is entirely at the user's risk, and the user agrees to defend, indemnify and hold harmless Bridgetek from any and all damages, claims, suits, or expense resulting from such use. This document is subject to change without notice. No freedom to use patents or other intellectual property rights is implied by the publication of this document. Neither the whole nor any part of the information contained in, or the product described in this document, may be adapted, or reproduced in any material or electronic form without the prior written consent of the copyright holder. Bridgetek Pte Ltd, 1 Tai Seng Avenue, Tower A, #03-05, Singapore 536464. Singapore Registered Company Number: 201542387H.

Appendix A – References

Document References

[Modbus Configuration Utility User Guide](#)

Acronyms and Abbreviations

Terms	Description
DO	Dissolved Oxygen
LED	Light Emitting Diode
UUID	Universally Unique Identifier

Appendix B – List of Figures and Tables

List of Figures

Figure 1 - Modbus Dissolved Oxygen Sensor Adapter Hardware Features	6
Figure 2 - Connection Diagram for Standard Modbus Power Supply	8
Figure 3 - RS485-RJ11 Cable(30cm).....	9
Figure 4 - Modbus Dissolved Oxygen Sensor Adapter Flush Mount.....	10
Figure 5 - Modbus Dissolved Oxygen Sensor Adapter DIN Rail Mount	10
Figure 6 - Modbus Dissolved Oxygen Sensor Adapter Dimension – Top View.....	12
Figure 7 - Modbus Dissolved Oxygen Sensor Adapter Dimension – Side View.....	12
Figure 8 - Modbus Dissolved Oxygen Sensor Adapter Dimension – Bottom View	12

List of Tables

Table 1 - Part Numbers / Ordering Information.....	2
Table 2 - Modbus Dissolved Oxygen Sensor Adapter Specifications.....	4
Table 3 - Modbus DO Sensor Adapter Hardware Features.....	7
Table 4 - RS485-RJ11 Cable(30cm) Pin Configuration.....	9
Table 5 - Modbus Registers	11
Table 6 - System Status LED Indicators	13

Appendix C – Revision History

Document Title: Modbus DO Sensor Adapter Datasheet
Document Reference No.: BRT_000490
Clearance No.: BRT#254
Product Page: <https://brtchip.com/product/modbus-do-sensor-adapter/>
Document Feedback: [Send Feedback](#)

Revision	Changes	Date
Version 1.0	Initial release under Bridgetek	13-10-2025