



QS30AF Adjustable Field Series Sensor

Original Instructions

p/n: 111384 Rev. E

19-Aug-25

© Banner Engineering Corp. All rights reserved. www.bannerengineering.com

Contents

Chapter 1 Features	3
Models	3
QS30AF Overview	4
Optical Triangulation	4
Specifications	4
Performance Curves	5
Dimensions	6
Chapter 2 Sensor Configuration	7
Remote Configuration	7
Background Suppression SET	7
Object Detection SET	8
Manual Adjust	8
Dynamic SET	9
Bar Graph Indicator Functions	9
SETUP Mode	10
Push Button Disable	10
Chapter 3 Installation Instructions	11
Wiring	11
Installation Notes	11
Chapter 4 Accessories	13
Quick-Disconnect (QD) Cordsets	13
Brackets	13
Chapter 5 Product Support and Maintenance	15
Repairs and Translations	15
Contact Us	15
Banner Engineering Corp Limited Warranty	15

Chapter Contents

Models.....	3
QS30AF Overview.....	4
Specifications	4

Chapter 1

 
Features

- Push-button adjustable-field background suppression sensor detects objects within a defined sensing field, while ignoring objects located beyond the sensing field cutoff
- Easy cutoff point push-button SET options: Background Suppression SET, Object Detection SET and Dynamic SET, plus manual adjustments
- Easy push-button N.O./N.C. and output OFF-delay setup
- Powerful, highly collimated visible red sensing beam
- Tough ABS housing is rated IP67; NEMA 6
- Easy-to-read operating status indicators, with 8-segment bar graph display
- Bipolar discrete outputs, PNP and NPN
- Selectable 30 millisecond OFF-delay
- Models available with 2 m or 9 m (6.5 ft or 30 ft) cable or integral quick-disconnect
- Compact housing, mounting versatility – via popular 30 mm threaded barrel or side-mount

**WARNING:**

- Do not use this device for personnel protection
- Using this device for personnel protection could result in serious injury or death.
- This device does not include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A device failure or malfunction can cause either an energized (on) or de-energized (off) output condition.

Models

Model	Cutoff	Cable	Supply Voltage	Output Type	Sensing Mode	Sensing Beam
QS30AF	50 mm to 300 mm (2 in to 12 in)	2 m (6.5 ft) 5-wire cable	10 V DC to 30 V DC	Bipolar NPN/PNP	 DIFFUSE	Visible red, 660 nm
QS30AFQ		Integral 5-pin M12 quick disconnect				

Integral 2 m (6.5 ft) unterminated cable models are listed.

- To order the 9 m (30 ft) PVC cable model, add the suffix "W/30" to the cabled model number. For example, QS30AF W/30.
- Models with a quick disconnect require a mating cordset.

QS30AF Overview

The QS30AF is an easy-to-use triangulation sensor that provides a sophisticated yet cost-effective solution for demanding applications.


The sensor features two identically configured outputs, one NPN and one PNP. The sensor's compact housing has a large, easy-to-see bar graph display plus bright LEDs for easy configuration and status monitoring during operation.

The sensor can be side-mounted, using its integral mounting holes, or front-mounted, via its 30 mm threaded barrel.

Optical Triangulation

The function of the QS30 is based on optical triangulation.

Using optical triangulation to determine sensing distance

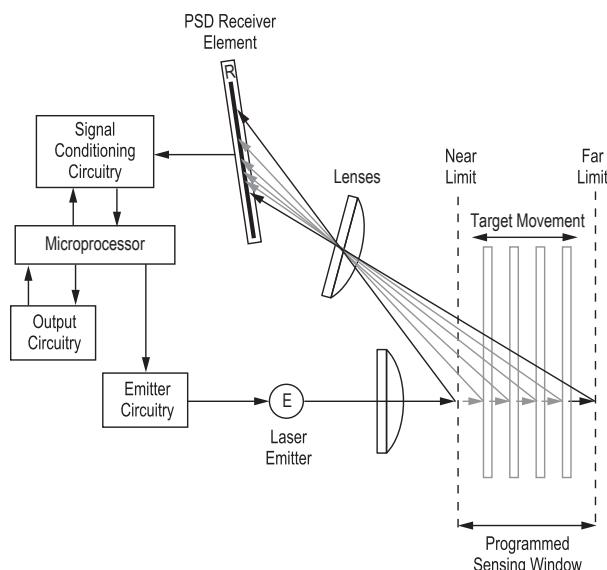

The emitter circuitry and optics create a light source that is directed toward a target. The light source bounces off the target, scattering some of its light through another lens to the sensor's position-sensitive device (PSD) receiver element. The target's distance from the receiver determines the light's angle to the receiver element. This angle determines where the returned light will fall along the PSD receiver element.

The position of the light on the PSD receiver element is processed through analog and digital electronics and analyzed by the microprocessor, which calculates the appropriate output value.

Specifications

Sensing Beam

Visible red, 660 nm

Supply Voltage

10 V DC to 30 V DC (10% max. ripple) at less than 45 mA, exclusive of load

Supply Protection Circuitry

Protected against reverse polarity, overvoltage, and transient voltages

Delay at Power-Up

250 ms; outputs do not conduct at this time

Output Configuration

Bipolar: 1 current sourcing (PNP) and 1 current sinking (NPN)

Output Ratings

150 mA maximum load (derate $\sim 1 \text{ mA}^{\circ}\text{C}$ above 25 $^{\circ}\text{C}$)

OFF-state leakage current: < 50 μA at 30 V DC

ON-state saturation voltage:

NPN: < 200 mV at 10 mA; < 1 V at 150 mA

PNP: < 1.25 V at 10 mA; < 2 V at 150 mA

Output Protection


Protected against output short-circuit, continuous overload, transient over-voltages, and false pulse on power up

Output Response Time

1 millisecond

Repeatability

170 microseconds

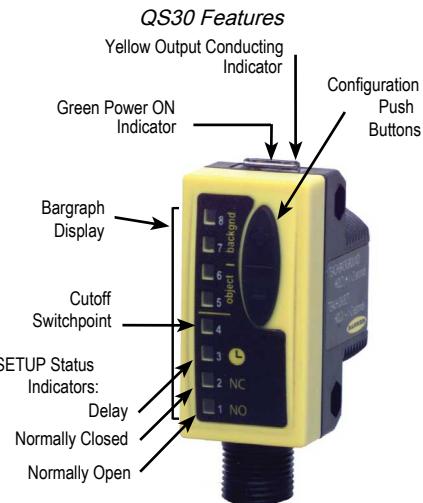

Adjustments

Two push buttons and remote wire
 Easy push-button configuration
 Manually adjust (+/-) cutoff (push buttons only)
 N.O./N.C. and OFF-delay configuration options (push buttons only)
 Push-button lockout (from remote wire only)

Indicators

8-segment red bar graph: Distance relative to cutoff point
Green LED: Power ON
Yellow LED: Output conducting

Connections

5-conductor 2 m (6.5 ft) integral PVC-jacketed cable, or 9 m (30 ft) integral PVC cable
 Integral 5-pin M12 male quick-disconnect connector

Construction

ABS plastic housing; acrylic lens cover

Environmental Rating

IP67, NEMA 6

Operating Conditions


-10 °C to +55 °C (+14 °F to +131 °F)
 90% at +55 °C maximum relative humidity (non-condensing)

Vibration and Mechanical Shock



All models meet MIL-STD-202F, Method 201A (Vibration: 10 Hz to 60 Hz maximum, 0.06 inch (1.52 mm) double amplitude, 10G maximum acceleration) requirements. Also meets IEC 60947-5-2 (Shock: 30G 11 ms duration, half sine wave) requirements.

Certifications


Performance Curves

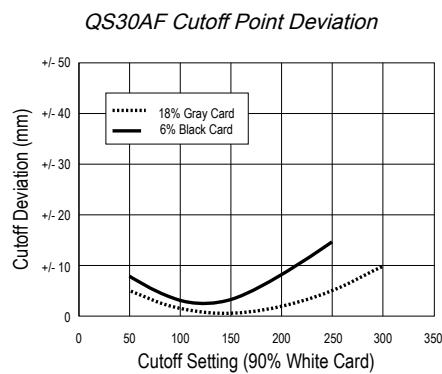

QS30AF Minimum Range vs. Cutoff Setting

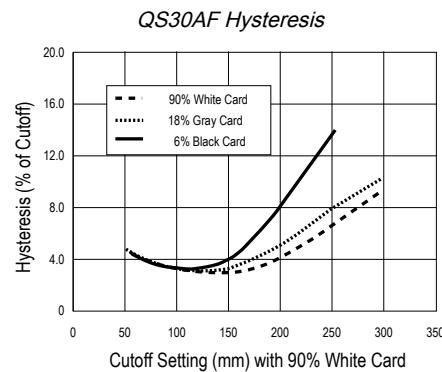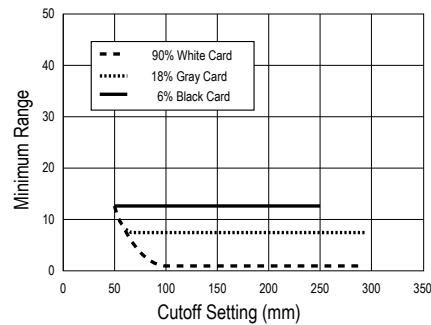

Dimensions

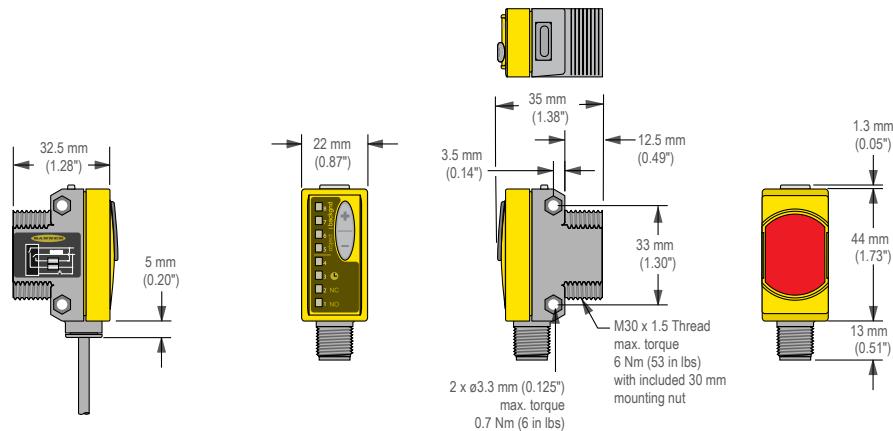

Chapter Contents

Remote Configuration	7
Background Suppression SET	7
Object Detection SET	8
Dynamic SET	9
Bar Graph Indicator Functions	9
SETUP Mode	10
Push Button Disable	10

Chapter 2

Sensor Configuration


The sensor's cutoff point is set using a simple procedure, via either the push buttons or the remote wire. Three methods are available: Background Suppression SET, Object Detection SET, and Dynamic SET (remote only). After the sensor has been set for the target application, manual adjustments (via the + and – push buttons) may be used to fine-tune the cutoff point. Sensor output configuration (N.O./N.C.) and the OFF-delay function are also set via the push buttons.

Remote Configuration

The remote function can be used to configure the sensor remotely or to disable the push button for security. Connect the gray wire of the sensor to ground (0 V DC), with a remote programming switch connected between them. Pulse the remote line according to the diagrams in the configuration procedures. The length of the individual programming pulses is equal to the value T where: $0.04 \text{ seconds} \leq T \leq 0.8 \text{ seconds}$

Background Suppression SET

Background Suppression SET

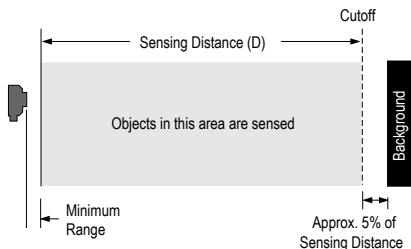

The distance to the background is sampled; the sensor places the cutoff point at approximately 95% of the distance to the background. In RUN mode, objects located between the minimum range and the taught cutoff are sensed; anything beyond the cutoff (for example, other objects or background surfaces) is ignored.

Minimum range varies, depending on the cutoff distance and reflectivity (see "QS30AF Performance Curves" on page 5).

	Push Button	Remote (0.04 seconds $\leq T \leq 0.8$ seconds)	Result
SET Background	<p>1. Present background condition.</p> <p>2. Press and hold Background (+) push button until indicators flash.</p>	<p>1. Present background condition.</p> <p>2. Single-pulse the remote line.</p>	Indicator segments 7 and 8 alternately flash.
Return to RUN Mode	<p>Sampling continues until the push button is released. The sensor returns to automatically to RUN mode.</p>	<p>Sensor returns to RUN mode.</p>	<p>If cutoff is accepted, sensor returns directly to RUN mode.</p> <p>If cutoff is beyond sensor range, Feedback is displayed for 2 seconds</p>

Continued on page 8


Continued from page 7




	Push Button	Remote (0.04 seconds \leq T \leq 0.8 seconds)	Result
			(see "Bar Graph Indicator Functions" on page 9). ⁽¹⁾

Object Detection SET

The distance to the target is sampled; the sensor places the cutoff point at approximately 105% of the distance to the target. In RUN mode, objects located between the minimum range and the cutoff are sensed; anything beyond the cutoff (for example, other objects or background surfaces) is ignored.

  Minimum range varies, depending on the cutoff distance and reflectivity (see "QS30AF Performance Curves" on page 5).

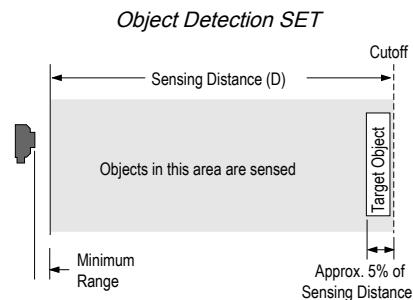

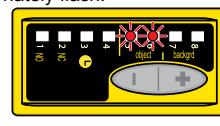	Push Button	Remote (0.04 seconds \leq T \leq 0.8 seconds)	Result
Sample Target Object	1. Present target object. 2. Press and hold Object (-) push button until indicators flash. 	1. Present target object. 2. Double-pulse the remote line. 	Indicator segments 5 and 6 alternately flash. 
Return to RUN Mode	Sampling continues until the push button is released. The sensor returns automatically to RUN mode. 	Sensor returns automatically to RUN mode.	Cutoff accepted: Sensor returns directly to RUN mode. Cutoff beyond sensor range: Feedback is displayed for 2 seconds (see "Bar Graph Indicator Functions" on page 9). ⁽²⁾

Manual Adjust

Click the push buttons (+ or -) to adjust the cutoff by approximately 2%.

- To suppress background more, click Background button.
- To increase object detection, click Object button.

The display will momentarily blink to acknowledge cutoff movement. If the cutoff is at an extreme, the far (7th and 8th) or near (1st and 2nd) bar graph segments will flash simultaneously to indicate that the cutoff did not adjust.


(1)

- **Segments 7 and 8 simultaneously flashing:** Indiscernible target; sensor defaults to maximum cutoff.
- **Segments 1 and 2 simultaneously flashing:** Background is nearer than minimum cutoff; sensor defaults to minimum cutoff.

(2)


- **Segments 7 and 8 simultaneously flashing:** Indiscernible target; sensor defaults to maximum cutoff.
- **Segments 1 and 2 simultaneously flashing:** Cutoff set is nearer than minimum cutoff; sensor defaults to minimum cutoff.

Dynamic SET

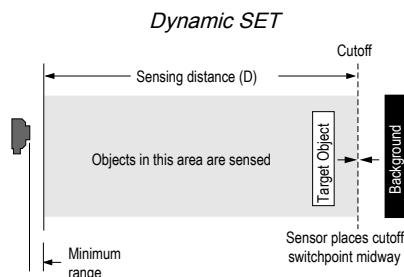

The sensor samples the distances to both the target objects and the background surface; the sensor places the cutoff point midway between the object and the background. In RUN mode, objects located between the minimum range and the cutoff are sensed; anything beyond the cutoff (for example, other objects or background surfaces) is ignored.

 Minimum range varies, depending on the cutoff distance and reflectivity (see "QS30AF Performance Curves" on page 5).

	Push Button	Remote (0.04 seconds \leq T \leq 0.8 seconds)	Result
Sample Target Present and Absent Conditions	Not available via push button.	<ol style="list-style-type: none"> 1. Hold remote line low greater than 2 seconds. 2. Continue to hold low while presenting at least 1 full application cycle. <p style="text-align: center;">[] > 2 seconds []</p>	Indicator segments 1 and 8 alternately flash. 
Return to RUN Mode		<p>Sampling continues until the remote line is released. The sensor returns automatically to RUN mode.</p>	Cutoff accepted: Sensor returns directly to RUN mode. Cutoff beyond sensor range: Feedback is displayed for 2 seconds (see "Bar Graph Indicator Functions" on page 9). ⁽³⁾

Bar Graph Indicator Functions

RUN Mode

- Lighted bar graph segment represents the relative distance from the cutoff point.
- **All segments OFF:** No object is detected within the visible range.

SET Mode

- **Segments 7 and 8 alternately flashing:** Background Suppression SET is active
- **Segments 5 and 6 alternately flashing:** Object Detection SET is active
- **Segments 1 and 8 alternately flashing:** Dynamic SET is active

SET Mode Feedback

If the cutoff point is accepted, the sensor returns immediately to RUN mode. If the taught cutoff point is beyond sensor range (closer than 50 mm or farther than 300 mm), the following are indicated for 2 seconds.

NOTE: The sensor defaults to either maximum or minimum cutoff, then returns to RUN mode.

- **Segments 7 and 8 are simultaneously flashing:** Indiscernible target; either no target or a highly reflective target (see "Installation Notes" on page 11). Sensor defaults to maximum cutoff.

(3)


- **Segments 7 and 8 simultaneously flashing:** Indiscernible target; sensor defaults to maximum cutoff.
- **Segments 1 and 2 simultaneously flashing:** Cutoff set is nearer than minimum cutoff; sensor defaults to minimum cutoff.

- **Segments 1 and 2 are simultaneously flashing:** Target is nearer than the minimum cutoff. Sensor defaults to minimum cutoff.

SETUP Mode

SETUP mode (accessible via push buttons only) is used to change sensor output response for:

- Normally Closed or Normally Open operation
- 30-millisecond pulse stretcher (OFF-delay), if required

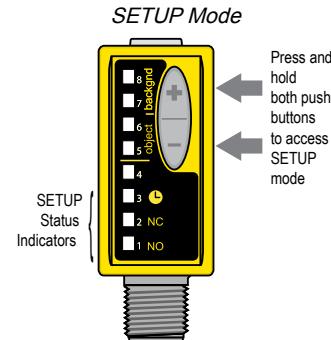

The status LEDs, active only during SETUP mode, indicate the output response configuration when the sensor will be in RUN mode. Four combinations are possible:

- Normally Open, No Delay
- Normally Closed, No Delay
- Normally Open, 30 ms Delay
- Normally Closed, 30 ms Delay

To access SETUP mode and change the output response settings:

1. Press and hold BOTH push buttons simultaneously until the green LED indicator turns OFF.
2. Click EITHER push button to toggle through the four possible setting combinations.
3. Sensor returns to RUN mode after push buttons are inactive for 4 seconds.

NOTE: Outputs are active during SETUP mode.

Push Button Disable

In addition to its configuration function, the remote wire may be used to disable the push buttons for security. Disabling the push buttons prevents accidental or unauthorized adjustment of the sensor settings. Connect the sensor's gray wire as described in , and four-pulse to either enable or disable the push buttons: 

Chapter Contents


Wiring	11
Installation Notes	11

Chapter 3

Installation Instructions

Wiring


Quick disconnect wiring diagrams are functionally identical.

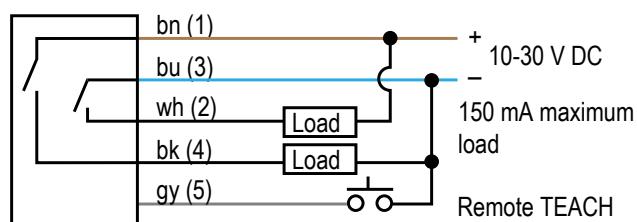

Installation Notes


Some targets (those with a stepped plane facing the sensor, a boundary line, or rounded targets) pose specific problems for sensing distances. For such applications, see ["Figure: Sensor Orientations for Typical Targets" on page 11](#) for suggested mounting orientation.

Sensor Orientations for Typical Targets

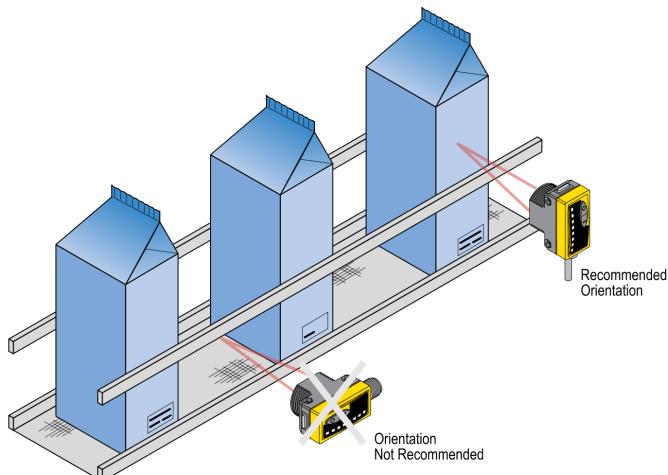

Highly Reflective Backgrounds . Use caution when sensing mirror-like background surfaces that produce specular reflections. False sensor response can occur if a background reflects the sensor's light more strongly to the near end of the detector than to its far end, resulting in a possible false ON condition. Use of a diffusely reflective (matte) background will cure this problem. Other possible solutions are to angle either the sensor or the background (in any plane) so that the background does not reflect back to the sensor (see ["Figure: Reflective Background – Problem" on page 12](#) and ["Figure: Reflective Background – Solution" on page 12](#)).

For these applications, the Object Detection SET procedure is recommended.

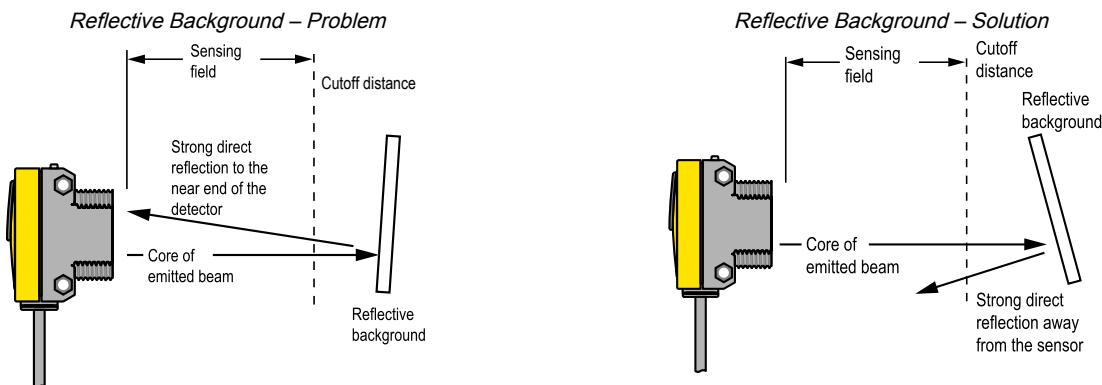

Chapter Contents

Quick-Disconnect (QD) Cordsets	13
Brackets	13

Chapter 4 Accessories

Quick-Disconnect (QD) Cordsets

5-pin Single-Ended M12 Female Cordsets				
Model	Length	Dimensions (mm)	Pinout (Female)	
BC-M12F5-22-1	1 m (3.28 ft)			1 = Brown 2 = White 3 = Blue 4 = Black 5 = Gray
BC-M12F5-22-2	2 m (6.56 ft)			
BC-M12F5-22-5	5 m (16.4 ft)			
BC-M12F5-22-8	8 m (26.25 ft)			
BC-M12F5-22-10	10 m (30.81 ft)			
BC-M12F5-22-15	15 m (49.2 ft)			

5-pin Single-Ended M12 Female Right-Angle Cordsets				
Model	Length	Dimensions (mm)	Pinout (Female)	
BC-M12F5A-22-1	1 m (3.28 ft)			1 = Brown 2 = White 3 = Blue 4 = Black 5 = Gray
BC-M12F5A-22-2	2 m (6.56 ft)			
BC-M12F5A-22-5	5 m (16.4 ft)			
BC-M12F5A-22-8	8 m (26.25 ft)			
BC-M12F5A-22-10	10 m (30.81 ft)			
BC-M12F5A-22-15	15 m (49.2 ft)			

Brackets

SMBQS30L

- Right-angle bracket for cable sensor models
- Clearance for M4 (#8) hardware
- $\pm 12^\circ$ tilt adjustment
- 14-gauge stainless steel


Hole center spacing: A to B=35.0
Hole size: A=Ø 4.3, B=Ø 4.25x16.3



SMBQS30LT


- Tall right-angle bracket for QD models
- $\pm 8^\circ$ tilt adjustment
- 14-gauge stainless steel

Hole center spacing: A to B=35.0
Hole size: A= \varnothing 4.3, B= \varnothing 4.25 \times 16.3

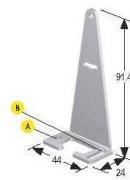**SMBQS30Y**

- Heavy-duty die-cast bracket
- M18 vertical mount option
- $\pm 8^\circ$ tilt adjustment with cabled units
- Includes nuts and lock washer

Hole size: A= \varnothing 15.3

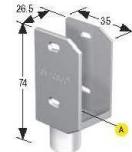

Other Compatible Mounting Brackets (see www.bannerengineering.com for more information):

- SMB30MM
- SMB30SC
- SMB30A

Chapter Contents

Repairs and Translations.....	15
Contact Us.....	15
Banner Engineering Corp Limited Warranty.....	15

Chapter 5

Product Support and Maintenance

Repairs and Translations

Obtain assistance with product repairs by contacting your local Banner Engineering Corp distributor or by calling Banner directly at (763) 544-3164. Access literature translated into your native language on the Banner website at www.bannerengineering.com or contact Banner directly at (763) 544-3164.

Para reparaciones de productos, por favor contacte a su distribuidor local de Banner Engineering o llame a Banner directamente al 00 1 (763) 544-3164. Vea la literatura traducida en su idioma en el sitio web Banner en www.bannerengineering.com o comuníquese con Banner directamente al 00 1 (763) 544-3164.

Pour vous aider lors de la réparation de produits, contactez votre distributeur local ou appelez directement Banner au (763) 544-3164. La documentation traduite dans votre langue est disponible sur le site internet de Banner www.bannerengineering.com ou contactez directement Banner au (763) 544-3164.

请联系当地的 Banner Engineering Corp 经销商或直接致电 Banner +1 (763) 544-3164, 以获得产品维修帮助。请访问邦纳网站 www.bannerengineering.com 或直接拨打 +1 (763) 544-3164 联系邦纳, 获取翻译成您母语的资料。

제품 수리에 대한 지원은 지역 Banner Engineering Corp 대리점에 문의하거나 Banner에 직접 (763) 544-3164로 문의하실 수 있습니다. 사용자의 모국어로 번역된 자료는 Banner 웹사이트 www.bannerengineering.com에서 액세스하거나 Banner에 직접 (763) 544-3164로 문의하실 수 있습니다.

Contact Us

Banner Engineering Corp. | 9714 Tenth Avenue North | Plymouth, MN 55441, USA | Phone: + 1 888 373 6767

For worldwide locations and local representatives, visit www.bannerengineering.com.

Banner Engineering Corp Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.**

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: www.bannerengineering.com.

For patent information, see www.bannerengineering.com/patents.



[LinkedIn](#)



[X \(formerly Twitter\)](#)



[Facebook](#)

