

Revised Edition

Motor Control Development Support Tool Renesas Motor Workbench 3.1

User's Manual

RA/RX/RL78 Family

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Technology Corp. website (<http://www.renesas.com>).

General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity. Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.

3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

6. Voltage application waveform at input pin

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between V_{IL} (Max.) and V_{IH} (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between V_{IL} (Max.) and V_{IH} (Min.).

7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.

8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall be responsible for determining what licenses are required from any third parties, and obtaining such licenses for the lawful import, export, manufacture, sales, utilization, distribution or other disposal of any products incorporating Renesas Electronics products, if required.
5. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
6. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
 - "Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.
 - "High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implants; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.

7. No semiconductor product is absolutely secure. Notwithstanding any security measures or features that may be implemented in Renesas Electronics hardware or software products, Renesas Electronics shall have absolutely no liability arising out of any vulnerability or security breach, including but not limited to any unauthorized access to or use of a Renesas Electronics product or a system that uses a Renesas Electronics product. **RENESAS ELECTRONICS DOES NOT WARRANT OR GUARANTEE THAT RENESAS ELECTRONICS PRODUCTS, OR ANY SYSTEMS CREATED USING RENESAS ELECTRONICS PRODUCTS WILL BE INVULNERABLE OR FREE FROM CORRUPTION, ATTACK, VIRUSES, INTERFERENCE, HACKING, DATA LOSS OR THEFT, OR OTHER SECURITY INTRUSION ("Vulnerability Issues"). RENESAS ELECTRONICS DISCLAIMS ANY AND ALL RESPONSIBILITY OR LIABILITY ARISING FROM OR RELATED TO ANY VULNERABILITY ISSUES. FURTHERMORE, TO THE EXTENT PERMITTED BY APPLICABLE LAW, RENESAS ELECTRONICS DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO THIS DOCUMENT AND ANY RELATED OR ACCOMPANYING SOFTWARE OR HARDWARE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE.**
8. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
9. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
10. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
11. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
12. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
13. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
14. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.5.0-1 October 2020)

Corporate Headquarters

TOYOSU FORESIA, 3-2-24 Toyosu,
Koto-ku, Tokyo 135-0061, Japan

www.renesas.com

Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit: www.renesas.com/contact/.

Table of Contents

| | |
|--|----|
| 1. Renesas Motor Workbench Overview | 1 |
| 1.1 RMW Functions | 1 |
| 1.2 Related Document | 1 |
| 2. Main Window | 2 |
| 2.1 Overview | 2 |
| 2.2 Window Structure | 2 |
| 2.3 Explanation of Items on Main Window | 3 |
| 2.3.1 Menu Bar | 3 |
| 2.3.2 Connection area | 4 |
| 2.3.3 Configuration | 6 |
| 2.3.4 File Information | 6 |
| 2.3.5 Select Tool | 7 |
| 2.3.6 Project File Path and File List | 8 |
| 2.4 Main Window Operation | 9 |
| 2.4.1 Loading Authentication File | 9 |
| 2.4.2 Loading RMT File | 11 |
| 2.4.3 Saving RMT file | 13 |
| 2.4.4 Loading Map File (Variable List) | 14 |
| 2.4.5 Option Dialog from Option Menu | 15 |
| 2.4.6 USB Connection | 18 |
| 2.4.7 Basic Window Operation | 21 |
| 2.4.8 Confirming version | 23 |
| 2.5 Select Navigation Function | 24 |
| 3. Analyzer Tool | 25 |
| 3.1 Overview | 25 |
| 3.2 Analyzer Tool Structure | 26 |
| 3.3 Analyzer tool View | 27 |
| 4. [Analyzer] Control Window | 28 |
| 4.1 Overview | 28 |
| 4.2 Features | 28 |
| 4.3 Window Structure | 28 |
| 4.3.1 Operation Buttons | 29 |
| 4.3.2 Variable Data Tab | 30 |
| 4.3.3 Variable List Tab | 31 |
| 4.3.4 Alias Name tab | 32 |
| 4.4 Specifying Variable Name (Variable Data Tab) | 33 |
| 4.4.1 Specifying Variable Name | 33 |
| 4.4.2 Setting Data Type | 35 |

| | | |
|--------|---|----|
| 4.4.3 | Setting Scale | 35 |
| 4.4.4 | Setting Base | 36 |
| 4.4.5 | Text Notes for Variable Information | 36 |
| 4.4.6 | Loading Variable Values | 37 |
| 4.4.7 | Writing Values into Variables | 38 |
| 4.4.8 | Rearranging Variable Display | 39 |
| 4.4.9 | Changing Background Color of Variable Display | 39 |
| 4.4.10 | Deleting Variables | 40 |
| 4.4.11 | Saving/Loading Variable Information | 41 |
| 4.5 | Listing Variables (Variable List Tab) | 42 |
| 4.6 | Specifying Alias Name (Alias Name Tab) | 43 |
| 4.6.1 | Specify target variable | 43 |
| 4.6.2 | Set Alias Name | 43 |
| 4.6.3 | Enable or disable Alias Name | 43 |
| 5. | [Analyzer] Scope Window | 45 |
| 5.1 | Overview | 45 |
| 5.2 | Features | 45 |
| 5.3 | Window Structure | 46 |
| 5.3.1 | Waveform Display Area | 47 |
| 5.3.2 | Channel Information Display Area | 49 |
| 5.3.3 | Measurement Settings area | 50 |
| 5.3.4 | Window-Channel Settings | 51 |
| 5.3.5 | Image Editor screen | 53 |
| 5.4 | Measurement Channel Setting | 54 |
| 5.4.1 | Displaying Channel Settings Window | 54 |
| 5.4.2 | Setting in Channel Settings Area | 54 |
| 5.5 | Math Function | 56 |
| 5.5.1 | Math Channel Settings Area | 56 |
| 5.5.2 | Handling Wave Data | 60 |
| 5.5.3 | Drawing Math Channel Waveform | 60 |
| 5.6 | Waveform Measurement | 61 |
| 5.6.1 | Trigger Settings Area | 61 |
| 5.6.2 | Acquisition Settings in Measurement Settings area | 63 |
| 5.6.3 | Starting and Stopping Waveform Measurement | 64 |
| 5.6.4 | Saving and Loading Waveform Data | 65 |
| 5.7 | Displaying Waveform | 66 |
| 5.7.1 | Displaying Scope Window | 66 |
| 5.7.2 | Switching Waveform Graph Display | 66 |
| 5.7.3 | Switching waveform between Main1 and Main2 | 66 |
| 5.7.4 | Specifying Zoom Waveform Display Area | 67 |
| 5.7.5 | Separating Channel Information Display Area | 68 |
| 5.7.6 | Separating Main Waveform from Zoom screen | 69 |
| 5.7.7 | Active Channel Display | 70 |
| 5.7.8 | Cursor Display | 70 |
| 5.7.9 | Thinning Waveform Display Points | 71 |

| | |
|---|-----|
| 5.7.10 Smoothing Waveform..... | 71 |
| 5.7.11 Changing Background Color..... | 72 |
| 5.7.12 Shortcut Keys | 73 |
| 5.8 Image Editor Function (Scope Capture Button)..... | 74 |
| 5.8.1 Starting and Terminating Image Editor..... | 74 |
| 5.8.2 Changing Display Position and Size | 74 |
| 5.8.3 Image Editor Operation Button..... | 75 |
| 5.8.4 Adjusting PDF Output Area | 76 |
| 6. [Analyzer] User Button Window..... | 77 |
| 6.1 Overview | 77 |
| 6.2 Features | 77 |
| 6.3 Screen Structure | 77 |
| 6.3.1 Execution Button Area..... | 78 |
| 6.3.2 Sequence-Editing Area | 79 |
| 6.3.3 Button Integration Area | 80 |
| 6.4 Explanation of Operation..... | 81 |
| 6.4.1 Creating New User Button | 81 |
| 6.4.2 Delating User Button | 81 |
| 6.4.3 Showing and Hiding User Button | 81 |
| 6.4.4 Editing Sequence | 82 |
| 6.4.5 Utilizing Internal Variable..... | 86 |
| 6.4.6 Setting Display | 86 |
| 7. [Analyzer] Commander Window..... | 88 |
| 7.1 Overview | 88 |
| 7.2 Features | 88 |
| 7.3 Window Structure | 88 |
| 7.3.1 Operation Button | 89 |
| 7.3.2 Write Data Tab..... | 90 |
| 7.3.3 Result List Tab | 91 |
| 7.3.4 Status Bar..... | 91 |
| 7.4 Explanation of Operation..... | 92 |
| 7.4.1 Starting and Exiting Commander | 92 |
| 7.4.2 Executing Send Checker..... | 92 |
| 7.4.3 Specifying CSV file..... | 93 |
| 7.4.4 Editing CSV file (“CSV Edit” button)..... | 94 |
| 7.4.5 Preparing for Sequence Execution | 98 |
| 7.4.6 Executing Sequence | 99 |
| 7.4.7 Result of Sequence Execution | 100 |
| 8. [Analyzer] Status Indicator Window..... | 101 |
| 8.1 Overview | 101 |
| 8.2 Features | 101 |

| | | |
|--------|--|-----|
| 8.3 | Window Structure | 101 |
| 8.3.1 | Status Indicator Menu | 102 |
| 8.3.2 | Status Indicator Detail | 103 |
| 8.3.3 | Status Indicator Setting | 104 |
| 8.4 | Explanation of Operation..... | 105 |
| 8.4.1 | Showing or Hiding Menu Screen | 105 |
| 8.4.2 | Setting Screen (Setting Monitoring Condition)..... | 105 |
| 8.4.3 | Starting Monitoring | 106 |
| 8.4.4 | Stopping Monitoring | 106 |
| 8.4.5 | Display during Monitoring | 106 |
| 8.4.6 | Clearing Monitoring Results | 106 |
| 8.4.7 | Disabled Operations during Monitoring..... | 107 |
| 8.4.8 | Saving to RMT File..... | 107 |
| 9. | [Analyzer] One Shot Window | 108 |
| 9.1 | Overview | 108 |
| 9.2 | Features | 108 |
| 9.3 | Window Structure | 108 |
| 9.3.1 | Channel Information Area | 109 |
| 9.3.2 | Acquisition Setting Area | 109 |
| 9.4 | Explanation of Operation..... | 110 |
| 9.4.1 | Displaying One Shot Window..... | 110 |
| 9.4.2 | Settings of Channel Settings area | 110 |
| 9.4.3 | Data Acquisition..... | 111 |
| 9.4.4 | Cursor Settings..... | 111 |
| 9.4.5 | Saving Acquired Data..... | 111 |
| 10. | [Analyzer] Parameter Output..... | 112 |
| 10.1 | Overview | 112 |
| 10.2 | Features | 112 |
| 10.3 | Window Structure | 112 |
| 10.3.1 | Select Output Variable Window..... | 113 |
| 10.3.2 | Check Output Contents Window | 114 |
| 10.4 | Explanation of Operation..... | 115 |
| 10.4.1 | Displaying Parameter Output Window | 115 |
| 10.4.2 | Selecting Output Variable..... | 116 |
| 10.4.3 | Entering Macro Name | 116 |
| 10.4.4 | Checking Output Contents | 117 |
| 10.4.5 | Header File Output..... | 117 |
| 10.4.6 | Setting Header Template File | 118 |
| 11. | Navigation | 121 |
| 11.1 | Overview | 121 |
| 11.2 | Features | 121 |

| | |
|--|------------|
| 11.3 Window Structure | 121 |
| 11.3.1 Navigation Window..... | 121 |
| 11.4 Explanation of Operation..... | 122 |
| 11.4.1 Switching Displayed Function | 122 |
| 11.4.2 Selecting Operation Procedure | 122 |
| 11.4.3 Changing Image Scaling | 123 |
| 11.4.4 Disabling Navigation Auto-Start | 123 |
| 11.4.5 Moving to Next/Previous Page..... | 125 |
| 12. Easy GUI..... | 126 |
| 12.1 Overview | 126 |
| 12.2 Features | 126 |
| 12.3 Explanation of Window..... | 127 |
| 12.4 Preparation..... | 127 |
| 12.4.1 Displaying Easy GUI Window | 127 |
| 12.4.2 Setting Variables to display in GUI..... | 128 |
| 12.5 Explanation of Operation..... | 128 |
| 12.5.1 Basic Function..... | 129 |
| 12.5.2 Slider Function..... | 130 |
| 12.5.3 Sequence Function | 131 |
| 12.5.4 Measurement Function | 134 |
| 12.6 Setting Variable | 135 |
| 12.6.1 RUN/STOP Button..... | 136 |
| 12.6.2 Status Display | 137 |
| 12.6.3 Parameter Table | 138 |
| 12.6.4 Slider | 139 |
| 12.6.5 Sequence | 140 |
| 12.6.6 Sequence Graphical Input..... | 141 |
| 12.6.7 Option Switch | 142 |
| 12.6.8 Meters..... | 143 |
| 12.6.9 Graph..... | 144 |
| 12.7 Switching Theme Color | 145 |
| 12.8 Tutorial | 146 |
| 13. Servo Tool..... | 147 |
| 13.1 Overview | 147 |
| 13.2 Features | 147 |
| 13.3 Window Structure | 147 |
| 13.3.1 Servo Adjustment Window (Inertia Estimation tab)..... | 147 |
| 13.3.2 Servo Adjustment Window (Servo Tuning Tab) | 149 |
| 13.3.3 Servo Adjustment Window (Return to Origin Tab) | 151 |
| 13.3.4 Servo Adjustment Window (Point to Point Tab) | 153 |
| 13.3.5 Waveform Window | 155 |
| 13.4 Explanation of Operation..... | 156 |
| 13.4.1 Displaying Servo Adjustment Window | 156 |
| 13.4.2 Switching Displayed Function | 157 |

| | |
|--|------------|
| 13.4.3 Performing Inertia Estimation..... | 158 |
| 13.4.4 Performing Servo Adjustment | 162 |
| 13.4.5 Performing Return to Origin | 166 |
| 13.4.6 Performing Point to Point Operation | 169 |
| 13.4.7 Displaying Waveform Window | 173 |
| 14. Tuner Tool..... | 174 |
| 14.1 Overview | 174 |
| 14.2 Features | 174 |
| 14.3 Window Structure | 175 |
| 14.4 Explanation of Operation..... | 176 |
| 14.4.1 Preparation | 176 |
| 14.4.2 Performing Tuning | 177 |
| 14.4.3 Checking Operation..... | 180 |
| 14.4.4 Terminating Tuner tool..... | 182 |
| 14.5 Function Description | 183 |
| 14.5.1 Skip Function (Parameter Input Window) | 183 |
| 14.5.2 Tuning Control Parameters (Tune Window)..... | 184 |
| 14.5.3 Reset Function (Tune Window)..... | 185 |
| 14.5.4 Header Output (Tune Window) | 186 |
| 14.5.5 PDF Output (Tune Window) | 187 |
| 14.5.6 Waveform Information Display (Scope Window) | 188 |
| 14.5.7 Memory Function (Scope Window)..... | 189 |
| 15. Built-in Type Communication Library | 190 |
| 15.1 Overview | 190 |
| 15.2 Features | 190 |
| 15.3 HW Configuration | 192 |
| 15.3.1 When Using MCK Motor Control Evaluation Kit | 192 |
| 15.3.2 When Using Evaluation System..... | 193 |
| 15.3.3 When Using User Board | 194 |
| 15.4 Example of Use | 195 |
| 15.4.1 HW Preparation..... | 196 |
| 15.4.2 Determine Which Pin to Use | 197 |
| 15.4.3 Determine Communication Speed | 198 |
| 15.4.4 Create Program..... | 199 |
| 15.4.5 Download Program..... | 202 |
| 15.4.6 Connect with RMW..... | 203 |
| Website and Support..... | 205 |
| Revision History | 206 |

1. Renesas Motor Workbench Overview

This document describes the various functions and operating procedures of the Motor Control Development Support Tool Renesas Motor Workbench (hereafter, RMW). Read this manual carefully to ensure safe use.

The description on functions and operations in this document assumes that the target is correctly connected. Some features may not be available or may be restricted if it is in offline mode or there is a problem with connection.

1.1 RMW Functions

RMW is a development support tool for debugging, analyzing, and tuning motor control programs. RMW provides the following features:

- Analyzer tool
 - Dynamically reads and writes variables in a MCU.
 - Displays changes in variables as waveforms in real-time.
 - Sets trigger and performs zoom analysis.
- Easy tool
 - Intuitive operations enable you to control speed and position of the motor easily.
 - You can check the drive status at a glance with meters and graphs.
- Tuner tool
 - Automatically obtains and tunes the parameters necessary for vector control.
 - Enables fine tuning by means of a manual tuning function.
 - Outputs the tuning results (header file, PDF).
- Servo tool
 - Inertia Estimation
 - Estimates the load inertia and the inertia of the rotor and the shaft connected with the motor-axis by driving the motor actually.
 - Servo Tuning
 - Configures the settings for servo operation such as position control method and control parameters.
 - Return to Origin
 - Sets the method for return to origin and the return speed, etc.
 - Point to Point
 - Performs PTP (Point to Point) operation for one axis.

1.2 Related Document

For installation, environment settings, and preparations of RMW, refer to the following Quick Start Guide.

- Renesas Motor Workbench 3.1 Quick Start Guide (R01QS0011)

We release some functions of RMW (communication function to the target MCU, etc) in the form of DLL. When developing an original application on a PC, please refer to the following documentation.

- Renesas Motor Workbench DLL for communication Function Manual (R20AN0683)

2. Main Window

2.1 Overview

Main Window is a window that opens when RMW is started. This window is for basic operations of RMW, such as connecting to a communication board, loading project information, and launching tools.

2.2 Window Structure

The structure of Main Window is shown below.

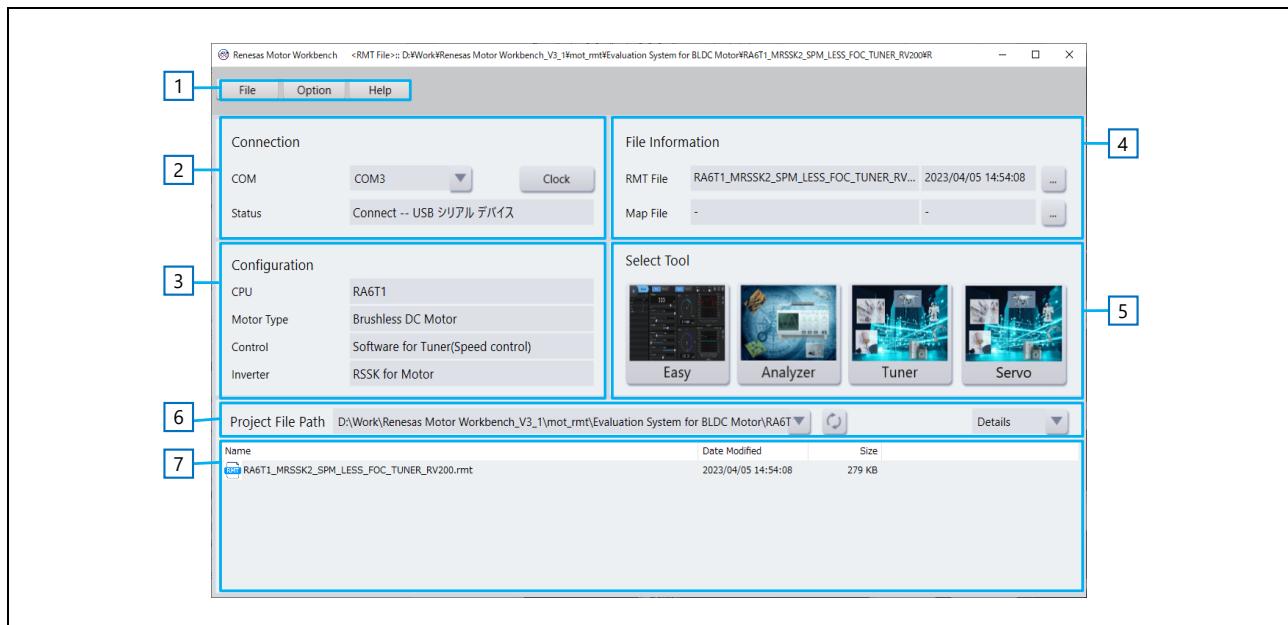


Figure 2-1 Main Window structure

Table 2-1 Names of each part in Main Window (No. corresponds to the above figure.)

| No. | Name | Explanation | Reference chapter |
|-----|-------------------|---|-------------------|
| 1 | Menu bar | Menu bar (File, Option, Help) | 2.3.1 |
| 2 | Connection | Set communication with the target system. | 2.3.2 |
| 3 | Configuration | Displays information on the target system (only for the execution file provided by Renesas) . | 2.3.3 |
| 4 | File Information | Displays the RMT file and Map file that are currently valid. | 2.3.4 |
| 5 | Select Tool | Displays icons for available tools. | 2.3.5 |
| 6 | Project File Path | <ul style="list-style-type: none"> Displays the paths to the RMT files that were loaded before in a pull-down list. (max. 10) Lists the RMT files included in the chosen folder into File List below. (The RMT file is not loaded at this point.) | 2.3.6 |
| 7 | File List | <ul style="list-style-type: none"> Displays a list of the RMT files in the folder specified in Project File Path. Double-click to load the RMT file. Users can directly add an RMT file here by drag & drop as well. | |

2.3 Explanation of Items on Main Window

2.3.1 Menu Bar

2.3.1.1 File menu

The functions of File menu are shown below.

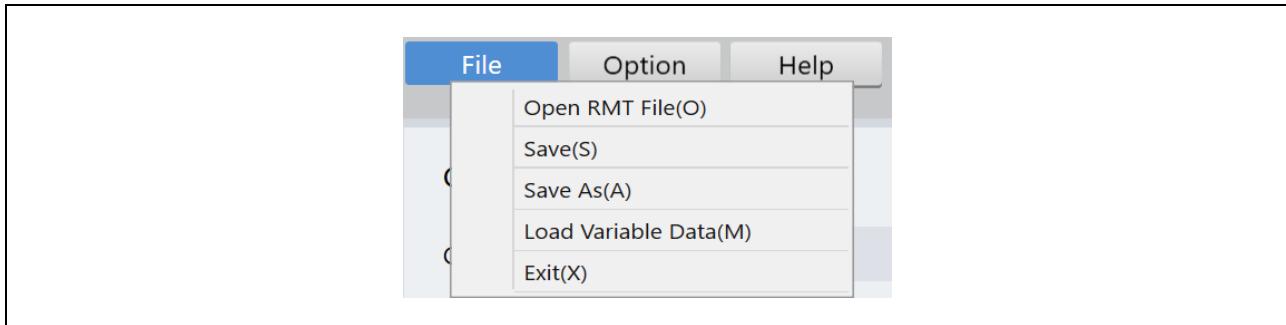


Figure 2-2 File menu

Table 2-2 Functions of File menu

| Name | Explanation |
|--------------------|---|
| Open RMT File | Loads an RMT file <small>Note</small> |
| Save | Overwrites and saves the loaded information about variables and RMW settings into the RMT file. |
| Save As | Saves the loaded information about variables and RMW settings into a new RMT file with a new name. |
| Load Variable Data | Loads a list of the global variables ("variable information") held in the user program from a Map file. |
| Exit | Terminates RMW (displays the Exit screen.) |

Note: RMT project file (including both variable information and information on settings configured by RMT tools)

2.3.1.2 Option menu

The functions of Option menu are shown below.

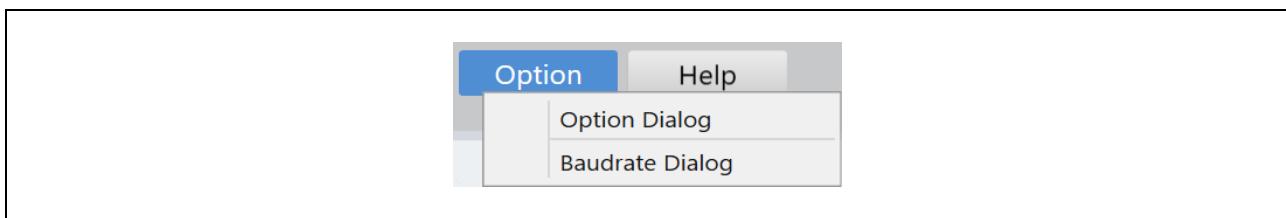


Figure 2-3 Option menu

Table 2-3 Functions of Option menu

| Name | Explanation |
|-----------------|--|
| Option Dialog | Configures various RMW settings. Displays the Option Dialog screen. |
| Baudrate Dialog | Sets the baud rate when the built-in type communication library is used. |

2.3.1.3 Help menu

The functions of Help menu are shown below.

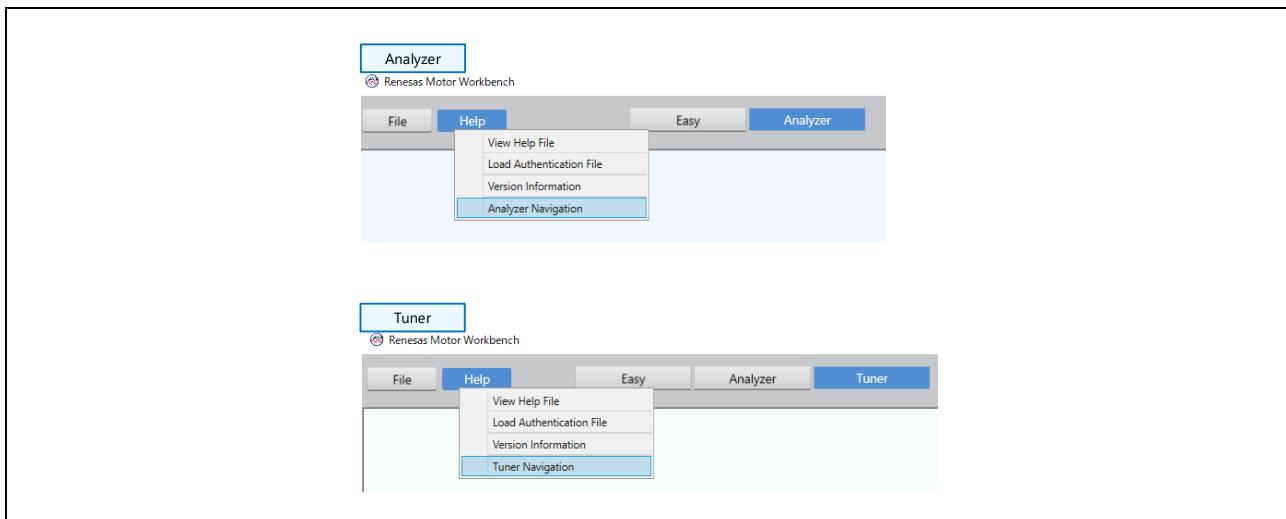


Figure 2-4 Help menu

Table 2-4 Functions of Help menu

| Name | Explanation |
|--------------------------|--|
| View Help File | Displays RMW help information. |
| Load Authentication file | Loads an authentication file, because authentication is required in order to use RMW. This tool become available by loading the authentication file from this menu. |
| Version Information | Displays the RMW version information. |
| Select Navigation | Selectable from the menu while Main Window is displayed. Displays the dialog to load an RMT or Map file. Select Navigation is displayed by default on RMW launching. (It is possible to set not to display.) |
| Analyzer Navigation | Selectable from the menu while Analyzer tool is displayed. Displays the dialog to check the steps for using Analyzer functions. Analyzer Navigation is displayed by default when Analyzer starts. (It is possible not to display.) |
| Tuner Navigation | Selectable from the menu while Tuner tool is displayed. Displays the dialog to check the steps for using Tuner functions. Tuner Navigation is displayed by default when Tuner starts. (It is possible not to display.) |

2.3.2 Connection area

The functions of the Connection area are shown below.



Figure 2-5 Connection area

Table 2-5 Functions of Connection

| Name | Explanation |
|--------------|---|
| COM | <ul style="list-style-type: none">• Connectable COM numbers or “Offline Mode” are displayed as a pull-down list.• When a COM number is selected, connection to that COM is attempted. |
| Status | <ul style="list-style-type: none">• Displays the connection status when a COM number is selected and connection to that COM is being attempted.• Displays “Connect – USB Serial Port” when the connection is successful. |
| Clock button | <ul style="list-style-type: none">• Click this button to set a communication frequency.• For Motor RSSK, the value is fixed to 8 MHz. |

2.3.3 Configuration

The functions of Configuration ^{Note} are shown below. Configuration area displays the contents defined in the control program.

Note: Displayed only when downloading the sample code provided by Renesas into an MCU.

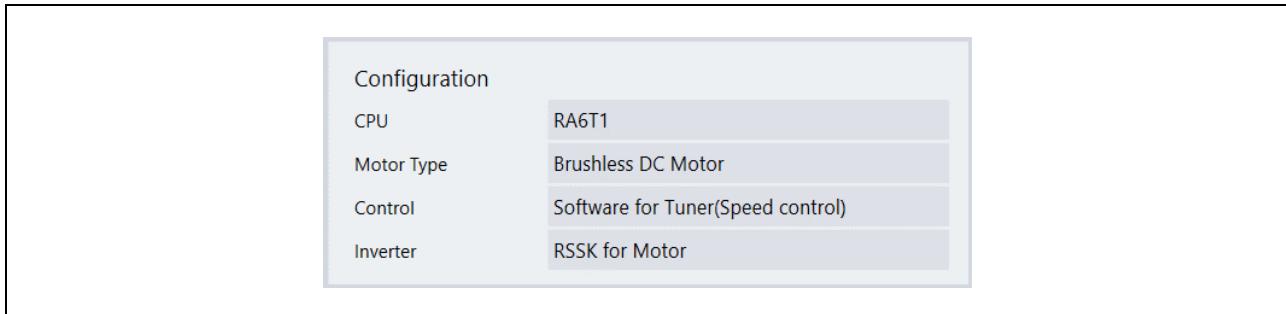


Figure 2-6 Configuration area

Table 2-6 Functions of Configuration

| Name | Explanation |
|------------|---|
| CPU | Displays the name of the target CPU that is connected. |
| Motor Type | Displays the type of motor that the control program targets. |
| Control | Displays the control method of the control program. |
| Inverter | Displays information about the inverter board that the control program targets. |

2.3.4 File Information

The functions of File Information are shown below. Hovering a mouse cursor on a file name displays its information, and clicking the right button loads the file.

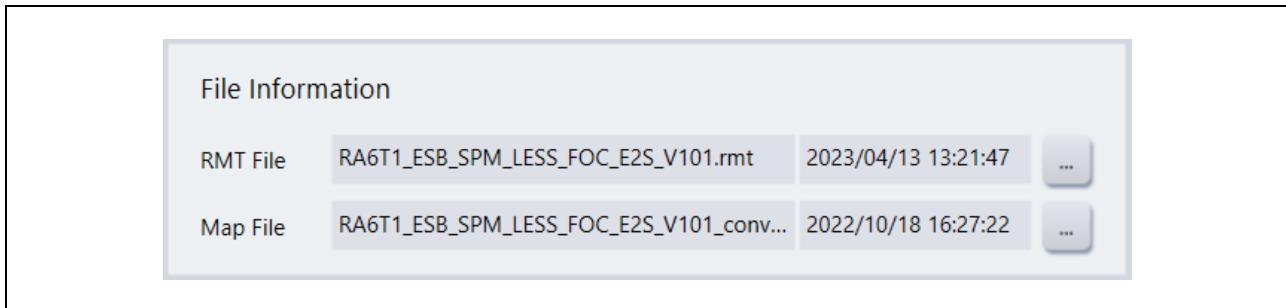


Figure 2-7 File Information area

Table 2-7 Functions of File Information

| Name | Explanation |
|----------|---|
| RMT File | Displays the name of the RMT file being loaded and its most recent modification date. |
| Map File | Displays the name of the Map file being loaded and its most recent modification date. |

2.3.5 Select Tool

Select Tool displays icons for available tools. Clicking a tool icon starts that tool.

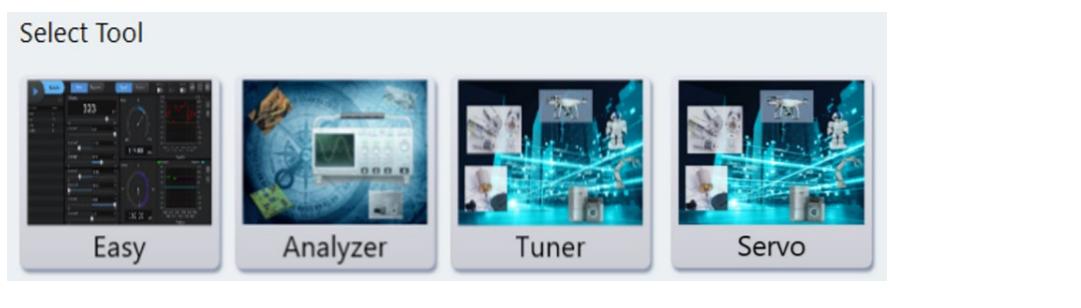


Figure 2-8 Select Tool area

Table 2-8 Functions of Select Tool

| Name | Explanation |
|-------------------------------|---|
| Select Tool (Icon display) | <ul style="list-style-type: none"> Displays icons for available tools (Easy, Analyzer, Tuner, Servo) according to the program. Clicking an icon starts that tool and switches the window. |

The available tools are determined according to the value of the variable “g_u2_conf_tool” that is defined in the motor control program.

The variable value is loaded on COM connections, and available tools are displayed according to that value.

The conditions of availability of the tools are shown below.

Table 2-9 Availability conditions of tools

| Name | Availability condition |
|----------|---|
| Easy | Always available |
| Analyzer | Always available |
| Tuner | Available when the value of the variable “g_u2_conf_tool” is 0x600. |
| Servo | Available when the value of the variable “g_u2_conf_tool” is 0xA00. |

2.3.6 Project File Path and File List

Project File Path and File List are for managing project folders of RMW.

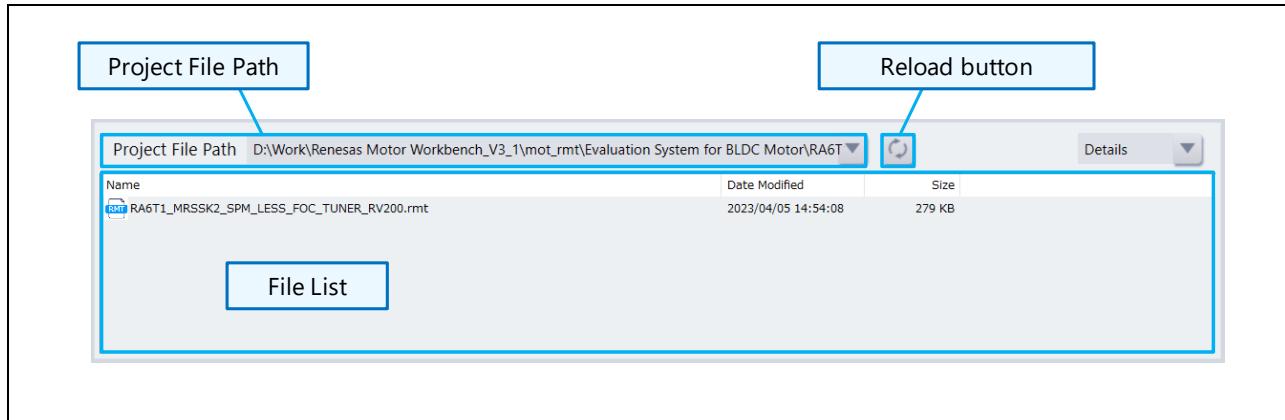


Figure 2-9 Project File Path and File List and relation to project folder

Table 2-10 Functions of Project File Path and File List

| Name | Explanation |
|-------------------|--|
| Project File Path | <ul style="list-style-type: none"> Displays paths to the project folders (folders in which the loaded RMT file exists) that have been loaded before in a pull-down menu. (max.10) You cannot enter a path here directly. Select a path, and the RMT files in the selected project folder will be displayed in File List below. (The RMT file has not been loaded yet at the time it is displayed in the File List.) When you click the reload button on the right of Project File Path, the display of File List (list of the RMT files in the project folder) is refreshed. |
| File List | <ul style="list-style-type: none"> Displays a list of the RMT files in the project folder specified by Project File Path. When you double-click the displayed RMT file, it is loaded into RMW. If you added/deleted an RMT file in the project folder on a PC after specifying a path in Project File Path, press the reload button next to the Project File Path to refresh the display. (It is not reflected automatically.) Notice for file operation: <ul style="list-style-type: none"> If you add an RMT file on a PC directly to File List by drag & drop, that file is displayed in File List and copied to the project folder on the PC. If you delete an RMT file by the right-click menu on the File List, the RMT file on the PC is deleted as well. |

2.4 Main Window Operation

2.4.1 Loading Authentication File

Before you start using RMW, you must load an authentication file (*.atf). The authentication messages are shown on the screen based on the authentication status or by Help menu operation.

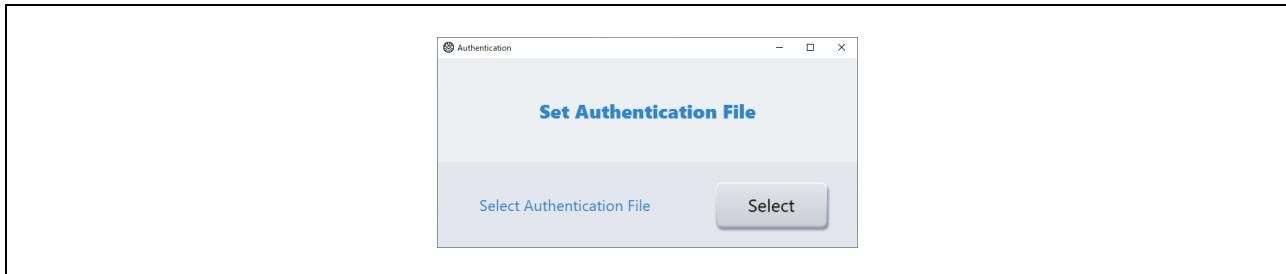


Figure 2-10 Example of message on authentication screen.

Table 2-11 Messages on authentication and action

| Message | Status | RMW availability | Action to take |
|-------------------------|--|------------------|---|
| Termfile not exist | It is displayed when the requested authentication information cannot be found. | N/A | Load an authentication file. |
| Set Authentication file | It is displayed when "Load Authentication File" is selected from "Help menu". | Available | |
| License expires soon | It is displayed when the license will expire within 30 days. | Available | To continue using the tool after the expiration, acquire and load the latest authentication file. |
| Expiration date out | It is displayed when the license has expired. | N/A | |
| Expired File | It is displayed when the loaded authentication file is invalid. | N/A | If the status doesn't change after reloading the file, acquire and load the latest authentication file. |

When you start Renesas Motor Workbench for the first time, the message "Termfile not exist" may be shown in the authentication screen. (While this message is indicated, Renesas Motor Workbench cannot be used.) In this case, load the authentication file (*.atf) in the "Installer" folder in the package by specifying it from the "Select" button.

Authentication for Renesas Motor Workbench has a time limit for one year. When the expiration date approaches, the message "License expires soon" is displayed on the authentication screen. When it has expired, the message "Expiration date out" is displayed. After the expiration, users need to load the latest authentication file.

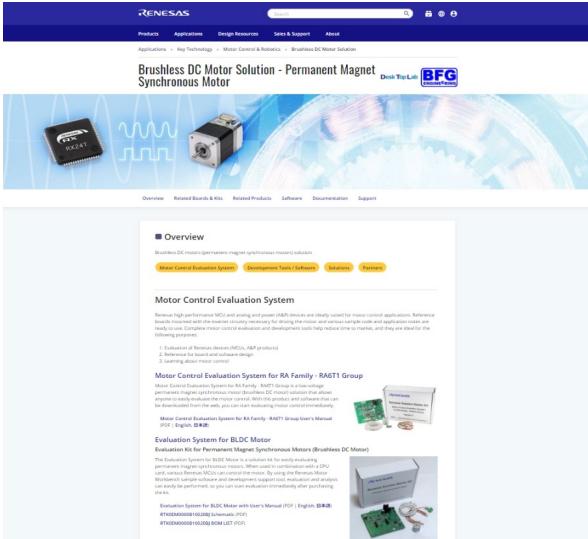
2.4.1.1 Acquire new authentication file

To renew the time limit of Renesas Motor Workbench, obtain and load the new authentication file (*.atf) from the following Renesas web page.

Brushless DC Motor Solution - Permanent Magnet Synchronous Motor

<https://www.renesas.com/us/en/application/key-technology/motor-control-robotics/brushless-dc-motor-solution>

Renesas WEB : [Brushless DC Motor Solution - Permanent Magnet Synchronous Motor](https://www.renesas.com/us/en/application/key-technology/motor-control-robotics/brushless-dc-motor-solution)



(On the middle of the page)

Renesas Motor Workbench 3.0: Motor Control Development Tool 3.0

Renesas Motor Workbench is a debugging tool for motor control. The Analyzer function can read and write variables inside the motor control MCU and display the waveform of variables. The Tuner function can automatically adjust the vector control parameter. The Easy function allows even beginners to operate the motor with an intuitive GUI.

Motor Control Development Support Tool Renesas Motor Workbench 3.0 (ZIP)

Authentication Expiration Notice

For current users of Renesas Motor Workbench

When starting this tool, the following messages about the expiration date of authentication may be displayed.

License expires soon: Displays when less than 30 days remain **Expiration date out:** Displays when the expiration date is before the expiration date.

To continue using the tool after the certificate expires, you need to import the latest authentication file and update the authentication.

1. Download Authentication File
2. Import the authentication file by clicking the "Select" button on the certificate expiration message screen.

You can download the authentication file here.

Note To download a file, you are required to log in the Renesas Web. After logging in, follow the instructions on the screen and download the authentication file.

Figure 2-11 Web page to download new authentication file

2.4.1.2 Loading authentication file

To load an authentication file, click the “Select” button on the authentication screen. When the authentication file has been loaded successfully, RMW becomes available.

The procedure is described below.

1. Select “Load Authentication File” from “Help” menu, and the message “Set Authentication file” will be displayed.
2. When clicking the “Select” button in the displayed message, you are asked to specify the target file.
3. If the authentication screen disappears after opening the file, the operation is completed successfully. If the valid authentication file has been already loaded, “Already Read File” is displayed.

R21UZ0004EJ0400 Rev 4.00
May.30.23

RENESAS

Page 10 of 206

2.4.2 Loading RMT File

An RMW project file (RMT file) stores both the variable information loaded from a Map file and the RMW tool setting information.

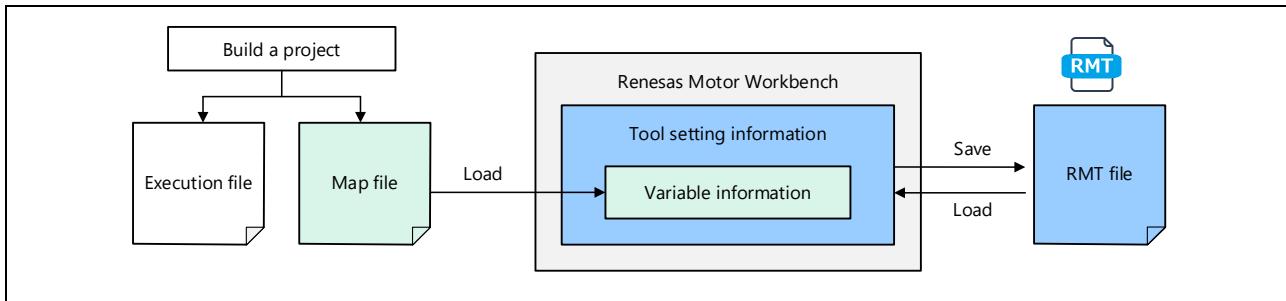


Figure 2-12 RMT file

Loading a project file means loading an RMT file into RMW. When an RMT file is loaded, information loaded previously is cleared. The methods for loading an RMT file are described below.

2.4.2.1 Loading from “File” menu or “Open RMT file” button

Select “Open RMT file” from “File” menu or click the “Open RMT file” button next to the RMT File field in File Information, and a dialog for opening an RMT file will be displayed. Specify a file and click the “Open” button, and the RMT file will be loaded.

When the RMT file is loaded, its path and name are displayed in the title bar of Main Window, and the contents of File Information, Project File Path, and File List are updated.

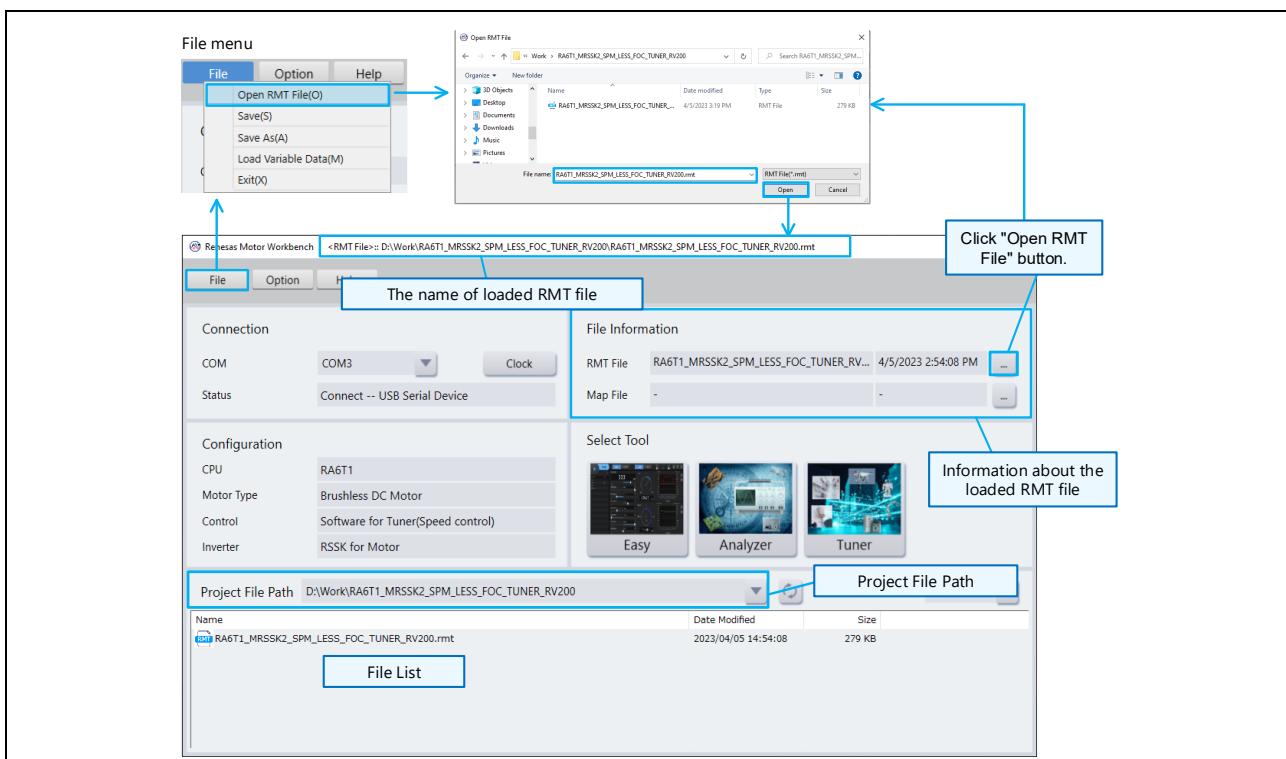


Figure 2-13 Loading RMT file from File menu

2.4.2.2 Loading with Project File Path and File List

In the pull-down list of Project File Path, the paths to the RMT files loaded most recently are displayed up to 10 paths. When you select a path, RMT files in the project folder you select are shown in File List. You cannot directly enter a path name.

Double-click the RMT file in File List to load it. When the RMT file is loaded, the title bar of Main Window and the contents in File information are updated.

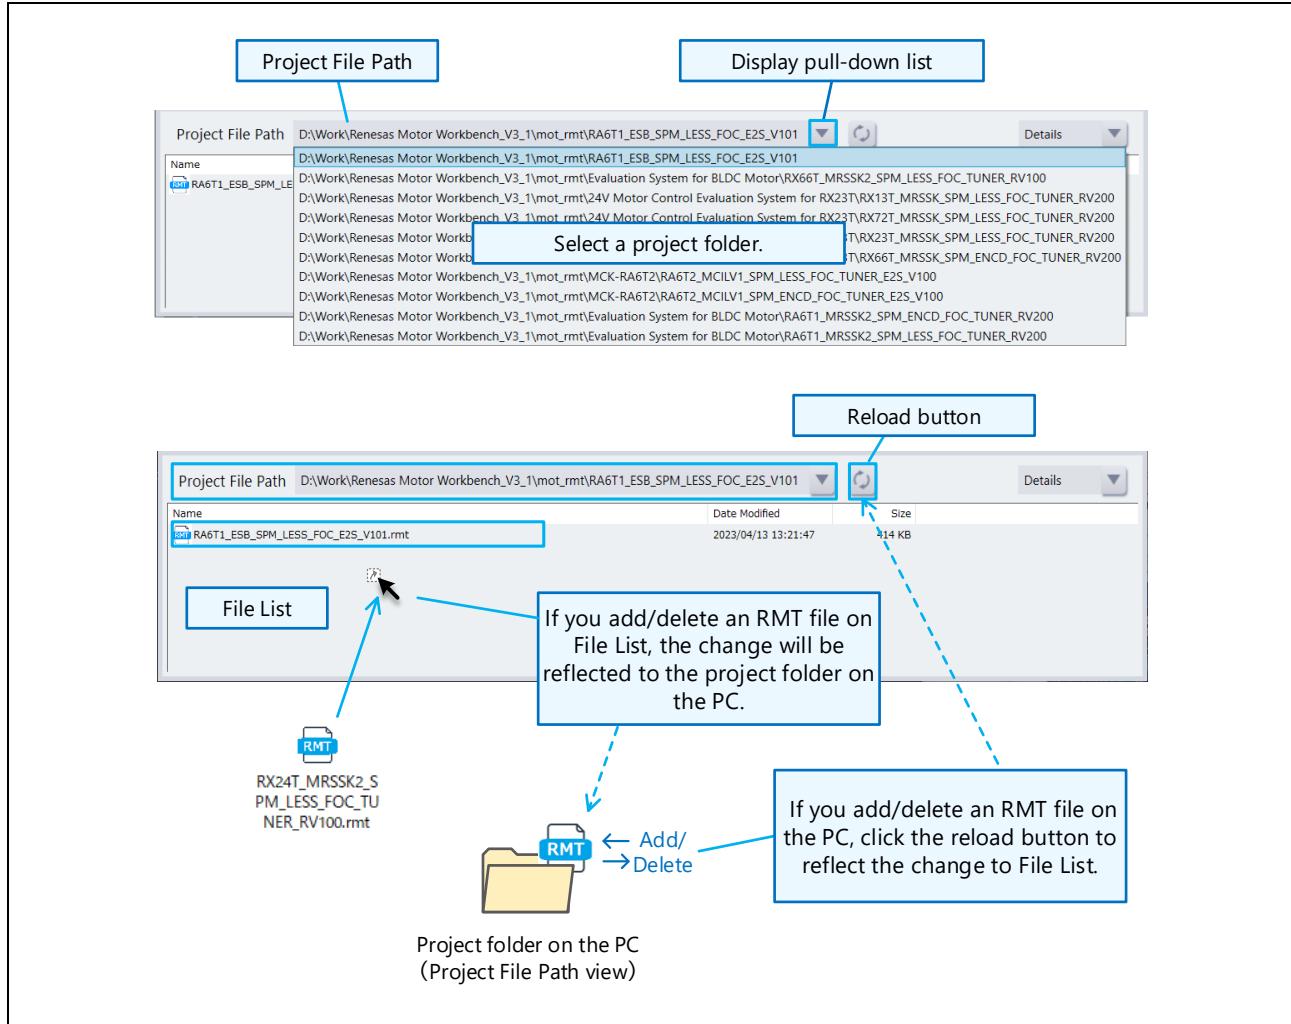


Figure 2-14 Loading RMT file from File List

You can also add an RMT file from a PC to File List by drag & drop operation. **The file is copied to the project folder on the PC (specified by Project File Path) by this operation.**

In addition, you can delete an RMT file by the right-click menu on File List, and **the RMT file in the project folder on the PC is deleted as well.**

If you added/deleted an RMT file in the project folder on a PC after specifying a path in Project File Path, press the reload button next to the Project File Path to update the File List. (It is not reflected automatically.)

2.4.2.3 Loading with Select Navigation

You can also use the “Select Navigation” function to load an RMT file. For Select Navigation, see chapter 2.5.

2.4.3 Saving RMT file

How to save an RMT file is described below.

2.4.3.1 Saving with “Save” or “Save As” from File menu

When you select “Save” from Main Window’s File menu, the information is saved into the loaded RMT file by overwriting it. When you select “Save As”, the Save As screen is displayed. Specify an RMT file name and save it.

2.4.3.2 Saving RMT file when terminating RMW

When terminating RMW, you can select how to save the RMT file on the exit screen. The procedures are described below.

1. Select “Exit” from “File” menu or press the close button on the upper right corner of Main Window, and the exit screen will be displayed.
2. If you want to save the RMT file, select “Save” or “Save As” on the exit screen.

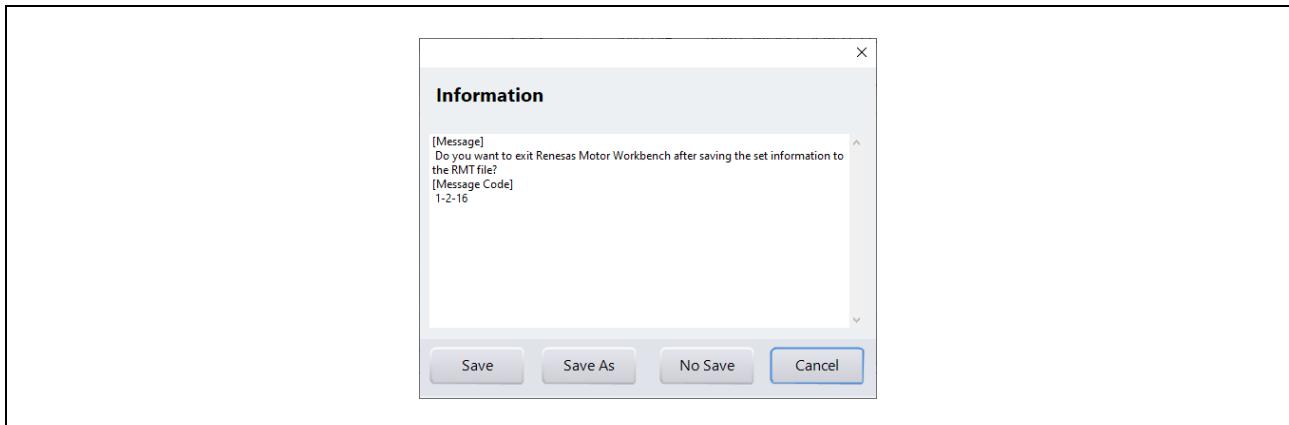


Figure 2-15 Renesas Motor Workbench exit screen

Table 2-12 Functions of buttons on exit screen

| Button | Function |
|---------|---|
| Save | Saves the RMW project file in the loaded RMT file by overwriting it and exits. |
| Save As | Saves the RMW project file into a new RMT file with a new name specified and exits. |
| No Save | Exits RMW without saving the RMW project file. |
| Cancel | Cancel the termination process. |

2.4.4 Loading Map File (Variable List)

Load a Map file that was generated in building a user program into RMW. By this operation, the variable list of global variables (variable information) is updated. If the user program has been changed and rebuilt, it is necessary to load the Map file again.

The procedure is described below.

2.4.4.1 Loading from File menu's "Load Variable Data"

1. Select "Load Variable Data" from Main Window's File menu, and the screen to select a Map file will be displayed.
2. Select a Map file, and the "User Setting Form" screen will be displayed. (If "Data Type" is set in "Load Variable Data" from Option menu->Option Dialog.)
3. "User Setting Form" displays the variable list that reflects the settings.
4. After confirming the information in User Setting Form, click the "Set" button to load the variable information.

You cannot change "Data Type" of the variable list by using other RMW functions. To make a change, configure the variable information by using the Load Variable Data function again.

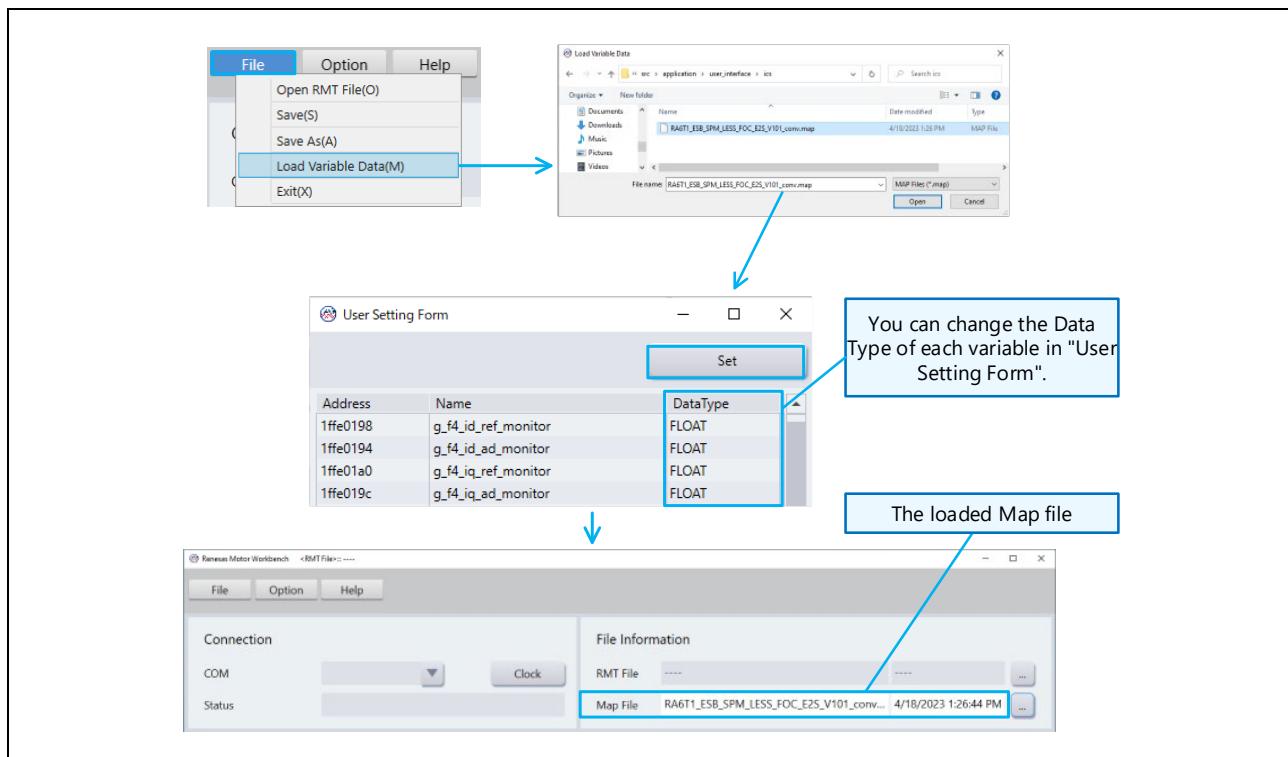


Figure 2-16 Loading variable list (Map file)

2.4.4.2 Loading with Select Navigation

A Map file can also be loaded by using the Select Navigation function. For Select Navigation, see chapter 2.5.

2.4.5 Option Dialog from Option Menu

By selecting “Option Dialog” from Option menu, you can configure the settings for loading Map files and for preventing switch of the Analyzer function.

To use RMW with the same settings next time, you must save the RMT file.

Table 2-13 List of Option Dialog menu

| Tab | Function | Explanation |
|-------------|----------------------------|---|
| Main Window | Load Variable Data | <ul style="list-style-type: none"> Specify a Data Type to be used when user program's global variables are loaded from a Map file (when using the Load Variable Data function.) Prefix Setting <ul style="list-style-type: none"> Specify prefixes for variable names when you want to change a Data Type of variables. You can specify up to four prefixes, separated by commas. |
| | Load Variable Meaning Data | <ul style="list-style-type: none"> Specify the path of the CSV file that contains information about the variable meanings. |
| Analyzer | Control Window | <ul style="list-style-type: none"> To ensure safety, you can prevent switching to another tool while a motor is being operated. <ul style="list-style-type: none"> Variable Name: Specify the name of the variable to be referenced for confirming switching prevention. Value: Specify the variable value to be referenced for confirming switching prevention (the specified value is the value used for prevention). |

2.4.5.1 Load Variable Data tab in Main Window tab

When you use prefixes to identify variables with the same data type (UINT8, INT8, etc.), the data types specified here are set for all variables with the matching prefixes during loading of the variable list (Map file) (by executing the Load Variable function.)

For variables to be treated as an array, specify the data type in “Array of <Data Type>.” For non-array variables, specify the data type in “<Data Type>.” Up to four comma-separated values can be specified to each Data Type.

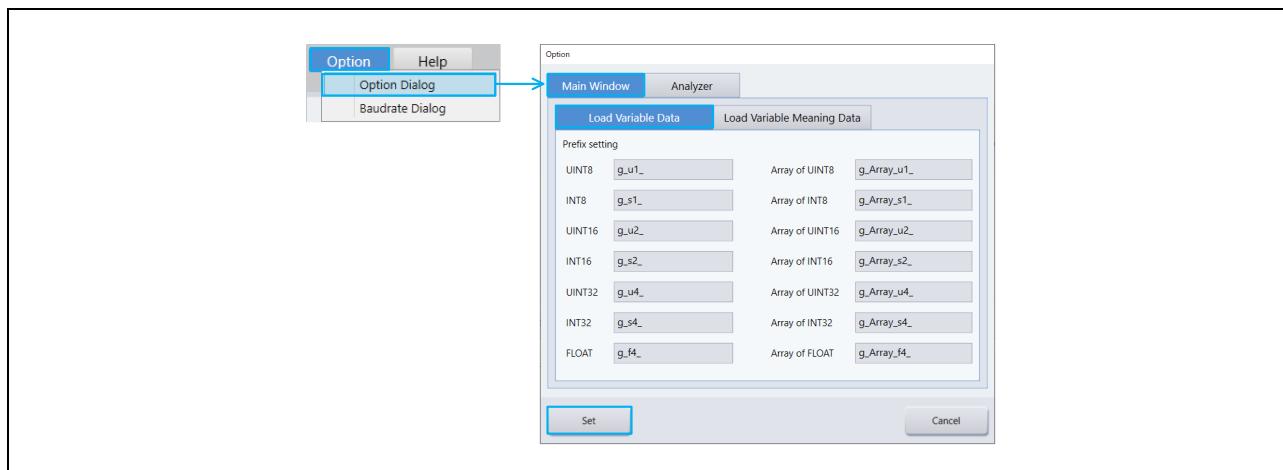


Figure 2-17 Load Variable Data settings in Main Window tab

2.4.5.2 Load Variable Meaning Data (Setting file for variable meaning information)

You can load the information about the meanings (purposes) of variables in a CSV file format. The purpose and unit for each variable is displayed.

Create a CSV file as the following format:

<Variable name>,<Meaning>,<Unit>

The loaded information of the CSV file can be saved in a RMT file by the procedure described in 2.4.3 Saving RMT file. When a RMT file storing CSV file information is loaded, the saved variable meanings and units will be displayed.

| Variable Name | Meaning | Unit |
|--|--|---------|
| A | B | C |
| 1 com_u1_sw_userif | Switching of the user interface | |
| 2 com_u1_system_mode | Managing the state | |
| 3 com_f4_ref_speed_rpm | Speed command value (mechanical angle) | [rpm] |
| 4 g_st_sensorless_vector.u2_error_status | Error status | |
| 5 g_st_cc.f4_id_ref | d-axis current command value | [A] |
| 6 g_st_cc.f4_id_ad | d-axis current detection value | [A] |
| 7 g_st_cc.f4_iq_ref | q-axis current command value | [A] |
| 8 g_st_cc.f4_iq_ad | q-axis current detection value | [A] |
| 9 g_st_cc.f4_iu_ad | U-phase current detection value | [A] |
| 10 g_st_cc.f4_iv_ad | V-phase current detection value | [A] |
| 11 g_st_cc.f4_iw_ad | W-phase current detection value | [A] |
| 12 g_st_cc.f4_vd_ref | d-axis voltage command value | [V] |
| 13 g_st_cc.f4_vq_ref | q-axis voltage command value | [V] |
| 14 g_st_cc.f4_refu | U-phase voltage command value | [V] |
| 15 g_st_cc.f4_refv | V-phase voltage command value | [V] |
| 16 g_st_cc.f4_refw | W-phase voltage command value | [V] |
| 17 g_st_sc.f4_ref_speed_rad_ctrl | Speed command value (mechanical angle) | [rad/s] |
| 18 g_st_sc.f4_speed_rad | Speed detection value | [rad/s] |

Figure 2-18 Example of creating variable meaning information file (csv format)

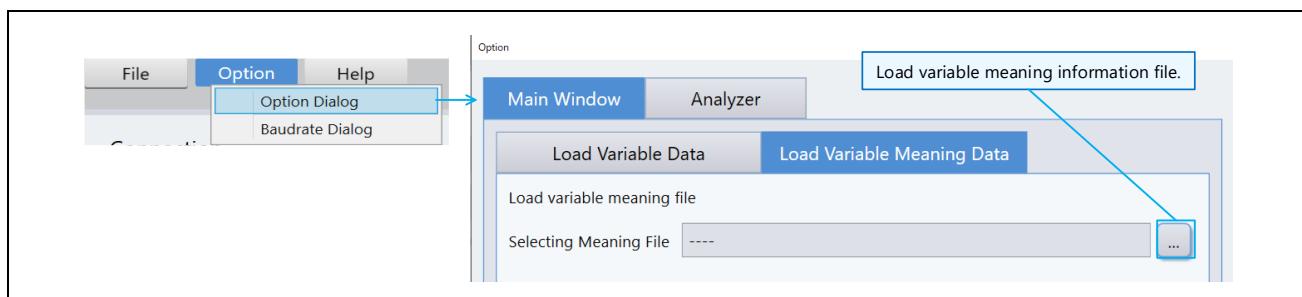


Figure 2-19 Example of setting Load Variable Meaning Data

2.4.5.3 Control Window in Analyzer tab

You can prevent the screen from switching to another tool while driving a motor by a user program.

Specify a variable name in the “Variable Name” field and a value that indicates “being operated (being processed)” in the “Value” field. Tool switching will be prevented when the value of the specified variable matches the value specified in the “Value” field. The message “Cannot changeover TAB of tools while Motor is in.” is displayed while tool switching prevention is in effect.

The default value of “Variable Name” field is blank. If this field is left blank, switching prevention will not be enabled. (RMW can be operated in this state.)

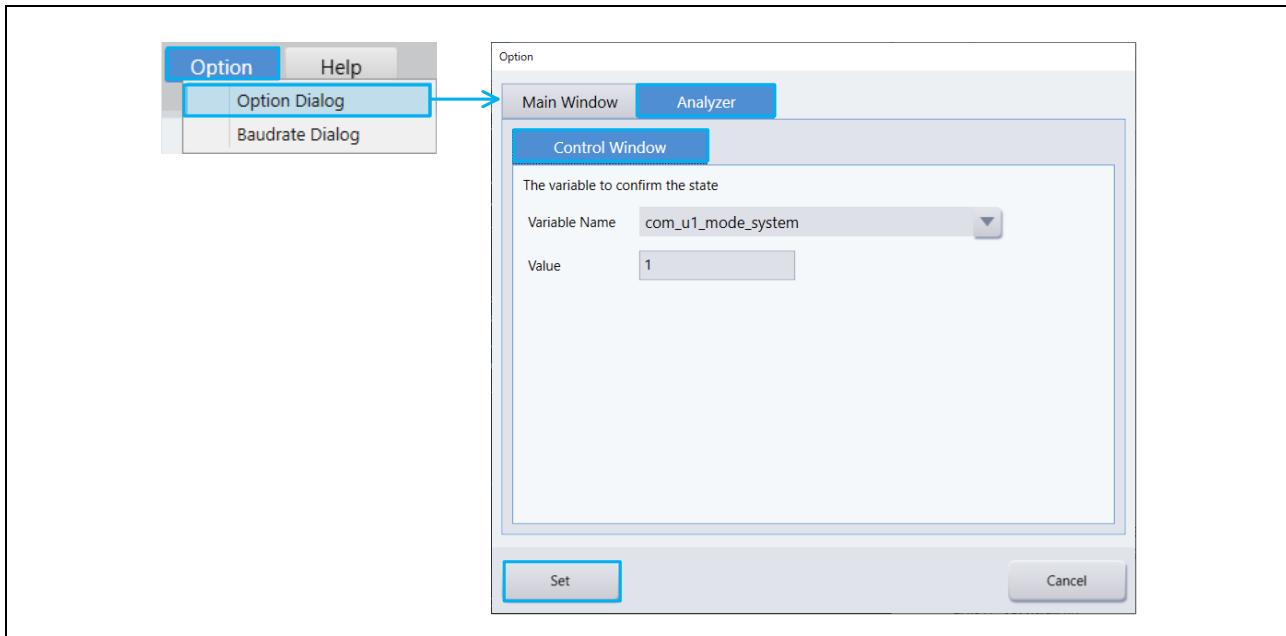


Figure 2-20 Control Window settings in Analyzer tab (example of setting “motor is being operated” as judgement condition)

2.4.6 USB Connection

2.4.6.1 Starting USB communication

When expanding the COM information list in Main Window's "Connection", you can see the COM number or "Offline Mode" in a pull-down menu.

If you select "COM**" from the COM selection list, The COM connection process is started. The process status is displayed in "Status". When COM connection process is completed successfully, "Connect – USB Serial Port" is displayed.

In this state, tools are enabled.

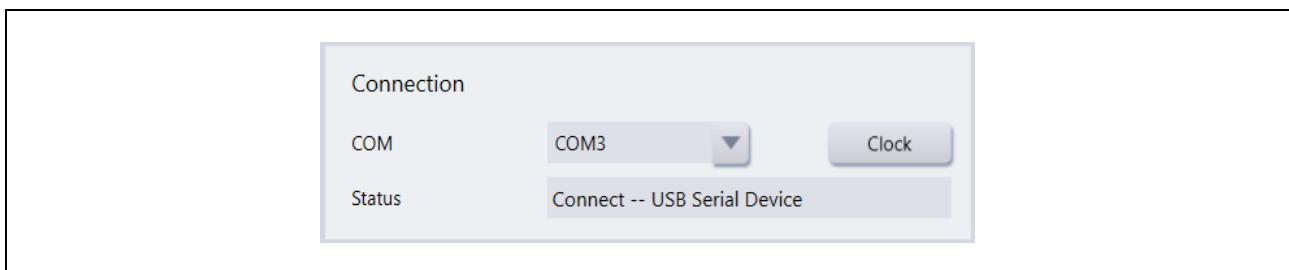


Figure 2-21 Status displayed in Connection screen when connection is established

Table 2-14 Main Window display when connection is established

| Name | Display |
|-------------------|---|
| Connection Status | Displays "Connect." |
| Configuration | Displays the connection environment information. (This function is only for the execution file provided by Renesas.) |
| Select Tool | <ul style="list-style-type: none">Displays the icons for the available tools.When "Offline Mode" is selected in the COM list, the available tools are limited. |

2.4.6.2 Setting clock frequency (when using communication board for tools)

When using a communication board for tools (MC-COM by Renesas or W2002 by Desk Top Laboratories), specify the communication speed by the following operation.

Click "Clock" button in Main Window's "Connection" to display the Clock Setting dialog. The Clock Setting dialog displays the clock frequency that is currently set, so you can change this value. The changed clock frequency will take effect at the time of COM connection.

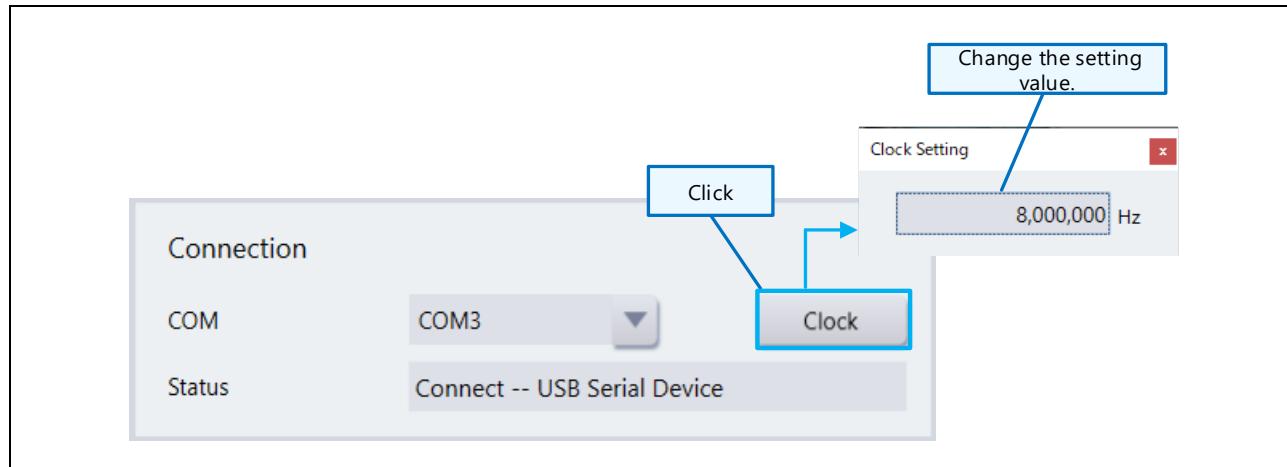


Figure 2-22 Clock Setting dialog

To set the clock frequency, obtain the value by **multiplying the communication rate by 8**.

Example: When the communication rate is 1 Mbps, set the clock frequency to 8 MHz (8,000,000 Hz).

When the communication rate is 5 Mbps, set the clock frequency to 40 MHz (40,000,000 Hz).

When using a MC-COM (Renesas communication board for tools), you can select the following communication rates (clock frequencies). Set it based on the jumper (JP2) of the MC-COM.

Table 2-15 Settings of MC-COM JP2 and selectable clock frequencies

| JP2 | Selectable clock frequency |
|--------------|---|
| Short | 1 Mbps (8 MHz), 5 Mbps (40 MHz), 7.5 Mbps (60 MHz), 10 Mbps (80 MHz), 15 Mbps (120 MHz) |
| Open | 6.25 Mbps (50 MHz), 8.33 Mbps (66666666 Hz), 12.5 Mbps (10 MHz), 16.66 Mbps (13333333 Hz) |

2.4.6.3 Setting baud rate (when using built-in type communication library)

When using the built-in type communication library (using a commercially available USB serial conversion module), set the baud rate by the following operation.

Note: For the built-in type communication library, refer to "Renesas Motor Workbench Quick Start Guide".

Select "Baud rate Dialog" from the Main Window's "Option" menu to display the Baud rate Setting dialog. The dialog displays the baud rate that is currently set, so you can change this value. The changed baud rate will take effect at the time of COM connection.

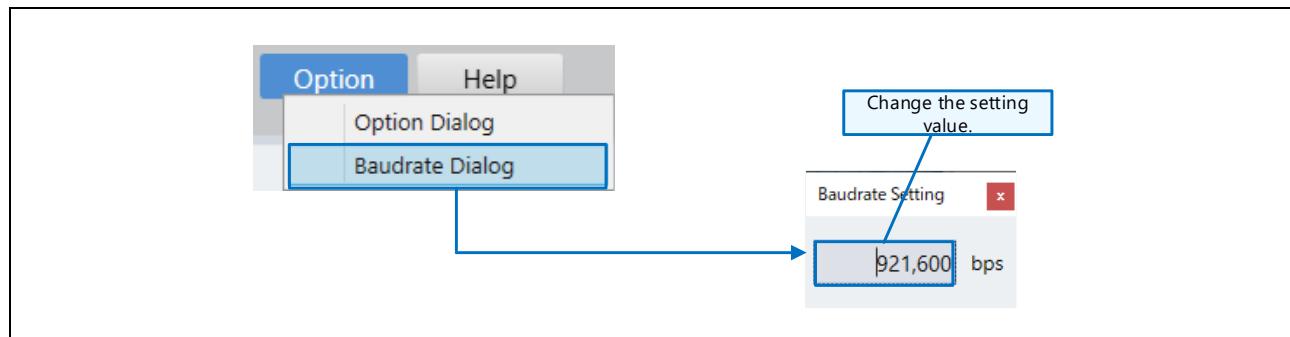


Figure 2-23 Baud rate setting

Set the baud rate to the value that is set by the program including the built-in type communication library. In addition, the set value must be a value that can be set from a PC to the connected USB serial conversion board. You can check the configurable values in the properties of the COM port (port setting) from Device Manager of Windows control panel.

2.4.7 Basic Window Operation

Main Window's "Select Tool" displays icons for the available tools. Click the icon to start the tool. The available tools vary depending on the user program and the status of COM connection.

The screen of each tool (Analyzer, Tuner, Easy) has a button to switch tools and a button to go back to Main Window on the top of the screen. However, if the condition matches the setting configured by Menu bar -> Option -> Option Dialog -> Analyzer tab -> "Control Window", tool switching is prevented while motor is being operated. (For details, see chapter 2.4.5.)

2.4.7.1 Tool switch button

When a tool is started from Main Window, "Tool Switch button" is displayed on the top of the tool's screen. Click this button to switch to another tool.

Note that if you have set prevention of switching described in chapter 2.4.5.2, you cannot switch tools while the state matches the preset condition.

2.4.7.2 Main Window switch button

When a tool is started from Main Window, the "Main Window" button is displayed on the upper right of the tool's screen. Click this button to go back to Main Window.

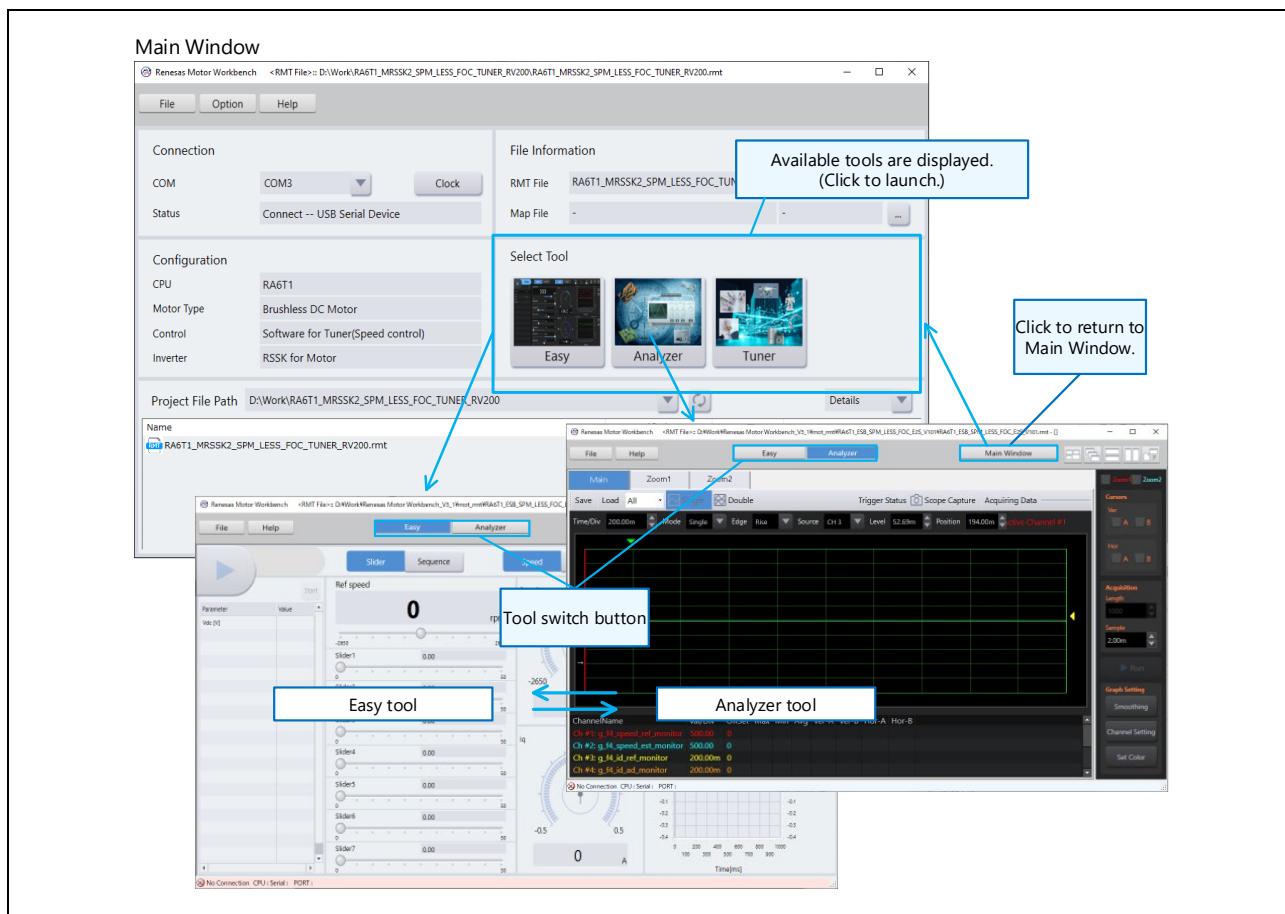


Figure 2-24 Tool switch button and Main Window button

Note that you cannot switch to Main Window in the state like driving motor.

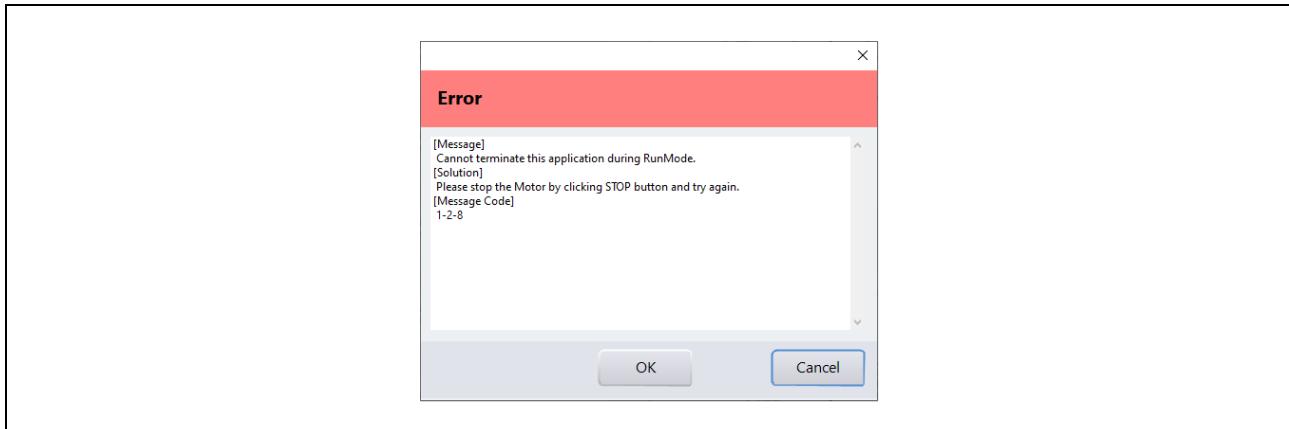


Figure 2-25 Error message for switching tools during processing.

2.4.7.3 Window view switch button

In the screen of each tool (Analyzer, Easy, Servo, Tuner), you can change the window view by clicking the following buttons. You can also release the maximized window.

You can select the frontmost window with the window list button (button (a) in the figure below). However, when a window is framed out of the tool, the window is not displayed in the list of active windows. (In this case, select the window from Windows Task Bar.)

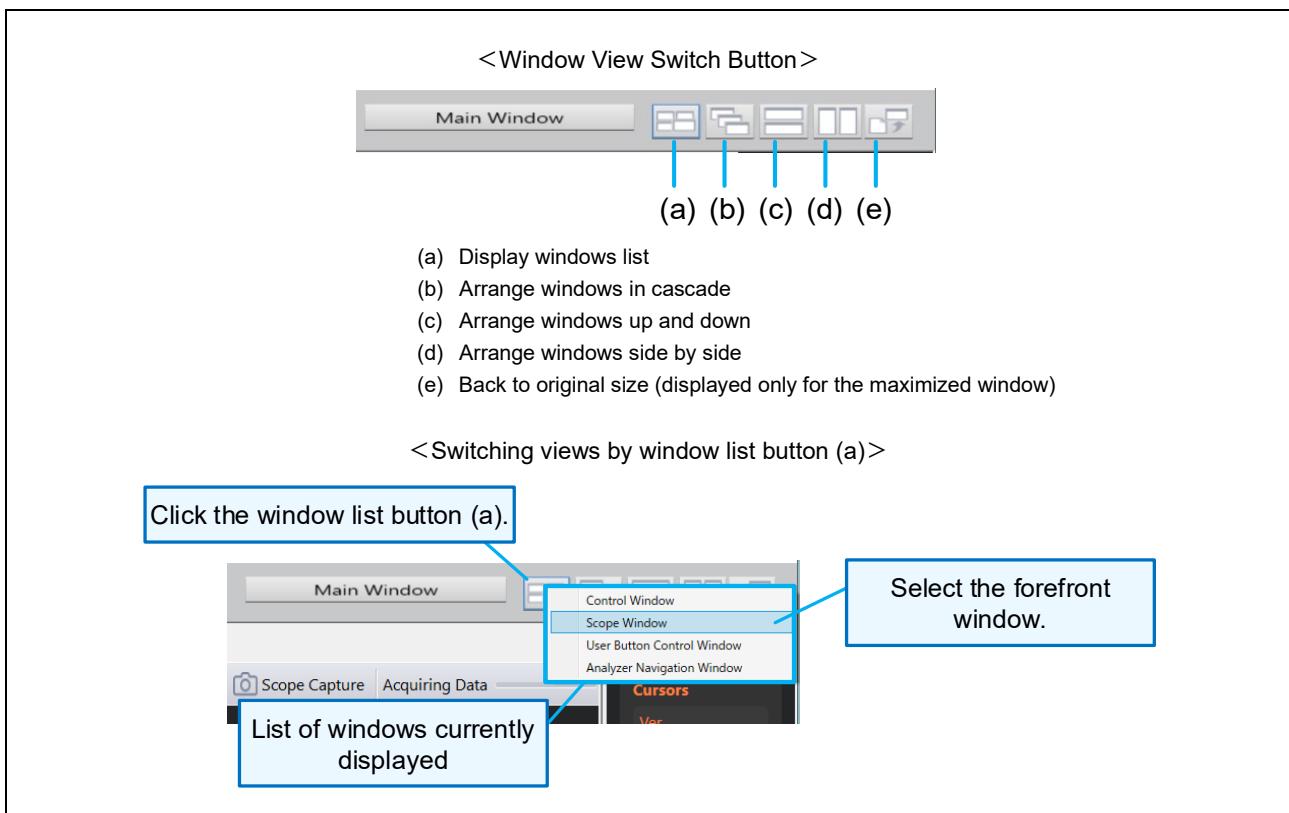


Figure 2-26 Window view switch button

2.4.7.4 Framing Out/In window

You can move (frame out) tool windows (except for some tools) outside of the tool frame by dragging the title. In reverse, you can move (frame in) the window into the original tool frame by dragging it.

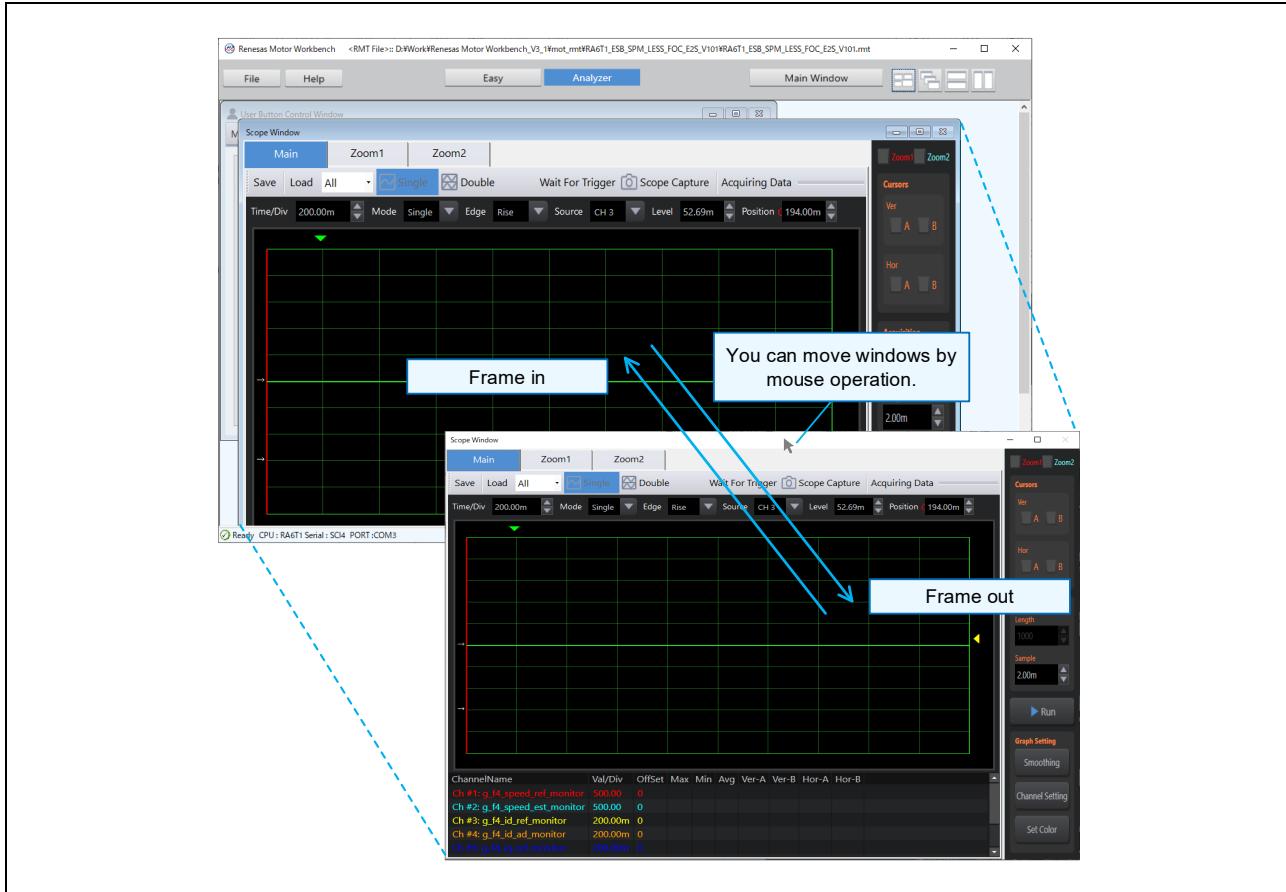


Figure 2-27 Window frame out/frame in

2.4.8 Confirming version

You can check the version of RMW from "Version Information" under the Help menu.

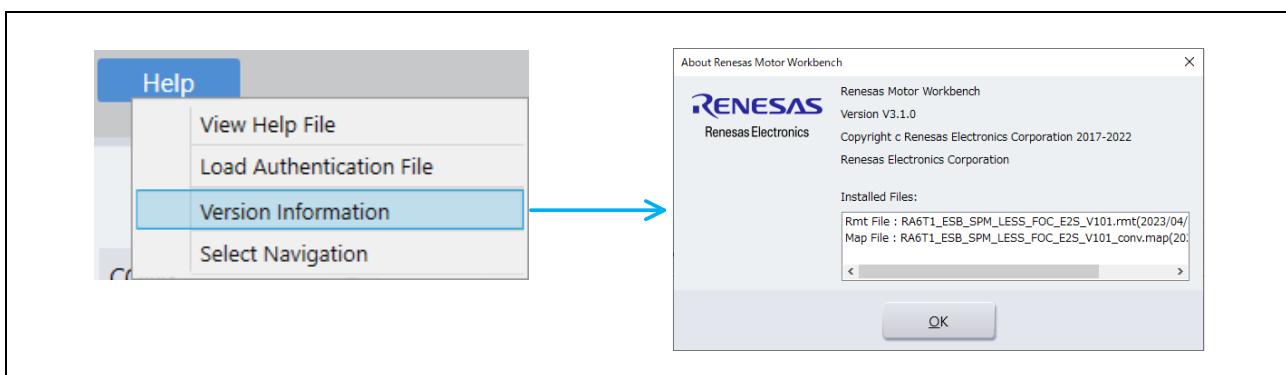


Figure 2-28 Displaying version information

2.5 Select Navigation Function

Select Navigation is a function that assists the basic settings for RMW, supporting such as loading RMT/Map files and setting a COM port in the dialog.

Select Navigation is displayed when RMW is started. (If you check “Do not show this features in the future”, it will not be displayed from the next time.) In addition, you can display it also by selecting “Select Navigation” from the Main Window’s Help menu.

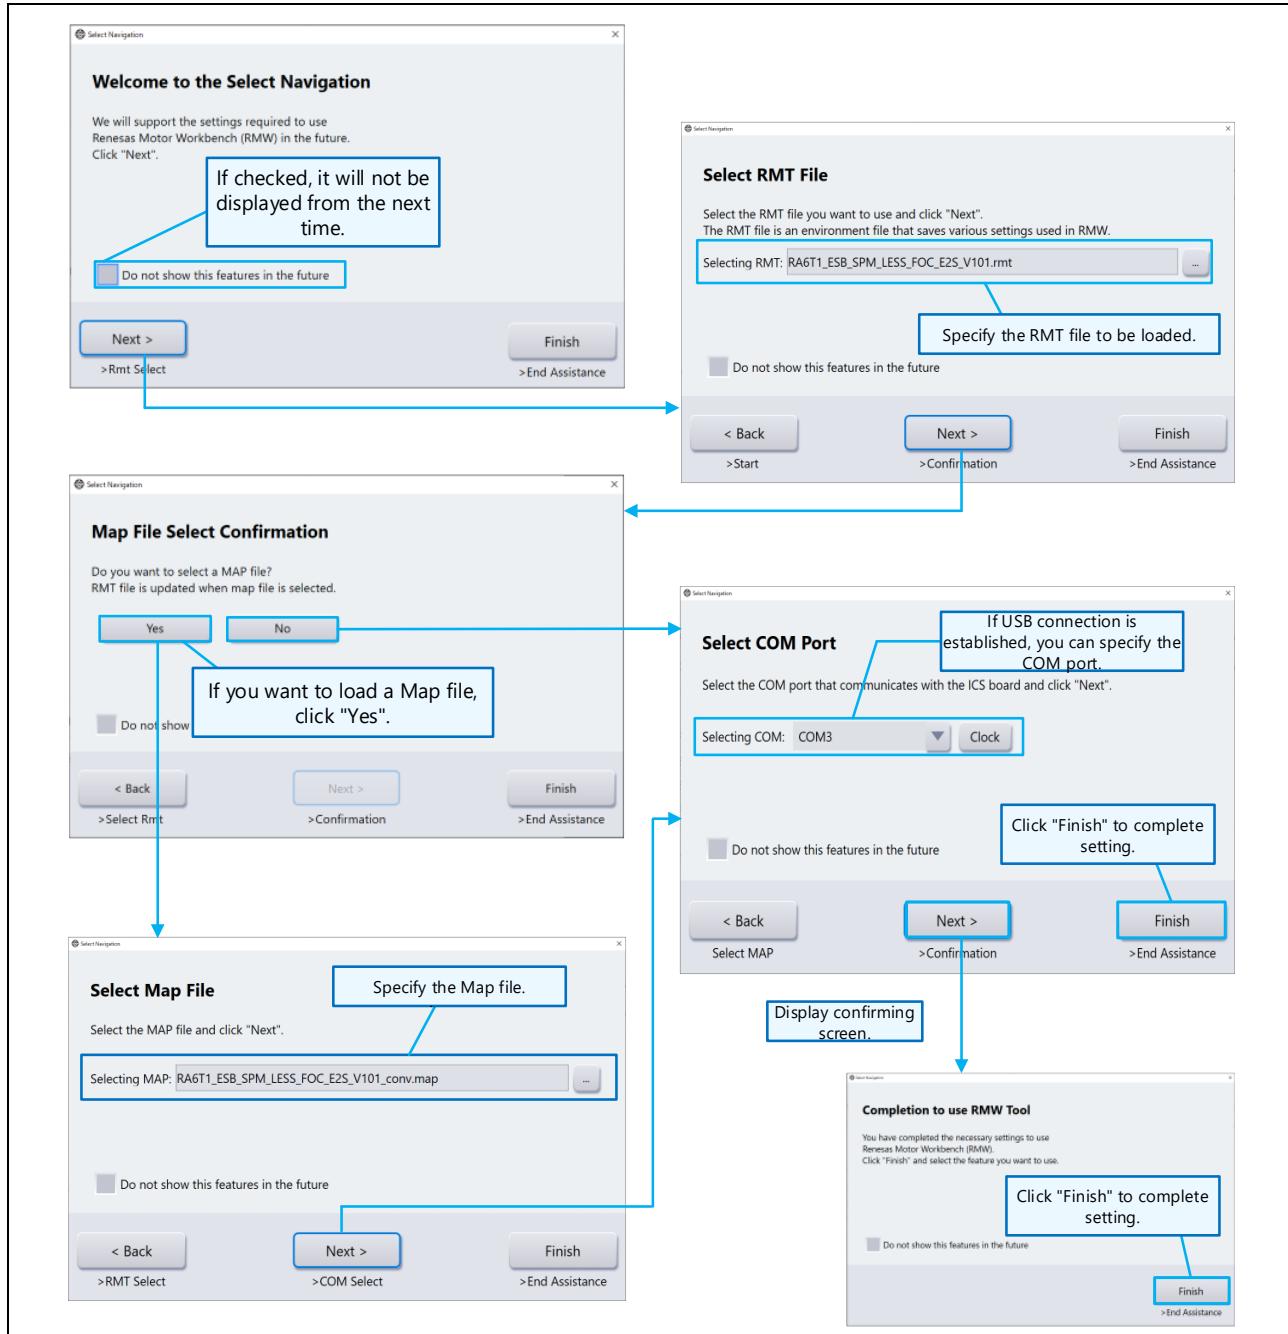


Figure 2-29 Select Navigation function

3.Analyzer Tool

3.1 Overview

Analyzer is a tool that can read/write variables and display waveforms in real-time without stopping the program while a motor is being operated.

In motor control, if program execution is stopped suddenly, a large current may flow, and the inverter board may be damaged depending on the state of PWM output. Therefore, the variables in the MCU cannot be checked by setting brake points like general applications.

Additionally, in motor control, particularly in vector control, the current values calculated by the program, such as current values of “d-axis” and “q-axis”, are used for control, so those values cannot be checked with an oscilloscope, etc. This tool enables users to check the current values directly, which is one of key features.

Furthermore, Analyzer tool has various functions such as triggering according to the sequence, zooming the waveforms, etc.

By utilizing these functions of Analyzer tool, you can proceed your development far more efficiently than by outputting data with DA converters or external paths, or by saving them in a memory to analyze later.

3.2 Analyzer Tool Structure

Analyzer tool has three basic functions (windows) such as:

- Control Window
- Scope Window
- User Button Window
- Analyzer Navigation Window

and three sub tools (windows) that can be started from the above Control Window.

- Commander
- Status Indicator
- One Shot
- Parameter Output

The basic functions of Analyzer tool are displayed when you start Analyzer tool. While the Analyzer tool is active, you cannot close the window for the basic functions.

Every window in Analyzer tool can be framed out of the Analyzer tool window. (For detail, refer to 2.4.7 Basic Window Operation.)

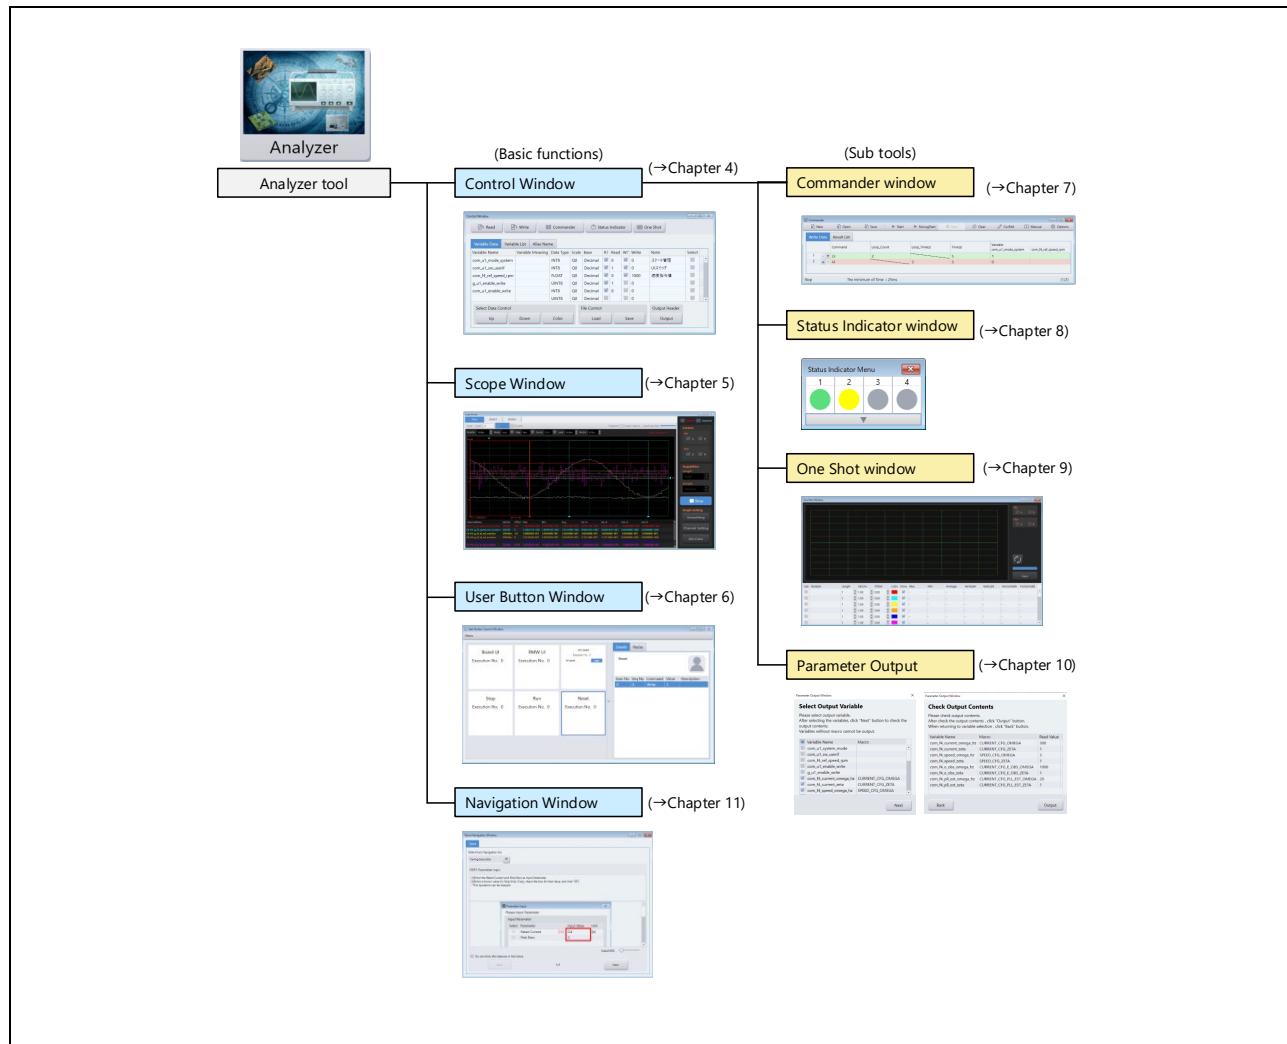


Figure 3-1 Analyzer tool structure

3.3 Analyzer tool View

The view of Analyzer tool is as below (the windows are arranged vertically).

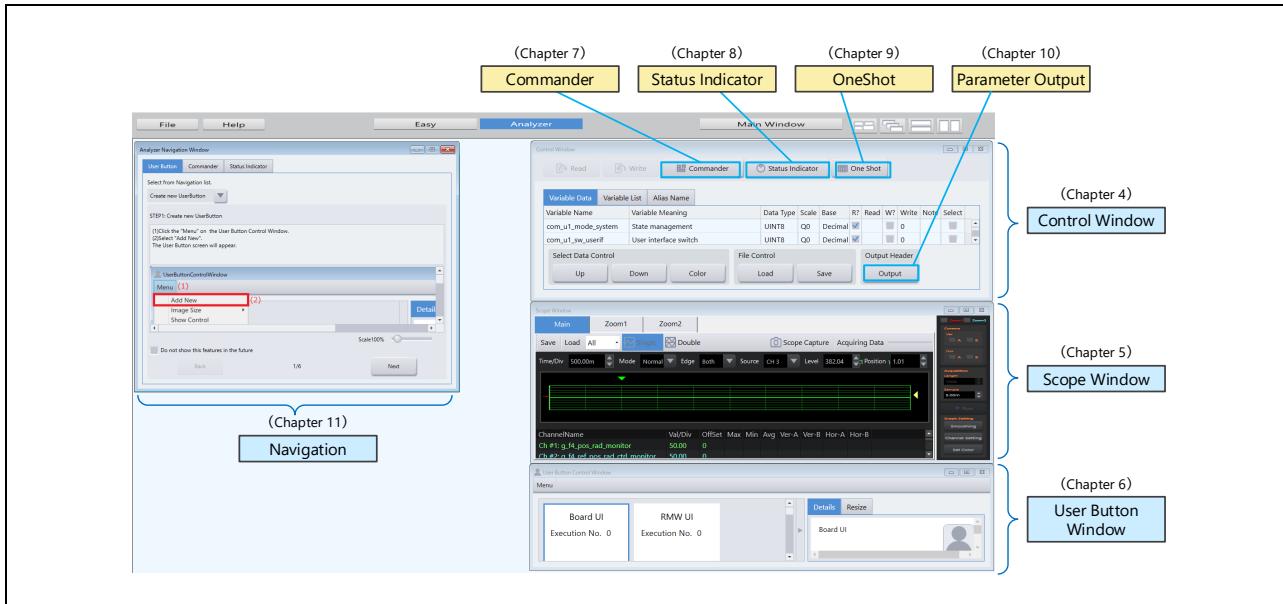


Figure 3-2 Analyzer tool view

Table 3-1 Windows of Analyzer

| Window | | Explanation | Reference |
|----------------|-------------------------|---|------------|
| Basic function | Control Window | Reads and writes variables in real-time. You can specify the target variable to operate from variables loaded from a Map file. | Chapter 4 |
| | Scope Window | Provides waveform display of selected variables like an oscilloscope. It is possible to zoom and capture the display. | Chapter 5 |
| | User Button Window | Executes the preregistered sequence sequentially by user instructions (clicking button). | Chapter 6 |
| | Navigation Window | Explains how to operate each tool of Renesas Motor Workbench. | Chapter 11 |
| Sub tool | Commander window | Preregisters a sequence of instructions for writing data into variables and executes it. It is possible to specify the intervals and perform loop processing. | Chapter 7 |
| | Status Indicator window | Monitors variable values and turns on the indication light when a monitored result matches a preset condition (a threshold is exceeded). | Chapter 8 |
| | One Shot window | Displays the buffered data (data of consecutive addresses from the specified variable) as a waveform. | Chapter 9 |
| | Parameter Output | Outputs the parameters adjusted by Analyzer as a header file to be included in the motor control program. | Chapter 10 |

4. [Analyzer] Control Window

4.1 Overview

Control Window can read and write values of variables loaded from a Map file in real-time. Control Window is displayed when you launch Analyzer.

Control Window has three tabs such as Variable Data tab, Variable List tab, and Alias Name tab. You can also activate the sub windows (Commander window, Status Indicator window, and One Shot window) from the buttons on Control Window.

4.2 Features

- Reads and writes variables in real-time. Ideal for acquiring values instantaneously.
- Automatically displays a list of potential candidates when you enter characters to select the target variables.

4.3 Window Structure

The structure and functions of Control Window are shown below.

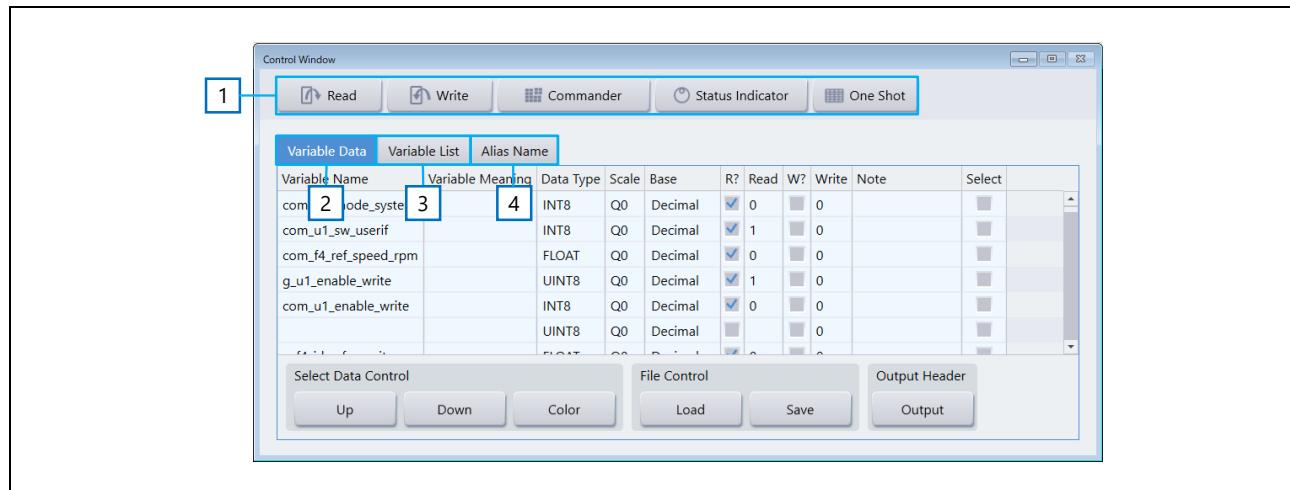


Figure 4-1 Control Window structure

Table 4-1 Explanation of each part of Control Window

| No. | Name | Explanation |
|-----|-------------------|--|
| 1 | Operation buttons | <ul style="list-style-type: none"> You can load/write values of variables by clicking the Read/Write buttons. (You cannot when the target is not connected.) Click Commander/Status Indicator/One Shot buttons to start each function. |
| 2 | Variable Data tab | You can specify the variable names from the “variable information” loaded from a Map file to load/write the values. |
| 3 | Variable List tab | Displays the list of “variable information” loaded from a Map file. |
| 4 | Alias Name tab | You can specify aliases for variable names in the “variable information” loaded from a Map file |

4.3.1 Operation Buttons

The names and functions of operation buttons are explained below.

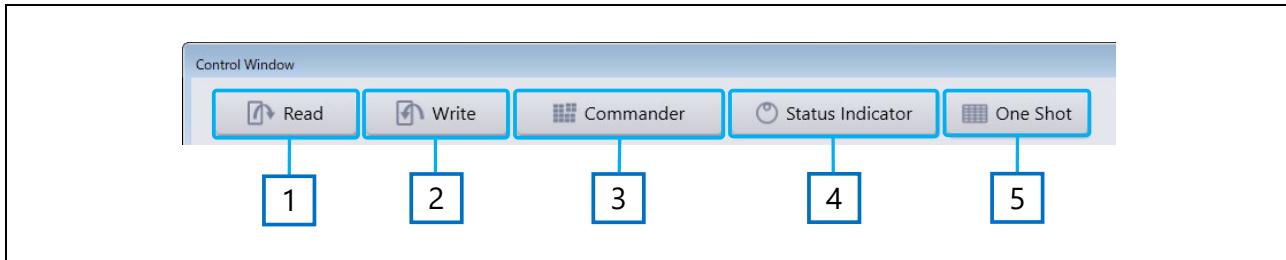


Figure 4-2 Operation buttons

Table 4-2 Operation button function

| No. | Name | Function |
|-----|------------------|--|
| 1 | Read | Loads variable values. |
| 2 | Write | Writes values into variables. |
| 3 | Commander | Starts Commander window. (For details, see 7. [Analyzer] Commander Window.) |
| 4 | Status Indicator | Starts Status Indicator Menu window. (For detail, see 8. [Analyzer] Status Indicator Window.) |
| 5 | One Shot | Starts One Shot window. (For details, see 9. [Analyzer] One Shot Window.) |

4.3.2 Variable Data Tab

You use Variable Data tab to load variable values and write values into variables by specifying the target variables.

The names and functions of items in Variable Data tab are shown below.

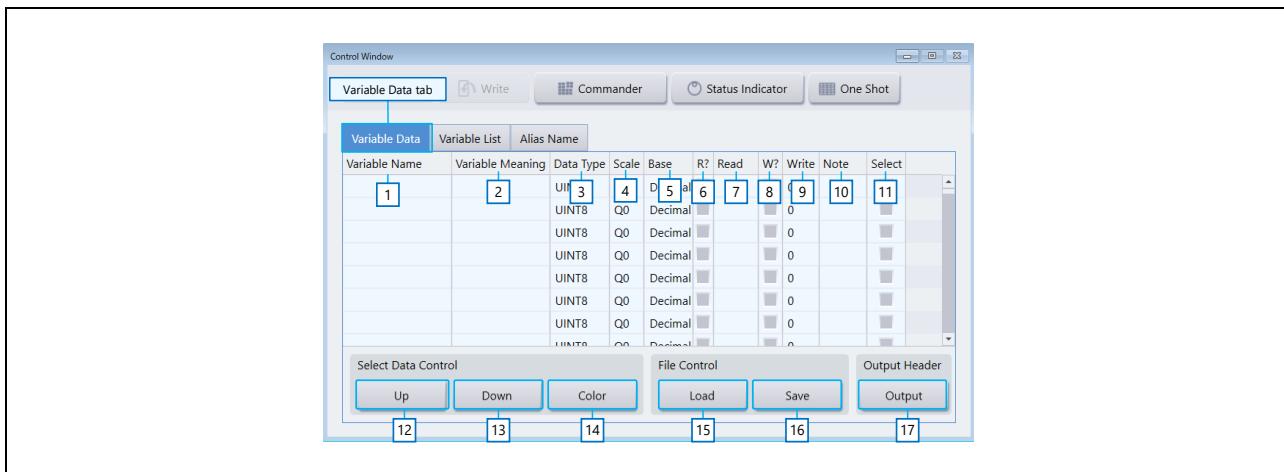


Figure 4-3 Variable Data tab view

Table 4-3 Variable Data tab functions

| No. | Name | Explanation |
|-----|------------------|---|
| 1 | Variable Name | <ul style="list-style-type: none"> Specify the name of a variable to be loaded or written. You can specify a name by directly entering it, selecting the name from a list, or using the Variable Find function. <p>(For details about the specification methods, see 4.4.1 Specifying Variable Name.)</p> |
| 2 | Variable Meaning | <ul style="list-style-type: none"> Displays the meaning and unit of the Variable Name |
| 3 | Data Type | <ul style="list-style-type: none"> Displays the data type of the variable loaded from a Map file. You can change the data type, but the change is effective only on this screen. (It is not reflected to the Variable List.) |
| 4 | Scale | Specify a scale value for the variable. |
| 5 | Base | Set the base number to be displayed. |
| 6 | R? | Specify whether the value is/isn't loaded when the Read button is clicked. |
| 7 | Read | Displays the loaded value. |
| 8 | W? | Specify whether the value is/isn't written when the Write button is clicked. |
| 9 | Write | Directly enter the value to be written. |
| 10 | Note | Any comments can be entered. (The entered information is saved in an RMT file.) |
| 11 | Select | By selecting boxes in this column, you can move rows or change background color in a batch operation. (You can select multiple items.) |
| 12 | Up button | Moves up the row(s) selected in Select by one row. |
| 13 | Down button | Moves down the row(s) selected in Select by one row. |
| 14 | Color button | Changes the background color of the row(s) selected in Select. |
| 15 | Load button | Loads setting information on variables to be read/written from a CSV file. |
| 16 | Save button | Saves information that has been set in this tab into a CSV file. |
| 17 | Output button | Activates Parameter Output window. |

4.3.3 Variable List Tab

Variable List tab displays all variable information loaded from a Map file. In this tab, you cannot edit the information other than the “Description” field.

The names and functions of items in Variable List tab are shown below.

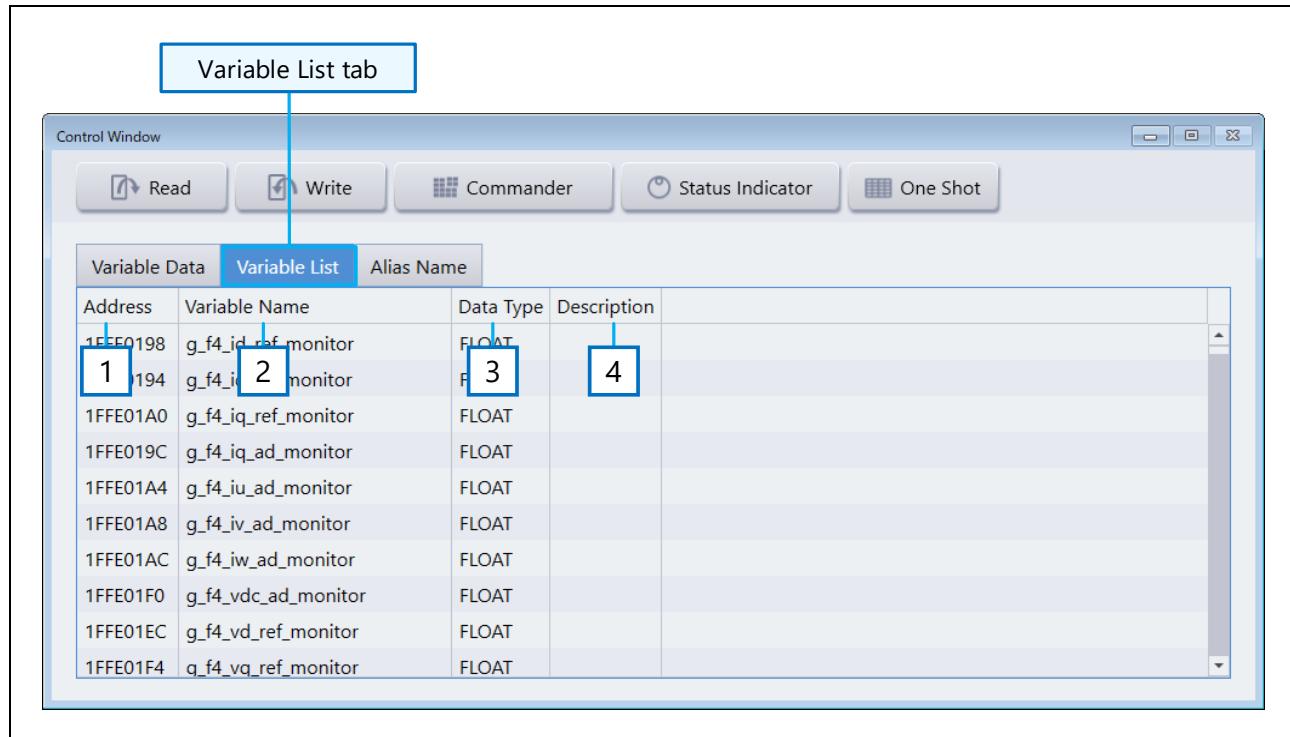


Figure 4-4 Variable List tab view

Table 4-4 Variable List tab function

| No. | Name | Explanation |
|-----|---------------|---|
| 1 | Address | Displays the address of a variable (cannot be edited). |
| 2 | Variable Name | Displays a variable's name (cannot be edited). |
| 3 | Data Type | Displays a variable's data type (cannot be edited). |
| 4 | Description | Any comments can be entered. (The entered information is saved in an RMT file.) |

4.3.4 Alias Name tab

In Alias Name tab, you can specify an alias name for the variable loaded from a Map file. The specified name is used as Alias Name in the following windows.

- Channel Setting window in Scope Window
- User Button Window
- Commander window
- Variable Find window (searching variables)

The names and functions of items in Alias Name tab are shown below.

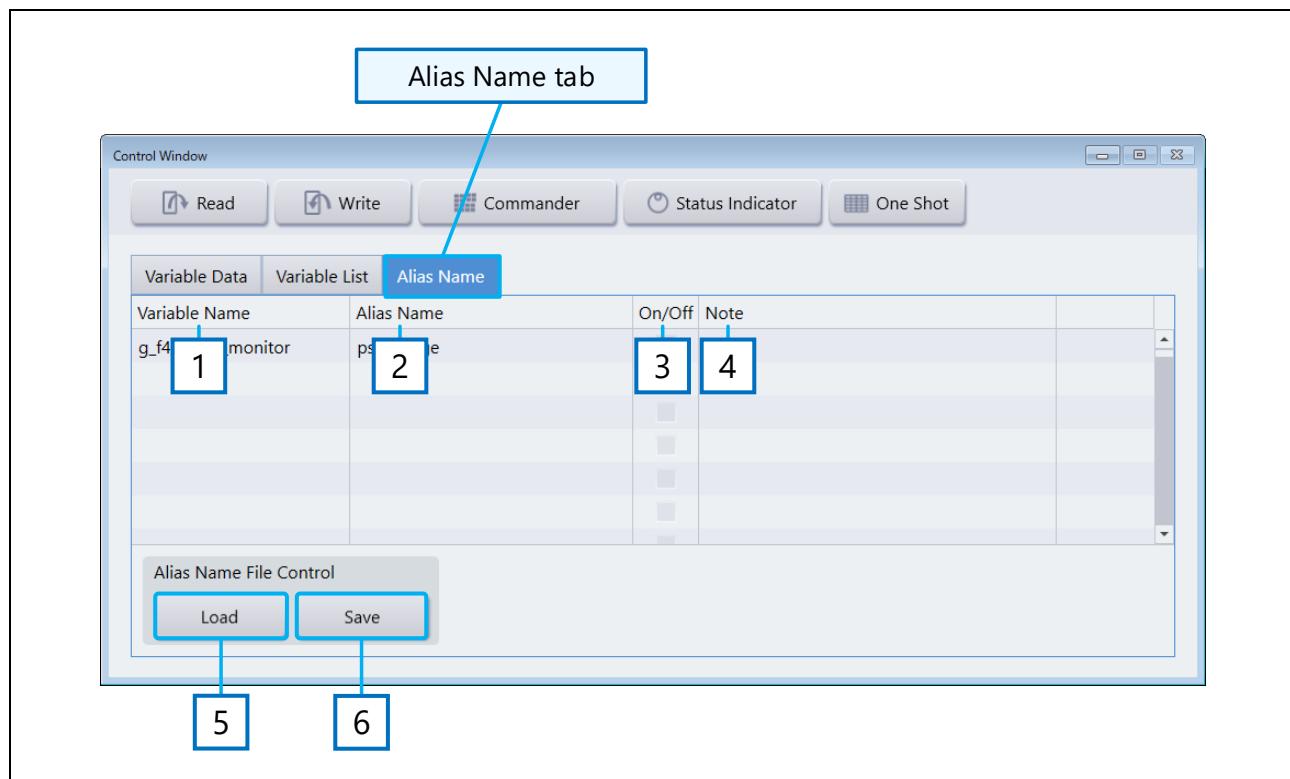


Figure 4-5 Alias Name tab view

Table 4-5 Alias Name tab functions

| No. | Name | Explanation |
|-----|---------------|--|
| 1 | Variable Name | <ul style="list-style-type: none"> Specify the variable name for which an alias is to be specified. You can specify a variable name by directly entering it, selecting from a list, or using Variable Find. (For details, see 4.4.1 Specifying Variable Name.) |
| 2 | Alias Name | Specify the name to be used as the alias name. |
| 3 | On/Off | Enables/disables the alias name. (On: Setting enabled; Off: Setting disabled). |
| 4 | Note | Any comments can be entered. (The entered information is saved in an RMT file.) |
| 5 | Load | Loads alias name setting information from a CSV file. |
| 6 | Save | Saves the specified alias name information in a CSV file. |

4.4 Specifying Variable Name (Variable Data Tab)

4.4.1 Specifying Variable Name

To load variable values or write values into variables, specify the target variable name in the Control Window's Variable Data tab. Specify a variable name by following one of the steps 4.4.1.1 to 4.4.1.3 below.

4.4.1.1 Enter directly into the Variable Name cell

Click a Variable Name cell in Variable Data tab to select it (the cell color is changed), then click it again to make it editable. You can enter a variable name directly in this state.

When you start entering characters, RMW automatically displays a list of potential matching candidates from the loaded variable information. You can select one of these variables.

Not that if you release the selected cell in which characters are entered halfway without specifying a variable, the entered information will be cleared.

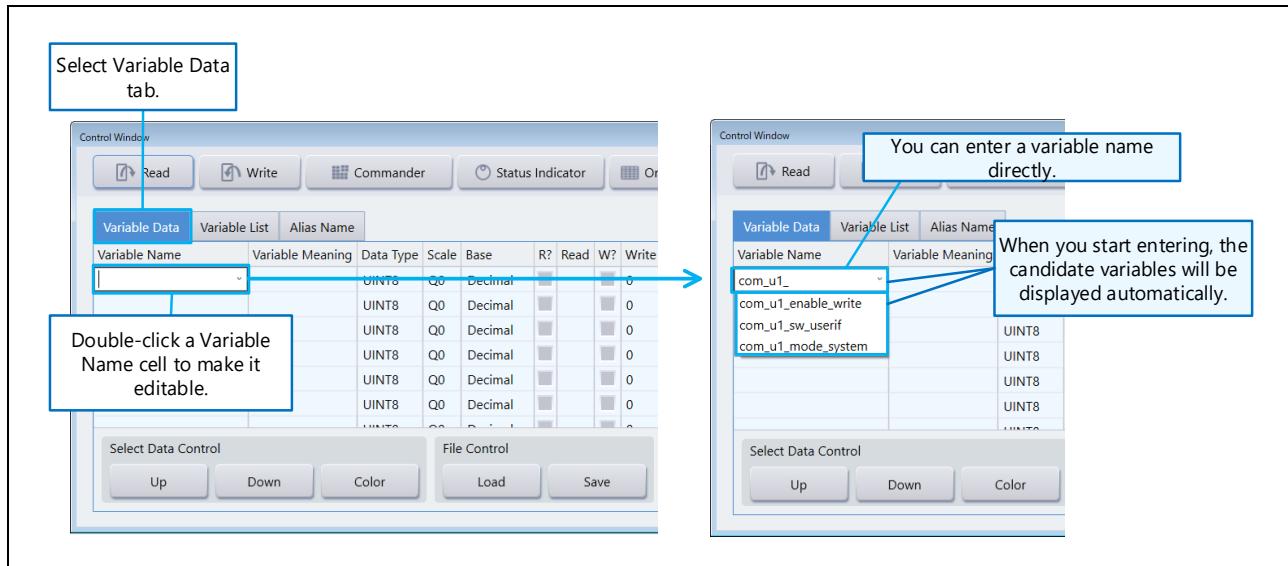


Figure 4-6 Direct input to cell

4.4.1.2 Select variable from the list

Click a Variable Name cell in Variable Data tab to select it (the cell color is changed), then click it again to make it editable. In this state, "v" is displayed to the right of the cell. Click this "v" to display a list of the loaded variable information. Select a variable from this list.

If you enter a variable name partway and click the "v", a list of potential matching candidates is automatically displayed. You can select one of these variables. (the same operation as in 4.4.1.1)

Not that if you release the selected cell in which characters are entered halfway without specifying a variable, the entered information will be cleared.

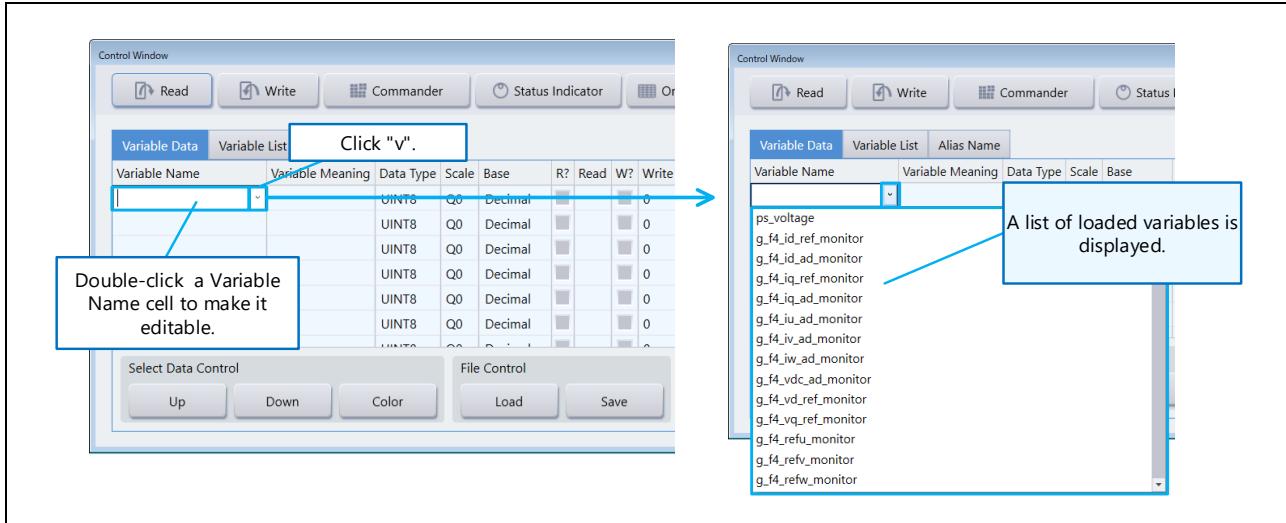


Figure 4-7 Selecting variable from list

4.4.1.3 Select variable using Variable Find function

Right-click on a Variable Name cell to open a menu. Select “Variable Find” from this menu, and the Variable Find screen will be displayed. On this screen, you can select a variable by narrowing down with keywords or meaning information.

Enter a keyword into the text input field on the Variable Find screen, and then click the “Find” button. You can enter multiple keywords separated with spaces for AND search. When checking the box at the bottom of Variable Find screen, you can also narrow down your search to only the variables whose meaning information has been loaded.

The following shows how to operate the Variable Find function.

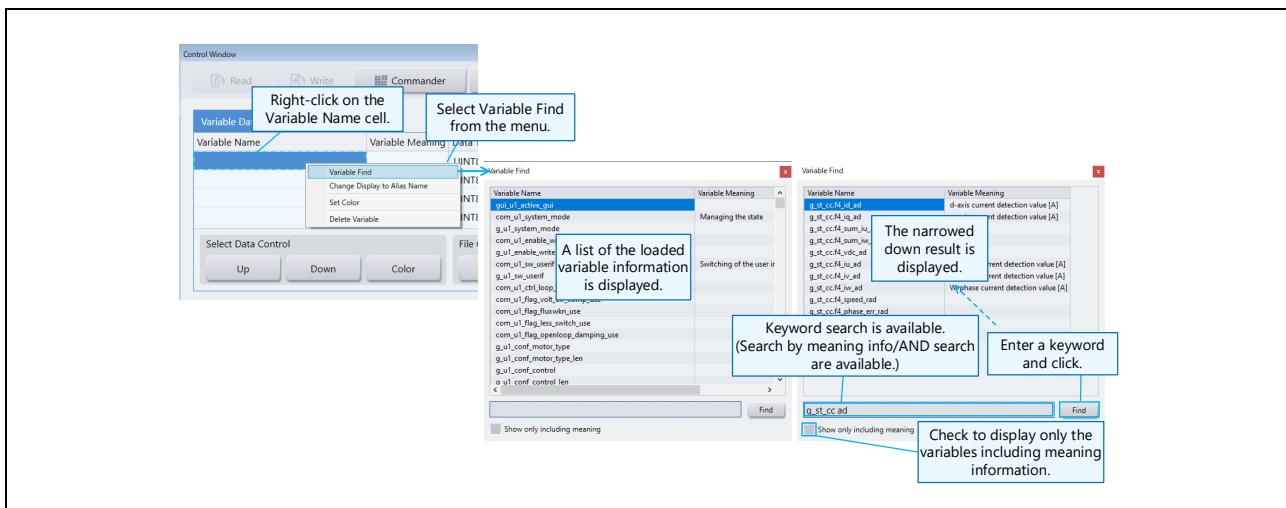


Figure 4-8 Variable selection using Variable Find function

4.4.2 Setting Data Type

Control Window's Variable Data tab has a Data Type field, which automatically displays the data type of the variable information loaded from a Map file when the variable name is specified in Variable Name.

In a Data Type field, you can change the data type of the variable to use in Read/Write operations on Control Window. When you click the “v” to the right of a Data Type field, a selection list is displayed. You can change the data type by selecting one from the list.

Table 4-6 Data Type list

| Data Type | Explanation |
|-----------|---|
| UINT8 | 8-bit, unsigned integer |
| INT8 | 8-bit, signed integer |
| UINT16 | 16-bit, unsigned integer |
| INT16 | 16-bit, signed integer |
| UINT32 | 32-bit, unsigned integer |
| INT32 | 32-bit, signed integer |
| FLOAT | 32-bit, floating point |
| BOOL | Data type that takes either of two values (True or False) |
| LOGIC | Bit Field is displayed in bits |

4.4.3 Setting Scale

Control Window's Variable Data tab has a Scale field, which automatically displays “Q0” as the default value when a variable name is specified in Variable Name.

In a Scale field, you can change the scale for the data to be used in Read/Write operations on Control Window. You can enter a value directly to this field. The valid values are Qn (n=0-31), positive integers, and positive decimals.

Table 4-7 Scale input values

| Input value | Formula for calculating data |
|------------------|--|
| Qn (n=0-31) | Data \times (1 \div (n-th power of 2)) |
| Positive integer | Data \times (1 \div integer) |
| Positive decimal | Data \times (1 \div decimal) |

If there is a mistake in the direct entry of a Scale field, an error notification is displayed.

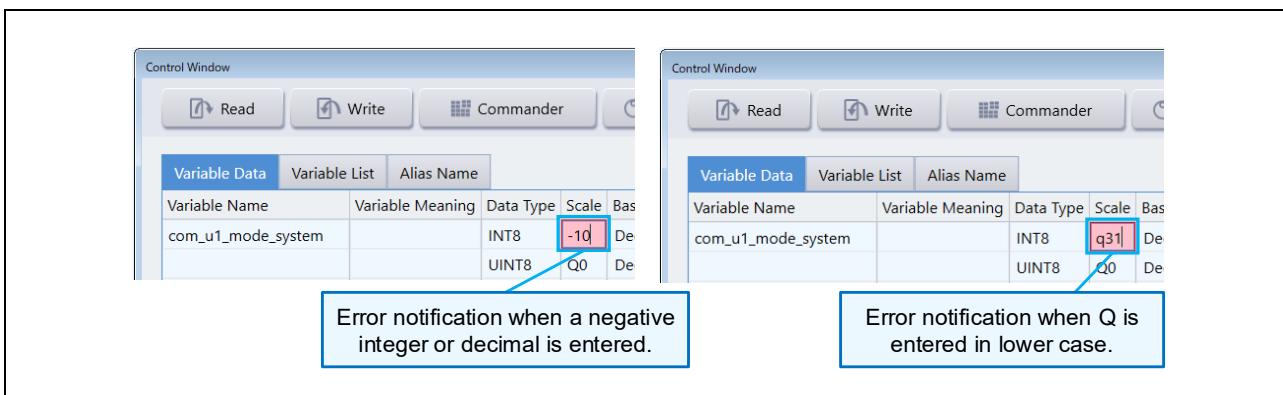


Figure 4-9 Error notification in Scale entry

4.4.4 Setting Base

Control Window's Variable Data tab has a Base field, which displays "Decimal" as the default value.

In a Base field, you can change the base for the data to be used in Read/Write operations on Control Window. Choose from Decimal, Binary, Octal, and Hex.

4.4.5 Text Notes for Variable Information

Control Window's Variable Data tab has a Note field, in which the user can enter any comments, such as a note on the variable information.

The information entered in the Note field is saved in an RMT file. (If you save RMT file and exit, the information will be displayed at the next startup.)

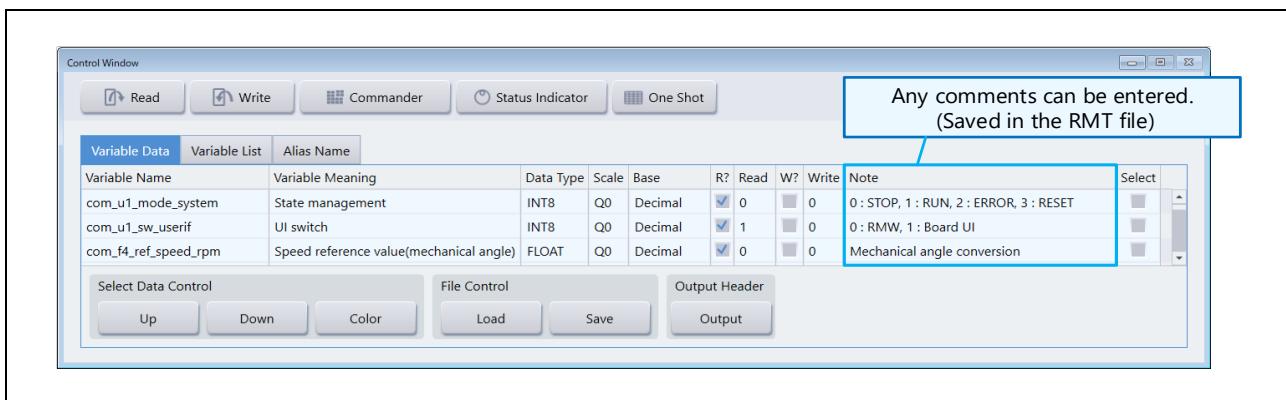


Figure 4-10 Note field in Variable Data tab

4.4.6 Loading Variable Values

Control Window's Variable Data tab is used to load variable values.

Check the checkbox in the "R?" field, then click the "Read" button to display the loaded value in the "Read" field. (If no target is connected, the "Read" button is disabled.)

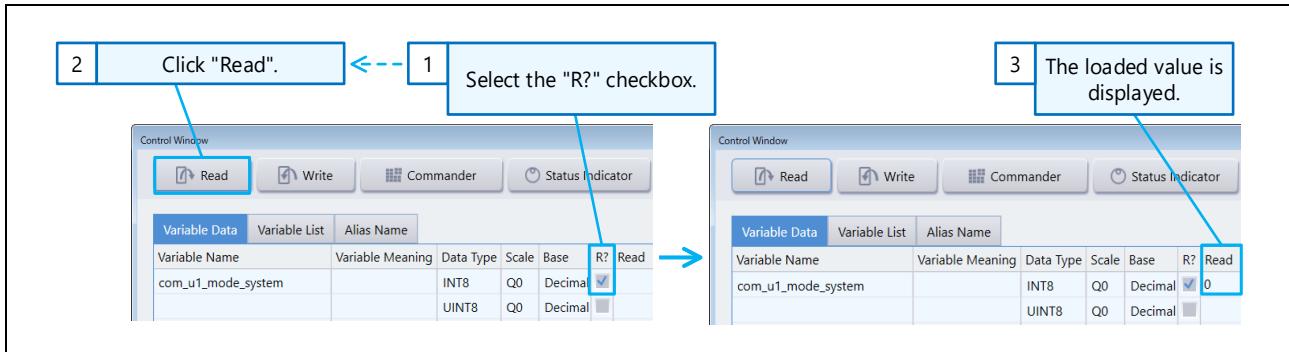


Figure 4-11 Loading variable values

You can switch ON/OFF of the checkboxes in the "R?" column all at once.

4.4.6.1 Select multiple cells to switch

When multiple cells are selected (the cells turn blue), right-click and select "Select Set" or "Select Clear" from the menu, and you can switch the checkboxes of the selected cells all at once.

4.4.6.2 Switch all cells

Select "All Set" or "All Clear" from the right-click menu of a "R?" cell, and you can switch the checkboxes of all the cells in the "R?" column at once.

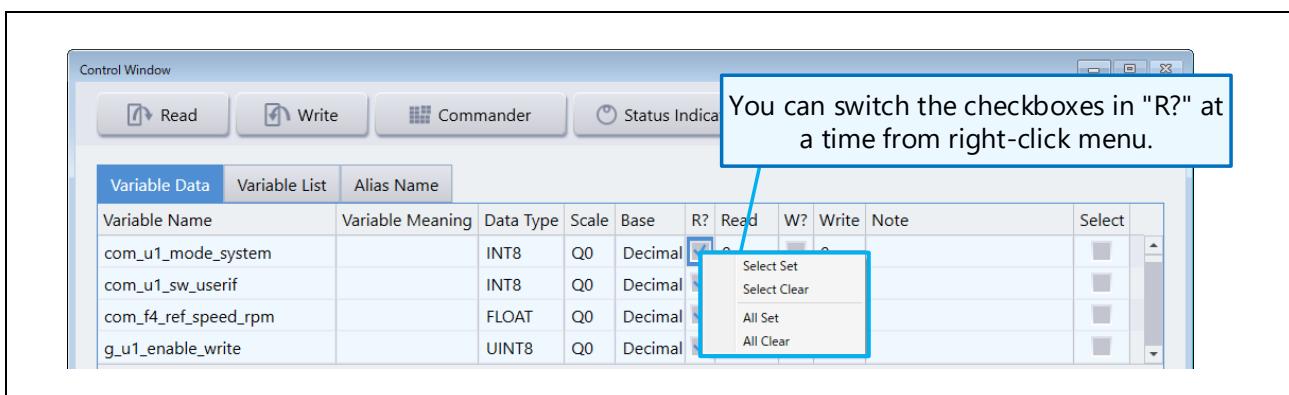


Figure 4-12 Switching "R?" checkboxes at once

4.4.7 Writing Values into Variables

You can use Control Window's Variable Data tab to write values to variables.

Turn on the checkbox in the "W?" column, then enter a value to be written into the variable in the "Write" field. When you click the "Write" button, writing operation will be performed. (If no target is connected, Write button is disabled.)

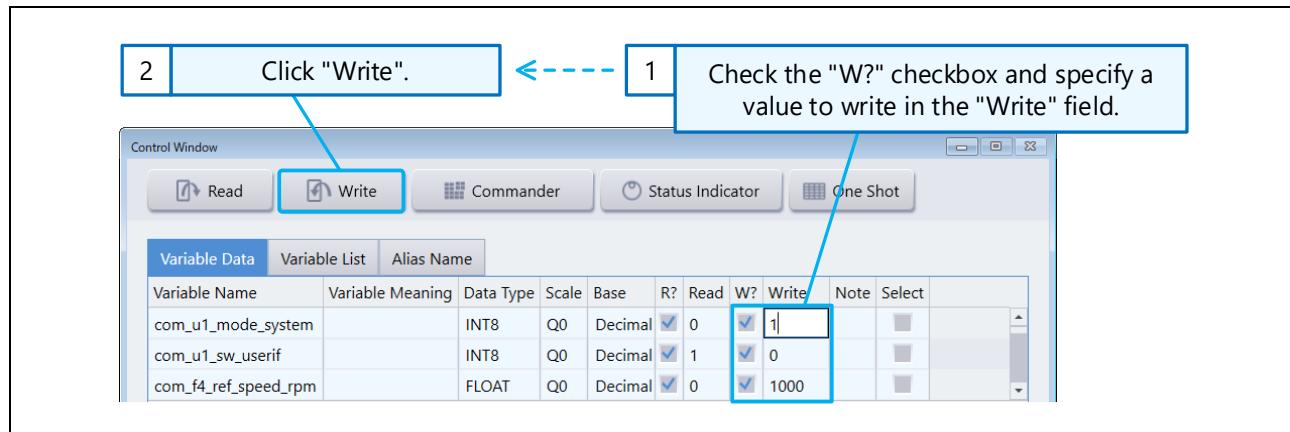


Figure 4-13 Writing variable values

You can check the written result using the operations described in 4.4.6 Loading Variable Values.

You can switch ON/OFF of the checkboxes in the "W?" column all at once.

4.4.7.1 Select multiple cells to switch

When multiple cells are selected (the cells turn blue), right-click and select "Select Set" or "Select Clear" from the menu, and you can switch the checkboxes of the selected cells all at once.

4.4.7.2 Switch all cells

Select "All Set" or "All Clear" from the right-click menu of the "W?" cell, and you can switch the checkboxes of all the cells in the "W?" column at once.

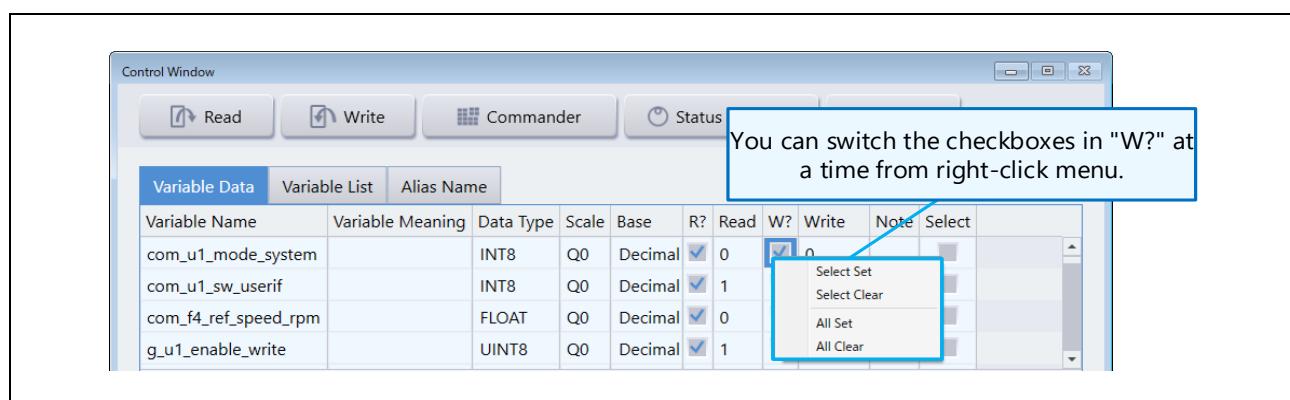


Figure 4-14 Switching "W?" checkboxes at once

4.4.8 Rearranging Variable Display

You can rearrange the order of the variable names set in the Control Window's Variable Data tab. Select a checkbox in the Select field for a row that you want to move, then click the "Up" or "Down" button at the bottom of the screen to move the row. You can also select multiple rows and move them at once.

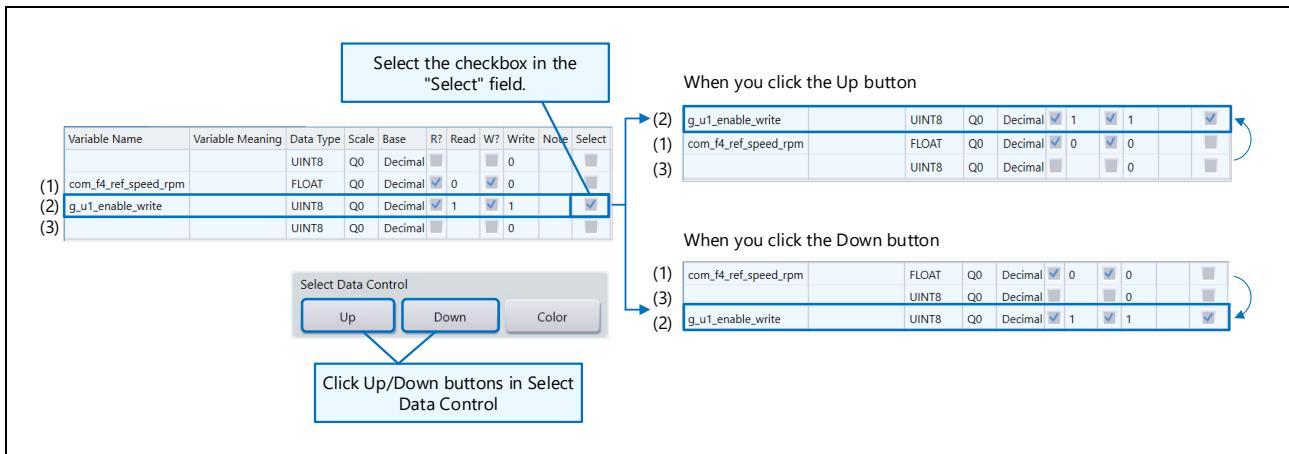


Figure 4-15 Rearranging variable display

4.4.9 Changing Background Color of Variable Display

You can change the background color of rows in Control Window's Variable Data tab to make them stand out. There are two ways to change.

4.4.9.1 Change from the right-click menu

Right-click on the row whose color you want to change, and select "Set Color" from the menu, and the color setting screen will be displayed. Select a color to change the background color.

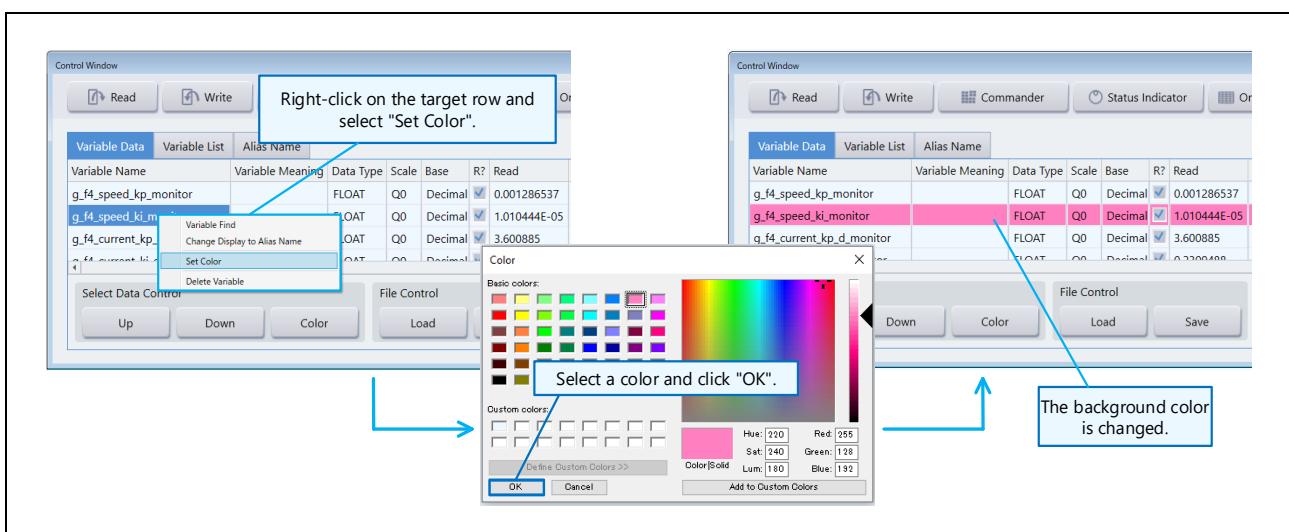


Figure 4-16 Changing background display color of variables (right-click menu)

4.4.9.2 Select rows by using Select field

Turn on the checkbox in the “Select” field of the row whose background color you want to change. Then click the “Color” button at the bottom of the screen, and the color setting screen will be displayed. Select a color to change the background color. You can also select multiple rows and change the color at once.

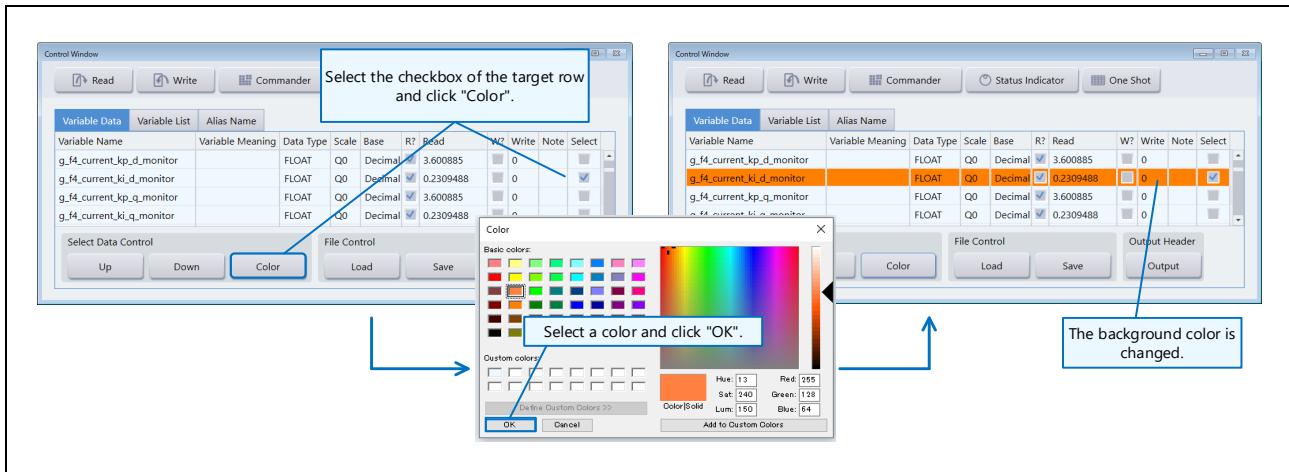


Figure 4-17 Changing background display color of variables (selecting rows by using Select field)

4.4.10 Deleting Variables

There are two ways to delete variable names set in the Control Window's Variable Data tab. When a variable name is deleted, all the information on its row will be reset.

4.4.10.1 Delete by Delete Key

To delete a variable, select the variable name and press the Delete key.

4.4.10.2 Delete from right-click menu

Right-click on the row of the variable name to be deleted (except on the R? /W?/Select fields), and you can delete it by selecting "Delete Variable" from the right-click menu.

If multiple variable names are selected, you can delete the multiple rows at once by the above operations 4.4.10.1 or 4.4.10.2. When a variable name is deleted, all the information set on its row will be reset to the initial state.

Note, however, that you cannot delete variables by selecting their checkboxes in the Select field.

4.4.11 Saving/Loading Variable Information

You can save and load the variable information set in Variable Data tab in CSV file format.

4.4.11.1 Saving operation

Click the “Save” button on Variable Data tab to save the setting information into a CSV file.

4.4.11.2 Loading operation

Click the “Load” button on Variable Data tab to load the setting information from the CSV file and update (overwrite) the list in Variable Data tab.

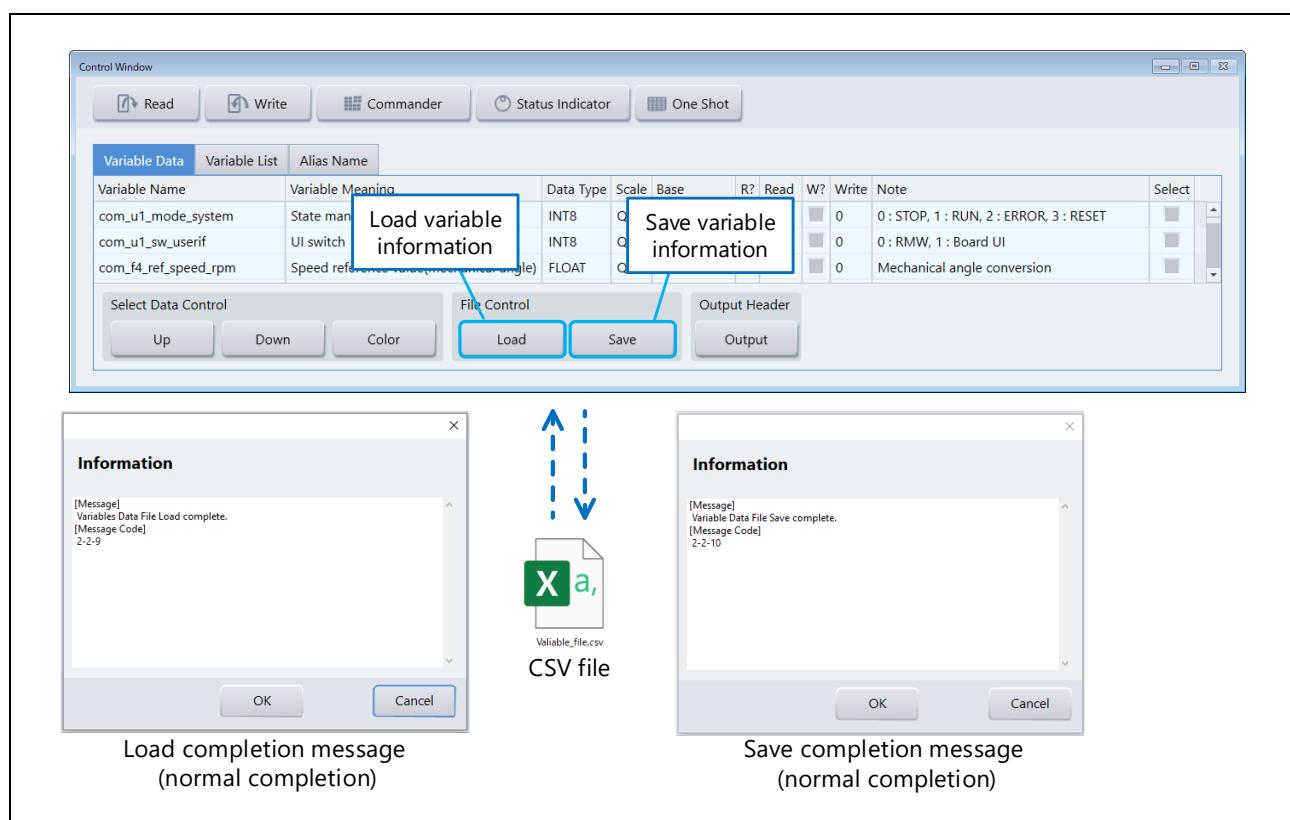


Figure 4-18 Saving/loading variable information (CSV file)

Note that when you save an RMT file, all information set in each Control Window's tab (Variable Data tab, Variable List tab, and Alias Name tab) is also saved. This information will be restored when the saved RMT file is loaded.

4.5 Listing Variables (Variable List Tab)

Variable List tab displays all the "variable information" loaded from a Map file. In this tab, you cannot edit the information other than the "Description" field.

For the screen structure, see chapter 4.3.3.

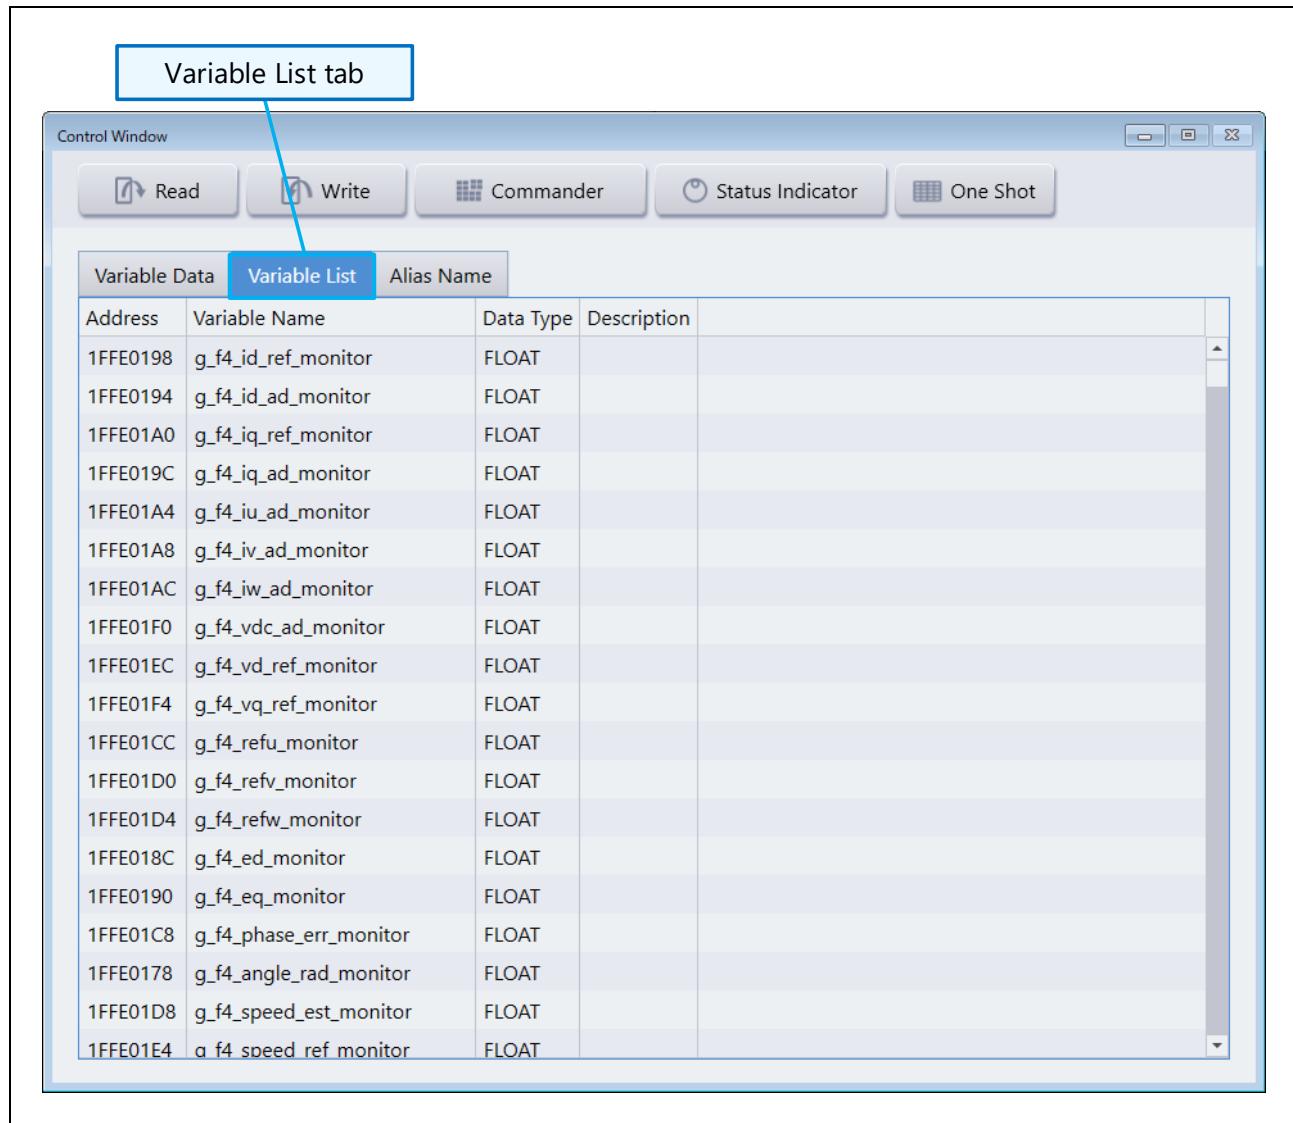


Figure 4-19 Variable List tab view

4.6 Specifying Alias Name (Alias Name Tab)

In Control Window's Alias Name tab, you can specify an alias for the variable name. Aliases are displayed in the variable list in each function as well as regular variable names.

Alias Name can be displayed in Control Window's Variable Data tab, Variable Find screen for variable-search, Commander window, User Button window, and Channel Setting window in Scope Window.

4.6.1 Specify target variable

To define Alias Name, first specify the target variable in the Variable Name field of Alias Name tab.

You can enter a variable name in the same way as in Variable Name fields of Variable Data tab. (For details, see "4.4.1 Specifying Variable Name".)

4.6.2 Set Alias Name

Set an alias for the variable in the Alias Name field of Alias Name tab.

4.6.3 Enable or disable Alias Name

You can enable or disable the alias name setting in the On/Off checkbox in Alias Name tab.

Check the checkbox to enable the alias, and uncheck to disable the alias. Though you can have duplicates variable names and alias names in the list, the only one of alias Name can be On.

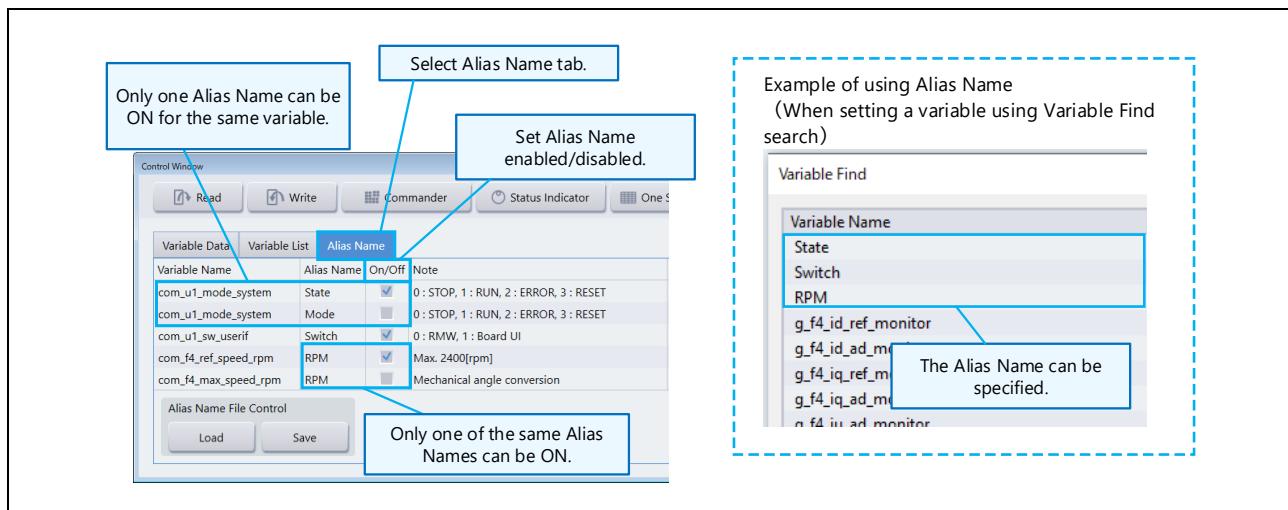


Figure 4-20 Enabling/disabling Alias Name

Note: If you switch the Alias Name setting from "On" to "Off" while the other function has specified the alias name, the alias name will be switched automatically to the variable name. However, if you switch it from "Off" to "On", the variable name will not be switched automatically to the alias name. Therefore, you need to specify the alias name again from the function you use.

4.6.3.1 Set Note

The Note field on Alias Name tab can be used for entering any comments as a note.

4.6.3.2 Save/load alias name list

You can save and load the setting information on Alias Name tab in a comma-separated CSV file format. When a CSV file is loaded, the information on Alias Name tab is overwritten.

When you save an RMT file, the information on Alias Name tab is also save.

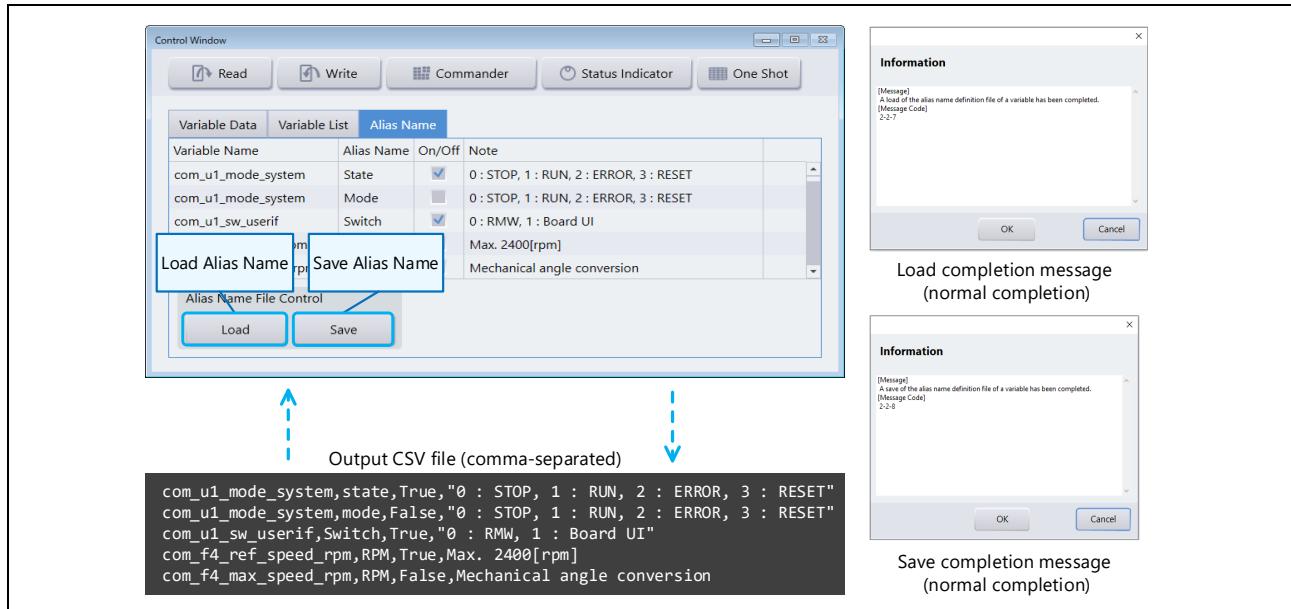


Figure 4-21 Saving/loading alias name list (CSV file)

4.6.3.3 Switch display between Alias Name and Variable Name

Once you have set an alias name, you can use the alias name when specifying the variable name for other functions.

When you right-click a variable name on windows that support Alias Name display (except for Variable Find screen for variable-search), a menu is displayed such as "Change Display to Variable Name" and "Change Display to Alias Name". You can switch displays by selecting them.

- Change Display to Variable Name :Switch display from Alias Name to Variable Name
- Change Display to Alias Name :Switch display from Variable Name to Alias Name

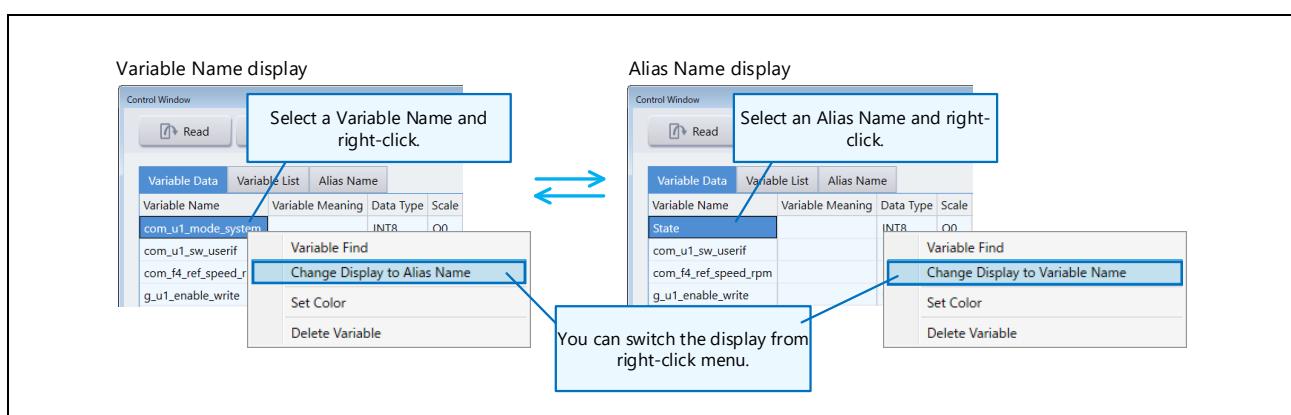


Figure 4-22 Switching displays between Alias Name and Variable Name

5. [Analyzer] Scope Window

5.1 Overview

Scope Window of Analyzer shows changes in the values of the selected variables as waveforms like an oscilloscope. Scope Window is displayed when you launch Analyzer.

5.2 Features

- Oscilloscope-like easy operations (trigger, offset, zoom, cursor, etc.)
- The sampling timing of each channel can be synchronized.
- The measured waveform information can be saved, loaded, and output in a report.

5.3 Window Structure

The window structure and functions of Scope Window are shown below.

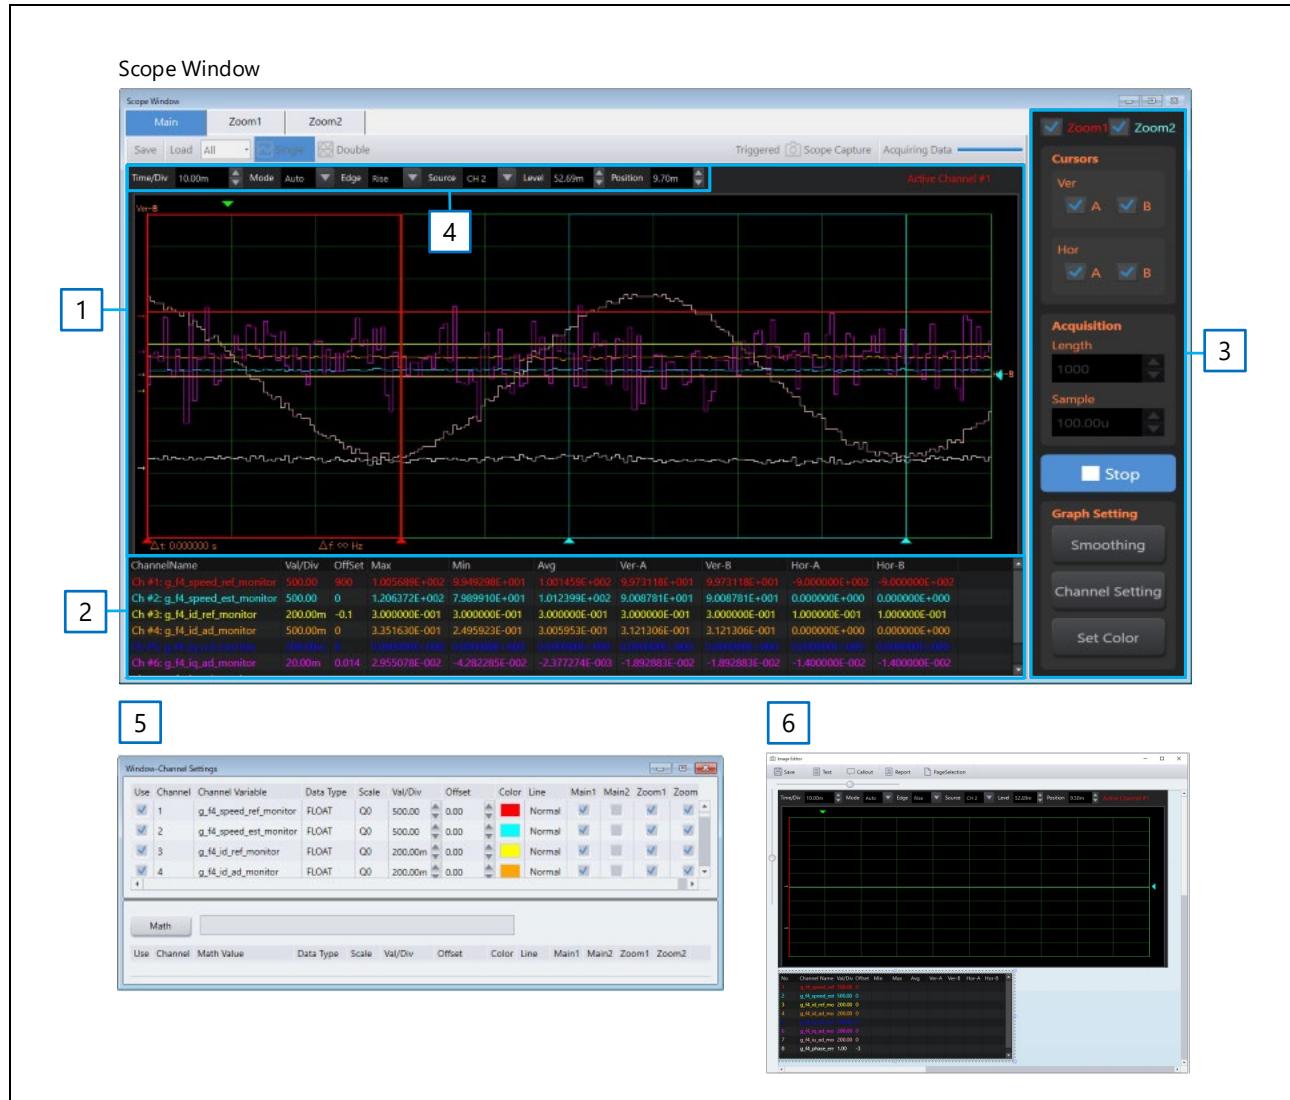


Figure 5-1 Scope Window structure

Table 5-1 Explanation of each area of Scope Window

| No. | Name | Explanation |
|-----|----------------------------------|---|
| 1 | Waveform display area | Displays variable values as waveforms. |
| 2 | Channel information display area | Displays channel information. |
| 3 | Measurement settings area | Starts/stops waveform measurement and specifies various settings. |
| 4 | Trigger settings area | Specify the horizontal axis of waveform display area and settings related to trigger events. |
| 5 | Window-Channel Setting | Clicking "Channel Setting" button displays this screen. Register channels and configure detailed settings. |
| 6 | Image Editor screen | Clicking "Scope Capture" button displays this screen. Adjusts the waveform display image and outputs it in PDF or image format. |

5.3.1 Waveform Display Area

The structure of the waveform display area is shown below.

5.3.1.1 Display switch tab

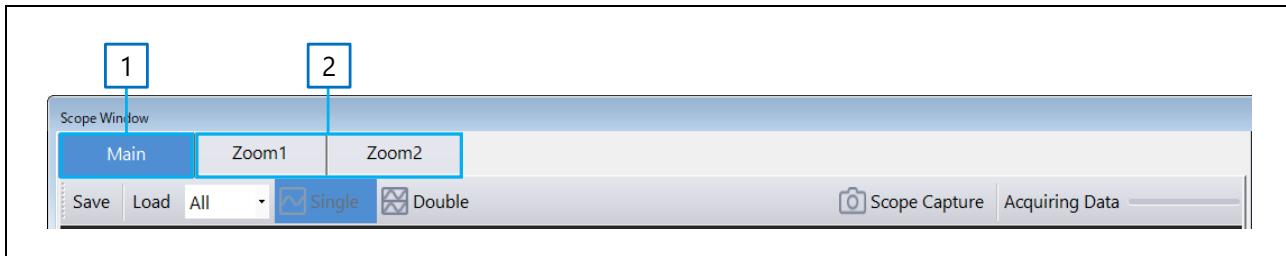


Figure 5-2 Display switch tab

Table 5-2 Explanation of display switch tab

| No. | Name | Explanation |
|-----|-----------------------|-----------------------------|
| 1 | Main tab | Displays the Main waveform. |
| 2 | Zoom1 tab / Zoom2 tab | Displays the Zoom waveform. |

5.3.1.2 Tool bar

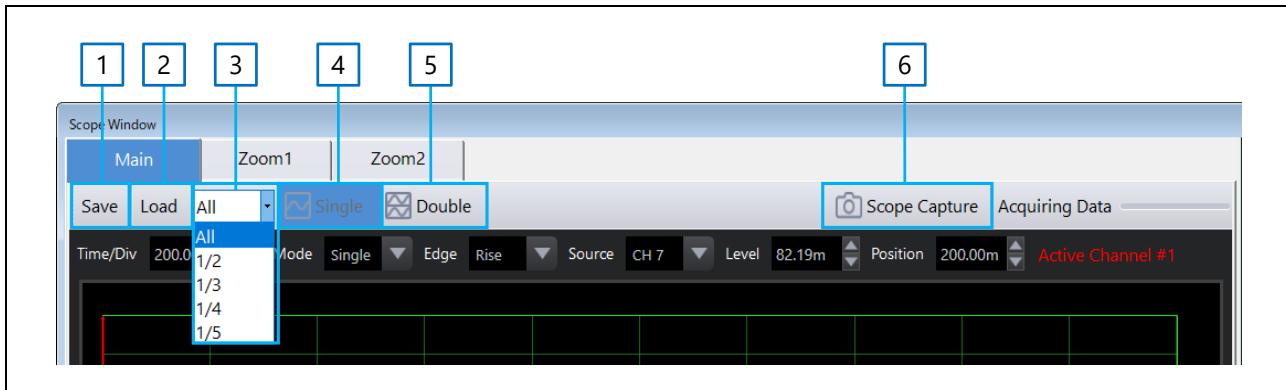


Figure 5-3 Tool bar

Table 5-3 Explanation of tool bar.

| No. | Name | Explanation |
|-----|----------------------|--|
| 1 | Save button | Saves the displayed waveform information in a CSV file. |
| 2 | Load button | Loads the CSV file that was saved with the Save button and displays its waveform. |
| 3 | Thinning count | Select the number of data to be thinned from the waveform data from a list box (All, 1/2, 1/3, 1/4, 1/5). |
| 4 | Single button | Displays the Main waveform in one screen. |
| 5 | Double button | Displays the Main waveform in double screens |
| 6 | Scope Capture button | Starts the Image Editor screen. The waveform image and the channel information are displayed in the Image Editor at the time of clicking this button. Another image and information are added each time the button is clicked. |

5.3.1.3 Trigger settings area

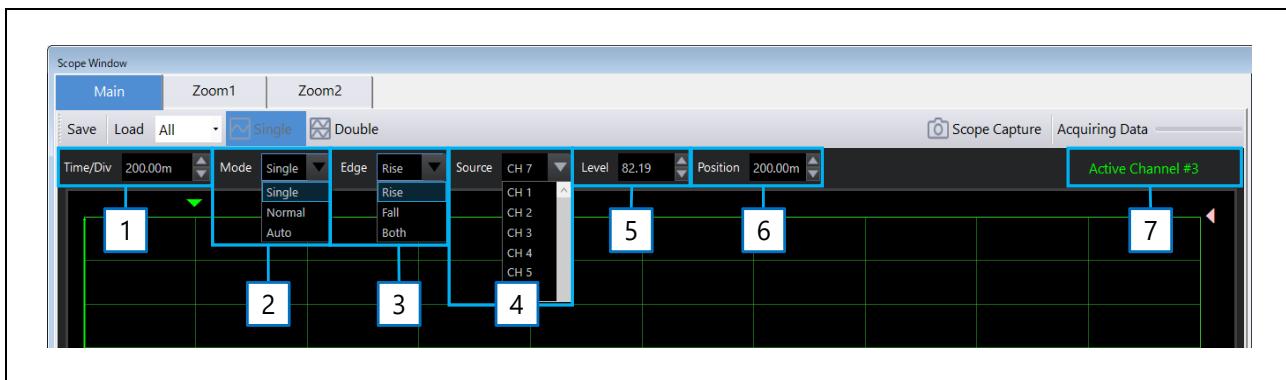


Figure 5-4 Trigger settings area

Table 5-4 Explanation of trigger settings area

| No. | Name | Explanation |
|-----|----------------|--|
| 1 | Time / Div | Specify the time per division for the horizontal axis for the waveform display. |
| 2 | Mode | Select the trigger mode: <ul style="list-style-type: none"> - Auto : Automatically updates the waveform at a fixed interval - Single : Displays a waveform when a trigger event occurs and stops updating. - Normal : Repeats the waveform display every time a trigger event occurs. |
| 3 | Edge | Select the trigger edge: <ul style="list-style-type: none"> - Rise : Rising edge - Fall : Falling edge - Both : Both edges |
| 4 | Source | Select the channel number for which a trigger is to be set. |
| 5 | Level | Specify the trigger synchronization level. |
| 6 | Position | Specify the trigger display position. |
| 7 | Active Channel | Displays the channel number that is set as the Active Channel. |

5.3.2 Channel Information Display Area

The structure of the channel information display area is shown below.

| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 |
|-------------------------------|---------|--------|---------------|---------------|---------------|---------------|---------------|----------------|----------------|
| ChannelName | Val/Div | Offset | Max | Min | Avg | Ver-A | Ver-B | Hor-A | Hor-B |
| Ch #1: g_f4_speed_ref_monitor | 500.00 | 900 | 1.005689E+002 | 9.949298E+001 | 1.001459E+002 | 9.973118E+001 | 9.973118E+001 | -9.000000E+002 | -9.000000E+002 |
| Ch #2: g_f4_speed_est_monitor | 500.00 | 0 | 1.206372E+002 | 7.989910E+001 | 1.012399E+002 | 9.008781E+001 | 9.008781E+001 | 0.000000E+000 | 0.000000E+000 |
| Ch #3: g_f4_id_ref_monitor | 200.00m | -0.1 | 3.000000E-001 | 3.000000E-001 | 3.000000E-001 | 3.000000E-001 | 3.000000E-001 | 1.000000E-001 | 1.000000E-001 |
| Ch #4: g_f4_id_ad_monitor | 500.00m | 0 | 3.351630E-001 | 2.495923E-001 | 3.005953E-001 | 3.121306E-001 | 3.121306E-001 | 0.000000E+000 | 0.000000E+000 |

Figure 5-5 Channel information display area

Table 5-5 Explanation of each column in the channel information display area

| No. | Name | Explanation |
|-----|-----------|--|
| 1 | Ch #n | Displays a variable name for which channel setting was specified. |
| 2 | Val / Div | Displays the Val/Div value for which channel setting was specified. |
| 3 | Offset | Displays the offset value for which channel setting was specified. |
| 4 | Max | Displays the maximum value of the range for which the waveform is to be displayed. |
| 5 | Min | Displays the minimum value of the range for which the waveform is to be displayed. |
| 6 | Avg | Displays the average of the waveform display values. |
| 7 | Ver-A | Displays the value on the vertical axis that was set by Cursor (Ver-A). |
| 8 | Ver-B | Displays the value on the vertical axis that was set by Cursor (Ver-B). |
| 9 | Hor-A | Displays the value on the horizontal axis that was set by Cursor (Hor-A). |
| 10 | Hor-B | Displays the value on the horizontal axis that was set by Cursor (Hor-B). |

5.3.3 Measurement Settings area

The structure of the measurement settings area is shown below.

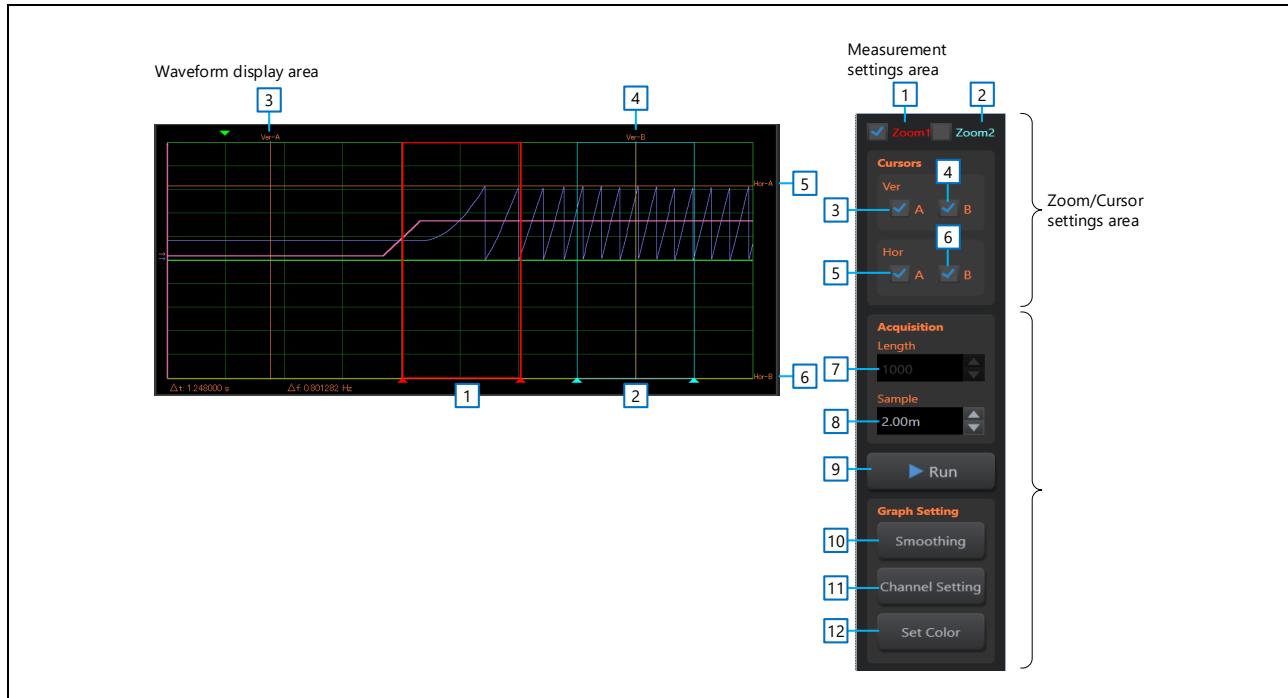


Figure 5-6 Measurement settings area

Table 5-6 Explanation of measurement settings area

| No. | Group | Name | Explanation |
|-----|---------------|-----------------|---|
| 1 | Zoom | Zoom1 | Displays the range of a waveform to be displayed in Zoom1 in the Main waveform screen as a red frame. |
| 2 | | Zoom2 | Displays the range of a waveform to be displayed in Zoom2 in the Main waveform screen as a blue frame. |
| 3 | Cursors | Cursor Ver A | Displays Cursor (Ver-A) in each screen to display waveforms |
| 4 | | Cursor Ver B | Displays Cursor (Ver-B) in each screen to display waveforms. |
| 5 | | Cursor Hor A | Displays Cursor (Hor-A) in each screen to display waveforms. |
| 6 | | Cursor Hor B | Displays Cursor (Hor-B) in each screen to display waveforms. |
| 7 | Acquisition | Length | Length changes according to the horizontal axis range and sampling cycle. The value is computed automatically and displayed. (Length = Time/Div ÷ Sample) |
| 8 | | Sample | Specify the sampling cycle for the data to be acquired from the waveform display. |
| 9 | RUN | RUN / STOP | Clicking RUN starts waveform display; clicking STOP stops waveform display. The button is labeled "STOP" while a waveform is being displayed and is labeled "RUN" while waveform display is stopped. |
| 10 | Graph Setting | Smoothing | When turned on, this function smoothes the waveform being displayed. (Click to toggle ON/OFF) |
| 11 | | Channel Setting | Clicking this button displays Window-Channel Settings. |
| 12 | | Set Color | Click this button to set a background color of the waveform display screen. |

5.3.4 Window-Channel Settings

Window-Channel Settings consists of the Channel Settings area and the Math Channel Settings area. The structure of Window-Channel Settings is shown below.

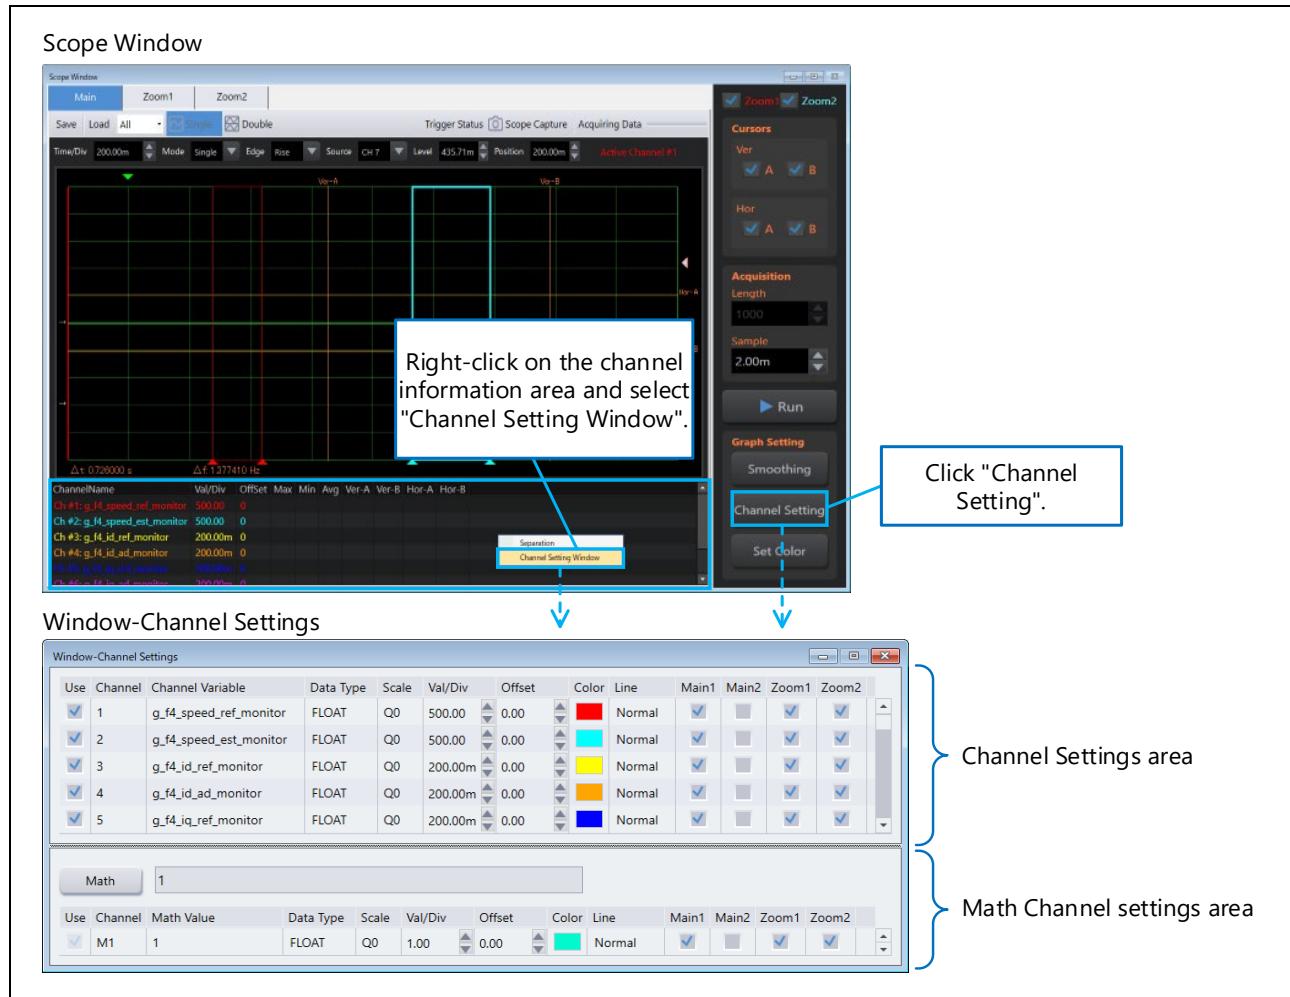


Figure 5-7 Window-Channel Settings

5.3.4.1 Channel Settings area

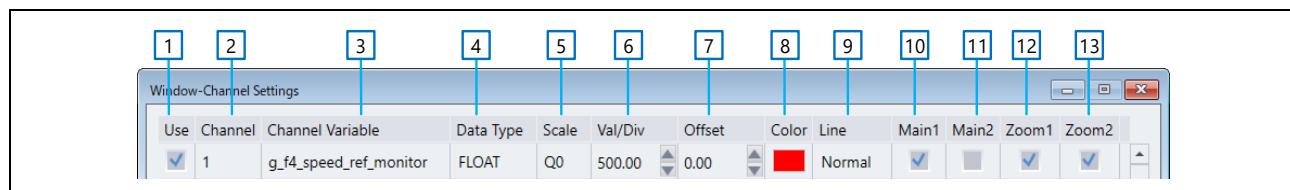
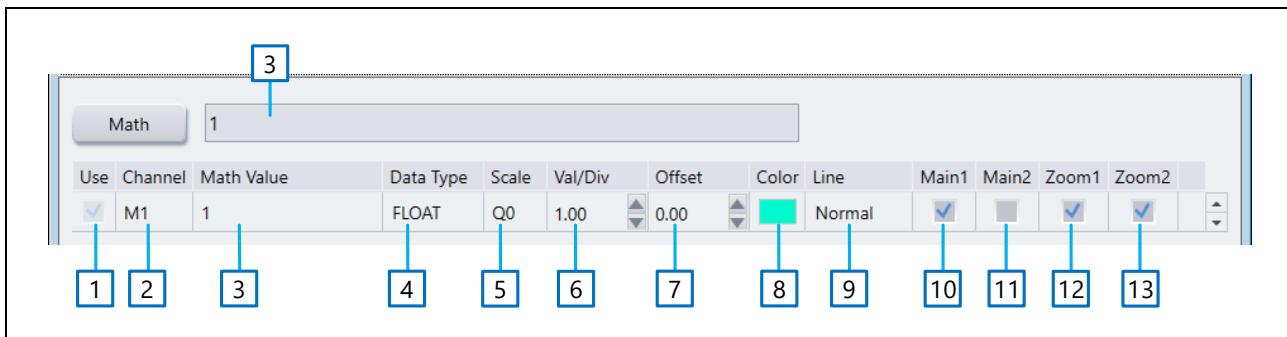


Figure 5-8 Channel Settings area

Table 5-7 Explanation of Channel Settings area

| No. | Name | Explanation |
|-------|-------------------------|---|
| 1 | Use | Select the channel for the waveform display. ON/OFF can be operated. |
| 2 | Channel | Displays the channel number (channel numbers cannot be edited). |
| 3 | Channel Variable | Specify the variable for the waveform display. |
| 4 | Data Type | Data type of the variable can be selected. |
| 5 | Scale | Vertical axis scale can be entered for the waveform display. |
| 6 | Val / Div | Specify the value per division for the vertical axis for the waveform display |
| 7 | Offset | Specify the vertical axis offset value for the waveform display |
| 8 | Color | Select a color for the waveform display. |
| 9 | Line | Select a line width for the waveform display. |
| 10~13 | Main1/Main2/Zoom1/Zoom2 | Used to select the screens for waveform display. |

5.3.4.2 Math Channel Settings area**Figure 5-9 Math Channel Settings area****Table 5-8 Explanation of Math Channel Settings area**

| No. | Name | Explanation |
|-------|-------------------------|---|
| 1 | Use | Display only. ON/OFF cannot be operated. |
| 2 | Channel | Displays the math channel number (M1, M2, . . .); math channel numbers are set automatically. |
| 3 | Math Value | Specify a formula for math computations. |
| 4 | Data Type | Data type can be specified. |
| 5 | Scale | Vertical axis scale can be entered for the waveform display. |
| 6 | Val / Div | Specify the vertical axis offset values for displaying waveforms. |
| 7 | Offset | Specify the vertical axis offset values for displaying waveforms. |
| 8 | Color | Select a color for the waveform display. |
| 9 | Line | Select a line width for the waveform display. - thin - Normal - thick |
| 10~13 | Main1/Main2/Zoom1/Zoom2 | Used to select the screens for waveform display. |

5.3.5 Image Editor screen

Clicking the “Scope Capture” button at the top right of Scope Window starts Image Editor. The window structure of Image Editor is shown below.

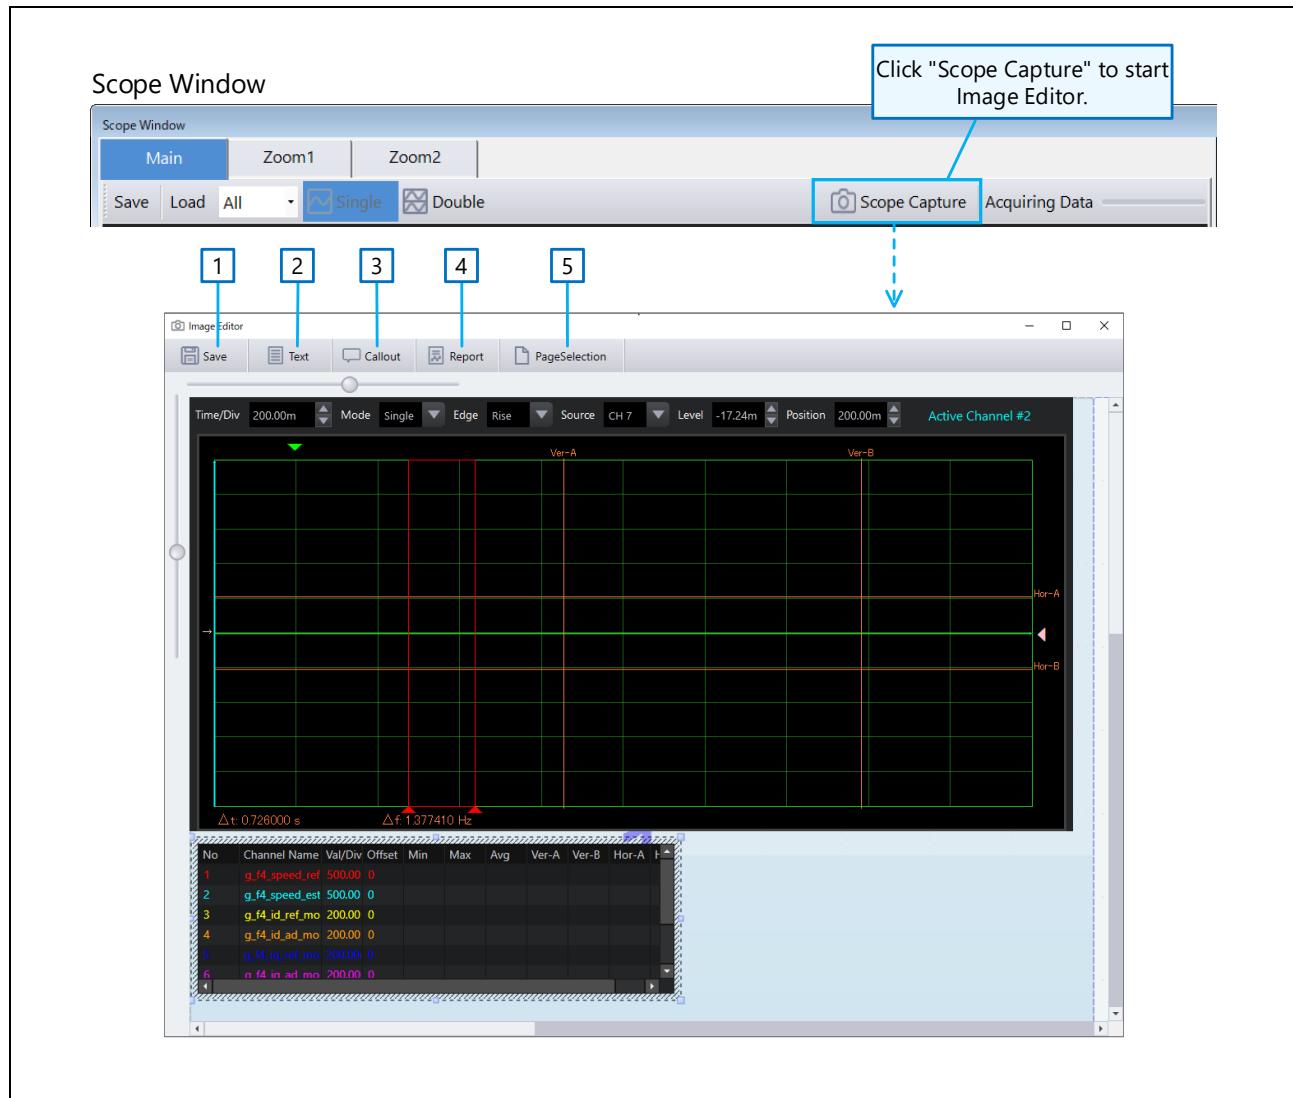


Figure 5-10 Image Editor screen

Table 5-9 Explanation of Image Editor screen

| No. | Name | Explanation |
|-----|----------------|--|
| 1 | Save | Saves the edited image information in a bmp file. |
| 2 | Text | Adds autoshape text. |
| 3 | Callout | Adds an autoshape callout |
| 4 | Report | Saves the edited image information in a pdf file. |
| 5 | Page Selection | Click this button to select page to be printed. Turn on the displayed page number by clicking, and the page will become the target for printing. |

5.4 Measurement Channel Setting

5.4.1 Displaying Channel Settings Window

To display waveforms in Scope Window, first set up channels in the Channel Settings area of Window-Channel Settings. Window-Channel Settings is displayed in one of the following ways:

- Click the "Channel Setting" button in the measurement settings area of Scope Window
- Right-click on the channel information area at the bottom of Scope Window and select "Channel Settings Window" from the menu.

For details on how to open Window-Channel Settings, see "5.3.4.1 Channel Settings area".

5.4.2 Setting in Channel Settings Area

This chapter explains how to set the items of the Channel Settings area.

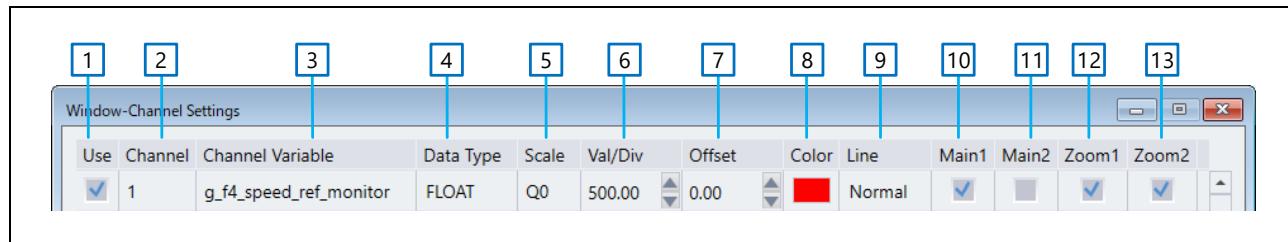


Figure 5-11 Channel Settings area

(1) Use

Selecting a check box in the Use column enables that channel information. Invalid channel information is grayed out. The maximum number of channels that can be enabled depends on the communication board that is connected.

(2) Channel

The Channel field shows the assigned channel numbers starting from 1. The channel number cannot be changed in this field. You need to check the checkbox of "Use" to use the channel.

(3) Channel Variable

In the Channel Variable field, specify the variable name for waveform display. The method to enter a variable name is the same as other functions (see 4.4.1 Specifying Variable Name.)

(4) Data Type

In the Data Type field, select the data type of the variable from the list.

- Selectable Data Type : UINT8, INT8, UINT16, INT16, UINT32, INT32, FLOAT, BOOL, LOGIC

(5) Scale

In the Scale field, specify the scale value for the variable data (waveform data) set in the channel. The formulas in Table 5-10 are applied to the display data for the waveform data. For handling waveform data, see chapter 5.5.2.

Table 5-10 Scale settings value

| Set value | Formula for calculating data |
|------------------|------------------------------|
| Qn (n = 0 to 31) | Data \times (1 / 2^n) |
| Integer | Data \times (1/integer) |
| Decimal | Data \times (1/decimal) |

(6) Val/Div

In the Val/Div field, enter the 1 div value of the vertical axes for displaying the data of the variable with the channel set. You can also use the \blacktriangleleft and \blacktriangleright symbols to the right of the input boxes to change the value.

(7) Offset

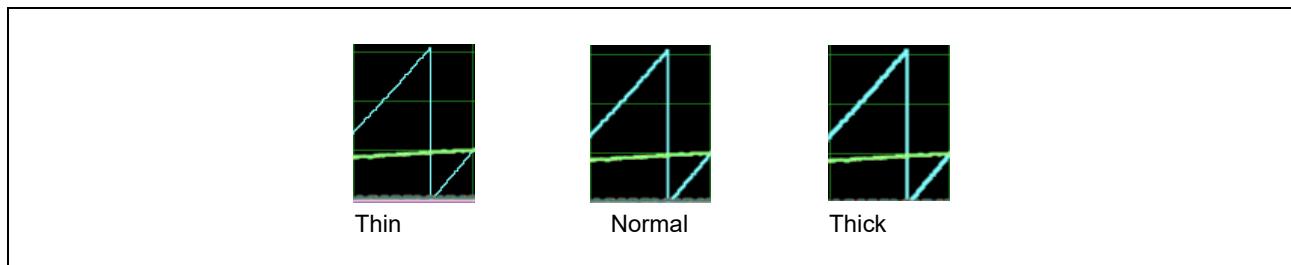
In the Offset field, enter the offset value for the vertical axes for displaying the data of the variable with the channel set. You can also use the \blacktriangleleft and \blacktriangleright symbols to the right of the input boxes to change the value.

(8) Color

In the Color field, select the waveform display colors for the variable with the channel set.

(9) Line

In the Line field, select the waveform display line width for the variable with the channel set.

**Figure 5-12 Selectable line width for waveform display**

(10) to (13) Main1 / Main2 / Zoom1 / Zoom2

Fields (10) to (13) are used to select windows to display waveforms of the variable set in the channel. You can only choose one of the Main windows (Main1 or Main2) in the Main tab.

5.5 Math Function

By using Math function, the specified calculation can be performed on the value of the variable with the channel set, and the result can be displayed as a waveform on Scope Window.

5.5.1 Math Channel Settings Area

To display the waveform using the Math function, register a Math channel in the Math Channel Settings area of Window-Channel Settings

For details on how to open Window-Channel Settings, see " 5.4.1 Displaying Channel Settings Window".

By right-clicking on the Math Channel Settings area and selecting "Math Channel Add" from the menu, you can add rows for Math channels. You can also insert or delete rows for the added rows in the same way.

Math channel numbers are assigned automatically by the system. You cannot sort the display of the Math channels.

◦

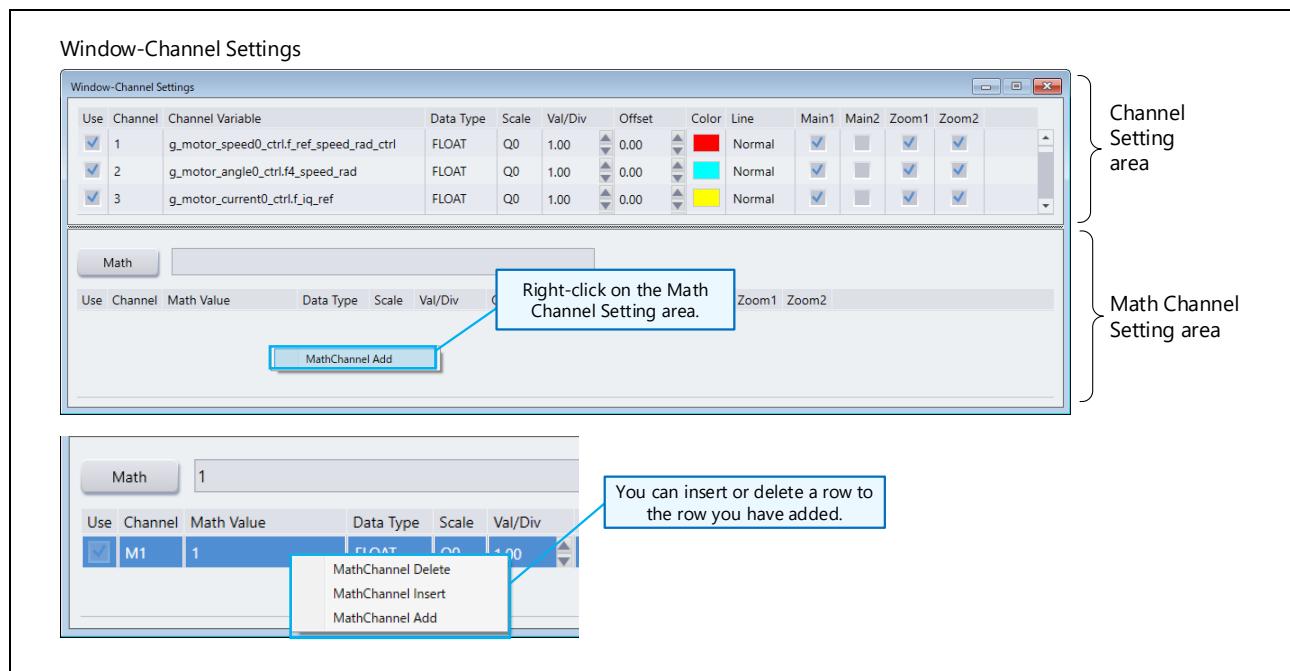


Figure 5-13 Math Channel Setting settings area

The following describes how to set the items in the Math Channel Settings area.

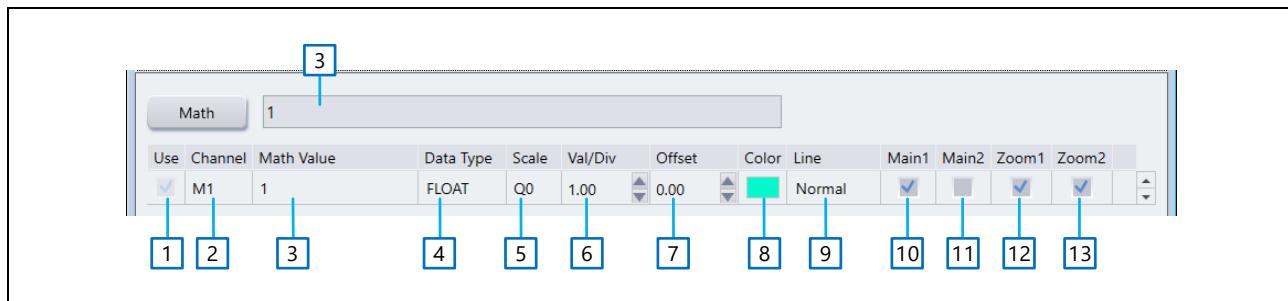


Figure 5-14 Math channel settings area

(1) Use

The checkbox of Use becomes ON when a Math channel is added. You cannot change it.

(2) Channel

The Channel field shows the assigned channel number starting from M1. You cannot change it.

(3) Math Value

In the Math Value field, specify a channel number, value, function, and arithmetic expression. You cannot directly enter a variable name into the Math Value field. In addition, functions and operators have the priority and some restrictions.

In the following cases, the Math Value field turns red, indicating that the entry is not completed or there is a problem.

- During Math Value entry, the arithmetic expression is insufficient or incorrect.
- The specified channel number does not exist.
- The specified Math channel number is on a row below the arithmetic expression.

Table 5-11 Specifiable values

| Setting value | | Specification method | Setting example | Remarks |
|---------------|---------------------|----------------------|-----------------|--|
| Channel | Channel number | ch(n) | ch1, ch2... | For channel value, the value obtained by applying the Scale value (displayed value) is used. |
| | Math channel number | M(n) | M1, M2... | For channel value, the value obtained by applying the Scale value (displayed value) is used. |
| Value | Integer | - | 50, -1, 0 | — |
| | Decimal | - | 1.5, -2.5 | — |

Table 5-12 Specifiable functions and operators

| Type | Operation | Functions/Operators | Setting example | Priority |
|----------|----------------------------------|---------------------|--|----------------------|
| Function | Delay ^{*Note1} | z^n | <ul style="list-style-type: none"> $z^1(ch1)+ch2$ $z^{-1}(M1)$ | Priority 1 (high) |
| | Arc tangent 2 ^{Note2} | Atan2(ch(n),ch(n)) | <ul style="list-style-type: none"> Atan2(ch1,ch2) Atan2(2,3) (= 0.9827937) | Priority 2 |
| | Sine ^{*Note3} | sin() | <ul style="list-style-type: none"> sin(ch1) sin(60) (= -0.3048106) | |
| | Cosine ^{*Note3} | cos() | <ul style="list-style-type: none"> cos(ch1) cos(60) (= -0.952413) | |
| | Tangent ^{*Note3} | tan() | <ul style="list-style-type: none"> tan(ch1) tan(60) (= 0.3200404) | |
| | Arc tangent ^{*Note3} | Atan() | <ul style="list-style-type: none"> Atan(ch1) Atan(60) (= 1.554131) | |
| | Square root | sqrt() | <ul style="list-style-type: none"> sqrt(2) (= 1.414214) | Priority 3 |
| Operator | Power | $^$ | <ul style="list-style-type: none"> $2^3 (= 8)$ | Priority 4 |
| | Multiplication ^{*Note4} | * | <ul style="list-style-type: none"> $ch1*7$ | Priority 5 |
| | Division | / | <ul style="list-style-type: none"> $ch1/7$ | |
| | Addition | + | <ul style="list-style-type: none"> $ch1+5$ | Priority 6 (Low) |
| | Subtraction | - | <ul style="list-style-type: none"> $ch1-8$ | |

Note

*1: If the specified data does not exist, 0 is assumed for the computation result; in the case of $z^0(ch1)$, it is assumed to have the same meaning as ch1.

*2: For the Atan2 argument, only channel information (such as ch1 and M1) and numerical values can be specified. No formulas can be specified.

*3: Trigonometric function values are computed in radians (rad).

*4: Implied multiplication cannot be specified (for example, $2(3+4)$, $(1+3)(2+4)$, $5\sin(60)$, etc.).

(4) Data Type

In the Data Type field, select the data type of the variable from the list.

- Selectable Data Type: UINT8, INT8, UINT16, INT16, UINT32, INT32, FLOAT, BOOL, LOGIC

(5) Scale

In the Scale field, specify the scale value for the waveform data. The formulas in Table 5-13 are applied to the data according to the setting value. For handling waveform data, see the next chapter 5.5.2

Table 5-13 Scale setting value

| Set value | Formula for calculating data |
|------------------|------------------------------|
| Qn (n = 0 to 31) | $Data \times (1 / 2^n)$ |
| Integer | $Data \times (1/integer)$ |
| Decimal | $Data \times (1/decimal)$ |

(6) Val / Div

In the Val/Div field, enter the 1 div value of the vertical axes for displaying the data of the variable with the channel set. You can also use the ▼ and ▲ symbols to the right of the input boxes to change the value.

(7) Offset

In the Offset field, enter the offset value for the vertical axes for displaying the data of the variable with the channel set. You can also use the ▼ and ▲ symbols to the right of the input boxes to change the value.

(8) Color

In the Color field, select the waveform display color for the variable with the channel set.

(9) Line

In the Line field, select the waveform display line width for the variable with the channel set.

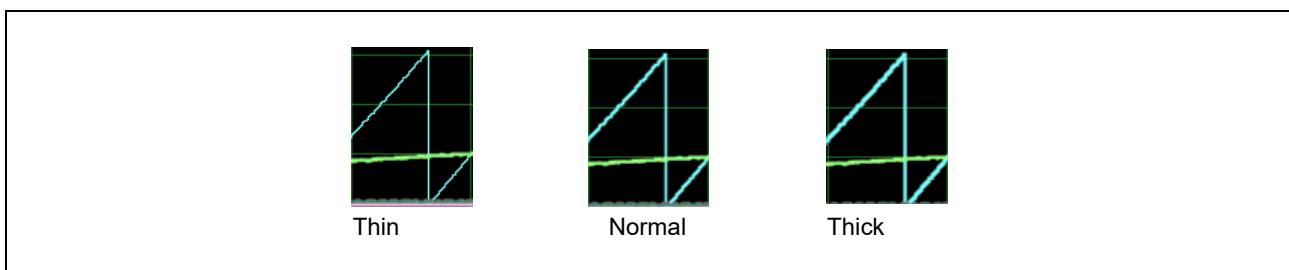


Figure 5-15 Selectable line width for waveform display

(10) to (13) Main1／Main2／Zoom1／Zoom2

Fields (10) to (13) are used to select windows to display waveforms of the variable set in the channel. You can only choose one of the Main windows (Main 1 or Main 2) in the Main tab.

5.5.2 Handling Wave Data

The sampled “waveform data value” is retained without considering the scale. On the other hand, the waveform is displayed in Scope Window with the scale applied.

When referring a channel number (such as ch7) or Math channel number (such as M1) in the Math Value field of the Math Channel, the value of the waveform display of referring source (value to which the scale is applied) is used as the waveform data value.

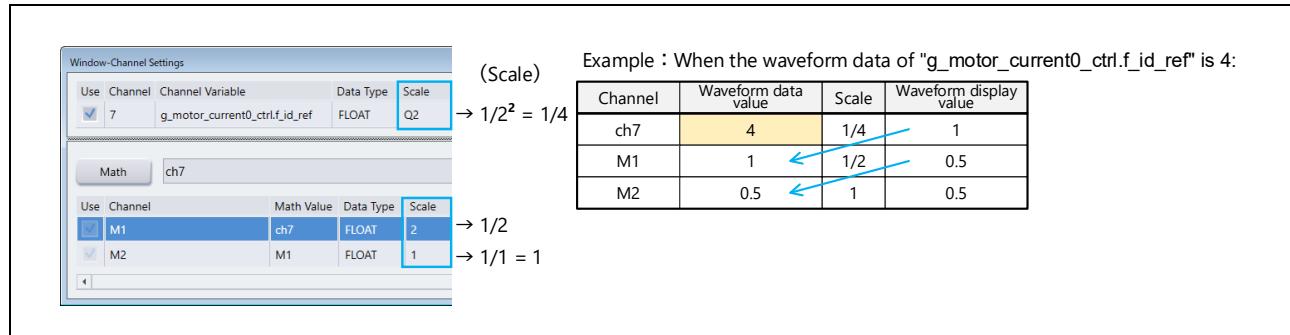


Figure 5-16 Waveform data handling

5.5.3 Drawing Math Channel Waveform

When you edit the Math channel information on Window-Channel Settings and then click the “Math” button, the waveform for the Math channel is drawn. If it has been already displayed, it is redrawn.

5.6 Waveform Measurement

5.6.1 Trigger Settings Area

Set triggers when displaying a waveform on Scope Window. The following explains the operations for the trigger settings area.

5.6.1.1 Time/Div

In the Time/Div field at the top of Scope Window, specify a time per division for the vertical axis on the waveform display screen.

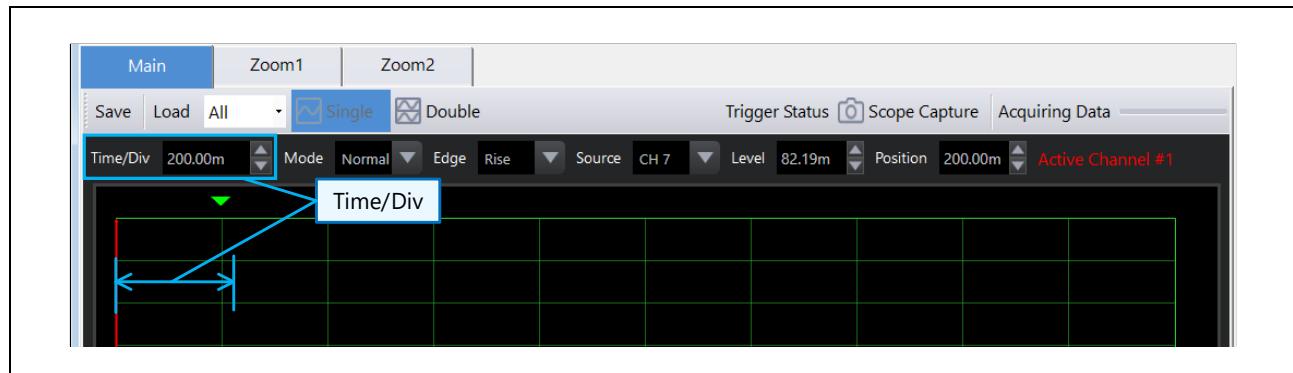


Figure 5-17 Time / Div selection

5.6.1.2 Mode

In the Mode field at the top of Scope Window, select the operation mode to be in effect when a triggering event occurs following startup of waveform display.

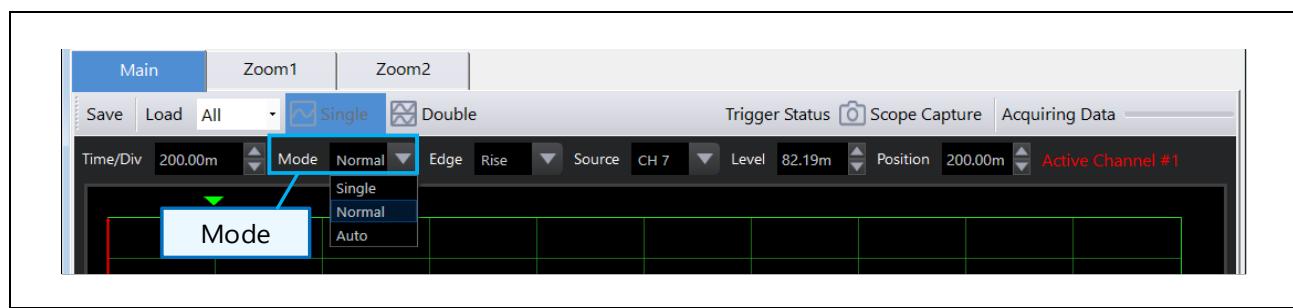


Figure 5-18 Mode selection

Table 5-14 Mode list

| Name | Explanation |
|--------|--|
| Single | Displays the waveform and stops updating the waveform display when a trigger event occurs. |
| Normal | Updates the waveform display each time a trigger event occurs. |
| Auto | Repeats automatic updating of the waveform display at a fixed interval. |

5.6.1.3 Edge

In the Edge field at the top of Scope Window, set Rise, Fall, or Both of the waveform data as a trigger event following startup of waveform display.

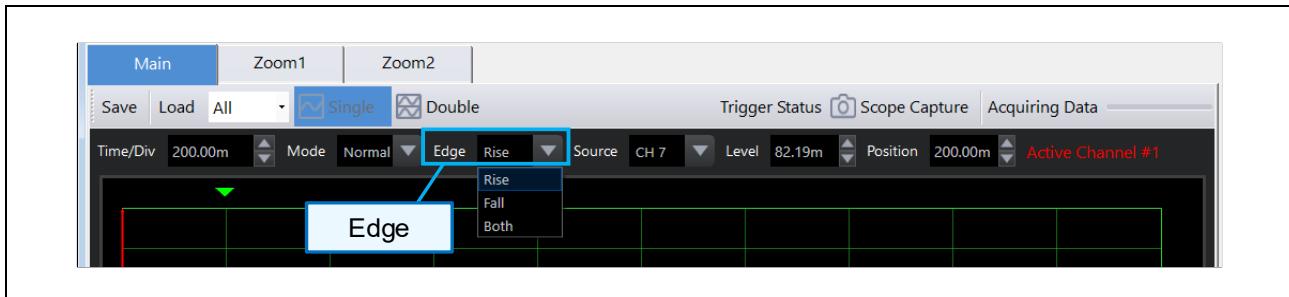


Figure 5-19 Edge selection

Table 5-15 Edge function list

| Name | Explanation |
|------|--------------|
| Rise | Rising edge |
| Fall | Falling edge |
| Both | Both edges |

5.6.1.4 Source

In the Source field at the top of Scope Window, select a channel number to be targeted by the trigger event following startup of waveform display.

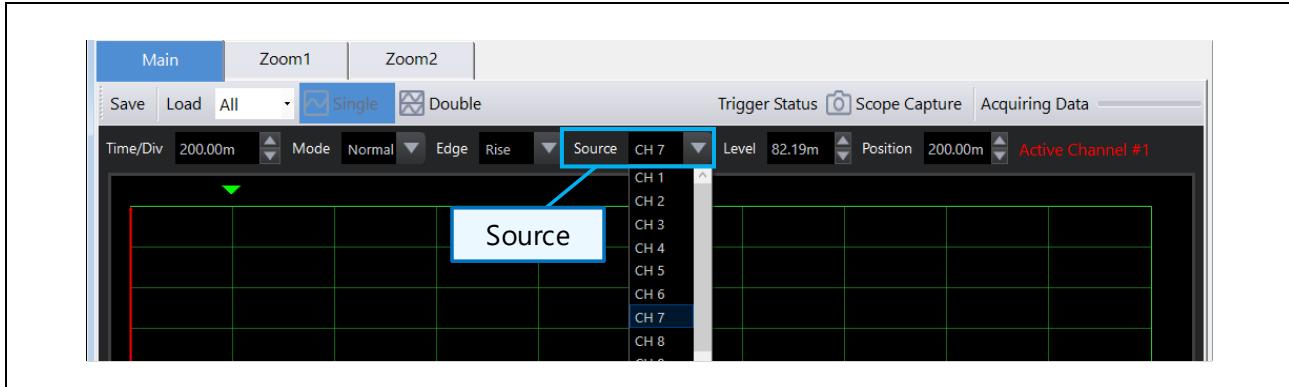


Figure 5-20 Source selection

5.6.1.5 Level

In the Level field, specify a waveform data value (level) that will become a trigger following startup of waveform display. This setting value will be indicated by the ▲ symbol on the right side of the waveform. You can also adjust the value by dragging the ▲ symbol with a mouse.

5.6.1.6 Position

In the Position field, specify the position (on the horizontal axis) to display a data point at which a trigger event occurs following startup of waveform display. This position will be indicated by the green ▼ symbol along the top of the waveform display screen. You can also adjust the position by dragging the ▼ symbol with a mouse.

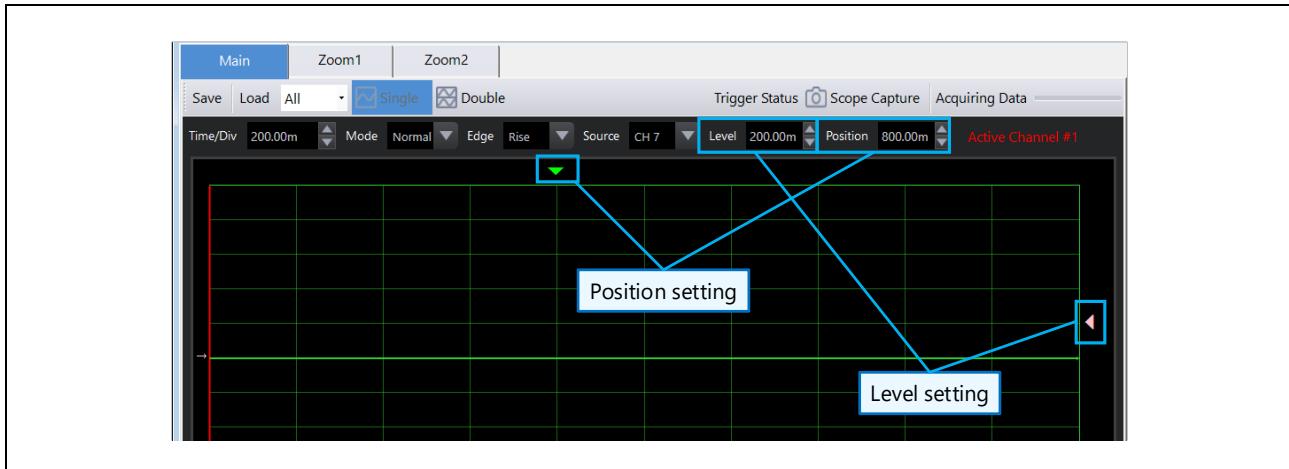


Figure 5-21 Level and Position settings

5.6.2 Acquisition Settings in Measurement Settings area

5.6.2.1 Length

Length changes according to the horizontal axis range and sampling cycle, and the value is computed automatically and displayed. (Display only)

Length (display width) = Time/Div \div \times 10 \div Sample

(Example) Time/Div = 200, Sample = 2ms \Rightarrow Length = $200 \times 10 \div 2 = 1000$

5.6.2.2 Sample

Specify the sampling cycle of the data to be acquired for the waveform display.

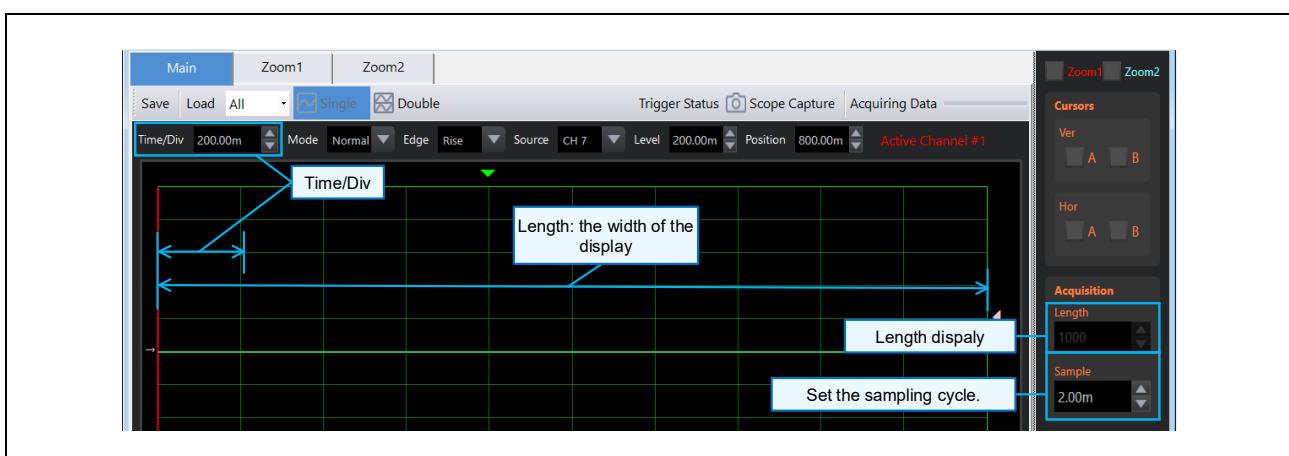


Figure 5-22 Acquisition in measurement settings area (Length and Sample)

5.6.3 Starting and Stopping Waveform Measurement

To start waveform measurement, click the “RUN” button. If the trigger setting mode has been set to Single, waveform measurement is stopped automatically following any trigger event. Otherwise, click the “STOP” button to stop waveform measurement.

If you read a variable value from the Control Window or write a value into a variable while performing waveform measurement, updating of the waveform measurement result display might be delayed in some cases because processing underway in the Control Window has a higher priority.

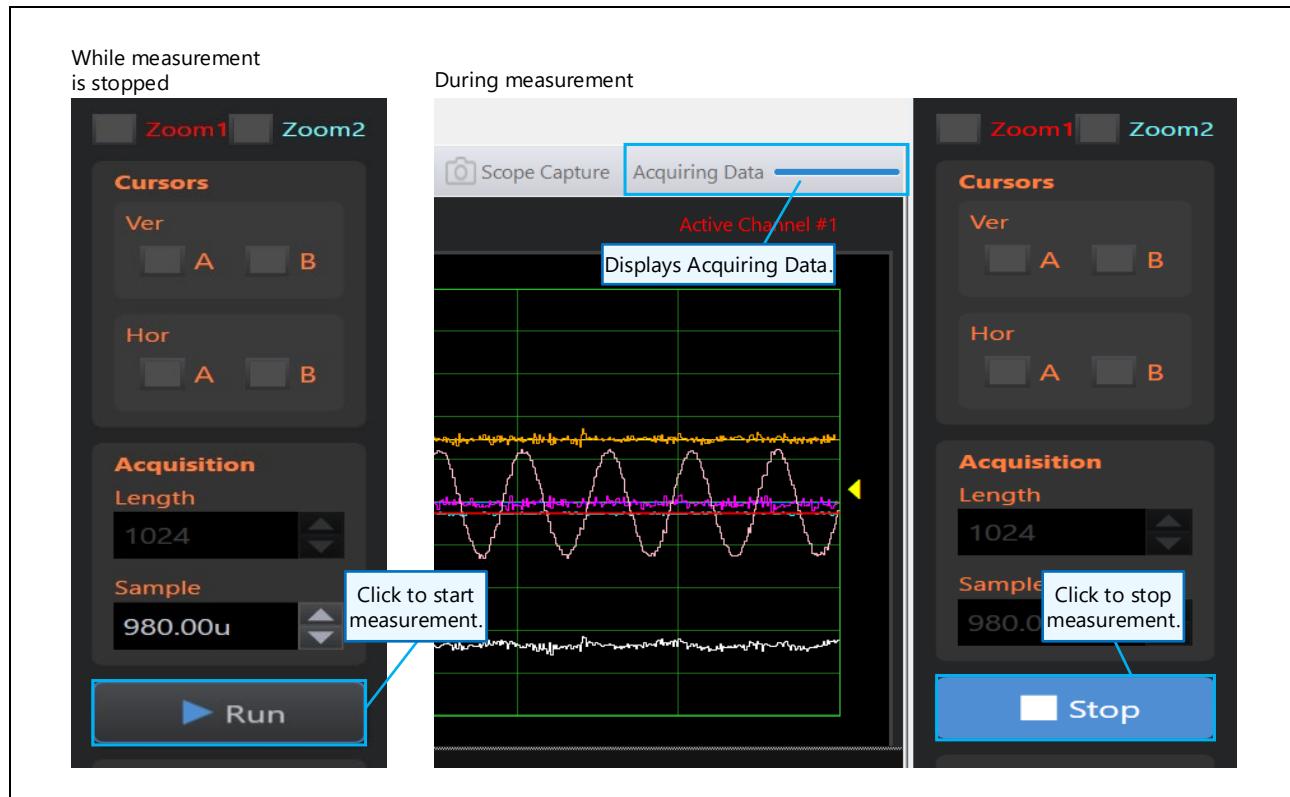


Figure 5-23 Starting/stopping waveform measurement

Table 5-16 RUN/STOP button display

| Button label | Action |
|--------------|---|
| RUN | Clicking starts waveform measurement (the button's label becomes “STOP” after starting) |
| STOP | Clicking stops waveform measurement (the button's label becomes “RUN” after stopping) |

5.6.4 Saving and Loading Waveform Data

You can save waveform data with the “Save” button at the top of Scope Window, and load waveform data with the “Load” button.

If you specify “*.csv1” as the file type in the Save operation, two files (*.csv and *.csv1) are saved. If you specify “*.csv”, only a file with *.csv extension is saved.

When you click the “Load” button, the saved waveform data (*.csv1 format) is loaded.

Table 5-17 Waveform data saving format

| File type at the time of saving | Saved information and handling |
|---------------------------------|---|
| ICS_Wave Data File(*.csv1) | <ul style="list-style-type: none"> Saves a file that contains sampled values of the waveform data (*.csv) and a file that contains both the sampled values and the setting information for waveform measurement (*.csv1). When a saved file (*.csv1) is loaded to RMW, the saved waveform can be displayed. |
| Comma Separated File(*.csv) | <ul style="list-style-type: none"> Saves only sampled values of the waveform data, separated by commas, in CSV format. Saved files (*.csv) cannot be loaded to RMW. |

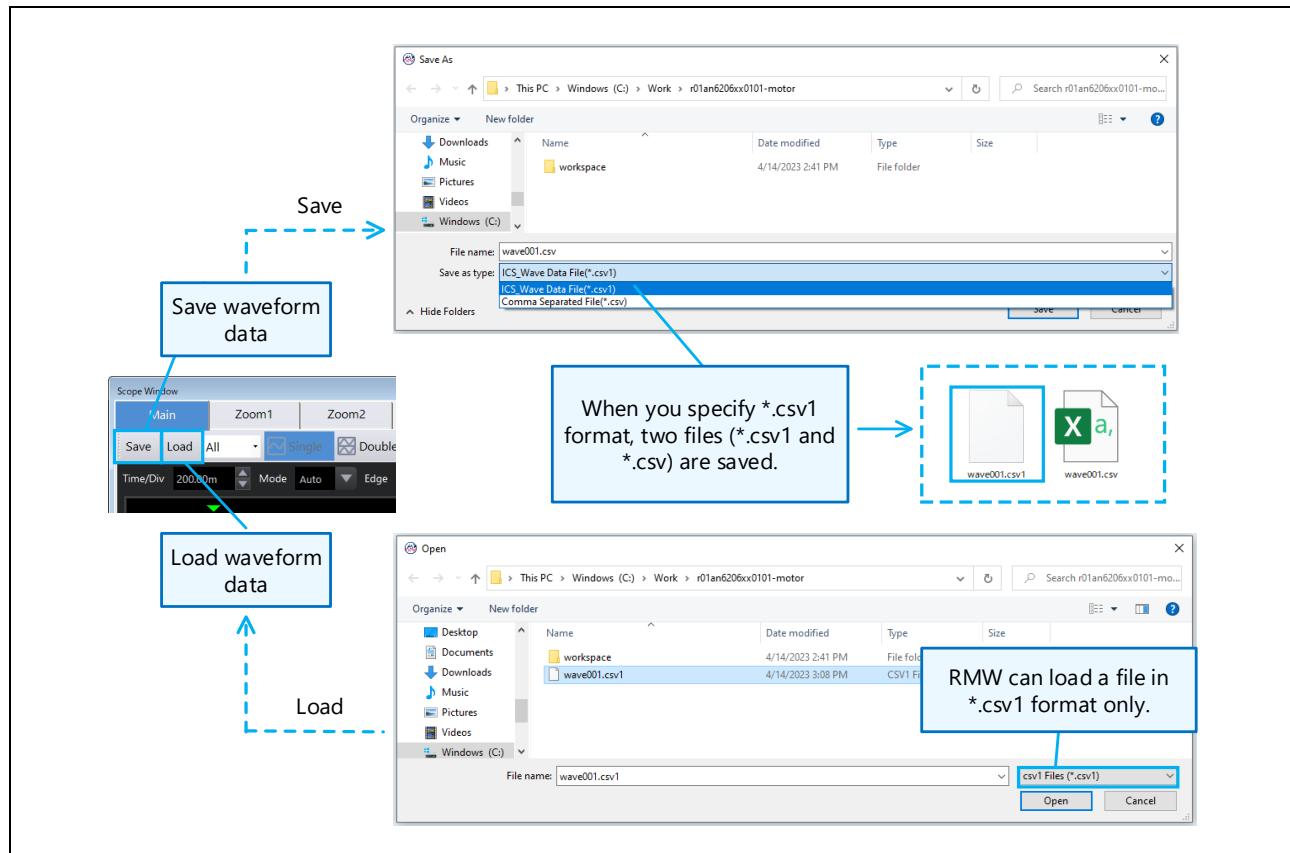


Figure 5-24 Saving and loading waveform data

5.7 Displaying Waveform

5.7.1 Displaying Scope Window

Scope Window is displayed automatically when Analyzer is started.

5.7.2 Switching Waveform Graph Display

You can switch the waveform graph to be displayed with the tabs at the upper left of Scope Window.

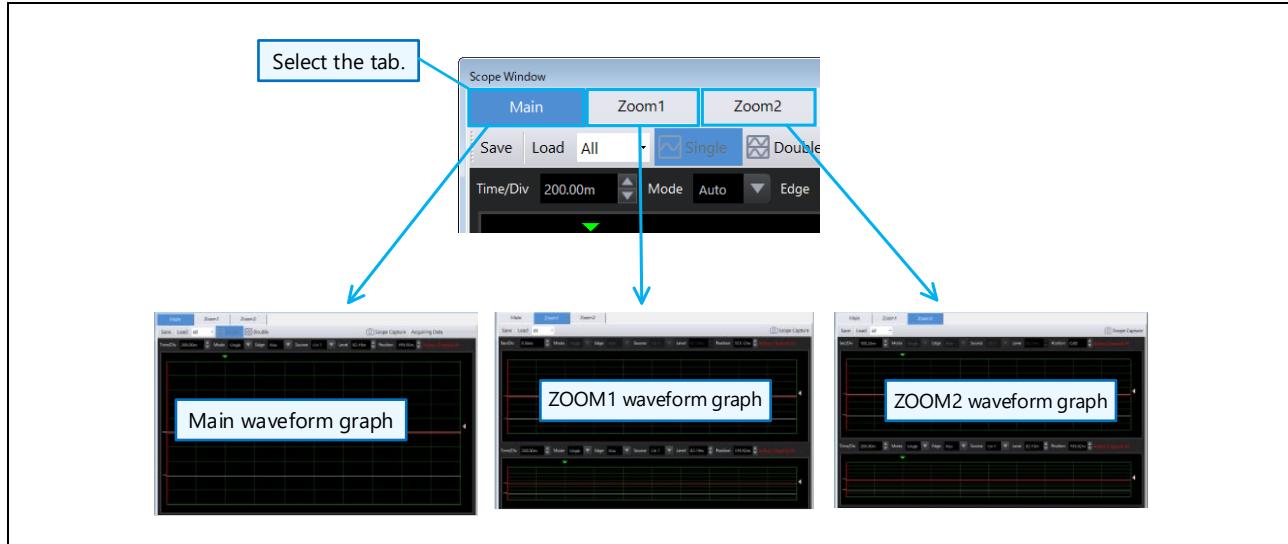


Figure 5-25 Switching waveform graph

5.7.3 Switching waveform between Main1 and Main2

The Main waveform graph of Scope Window can be displayed in two windows: Main1 and Main2. While one window is displayed, click the "Double" button to display two windows. While two windows are displayed, click the "Single" button to display one window (only Main 1).

You can specify whether the waveform data of each channel is displayed on Main 1 or Main 2 from Channel Settings Window. For details, refer to 5.4.1 Displaying Channel Settings Window.

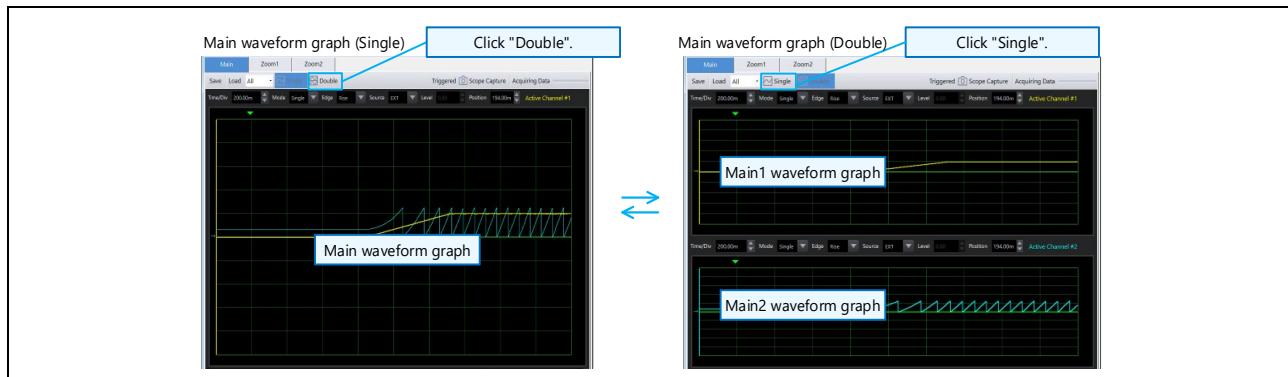


Figure 5-26 Waveform double window display

5.7.4 Specifying Zoom Waveform Display Area

In the Main waveform graph, you can specify the area to be displayed in the Zoom waveform graph.

When you select the check box for Zoom1 and Zoom2 in the measurement settings area of Scope Window, a red frame for Zoom1 and a blue frame for Zoom2 are displayed in the Main waveform display screen.

To adjust the zoom area, first adjust the width by dragging the ▲ symbol at the bottom right corner, then move the start point by dragging the ▲ symbol at the bottom left corner. If the specified zoom area are full of the screen width, you cannot move the ▲ symbol at the bottom left corner.

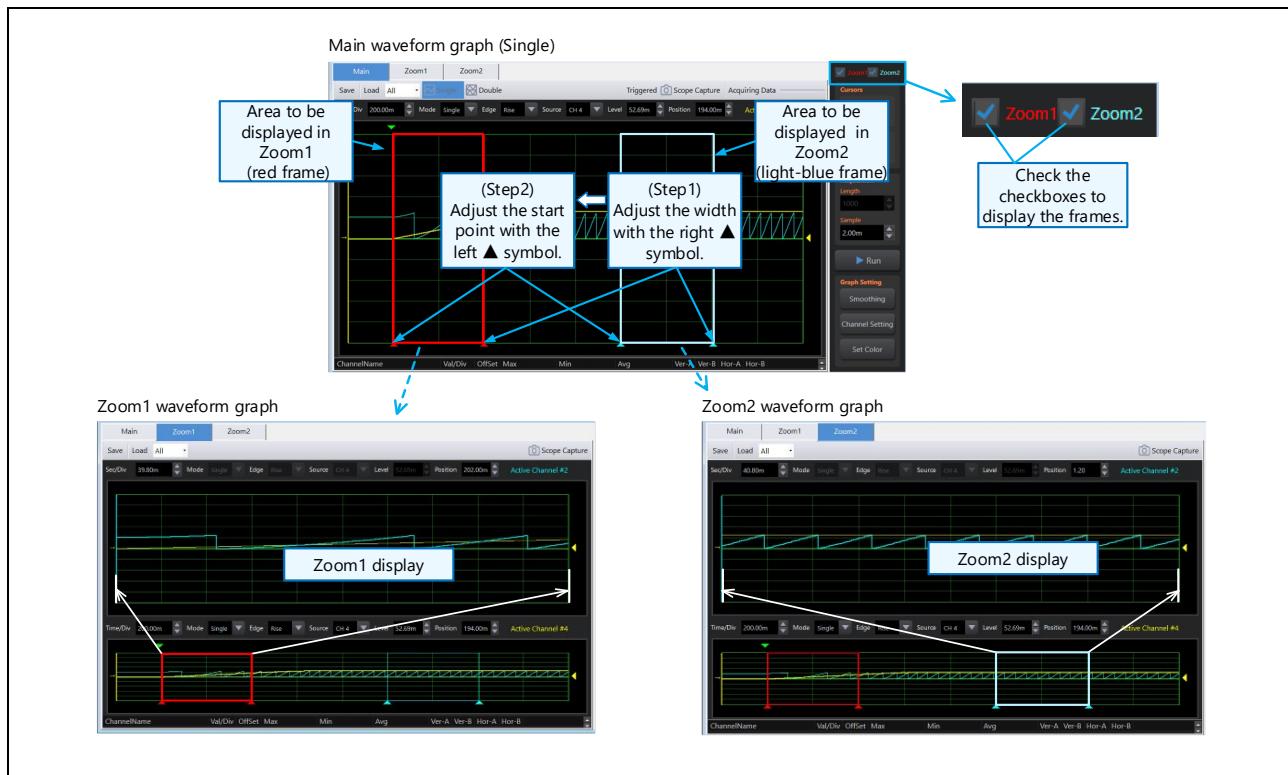


Figure 5-27 Specifying Zoom area (Single view)

In the Double view, you can also specify the area to be displayed in the Zoom waveform graph. You can move the area between Main1 and Main2 by right-clicking the ▲ symbol at the bottom corner of the area (either left or right).

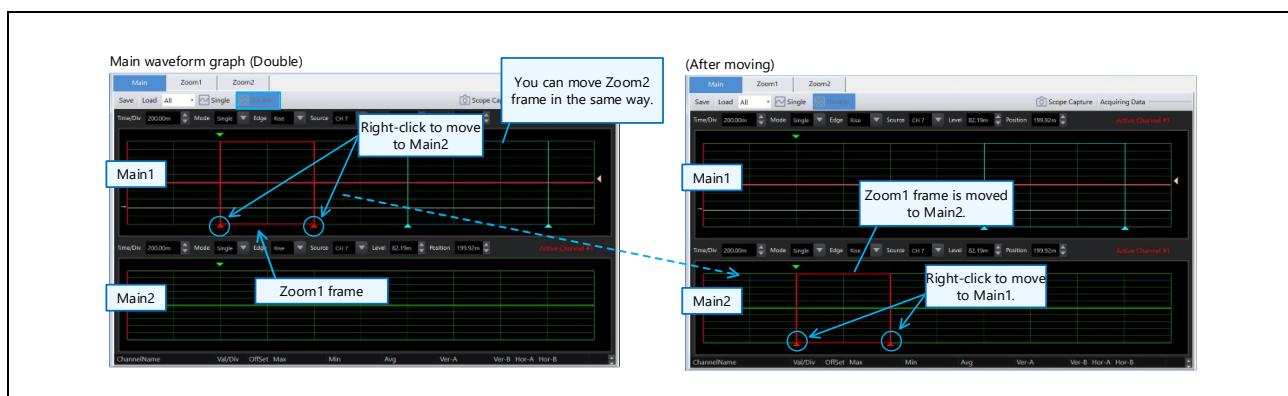


Figure 5-28 Specifying Zoom area (Double view)

5.7.5 Separating Channel Information Display Area

The channel information display area located at the bottom of the Main, Zoom1, and Zoom2 tabs can be separated to another screen. Right-click on the channel information display area to display the menu, then select "Separation" to separate the area to another screen.

To return the separated channel information display area into the original location, click the Exit button at the upper right corner of the separated screen. If you switch tabs between Main, Zoom1, and Zoom2 while the channel information display area is separated, the area will return to the original location.

The following screen titles are displayed in the separated channel information display area.

Table 5-18 Titles of separated channel information display area

| Tab before separation | Screen title |
|-----------------------|------------------------|
| Main | MainScope ChannelData |
| Zoom1 | Zoom1Scope ChannelData |
| Zoom2 | Zoom2Scope ChannelData |

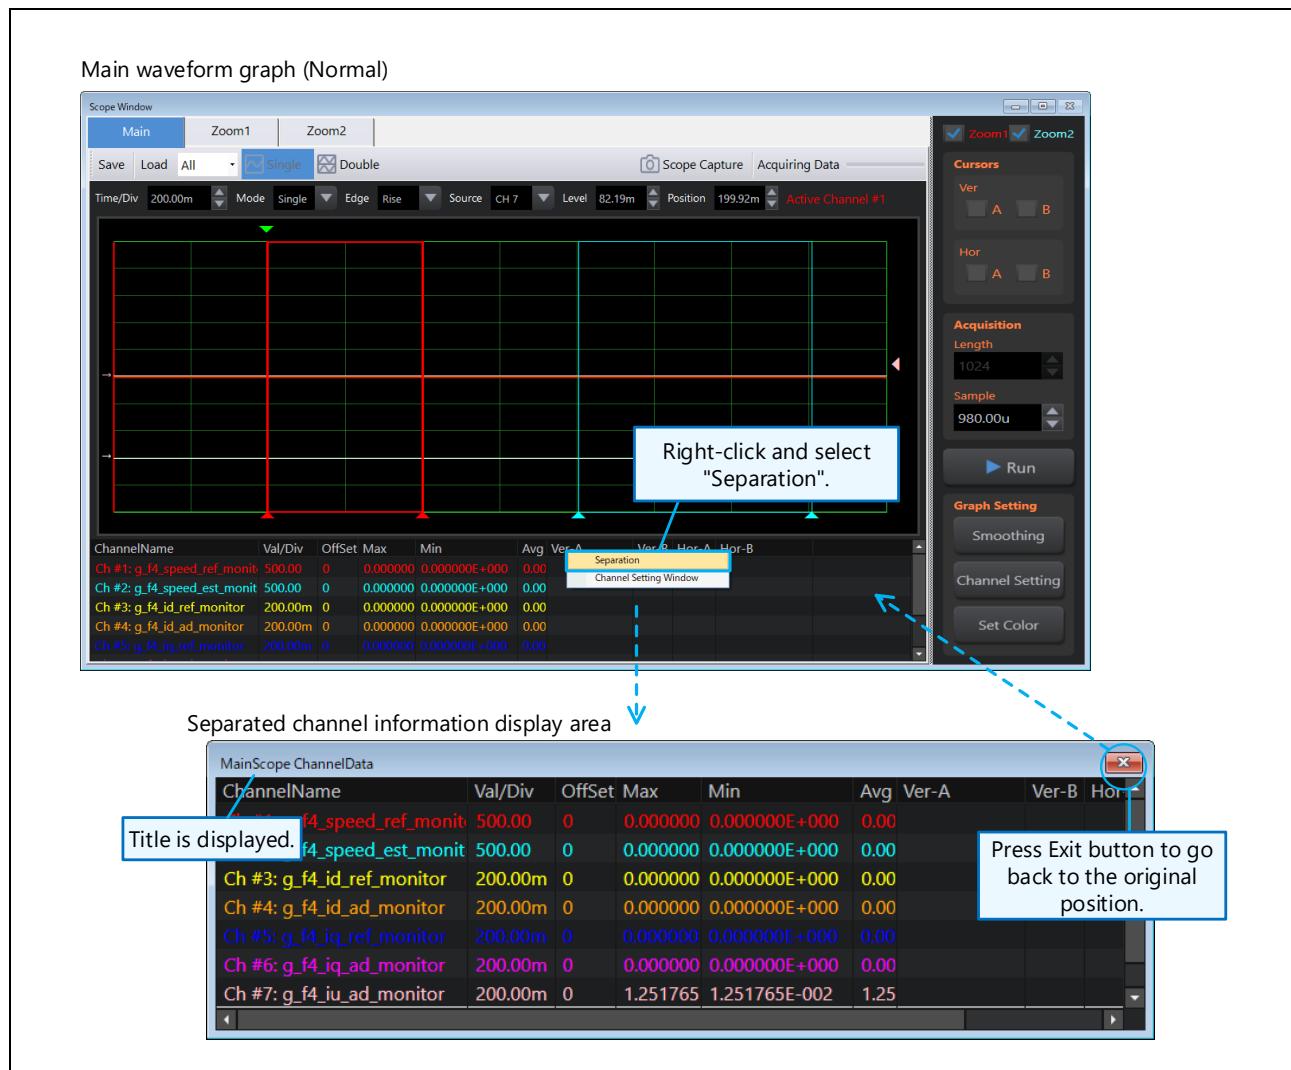


Figure 5-29 Separating channel information display area

5.7.6 Separating Main Waveform from Zoom screen

You can separate the Main waveform in the Zoom1 and Zoom2 tabs to another screen.

To return the separated Main waveform graph into the original location, click the Exit button at the upper right corner of the separated screen. If you switch tabs of Main, Zoom1, and Zoom2 while the separated screen is displayed, the Main waveform graph will return to the original location.

The following screen titles are displayed in the separated Main waveform graph.

Table 5-19 Titles of separated Main waveform graph

| Tab before separation | Screen title |
|-----------------------|-------------------|
| Main1 | Main1Scope Window |
| Main2 | Main2Scope Window |

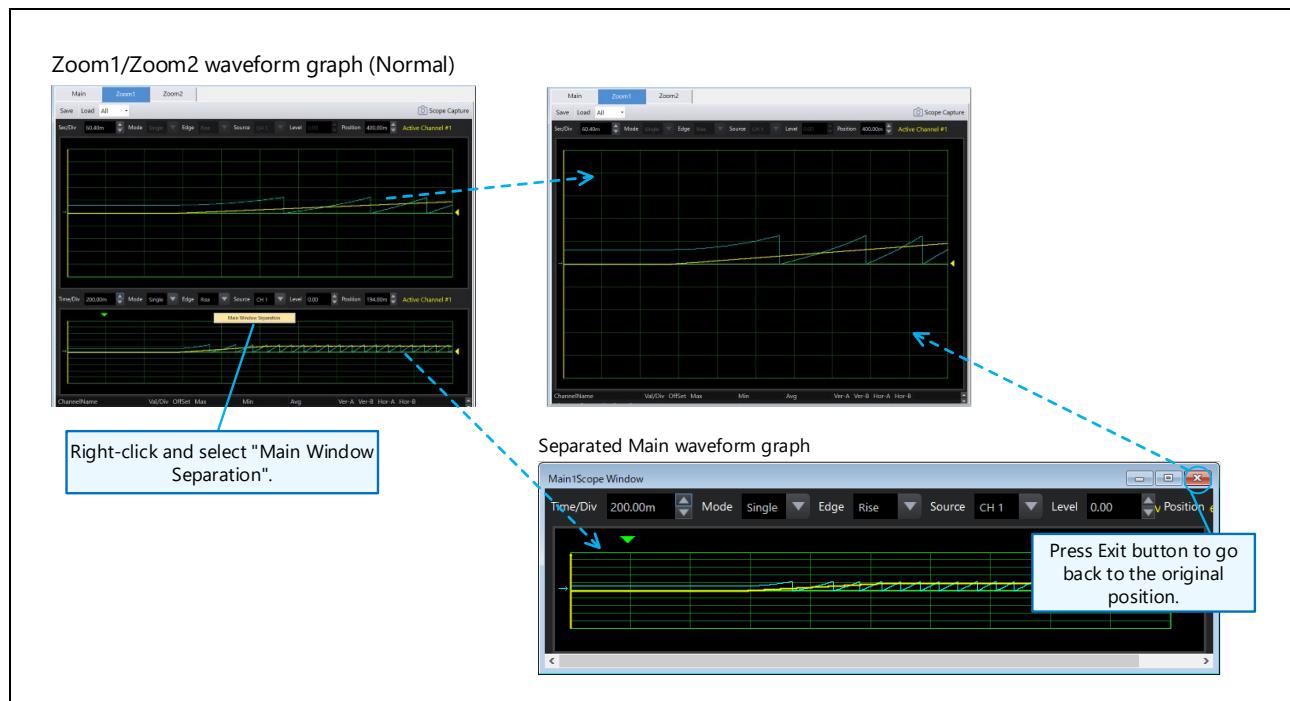


Figure 5-30 Separating Main waveform display

5.7.7 Active Channel Display

In the channel information display area of Main and Zoom tabs, you can set a channel as Active Channel. When some waveforms are displayed and overlapped, the waveform of Active Channel is displayed in the frontmost.

In addition, the left vertical axis of the graph turns the same color as the waveform of Active Channel.

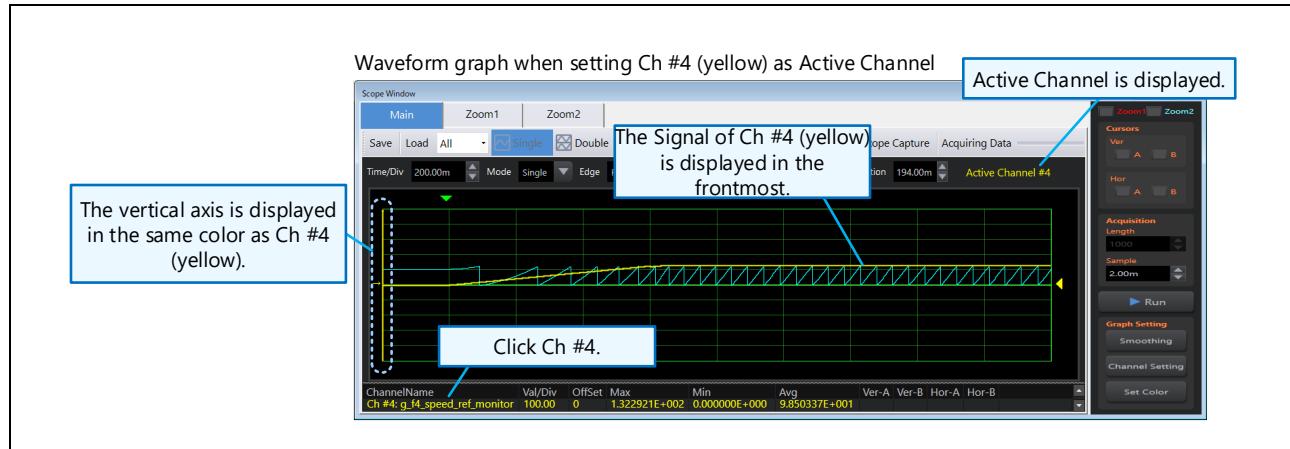


Figure 5-31 Active Channel and waveform graph display

5.7.8 Cursor Display

When the Cursors checkbox of Scope Window measurement settings area is ON, two Ver (vertical) cursors and two Hor (horizontal) cursors can be displayed on the graph. You can adjust the position of each cursor line on the screen by dragging with a mouse.

The values of each waveform at the position of the cursors are displayed in the channel information display area at the bottom of the screen.

When two Ver (vertical) cursors are displayed, the time and frequency between the cursors are displayed.

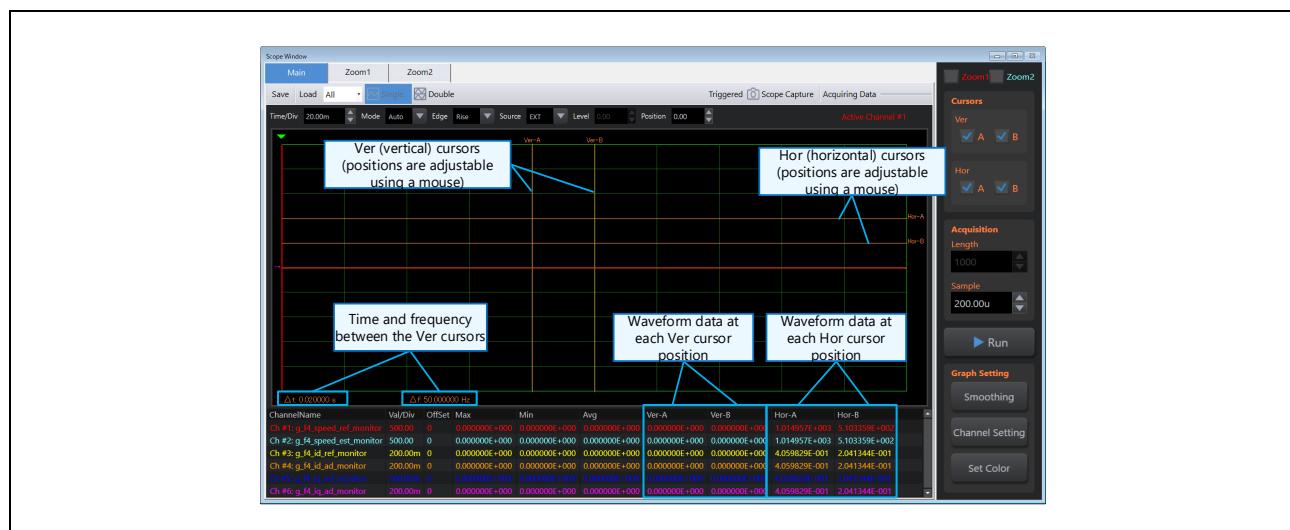


Figure 5-32 Displaying Cursor

5.7.9 Thinning Waveform Display Points

You can switch the point count for displaying waveform data from the list box at the upper left on Scope Window. When “All” is selected, all the data is displayed. Otherwise, thinning is carried out according to the point count setting before displaying the data. For example, if “1/5” is selected, one point is displayed for every five points in the waveform data.

The setting cannot be changed while waveform measurement is being performed.

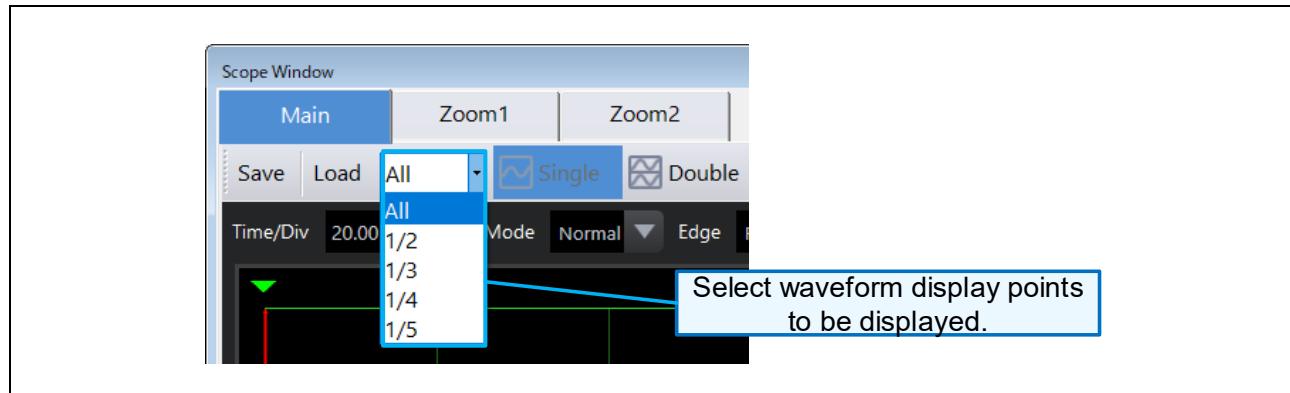


Figure 5-33 Waveform thinning settings

5.7.10 Smoothing Waveform

You can smooth the waveform display by clicking the “Smoothing” button in the measurement settings area of Scope Window. Turn the button ON to display a smoothed waveform graph. Turn it OFF to display the graph in the normal state.



Figure 5-34 Smoothing button (ON state)

5.7.11 Changing Background Color

You can change the Scope Window's background color by clicking the "Set Color" button at the bottom right of Scope Window.

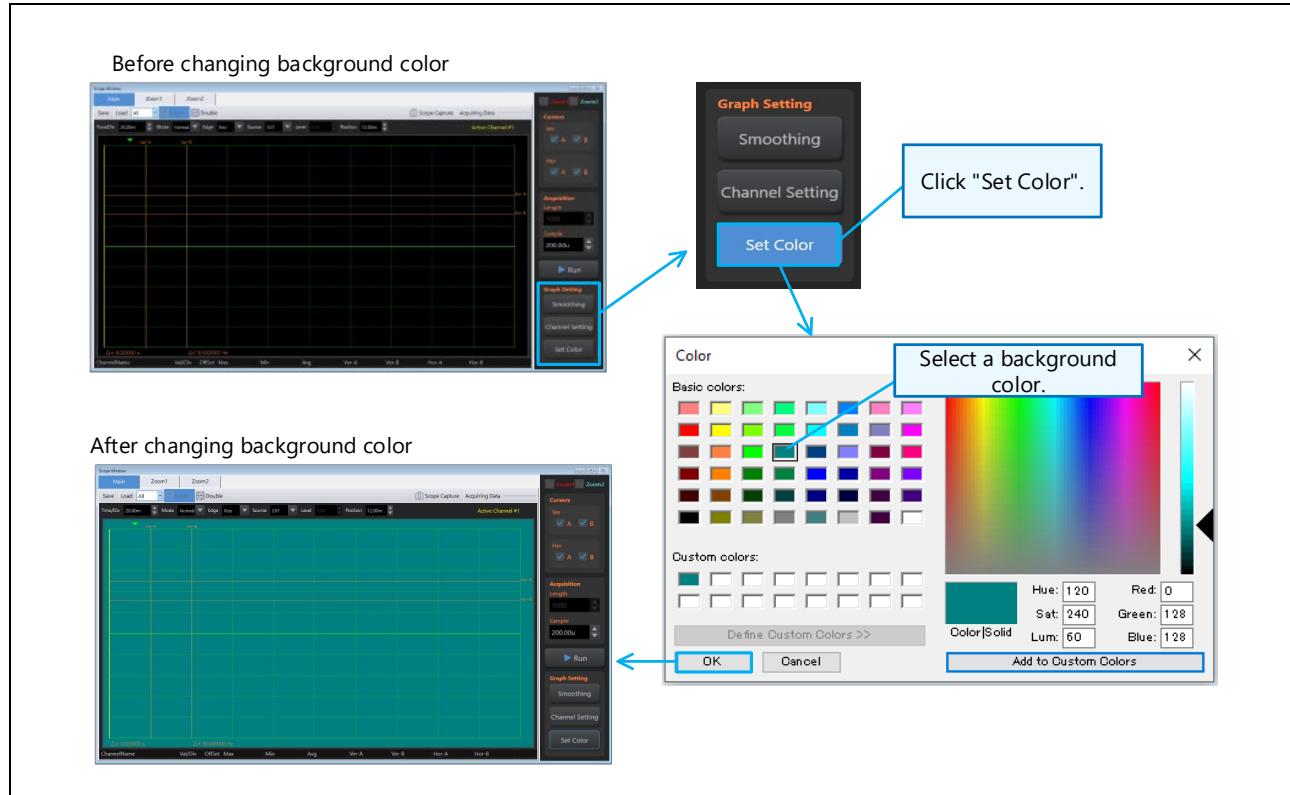


Figure 5-35 Changing background color by Set Color

5.7.12 Shortcut Keys

The following keyboard shortcuts are available in Scope Window.

Table 5-20 List of shortcut keys

| Overview | Action | Shortcut |
|---------------------------------|---|----------------------------|
| Displaying the Zoom range frame | Shows or hides Zoom1. | Alt + 1 |
| | Shows or hides Zoom2. | Alt + 2 |
| Editing the Zoom range frame | Moves the starting point (of selected Zoom range frame) to the right. | Alt + right cursor |
| | Moves the starting point (of selected Zoom range frame) to the left. | Alt + left cursor |
| | Expands the width (of selected Zoom range frame). | Alt + Shift + right cursor |
| | Narrows the width (of selected Zoom range frame). | Alt + Shift + left cursor |
| Measuring waveforms | Starts measurement (= click RUN button) | R |
| | Stops measurement (= click STOP button) | S |
| Acquiring screen image | Copies the screen image. | Ctrl + C |
| Editing the Active Channel | Increases the Val/Div value for Main1. | Up cursor |
| | Decreases the Val/Div value for Main1. | Down cursor |
| | Increases the Val/Div value for Main2. | Shift + up cursor |
| | Decreases the Val/Div value for Main2. | Shift + down cursor |
| Switching trigger settings | Switches Mode. | O |
| | Switches Mode (in the opposite direction). | Shift + O |
| | Switches Edge. | E |
| | Switches Edge (in the opposite direction). | Shift + E |
| | Switches Source. | T |

5.8 Image Editor Function (Scope Capture Button)

Clicking the “Scope Capture” button at the top of Scope Window starts Image Editor. Image Editor provides a function to capture and edit the waveform images and the channel information that are displayed.

When you click the “Scope Capture” button, the waveform images and the channel information at that time are loaded into Image Editor. While Image Editor is active, additional waveform images and channel information are loaded by every click of “Scope Capture” button.

5.8.1 Starting and Terminating Image Editor

You can start Image Editor from the “Scope Capture” button on the top of Scope Window, and terminate it from the Exit button on the upper right of Image Editor.

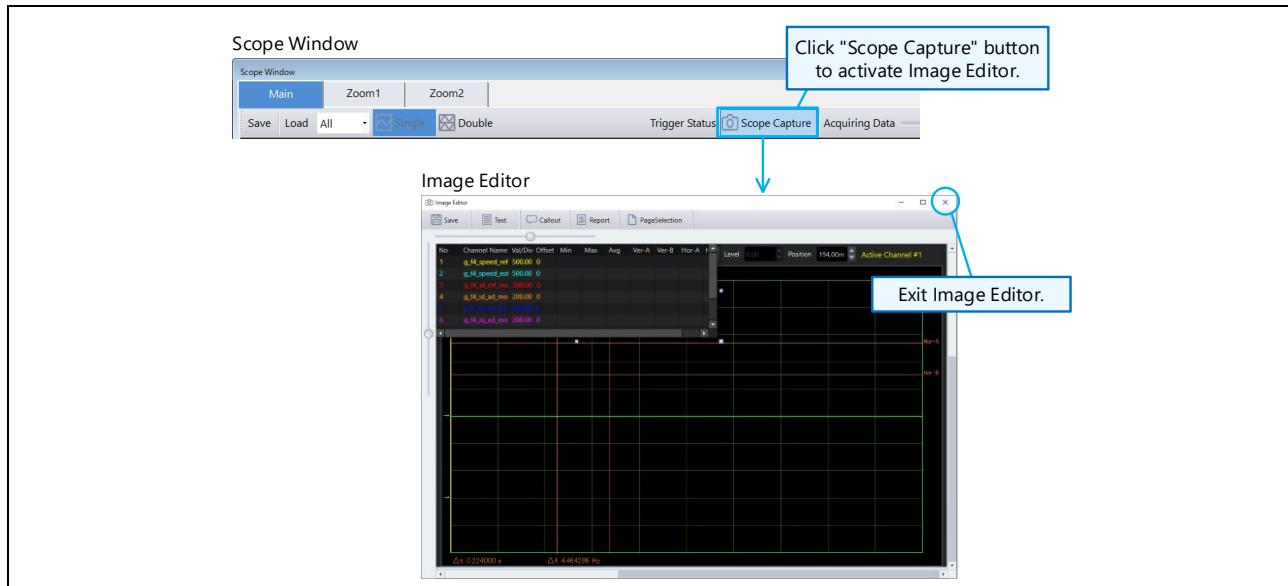


Figure 5-36 Starting/terminating Image Editor

5.8.2 Changing Display Position and Size

When you click an image displayed in Image Editor to select it, it is surrounded by the shaded area and size-change handles. If you grab a size-change handle with a mouse, you can change the display size. If you grab the shaded area with a mouse, you can move the display position within Image Editor.

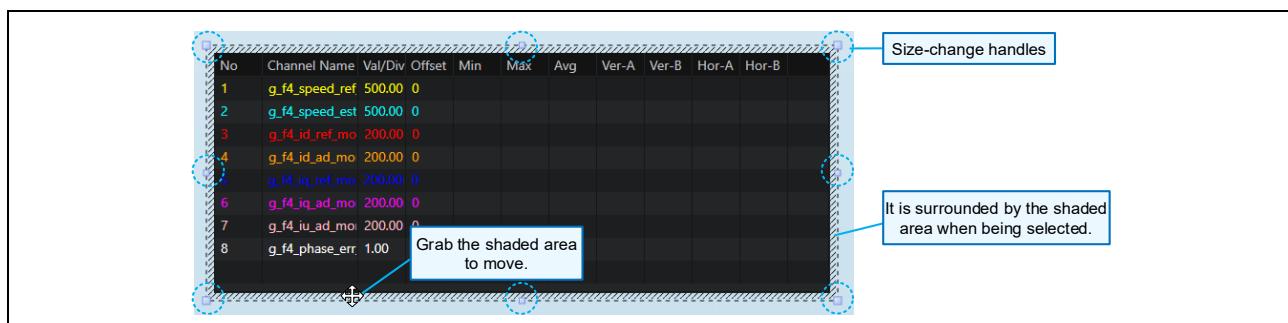


Figure 5-37 Changing display position/size

5.8.3 Image Editor Operation Button

The top of Image Editor contains the following operation buttons.

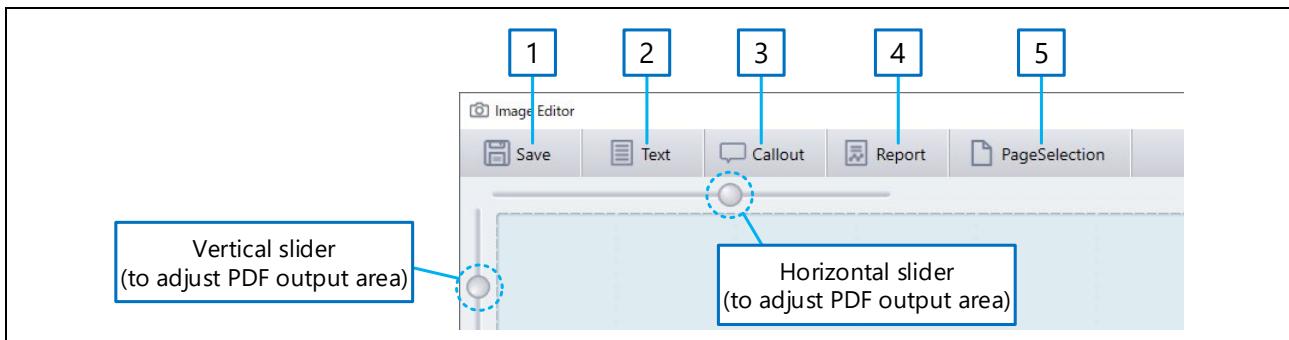


Figure 5-38 Image Editor operation buttons

(1) Save button

Click the “Save” button to save the image information edited by Image Editor in bmp/png/jpg format.

(2) Text button

Click the “Text” button to display a text-enabled autoshape within Image Editor. You can move and edit it. Select characters of the displayed text and right-click to display the menu. You can change the color and font.

(3) Callout button

Click the “Callout” button to display the callout menu. When you select one, a callout is displayed in Image Editor, which you can move and edit. You can change the setting from the right-click menu of the displayed callout.

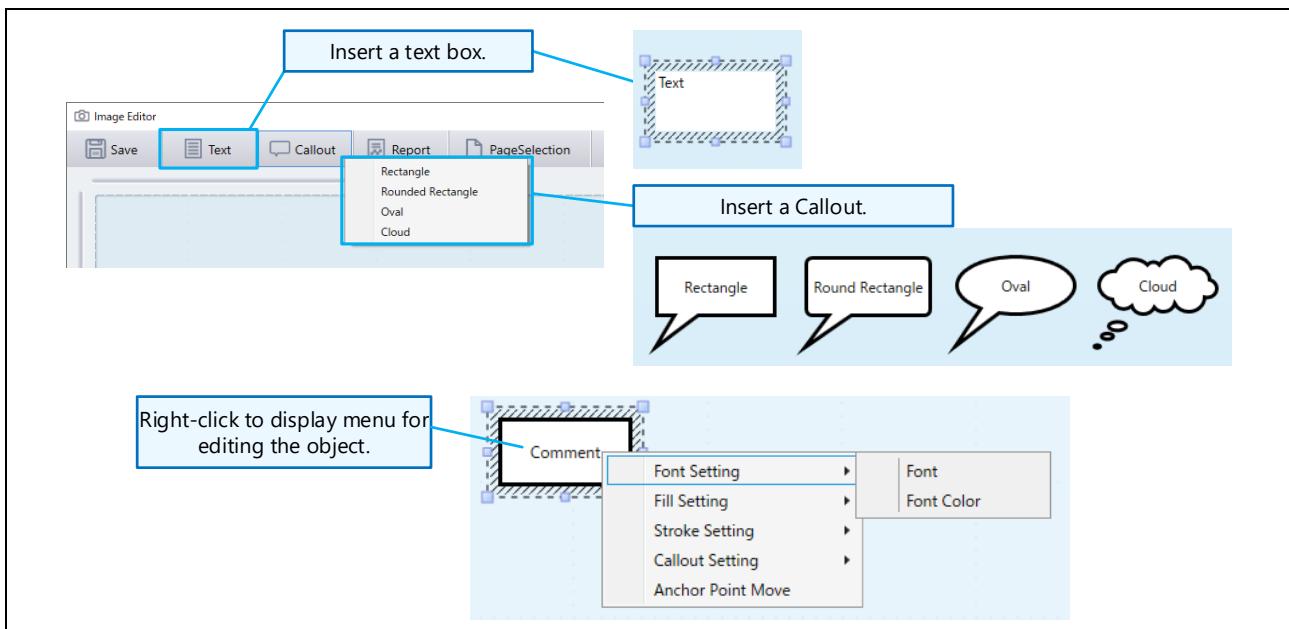


Figure 5-39 Callout type

Table 5-21 Right-Click menu setting for text and callout

| Text | Callout | Right-click menu | Sub menu | Action |
|------|---------|-------------------|--|---|
| ● | ● | Font Setting | Font | Selecting a character font |
| | | | Font Color | Selecting character color |
| ● | ● | Fill Setting | Fill Color | Selecting a color to fill the object |
| | | | Fill Color Transparent | Making the object transparent |
| ● | ● | Stroke Setting | Stroke Color | Selecting an outer frame color |
| | | | Stroke Color Transparent | Making the outer frame transparent |
| | | | Stroke Width | Selecting the outer frame thickness (from Thin/Normal/Bold) |
| — | ● | Callout Setting | Selecting the shape (from Rectangle/Round Rectangle/Oval/Cloud). | |
| — | ● | Anchor Point Move | Moving the callout tip. | |

(4) Report

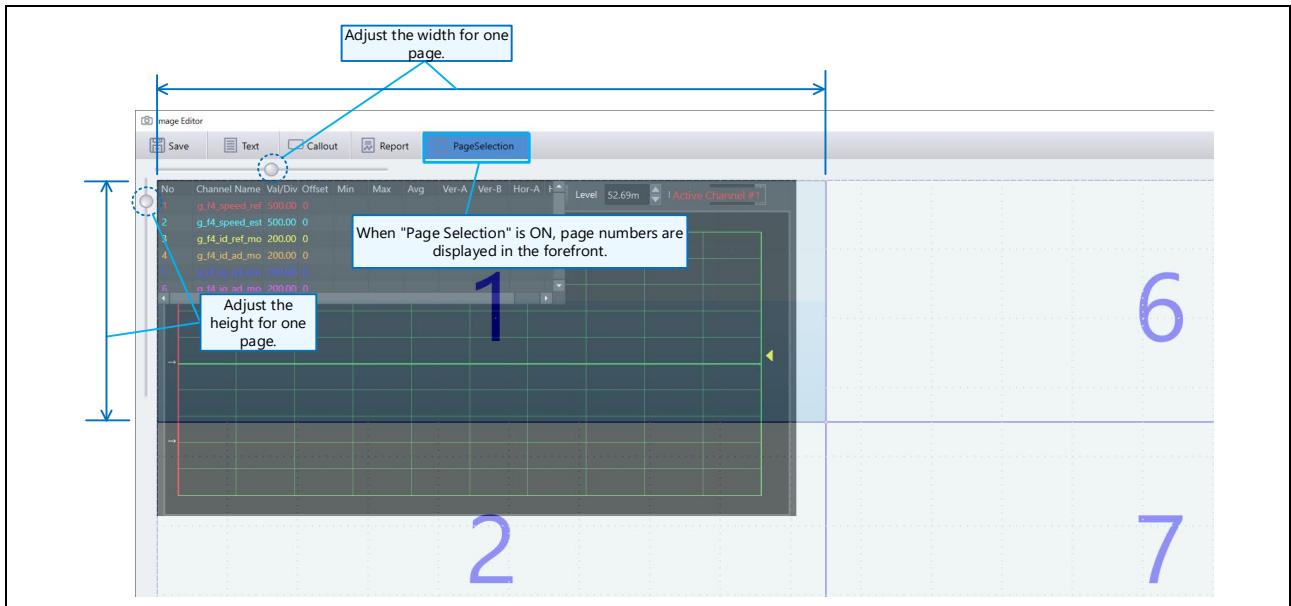
Click the Report button to save the image information edited in Image Editor in a pdf file.

(5) Page Selection button

When the Page Selection button is ON, the page numbers of the print area are displayed in the forefront. When a page number is selected, it turns slightly dark blue, indicating the target for output. If a page number is not selected, it turns light blue, indicating that it is not the target for output.

5.8.4 Adjusting PDF Output Area

You can use sliders in Image Editor to adjust the PDF output area: Horizontal slider to adjust the page width. Vertical slider to adjust the page height.

**Figure 5-40 Adjusting PDF output area**

6. [Analyzer] User Button Window

6.1 Overview

User Button Window provides a function to execute preregistered sequences sequentially by the user's instruction (by clicking the created button). User Button Window is displayed when you launch Analyzer tool.

6.2 Features

- Detailed sequences, such as for simultaneous execution, can be created.
- By using internal variables, loaded values can be written as is.

6.3 Screen Structure

Select “Add New” from the menu of User Button Control Window (or select “Show detail Setting” from the right-click menu of an existing button) to open a new User Button editing screen. The screen structure is shown below.

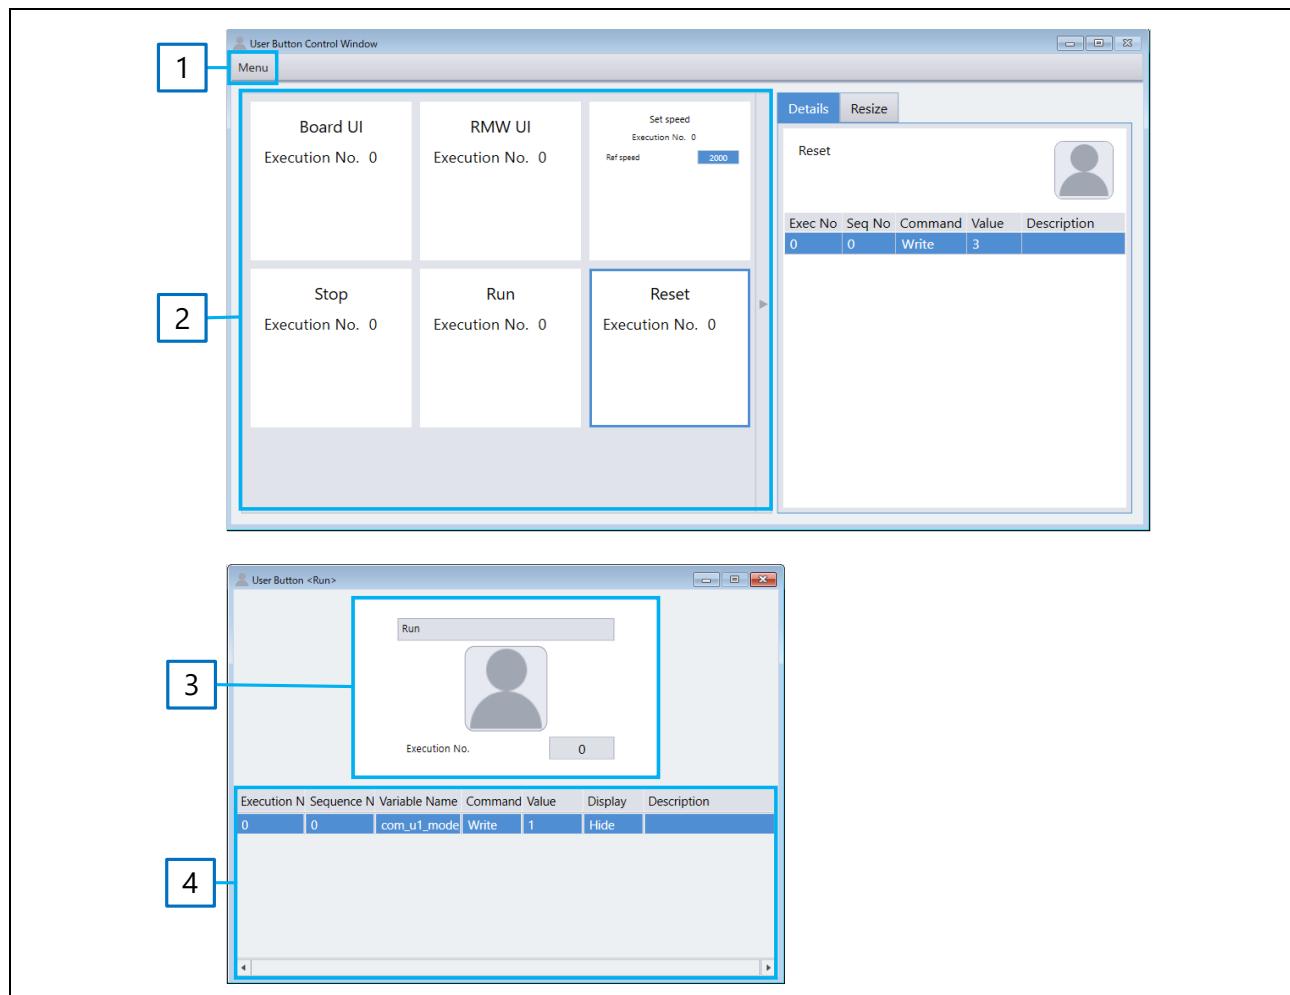


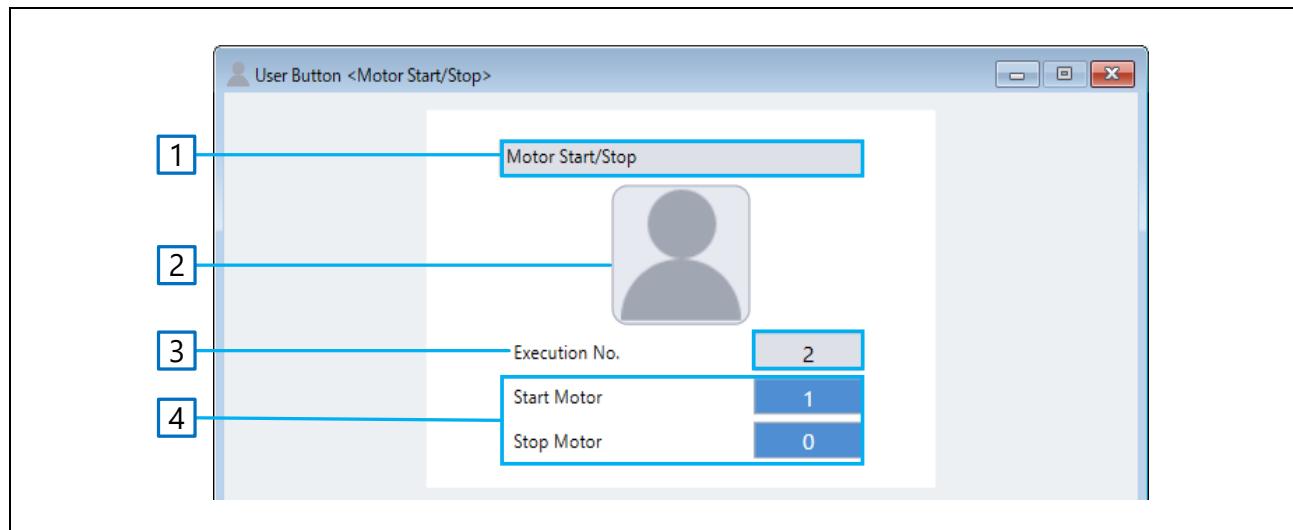
Figure 6-1 User Button editing screen

Table 6-1 Functions of User Button editing screen

| No. | Name | Explanation |
|-----|-------------------------|--|
| 1 | Menu | Select from Add New / Image Size / Show Control. |
| 2 | Button integration area | Multiple buttons are placed in one window. |
| 3 | Execution button area | Execution button. You can edit the name, number, and information to be displayed. |
| 4 | Sequence-editing area | The sequence to be executed each time the Execution button is clicked. You can edit it here. |

6.3.1 Execution Button Area

The names and functions of each part in the execution button area are shown below.

**Figure 6-2 Execution Button view****Table 6-2 Function of execution button area**

| No. | Name | Explanation |
|-----|------------------|--|
| 1 | Button Name | <ul style="list-style-type: none"> Any name can be specified. The name is displayed in the User Button menu on Control Window |
| 2 | Execution button | <ul style="list-style-type: none"> Clicking this button executes a single step of the sequence. You can set up an image from the right-click menu. |
| 3 | Execution No | <ul style="list-style-type: none"> Displays the Execution number to be executed when the Execution button is clicked. When the Execution button is clicked, the Execution number automatically switches to the next one. When the number reaches the last, it returns to the first Execution number. Execution numbers can be specified directly. |
| 4 | Information | <ul style="list-style-type: none"> Displays Description and Value of the sequence information specified as Display=Show in the sequence-editing area. The displayed Value can be edited. |

6.3.2 Sequence-Editing Area

This section explains the names and functions of the various parts of the sequence-editing area.

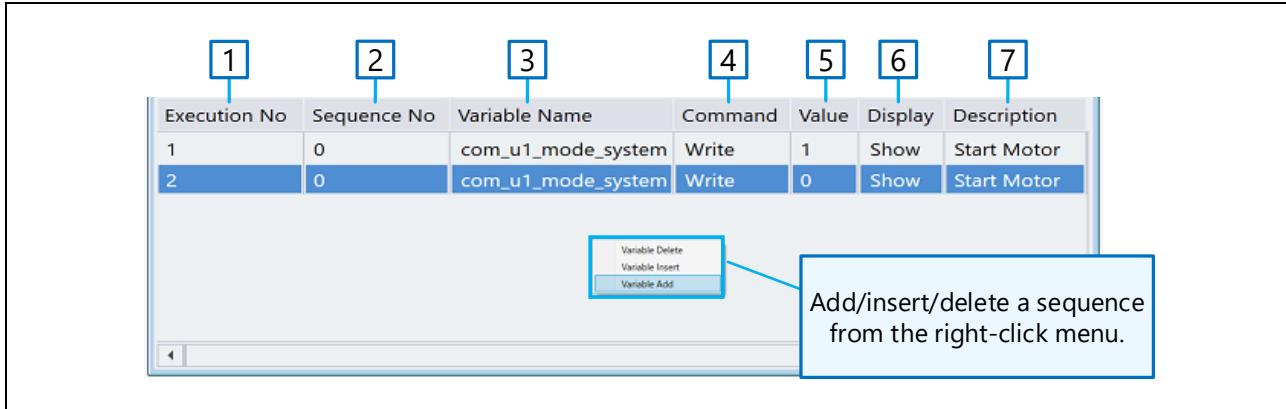


Figure 6-3 Sequence-editing area view

Table 6-3 Functions of sequence-editing area

| No. | Name | Explanation |
|-----|---------------|--|
| 1 | Execution No | <ul style="list-style-type: none"> Specify the processing order as an integer when the execution button is clicked. Execution proceeds sequentially starting with the smallest number. |
| 2 | Sequence No | <ul style="list-style-type: none"> If there are duplicated Execution numbers, specify the Sequence No. (processing order) in this field as an integer. If there are duplicated Sequence numbers, execution is in the order of top to bottom. |
| 3 | Variable Name | <ul style="list-style-type: none"> Specify variable names when values are to be loaded or written. |
| 4 | Command | <p>Select commands:</p> <ul style="list-style-type: none"> - Read/Write: Load or write variable values. - Run/Stop: Start or stop waveform display in Scope Window. |
| 5 | Value | <ul style="list-style-type: none"> When "Commander=Read" is specified: the loaded value is displayed. When "Commander=Write" is specified: the value to be written is specified. Loaded values can also be held in an internal area and utilized as values to be written. |
| 6 | Display | <ul style="list-style-type: none"> Specify whether to display (Show) or not display (Hide) information in the button's information area. |
| 7 | Description | <ul style="list-style-type: none"> Anything can be entered. If "Display=Show" is specified, the entered description is displayed in the button area. |

6.3.3 Button Integration Area

This section explains the names and functions of the parts of the button integration area.

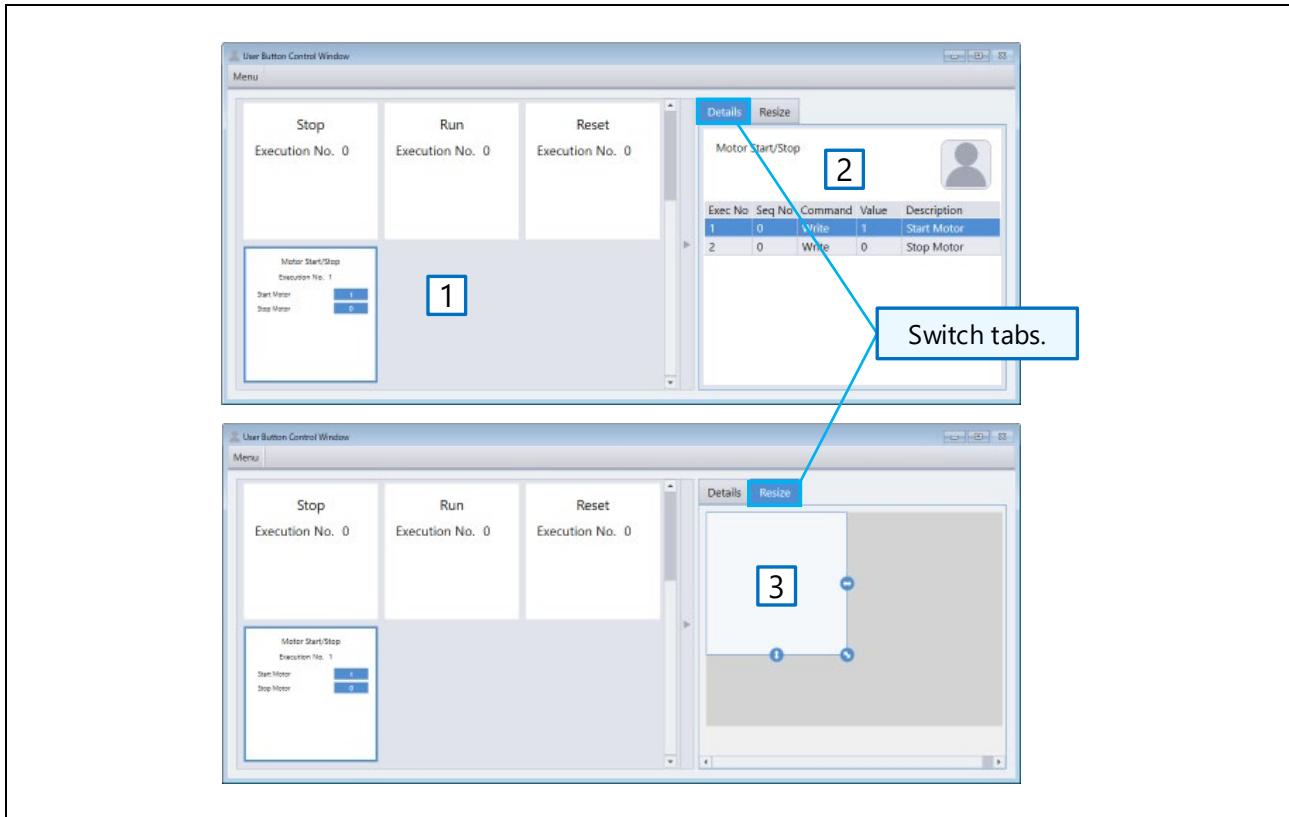


Figure 6-4 Button integration area view

Table 6-4 Functions of button integration area

| No. | Name | Explanation |
|-----|--------------------|--|
| 1 | Button area | <ul style="list-style-type: none"> Buttons are arranged side by side. You can rearrange the buttons freely by mouse-dragging |
| 2 | Button details tab | <ul style="list-style-type: none"> You can check the sequence set to the button. |
| 3 | Button resize tab | <ul style="list-style-type: none"> You can adjust the button size. |

6.4 Explanation of Operation

6.4.1 Creating New User Button

When you select “Add New” from the Menu on User Button Control Window, a new User Button window will appear. You can create User Buttons up to 16.

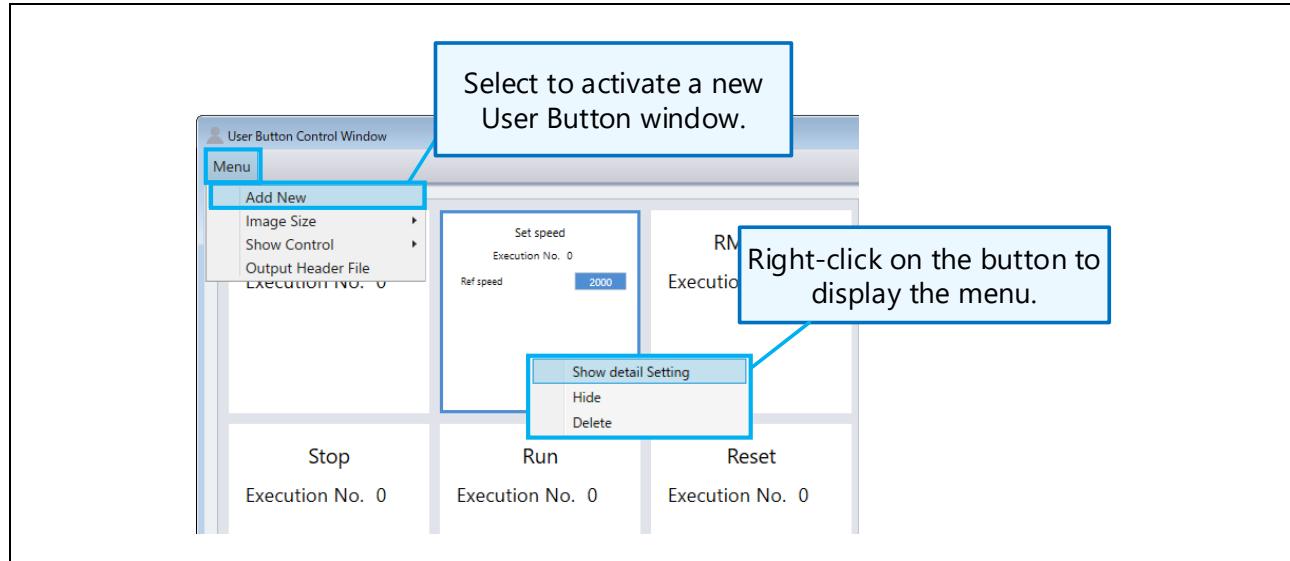


Figure 6-5 Creating new User Button

6.4.2 Deleting User Button

Select “Delete” from the right-click menu of each button, and the User Button will be closed.

6.4.3 Showing and Hiding User Button

Select “Hide” from the right-click menu of each button, and the User Button screen will be hidden, but it will not be deleted.

You can also specify Show/Hide for each User Button by the checkbox of the button name list that is displayed when selecting Menu > Show Control of User Button Control Window.

6.4.4 Editing Sequence

6.4.4.1 Setting up sequence rows

You can add, insert, and delete rows from the right-click menu in the sequence-editing area at the bottom of User Button window. However, right-clicking in the Variable Name column displays a menu for specifying variable names.

Table 6-5 Right-click menu on sequence-editing area

| Menu Item | Action |
|-----------------|-----------------------------------|
| Variable Add | Adds a row below the last row |
| Variable Insert | Adds a row above the selected row |
| Variable Delete | Deletes the selected row |

6.4.4.2 Specifying Execution No.

You can specify the execution order as an integer when the Execution button at the top of the User Button window is clicked. Execution proceeds sequentially starting with the smallest number (the specified numbers do not have to be contiguous). To process multiple rows with a single click of the Execution button, specify the same number in multiple rows.

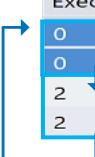
| Execution No | Sequence No | Variable Name | Command | Value | Display | Description |
|--------------|-------------|--------------------|---------|-------|---------|----------------------|
| 0 | 0 | com_u1_mode_system | Write | 1 | Show | Start Motor 1st Time |
| 1 | 0 | com_u1_mode_system | Write | 0 | Show | Stop Motor |
| 2 | 0 | com_u1_mode_system | Write | 1 | Show | Start Motor 2nd Time |
| 3 | 0 | com_u1_mode_system | Write | 0 | Show | Stop Motor |

Click the Execution button
 1st time : Executes the row with "Execution No=0".
 2nd time : Executes the row with "Execution No=1"
 3rd time : Executes the row with "Execution No=2"
 4th time: Executes the row with "Execution No=3"
 5th time : (Repeat from the 1st time)

Figure 6-6 Execution No setting

6.4.4.3 Specifying Sequence No.

If Execution numbers are duplicated within a sequence, you can specify the execution order within that Execution No. as an integer. Execution proceeds sequentially starting with the smallest number (the specified numbers do not have to be contiguous). You can specify the same number in multiple rows. In the following example, execution proceeds sequentially from top to bottom.



| Execution No | Sequence No | Variable Name | Command | Value | Display | Description |
|--------------|-------------|--------------------|---------|-------|---------|----------------------|
| 0 | 0 | com_u1_mode_system | Write | 1 | Show | Start Motor 1st Time |
| 0 | 1 | com_u1_mode_system | Write | 0 | Show | Stop Motor |
| 2 | 0 | com_u1_mode_system | Write | 1 | Show | Start Motor 2st Time |
| 2 | 1 | com_u1_mode_system | Write | 0 | Show | Stop Motor |

Click the Execution button

1st time : Executes the row with "Execution No=0 and Sequence No=0".
→ then executes the row with "Execution No=0 and Sequence No=1".

2nd time : Executes the row with "Execution No=2 and Sequence No=0".
→ then executes the row with "Execution No=2 and Sequence No=1".

3rd time : (Repeat from the top.)

Figure 6-7 Sequence No setting

6.4.4.4 Setting Variable

Specify a variable name in the Variable Name field in a sequence by one of the following operations.

(a) Enter variable name directly

When you enter a variable name partway, the potential candidate for the variable is displayed. (Note that only the first candidate in the variable list is displayed, and the list with narrowed candidates is not displayed.)

(b) Select from variable list

When you select a Variable Name cell, “v” is displayed to the right of the cell. Click this “v” to display the variable list, and you can select a variable name from it.

(c) Select using Variable Find function

Click a Variable Name cell once and right-click to display the menu. Select “Variable Find” from the menu, the Variable Find screen will be displayed. For the operation method, see 4.4.1.3 Select variable using Variable Find function.

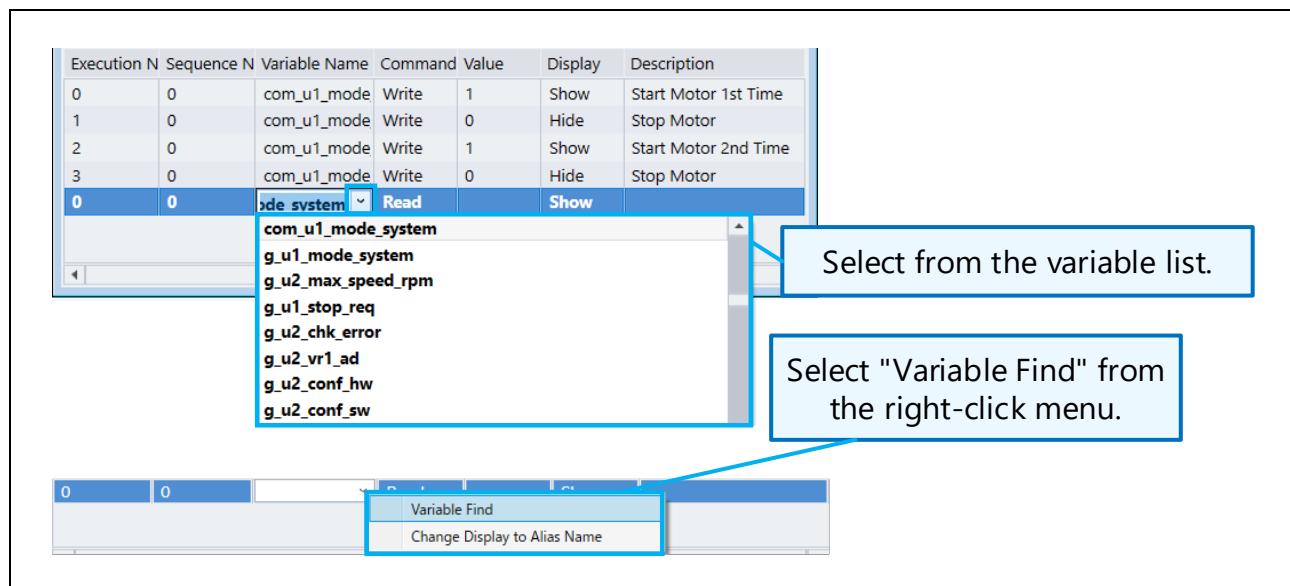


Figure 6-8 How to input variable name

6.4.4.5 Setting Command

Select a Command cell in a sequence and click "v" to display the selectable list. You can select a command from the list.

Table 6-6 Command list

| Command | Action |
|---------|---|
| Read | Loads a variable value |
| Write | Writes a variable value |
| Run | Starts waveform display in Scope Window |
| Stop | Stops waveform display in Scope Window |

6.4.4.6 Setting Value

When you specify "Read" in the Command field, the value of the loaded variable is displayed in the Value field.

When you specify "Write", the value set in the Value field is written into the variable.

6.4.4.7 Setting Display

Select a Display cell in a sequence and click "v" to display a list, from which you can select one of the following.

- Show : Displays sequence information (Description and Value) at the top of the screen.
- Hide : Does not display sequence information (Description and Value) at the top of the screen.

6.4.4.8 Setting Description

When you specify "Show" in the Display field in a sequence, the information described in the "Description" field is displayed in the button area.

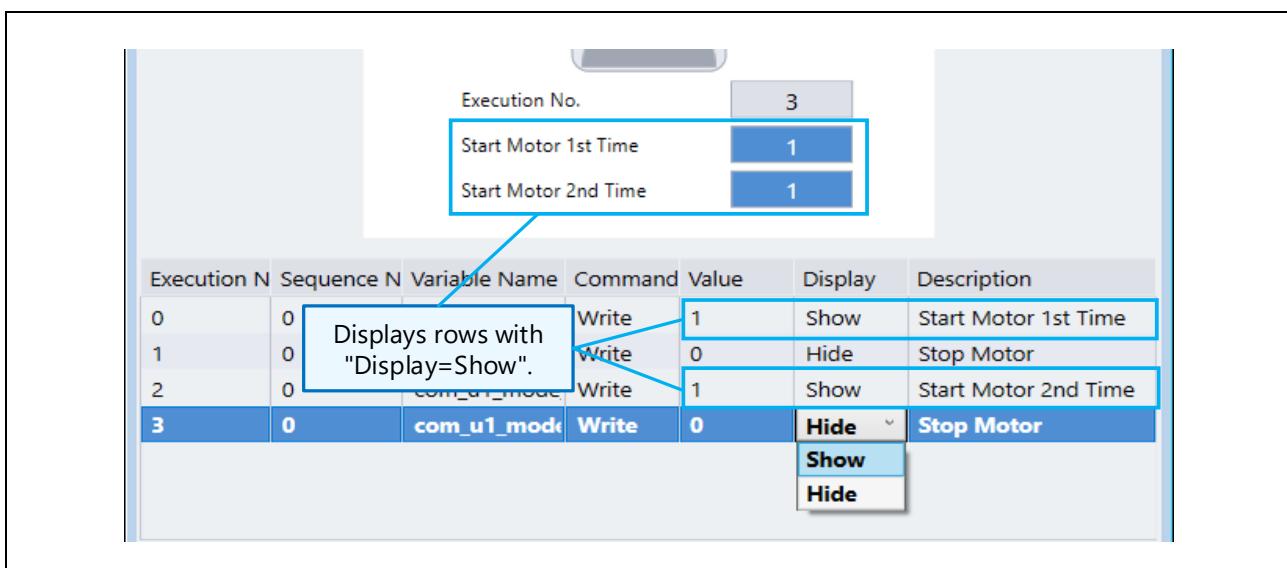


Figure 6-9 Description setting

6.4.5 Utilizing Internal Variable

In User Button window, there are internal variables for User Button that can use the read values as values to be written. When a character string that starts with the letter “A” or “a” followed by a number or numbers is described in the Value field of the sequence (e.g., A1, a12345), that variable can be used as an internal variable.

Table 6-7 Command list when utilizing internal variables

| Command | Action |
|---------|---|
| Read | Saves the value read from the variable in the internal variable |
| Write | Writes the value saved in the internal variable |

The values of internal variables cannot be directly displayed or referenced. It is also not possible to use an internal variable across multiple User Button windows.

| Execution N | Sequence N | Variable Name | Command | Value | Display | Description |
|-------------|------------|----------------|---------|-------|---------|-------------|
| 0 | 0 | com_f4_ref_spd | Write | 2000 | Show | Ref speed |
| 0 | 1 | g_u1_enable_w | Read | A1 | Hide | |
| 0 | 2 | com_u1_enable | Write | A1 | Hide | |

Example of using internal variables
 3rd row : Reads the variable value and save it to the internal variable “A1”.
 4th row : Writes the value of the internal variable “A1” to the variable.

Internal variable
 (A + number)

Figure 6-10 Example of using internal variables

6.4.6 Setting Display

6.4.6.1 Setting image to Execution button

Right-click on the button area at the top of the User Button window and select "Image" from the displayed menu. You can set an Image for the Execution button.

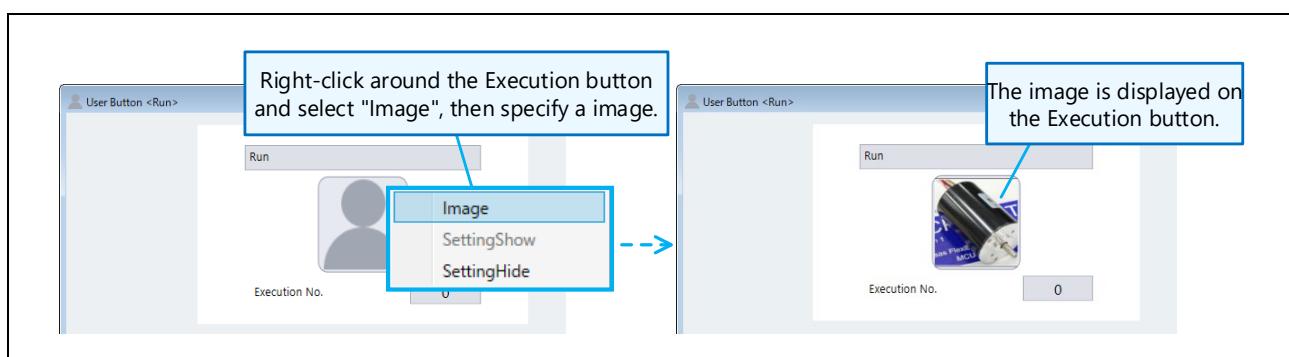


Figure 6-11 How to set image to Execution button

6.4.6.2 Showing and hiding sequence-editing area

Right-click on the button area of User Button Window to display the menu and select “SettingShow” or “SettingHide” to switch the display of the sequence-editing area. (You must right-click on the button area.)

Table 6-8 Switching sequence-editing area display

| Right-click menu | Action |
|------------------|----------------------------------|
| Setting Show | Shows the sequence-editing area. |
| Setting Hide | Hides the sequence-editing area. |

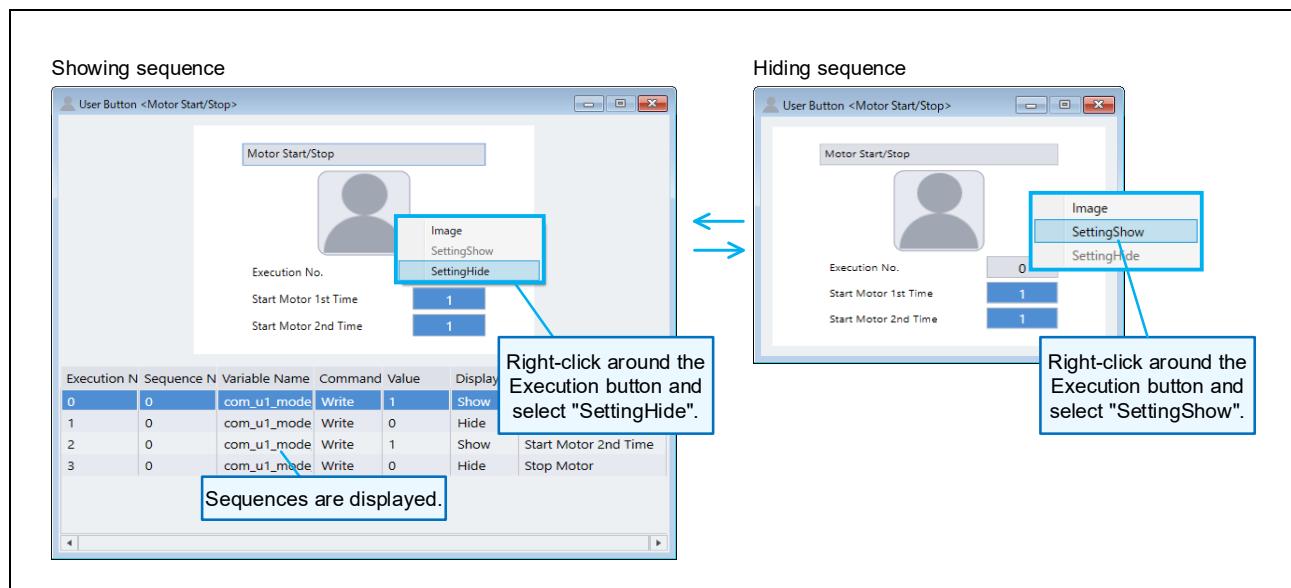


Figure 6-12 Showing/hiding sequence-editing area

7. [Analyzer] Commander Window

7.1 Overview

Commander is a function to preregister a sequence of instructions for writing data into variables, and then to execute the sequence continuously. Commander is activated with the “Commander” button in Analyzer’s Control Window.

7.2 Features

- Sequentially executes write operations.
- Intervals can be set.
- Repetitive (looped) processing can be performed.

7.3 Window Structure

The structure of Commander window is shown below.

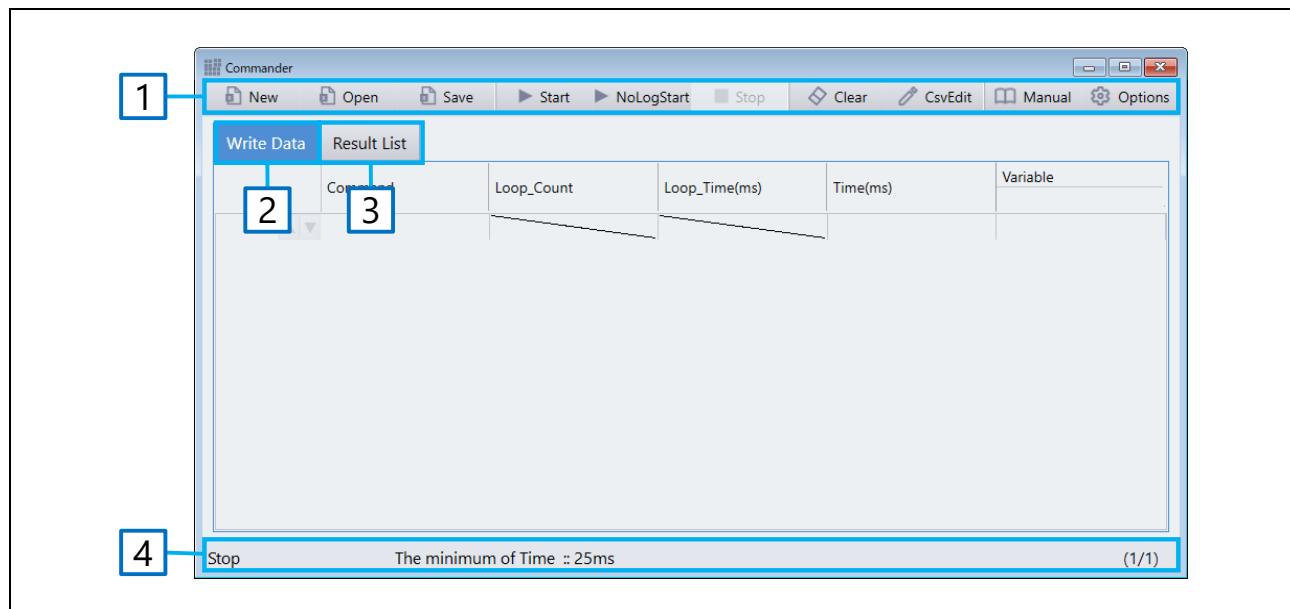


Figure 7-1 Commander window

Table 7-1 Functions of Commander window

| No. | Name | Explanation |
|-----|------------------|--|
| 1 | Operation button | By Clicking the buttons on the top of the window, you can read/write/edit a CSV file, import edited information, and run/stop the sequence, etc. |
| 2 | Write Data tab | Displays sequence information. You cannot edit a sequence on this window. (Use the CSV Edit button to edit a sequence.) |
| 3 | Result List tab | Displays a list of the sequence's execution results. |
| 4 | Status bar | Displays the sequence's execution status, Send Checker status, the number of commands, etc. |

7.3.1 Operation Button

This section explains the operation buttons on the toolbar.

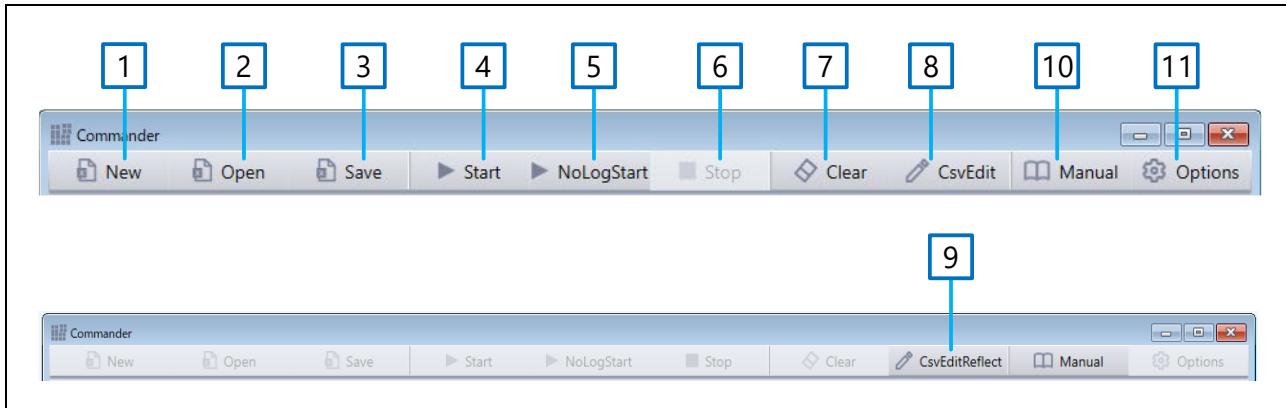


Figure 7-2 Toolbar

Table 7-2 Toolbar operation button functions

| No. | Name | Explanation |
|-----|------------------|---|
| 1 | New | Creates a new CSV file and displays the default sequence information. |
| 2 | Open | Loads an existing CSV file and displays the sequence information. |
| 3 | Save | Saves the CSV file. |
| 4 | Start | Executes the sequence. |
| 5 | NoLogStart | Executes the sequence without getting the log. |
| 6 | Stop | Stops the sequence that is being executed. |
| 7 | Clear | Clears the sequence information that is being displayed. |
| 8 | CSV Edit | Activates the sequence editing screen and displays information about the sequence (CSV file) that is being displayed. |
| 9 | CSV Edit Reflect | The button's label changes when sequence editing is completed. Clicking the button displays information about the edited sequence (CSV file). |
| 10 | Manual | Displays the input guide |
| 11 | Options | Specify various settings. |

7.3.2 Write Data Tab

When a CSV file is loaded, a sequence is displayed in the Write Data tab.

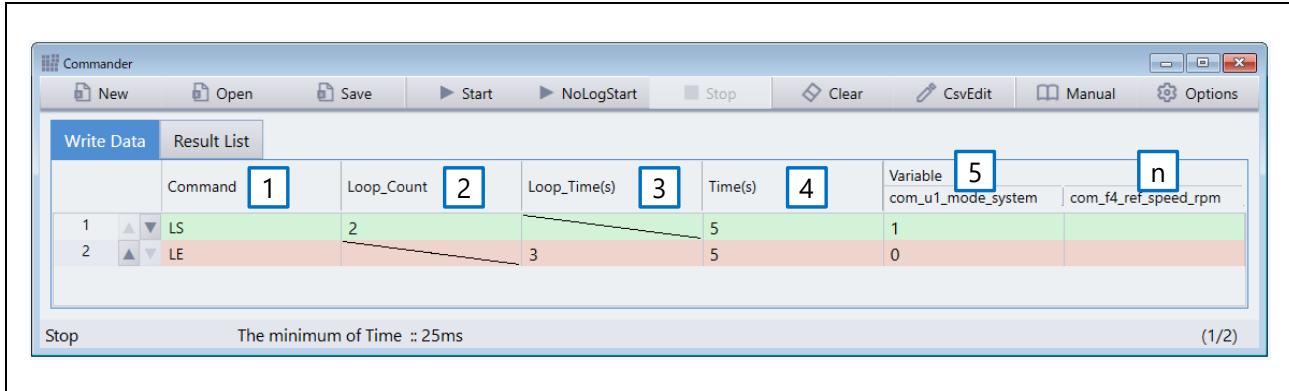


Figure 7-3 Write Data tab view

Table 7-3 Functions of Write Data tab

| No. | Name | Explanation |
|-----|---------------|--|
| 1 | Command | Displays the commands for looped processing: <ul style="list-style-type: none">• LS: Loop start• LE: Loop end |
| 2 | Loop Count | Displays the number of loops. |
| 3 | Loop Time | Displays the interval between the execution of the command on the last line of looped processing and the return to the command on the first line. |
| 4 | Time | Displays each line's execution wait interval. |
| 5 | Variable Name | Header line: Displays the name of the variable name to issue a command. Lines below the header: Displays the value to be written into the variable in the header. |
| n | Variable Name | Displays variable names as the number specified in the sequence. |

7.3.3 Result List Tab

When a sequence on the Write Data tab is executed, the results will be displayed on the Result List tab.

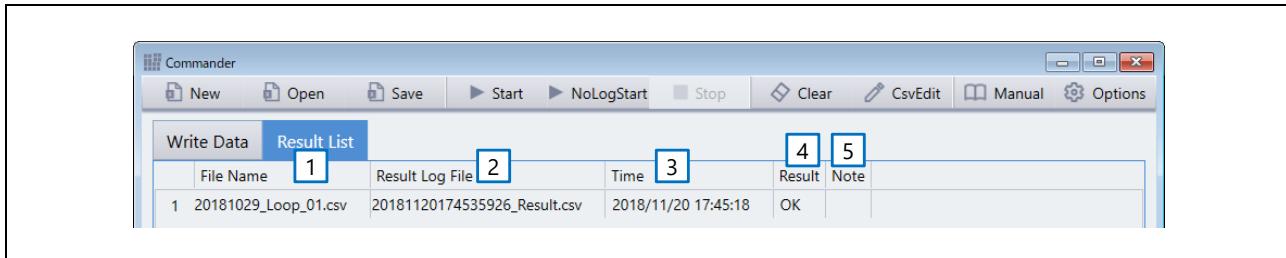


Figure 7-4 Result List tab view

Table 7-4 Functions of Result List tab

| No. | Name | Explanation |
|-----|-----------------|---|
| 1 | File Name | Displays information about the CSV file for which the sequence was executed. |
| 2 | Result Log File | Displays information about the log file for the sequence's execution results. |
| 3 | Time | Displays the date and time the sequence was executed. |
| 4 | Result | Displays the sequence's execution result (OK/NG). |
| 5 | Note | Any comments can be entered |

7.3.4 Status Bar

The status bar displays the status of Commander.

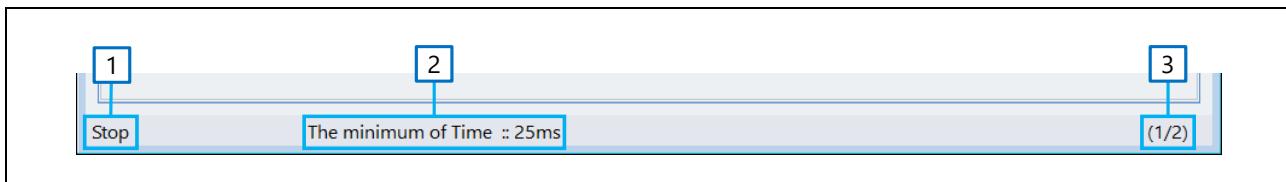


Figure 7-5 Status bar

Table 7-5 Functions of status bar

| No. | Name | Explanation |
|-----|--------------------------|---|
| 1 | Execution status | Displays the execution status of the sequence. <ul style="list-style-type: none"> Running : When a sequence is being executed by clicking Start button. Stop : When the sequence is stopped by clicking Stop button, or the sequence execution is completed. |
| 2 | Send Checker information | Displays the Send Checker information. <ul style="list-style-type: none"> Send Checker not executed: "Please press the Send Checker Button." Send Checker already executed: "The minimum of Time :: XXms" (XX: measured value) |
| 3 | Execution count | Displays (line-number/total-number-of-lines) for the sequence. <ul style="list-style-type: none"> line-number: Displays the line number that has been selected by clicking, or the line number that is being executed. total-number-of-lines: Displays the total number of instruction lines in the sequence. |

7.4 Explanation of Operation

7.4.1 Starting and Exiting Commander

Click the “Commander” button of Control Window to launch Commander. Click the exit button at the upper-right corner to terminate it.

7.4.2 Executing Send Checker

When you start Commander, the Send Checker function is executed, and the system measures the minimum value of the interval of command value transmission. To operate Commander, it is necessary to execute Send Checker first.

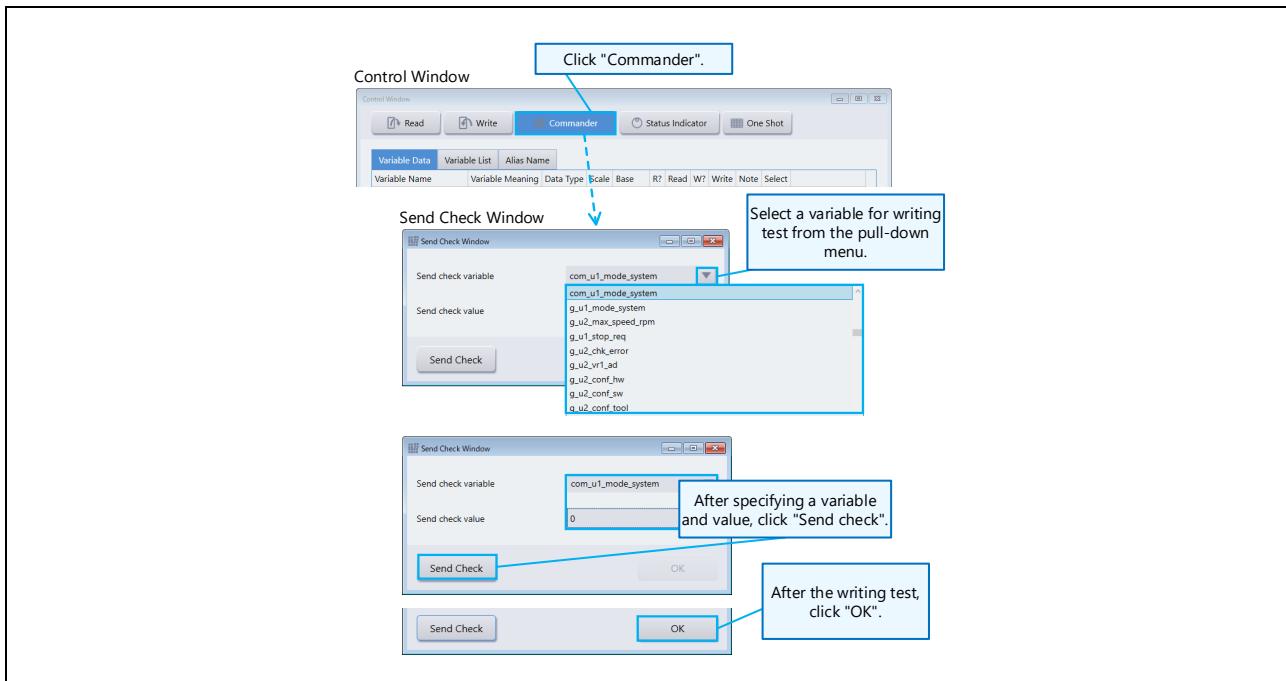


Figure 7-6 Starting Commander and Send Check window

[Operation]

1. Set the following items on the Send Check Window
 - Send Check Variable : Select a variable that can be used in the communication test from the pull-down menu.
 - Send Check Value : Specify a value that can be used in the communication test.

Note: Since the value is actually written to the selected variable in the measurement, specify the variable name and its value that are safe for writing.

2. Press the "Send check" button to measure.
3. When execution of Send Checker is completed normally, the "OK" button can be pressed.

When Send Checker is completed, click "OK" to open Commander window. The measurement result of Send Checker is displayed in the status bar of Commander window.

- Display after Send Checker execution: “The minimum of Time :: XXms” (XX: measured value)

7.4.3 Specifying CSV file

7.4.3.1 Creating a new CSV file (“New” button)

Click the “New” button of Commander window to create a new CSV file, and its information is displayed on Commander window.

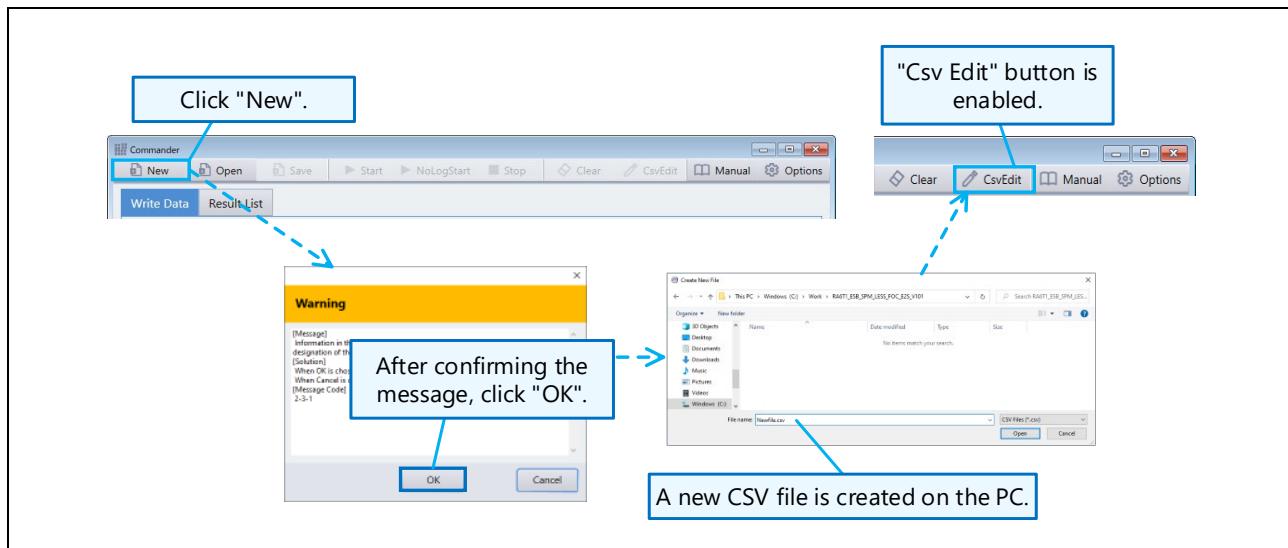


Figure 7-7 Creating new CSV file

[Operation]

1. Click the “New” button, the Warning message screen is displayed.
2. Message: “Emptied file when you open an existing file.” *Note
3. Click “OK” on the Warning message screen, and a screen to specify a new file name will be displayed.
4. Specify a new file name and click the “Open” button. A new CSV file is created, and the “CSV Edit” button is enabled.

Note If you specify an existing CSV file that contains sequence information in the filename specification, that CSV file will be initialized when it is opened. If you want to import an existing CSV file, use the “Open” described in the following.

7.4.3.2 Selecting Existing File (“Open” button)

Click the “Open” button to load the CSV file that has been created and edited, and the sequence will be displayed on Commander window.

[Operation]

1. Click the “Open” button to display the screen for opening a file.
2. Specify an existing CSV filename and click the “Open” button. The file is loaded, and the sequence information is displayed on Commander window.

7.4.3.3 Clearing displayed sequence information (“Clear” button)

Click the “Clear” button to clear the sequence being displayed in Commander window.

7.4.4 Editing CSV file (“CSV Edit” button)

When a sequence is displayed on Commander window, the “CSV Edit” button becomes enabled. Click the “CSV Edit” button to open the editing screen (Excel). The procedure for editing a sequence is explained below.

7.4.4.1 Basic settings

(a) Specify Variable

For a new CSV file, the E1 cell displays "Please register available variable". Delete this text and specify a variable name.

If you want to specify multiple variables per line (execute at the same timing), put these variables in the cell from E1 to the right side (F1, G1, H1...), without skipping a column.

(b) Specify processing interval

In the “Time(xx)” column, you can specify the processing interval. Positive integer/positive decimal values are valid.

(c) Specify command value

To issue commands, specify values in the second and subsequent lines in the column for variable names. Positive integer/positive decimal values are valid. If a command is issued to a large number of variable names in a single line (at the same timing), the next line may be issued before the processing is completed.

Before editing

| A | B | C | D | E | F |
|-----------|------------|---------------|----------|-------------------------------------|---|
| 1 Command | Loop_Count | Loop_Time(ms) | Time(ms) | Please register available variables | |
| 2 | | | | | |
| 3 | | | | | |

The headings of columns A to D are indispensable items.

Unit can be changed. (s/ms/ds)

Clear these letters and specify a variable name from the E1 cell.

After editing (example)

| A | B | C | D | E | F |
|-----------|------------|---------------|----------|--------------------|---|
| 1 Command | Loop_Count | Loop_Time(ms) | Time(ms) | com_u1_mode_system | |
| 2 | | | 5000 | 1 | |
| 3 | | | 5000 | 0 | |

Example of editing sequence
(2nd line) Start driving the motor after 5 sec.
(3rd line) Stop driving the motor after 5 sec.

Figure 7-8 Write data editing

7.4.4.2 Specify looping

(a) Specify looping

You can specify a loop operation in the “Command” column of the sequence. Specify "LS" in the loop starting line and "LE" in the ending line in uppercase characters. You can set multiple (nested) loops.

(b) Specify loops count

You can specify the loop count in the “Loop Count” column of the sequence. Specify the count in the line with Command "LS" specified. Positive integer values are valid.

(c) Specify loop interval

In the "Loop time" column of the sequence, you can specify the processing interval for returning from the "LE" (end) line process to the "LS" (start) line process in the loop operation.

Specify Loop time in the line with "LE" (end) specified. Valid values are positive integers and positive decimals.

Loop Processing example

| A | B | C | D | E | F |
|---|---------|------------|---------------|----------|--------------------|
| 1 | Command | Loop_Count | Loop_Time(ms) | Time(ms) | com_u1_mode_system |
| 2 | LS | 2 | | 5000 | 1 |
| 3 | LE | | 3000 | 5000 | 0 |

In above example, the following sequence is executed twice.
(2nd line) Start driving the motor after 5 sec.
(3rd line) Stop driving the motor after 5 sec.
(3rd line) Interval 3 sec -> return to the 2nd line

Figure 7-9 Setting Loop processing example 1

| A | B | C | D | E | F |
|---|---------|------------|---------------|----------|--------------------|
| 1 | Command | Loop_Count | Loop_Time(ms) | Time(ms) | com_u1_mode_system |
| A | 2 LS | 2 | | 5000 | 1 |
| B | 3 LE | | 3000 | 5000 | 0 |
| A | 4 LS | 3 | | 5000 | 1 |
| B | 5 LE | | 2000 | 5000 | 0 |

A 1st loop

B 2nd loop

LS line LE line
Variable value = 1 (5sec) Variable value = 0 (5sec)

Interval (3sec)

LS line LE line
Variable value = 1 (5sec) Variable value = 0 (5sec)

B 1st loop

2nd loop

3rd loop

LS line LE line
Variable value = 1 (5sec) Variable value = 0 (5sec)

Interval (2sec)

LS line LE line
Variable value = 1 (5sec) Variable value = 0 (5sec)

Interval (2sec)

LS line LE line
Variable value = 1 (5sec) Variable value = 0 (5sec)

Figure 7-10 Setting Loop processing example 2

7.4.4.3 Specifying time unit

You can specify a sequence processing interval in the “Time” and “Loop Time” columns in the sequence.

The processing interval unit can be seconds (s), milliseconds (ms), or deciseconds (ds). You set the value for the unit to be used by modifying <unit> in “Time (<unit>)” and “Loop Time (<unit>)” of the header line.

Before changing time unit

| | A | B | C | D | E | F |
|---|---------|------------|---------------|----------|--------------------|---|
| 1 | Command | Loop_Count | Loop_Time(ms) | Time(ms) | com_u1_mode_system | |
| 2 | LS | | | 5000 | | 1 |
| 3 | LE | | 3000 | 5000 | | 0 |

Change the time unit from ms (milliseconds) to s (seconds).

After changing time unit (the setting time is the same before changing)

| | A | B | C | D | E | F |
|---|---------|------------|--------------|---------|--------------------|---|
| 1 | Command | Loop_Count | Loop_Time(s) | Time(s) | com_u1_mode_system | |
| 2 | LS | | | 5 | | 1 |
| 3 | LE | | 3 | 5 | | 0 |

Specify the time according to the unit.

Figure 7-11 Modifying time unit

7.4.4.4 Terminating editing and reflecting

(a) Exiting editing screen

Save the edited sequence information into the CSV file by overwriting, then close the editing screen (CSV file). The label of the “Csv Edit” button switches to “CSV Edit Reflect”.

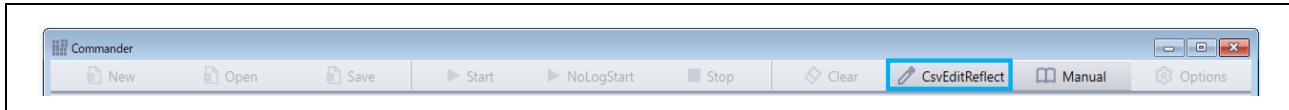


Figure 7-12 CSV Edit Reflect button

(b) Reflecting the edited sequence information (“CSV Edit Reflect” button)

When you click the "Csv Edit Reflect" button^{Note1}, the syntax of the edited sequence information (CSV file) is checked, and a message is displayed if there is a problem. If there is no problem, the edited sequence information (CSV file) is reflected in Commander window^{Note2}, and the label of the button switches to "CSV Edit".



Figure 7-13 CSV Edit button

Note 1. If you click the “Csv Edit Reflect” button without closing the screen in which you edited the CSV file, an error will result. Be sure to close the editing screen after saving the file.

2. If you finish editing a CSV file and save it with a filename that is different from the name loaded into Commander, the edited sequence information (CSV file) will not be reflected on the Commander window even when you click the “CSV Edit Reflect” button. In such a case, specify the name of the saved CSV file from the “Open” button on the Commander window to reflect the edited sequence information.

7.4.5 Preparing for Sequence Execution

Before executing the sequence, set the log saving of the sequence execution result. Click the "Options" button on the toolbar for setting.

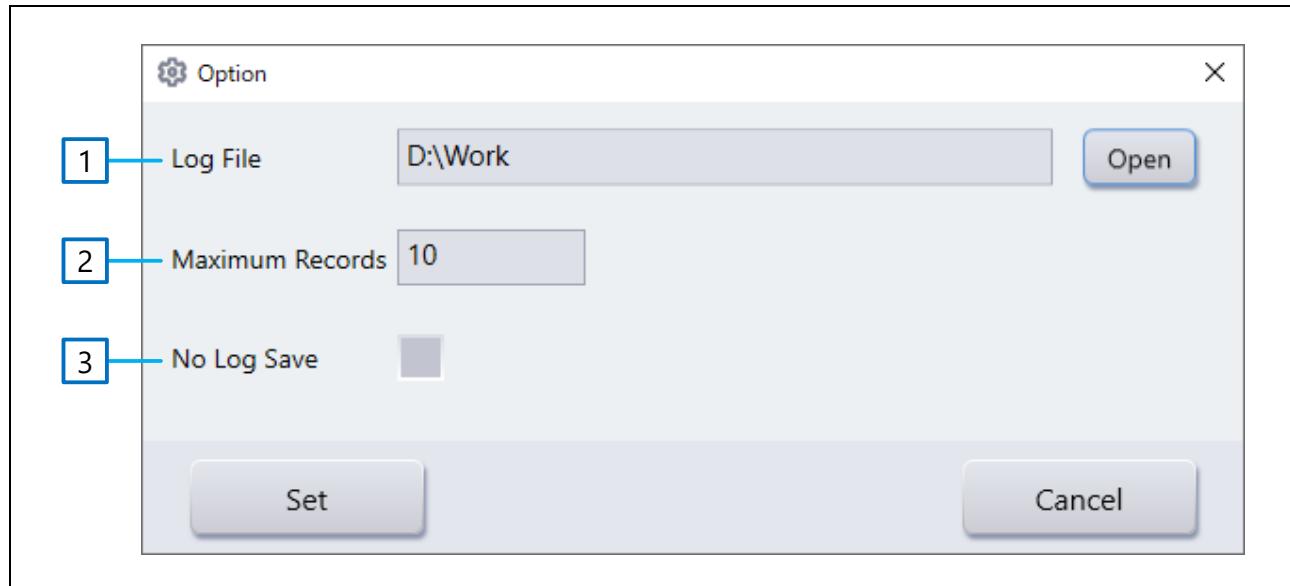


Figure 7-14 Option settings screen

Table 7-6 Option setting

| No. | Item name | Settings |
|-----|-----------------|---|
| 1 | Log File | Specify the output folder for the sequence execution result log. (Be sure to specify a user-accessible path.) |
| 2 | Maximum Records | Specify a maximum retentions count (MAX) for result records. The default value is set to 10. |
| 3 | No Log Save | If checked, the log will not be acquired. |

The log file is created as shown below (it is not output when "No Log Save" in Option is checked or when sequence execution is started with the "NoLogStart" button).

- Log file output destination : Folders specified in Log File of Option
- Log file name :<CSV filename> + “_YYYYMMDDhhmmssxx_Result.csv”

7.4.6 Executing Sequence

When sequence information (a CSV file) is loaded onto the Commander window, the "Start" and "NoLogStart" buttons become enabled on the Commander window.

Click the "Start" button to execute the sequence displayed in the Commander window. When you select a line of the displayed sequence and press "Start", execution will start from the selected line.

If you click the "NoLogStart" button to execute the sequence, the log will not be acquired.

The sequence line being executed is displayed in a blue frame. When the sequence is executed to the end, execution stops automatically. Also, if the "Stop" button is clicked while a sequence is being executed, execution stops.

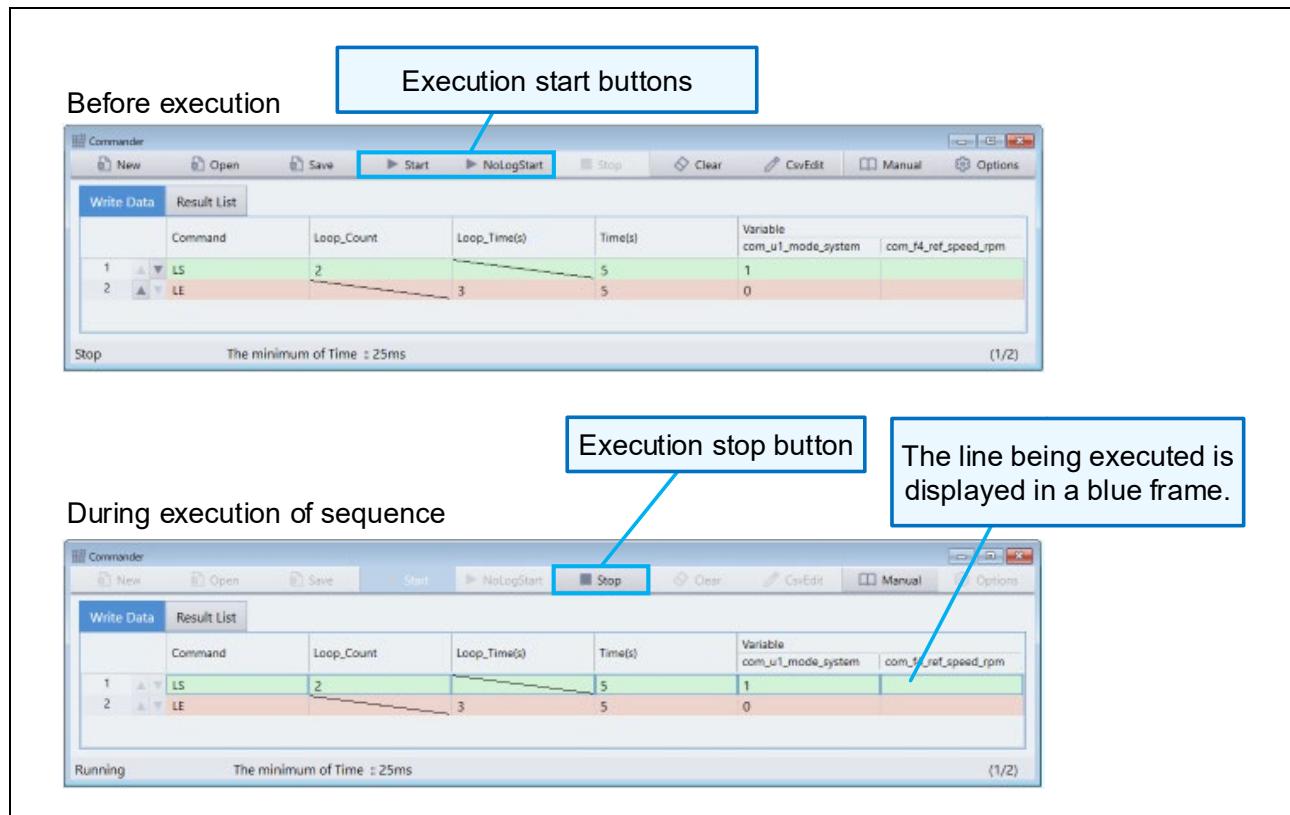


Figure 7-15 Executing sequence

7.4.7 Result of Sequence Execution

7.4.7.1 Result List tab

The sequence execution results are displayed in a list of result records on the Result List tab. The results are also output to a log file. (It is not output when the "No Log Save" checkbox in Option is checked, or when sequence execution is started with the "NoLogStart" button.)

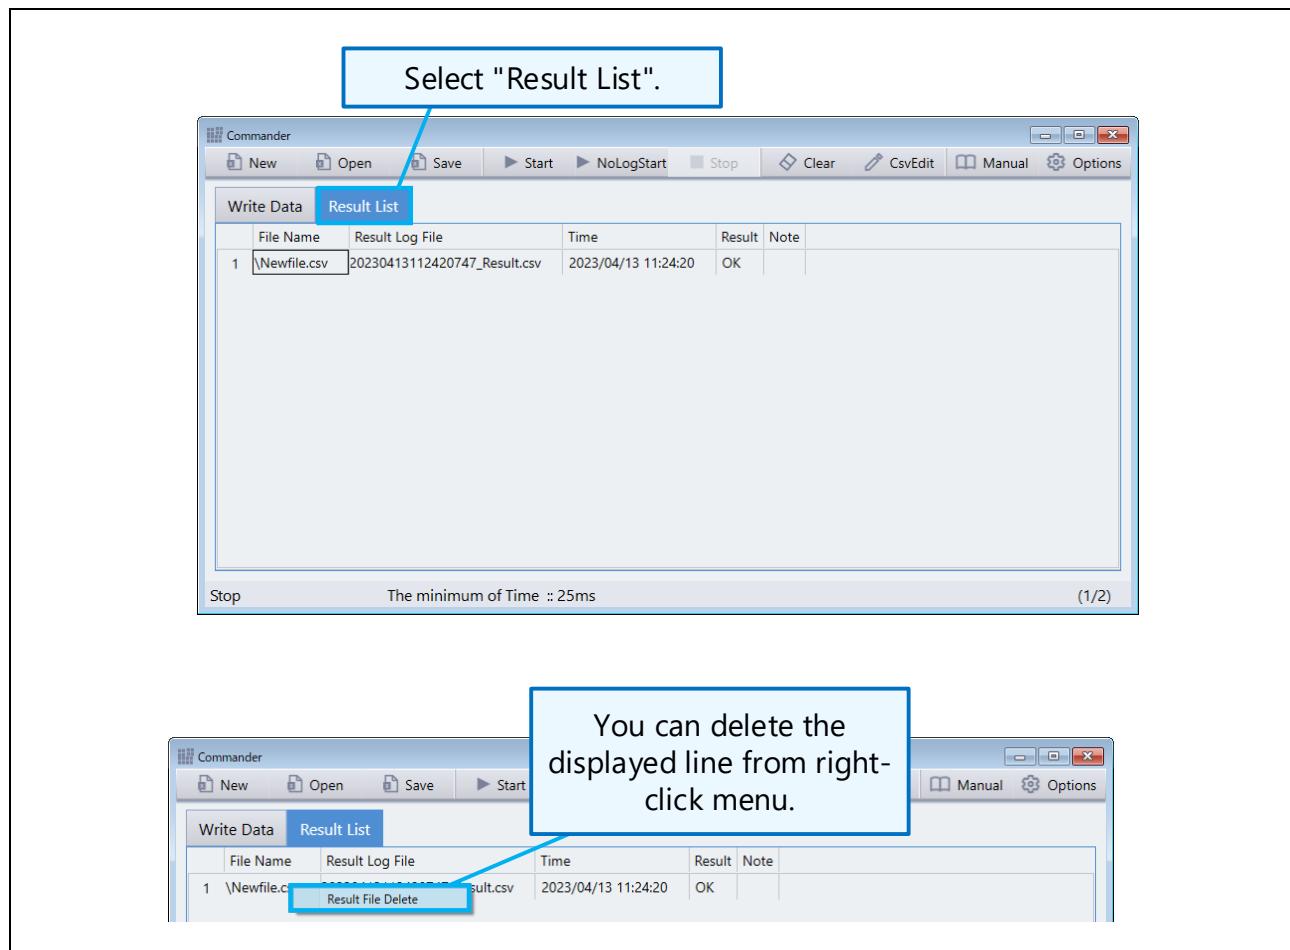


Figure 7-16 Result List view

7.4.7.2 Deleting result records

You can delete result records displayed on the Result List tab. Right-click the result record to be deleted and select "Result File Delete" from the displayed menu.

Note When you delete a result record from the Result List tab, the file displayed in Result Log File field (CSV file of the log) is also deleted from the PC.

7.4.7.3 Saving result record information

The result record information displayed in the list on the Result List tab is saved in an RMT file. When an RMT file with saved result records is loaded, the result record information is restored.

8. [Analyzer] Status Indicator Window

8.1 Overview

Status Indicator is a function to monitor the values of the global variables of a user program. If a monitored result matches a preset condition (a threshold is exceeded), an indicator light on the window turns on. Press the “Status Indicator” button on the Analyzer’s Control Window to launch Status Indicator.

8.2 Features

- Monitors variable values and indicates that a preset condition is met (a threshold is exceeded) with an indicator light color.
- Multiple monitoring conditions can be set for one variable.
- Multiple variables can be set to be monitored separately or simultaneously.
- When none of the monitoring conditions are met after start of monitoring, the indicator light turns green, and the status becomes “NORMAL”.
- A monitoring results record (history of matching setting conditions) is displayed in a list.

8.3 Window Structure

The structure of Status Indicator window is shown below.

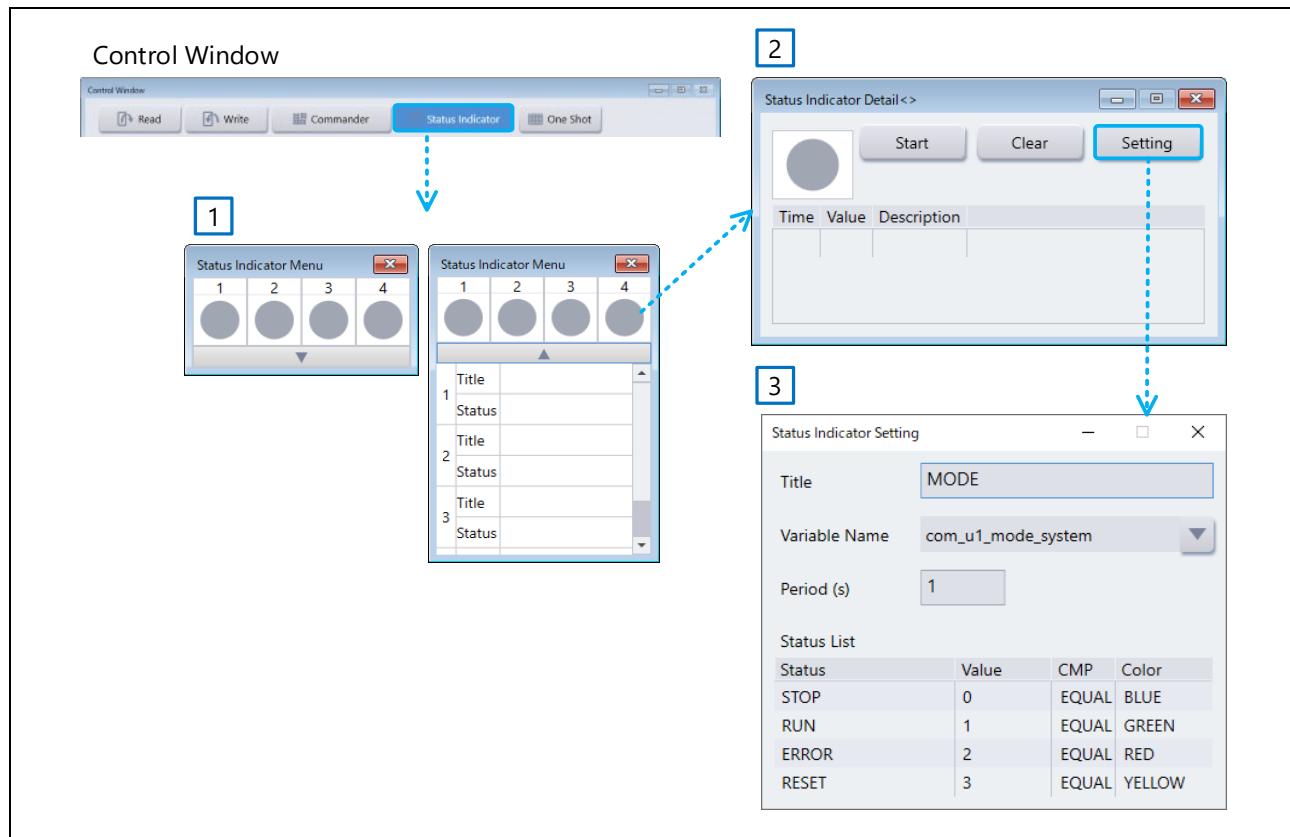


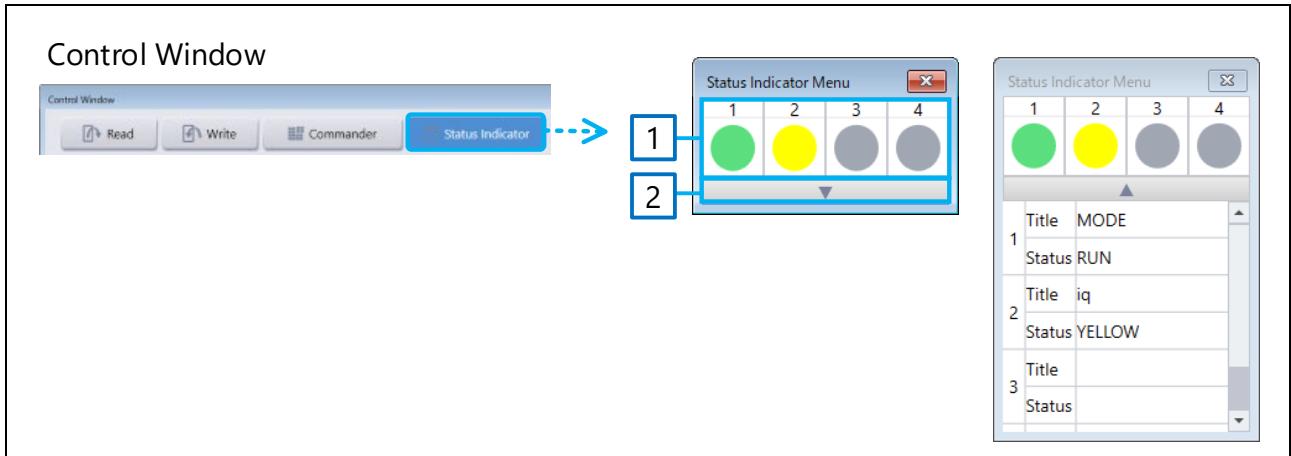
Figure 8-1 Status Indicator window structure

Table 8-1 Functions of Status Indicator window

| No. | Name | Explanation |
|-----|--------------------------|---|
| 1 | Status Indicator Menu | Displays the indicator light that can be set. |
| 2 | Status Indicator Detail | Starts or stops monitoring and shows or clears the monitoring result. |
| 3 | Status Indicator Setting | Specifies monitoring conditions. |

8.3.1 Status Indicator Menu

The Status Indicator Menu screen (hereafter, “Menu screen”) starts when the “Status Indicator” button on the Control Window is clicked. You can check each monitoring status from the indicator lights on the Menu screen.

**Figure 8-2 Status Indicator Menu screen****Table 8-2 Functions of Status Indicator Menu screen**

| No. | Name | Explanation |
|-----|----------------------------|--|
| 1 | Indicator light | Indicates the monitoring status with its color. |
| 2 | Information display button | Displays the Title and Status of the indicator lights (click ▼ to display, ▲ to hide). |

8.3.2 Status Indicator Detail

Click an indicator light on the Menu screen, and a Status Indicator Detail screen (hereinafter referred to as Detail screen) of that indicator will be displayed. In the Detail screen, you can start/stop monitoring and clear the log.

When you click the close button of the screen, the Detail screen will be closed regardless of the monitoring status.

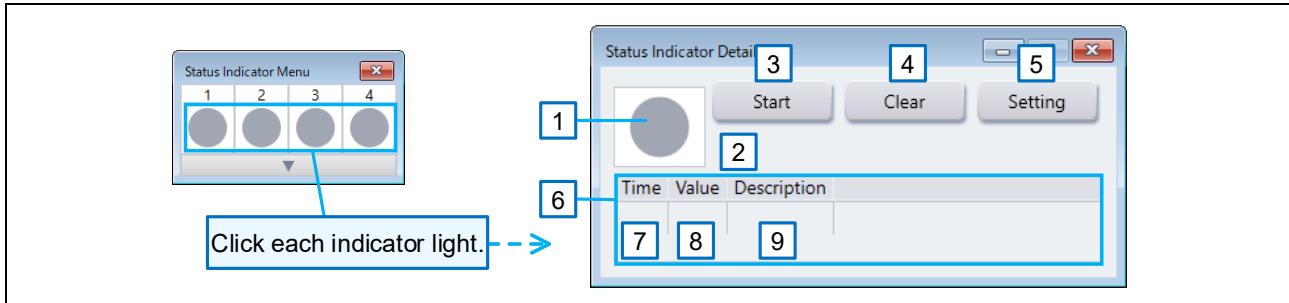


Figure 8-3 Status Indicator Detail screen

Table 8-3 Functions of Status Indicator Detail screen

| No. | Name | Explanation |
|-----|------------------------|--|
| 1 | Indicator light | Indicate the monitoring status with its color |
| 2 | Status | Indicates the monitoring status in text. |
| 3 | Start / Stop button | Starts or stops monitoring. |
| 4 | Clear button | Clears the monitoring result list. |
| 5 | Setting button | When this button is clicked while monitoring is stopped, the Status Indicator Settings screen is displayed. (It can not be displayed during monitoring.) |
| 6 | Monitoring result list | Lists the information about monitoring conditions that were met (the thresholds were exceeded) during monitoring. |
| 7 | Time | Displays the date and time a monitoring condition was met (the threshold was exceeded). |
| 8 | Value | Displays the value that matched the monitoring condition (the threshold was exceeded). |
| 9 | Description | Displays the status that matched the monitoring condition (the threshold was exceeded). |

8.3.3 Status Indicator Setting

Click the “Setting” button on the Detail screen, and the Status Indicator Settings screen (hereafter, “Settings screen”) will be displayed. You can specify detailed monitoring conditions on this screen.

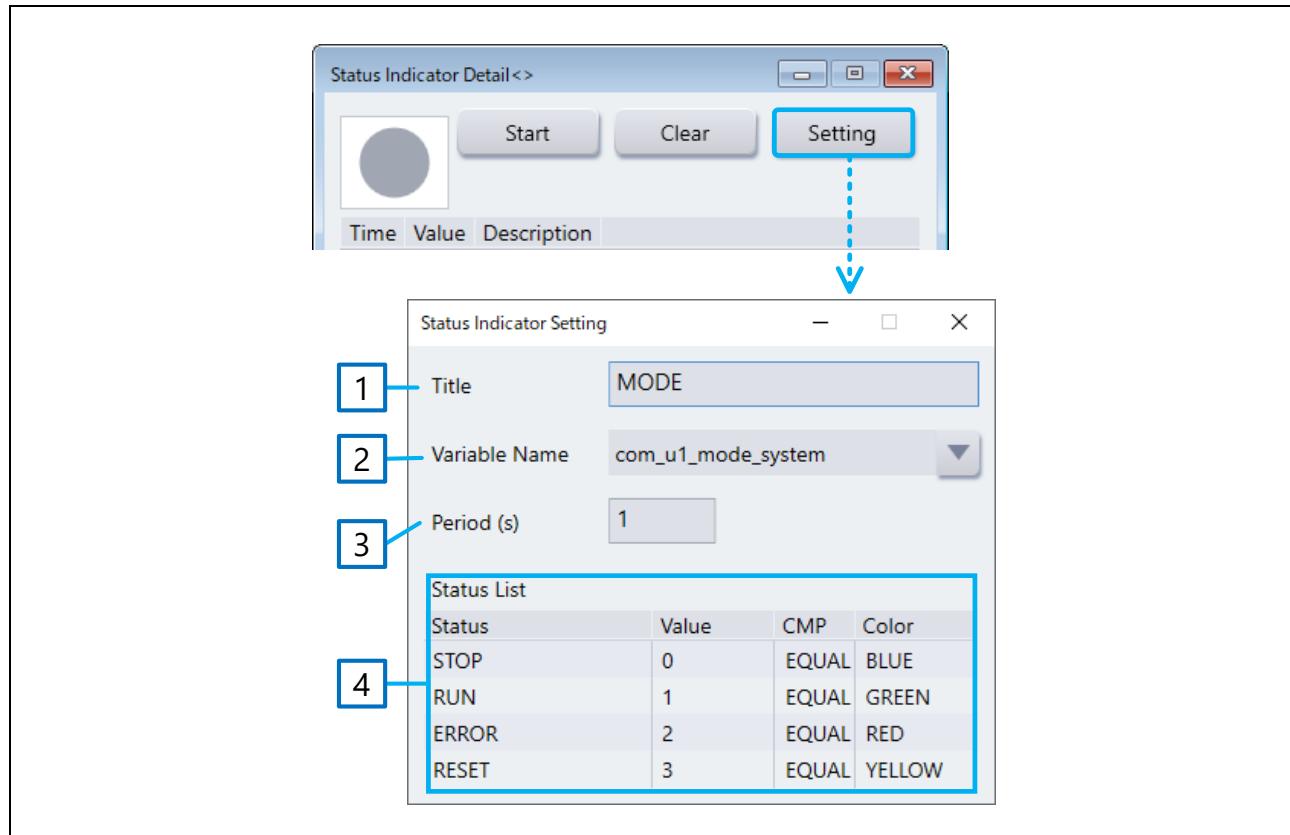


Figure 8-4 Status Indicator Settings screen

Table 8-4 Functions of Status Indicator Settings screen

| No. | Name | Explanation |
|-----|---------------|---|
| 1 | Title | Specify the name of the monitoring. |
| 2 | Variable Name | Specify the name of a variable to be monitored. |
| 3 | Periodic | Specify the monitoring interval (the default value is 0 seconds). |
| 4 | Status List | Specify the monitoring conditions. |

8.4 Explanation of Operation

8.4.1 Showing or Hiding Menu Screen

Click the "Status Indicator" button on Control Window, the Menu screen will be displayed.

Click the Exit button at the top right corner of the Menu screen, the Menu screen (and the Detail screen) will be hidden. Even if you click the Exit button on the Menu screen and hide the screen, the monitoring status is retained during monitoring.

8.4.2 Setting Screen (Setting Monitoring Condition)

Select an indicator light from the Menu screen, the Detail screen will be displayed. Then click the Settings button on the Detail screen, and the Settings screen will be displayed. You cannot edit the Settings screen during Status Indicator operation.

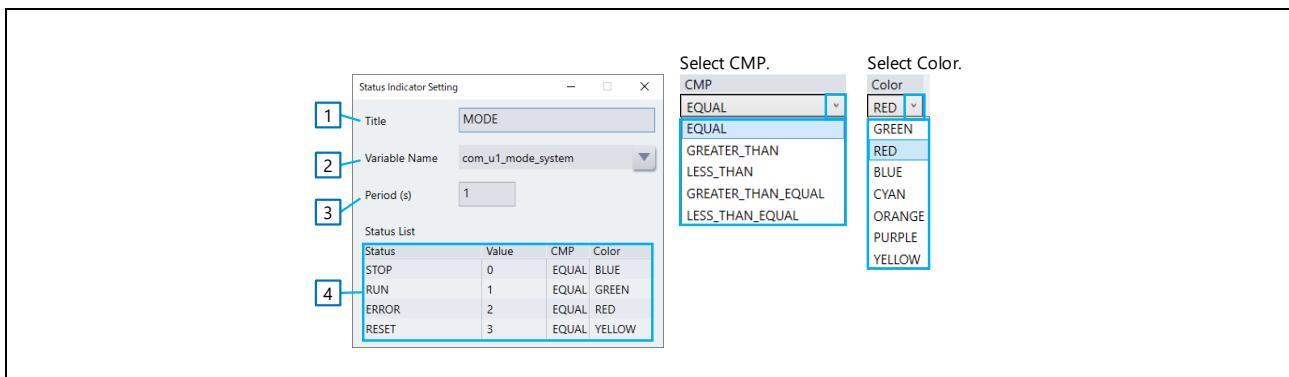


Figure 8-5 Monitoring settings screen

(1) Title

Specify a name for the monitoring settings (direct entry).

(2) Variable Name

Specify the name of the variable to be monitored (direct entry, select from the list, or using the Variable Find function).

(3) Periodic

Specify the monitoring interval (direct entry).

(4) Status List

Set monitoring conditions. After editing the last line, another line is added by press the Enter key. You cannot insert a line to the middle of them. To delete a line, press the Delete key when the entire line is selected (turned blue.) (The last line remains blank but does not affect the operation).

- Status : Specify a name for a condition (direct entry).
- Value : Specify a condition value (direct entry).
- CMP : Specify a judgment condition (select from the list).
- Color : Specify a color (select from the list).

Note that when setting a color, consider that the indicator lights is green when none of the monitoring conditions are met.

8.4.3 Starting Monitoring

The indicator can start monitoring individually. When the "Start" button is clicked on the Detail screen of the indicator light, monitoring starts. When monitoring starts, the colors of the indicator lights on Menu and Detail screens change to the colors set in the Settings screen according to the conditions. If none of the monitoring conditions are met, the indicator light turns green, and the Status turns NORMAL.

8.4.4 Stopping Monitoring

To stop monitoring, click the "Stop" button on the Detail screen under monitoring. The indicator light turns gray when monitoring stops.

8.4.5 Display during Monitoring

If there are no matching monitoring conditions during monitoring, the indicator light turns green and the Status turns "NORMAL". When the value of the variable meets the monitoring condition (exceeds the threshold value), the following operation is performed.

- The colors of the indicators on the Menu and Detail screens turn the colors set in the monitoring conditions.
- The information about the matched monitoring condition (threshold exceedance) is added to the monitoring result list on the Detail screen.

In the monitoring result list on the Detail screen, the latest information is added at the top of the list (it does not scroll automatically).

Even if you close the Menu or Detail screen, the monitoring status is retained (continued).

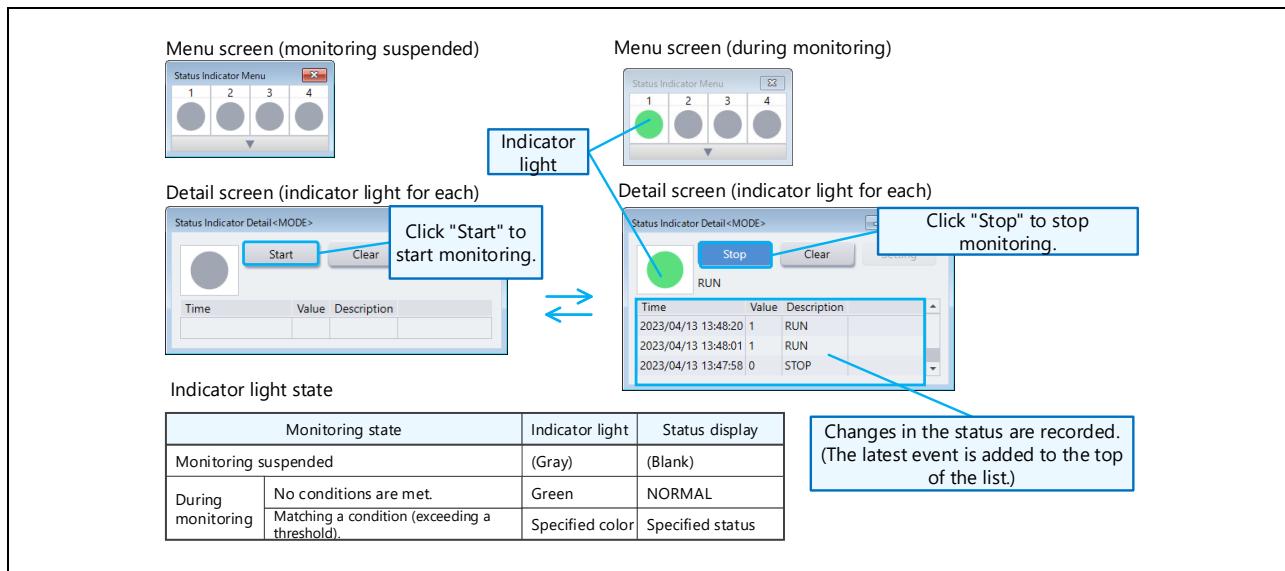


Figure 8-6 Starting/stopping monitoring

8.4.6 Clearing Monitoring Results

The monitoring result list in Detail window can be cleared by clicking "Clear" in Detail window. You can click the Clear button regardless of whether monitoring is being performed or has stopped.

8.4.7 Disabled Operations during Monitoring

The operations listed below are disabled during monitoring. To use any of these operations, you must first stop monitoring all.

- Terminating RMW
- Loading an RMT file (Open RMT File)
- Loading a Map file (Load Variable Data)
- Switching tools

If the above operations are not possible, check if an indicator light with the Detail screen closed or an unused indicator light is under monitoring.

8.4.8 Saving to RMT File

Status Indicator setting information is saved in an RMT file. However, the monitoring result list cannot be saved.

9. [Analyzer] One Shot Window

9.1 Overview

One Shot is a function to collectively acquire data of consecutive addresses from specified variables and display them in a waveform. One Shot is activated by clicking the “One Shot” button on Analyzer’s Control Window.

9.2 Features

- The buffered data can be displayed as a waveform

9.3 Window Structure

The structure of One Shot window is shown below.

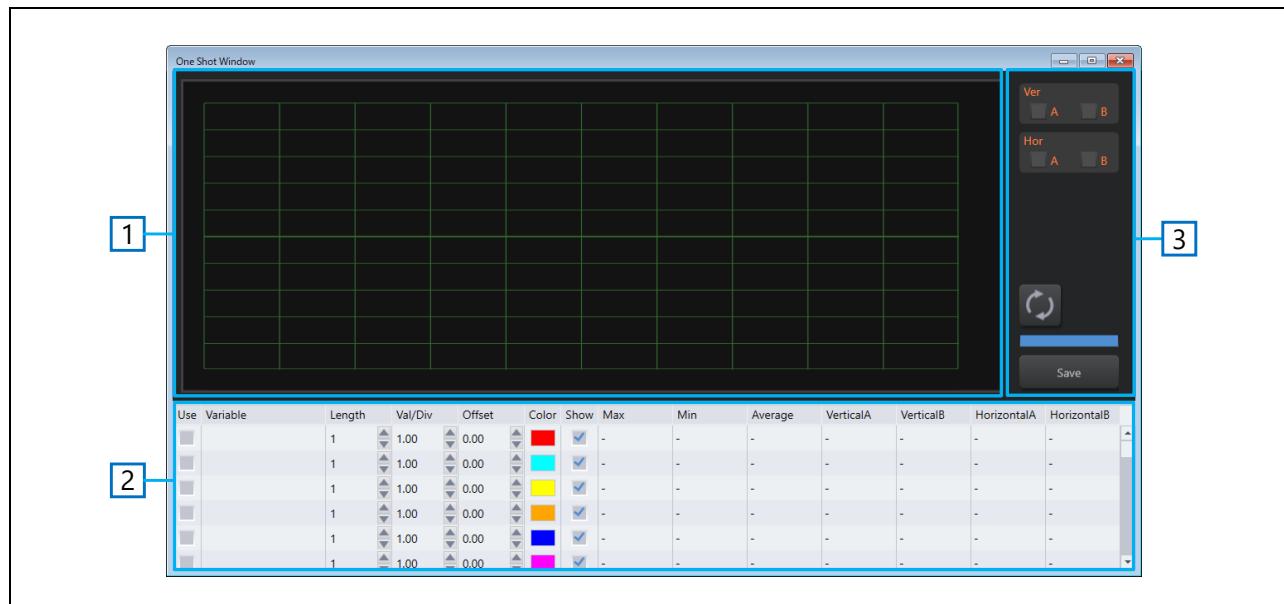


Figure 9-1 One Shot window

Table 9-1 Functions of One Shot window

| No. | Name | Explanation |
|-----|---------------------------|--|
| 1 | Waveform display area | Displays the acquired data as a waveform. |
| 2 | Channel information area | Sets and displays the channel information |
| 3 | Acquisition settings area | Sets the cursor and start acquisition (reload), etc. |

9.3.1 Channel Information Area

The structure of the channel information is shown below.

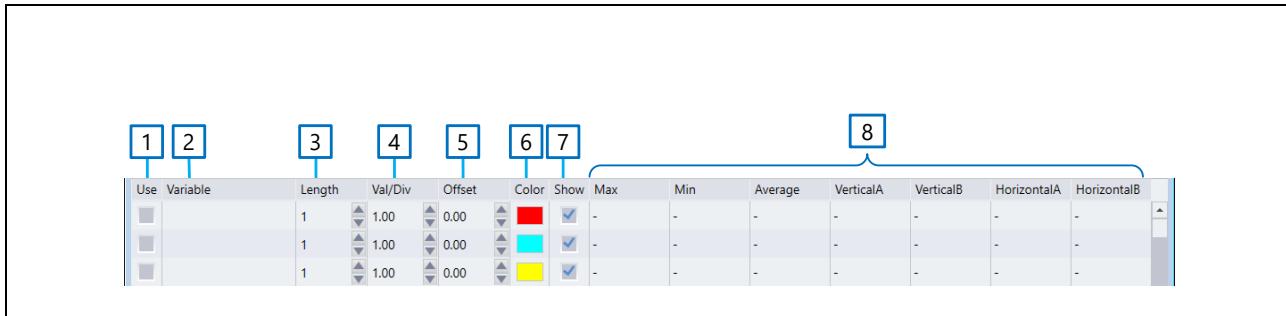


Figure 9-2 Channel information area

Table 9-2 Functions of channel information area

| No. | Name | Explanation |
|-----|------------------|--|
| 1 | Use | Select the Channel to acquire the waveform |
| 2 | Variable | Specify the variable to acquire the waveform. |
| 3 | Length | Specify the number of data to acquire the waveform. |
| 4 | Val/Div | Specify 1 div of the vertical axis the waveform display. |
| 5 | Offset | Specify the vertical axis offset value for the waveform display. |
| 6 | Color | Select the color of the waveform to be displayed. |
| 7 | Show | If checked, the waveform of that channel will be displayed. |
| 8 | Information area | Displays waveform information. |

9.3.2 Acquisition Setting Area

The structure of the acquisition settings area is shown below.

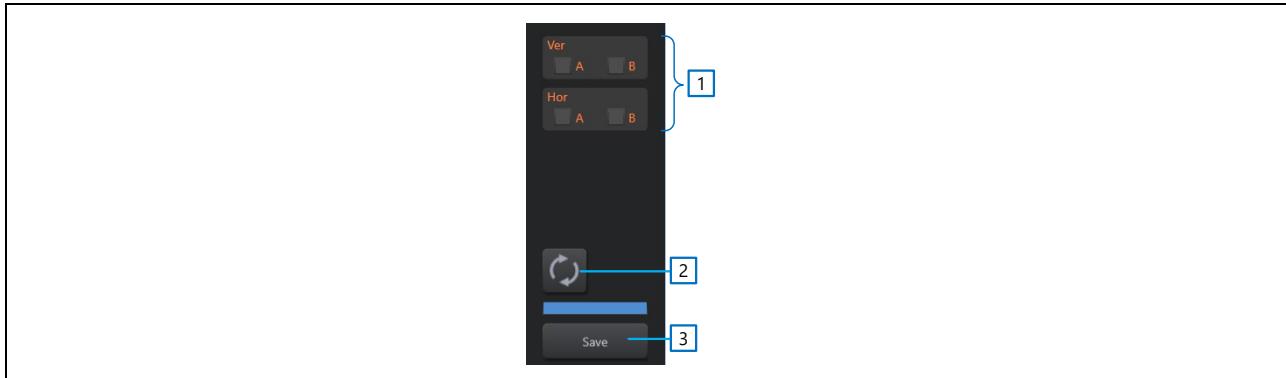


Figure 9-3 Acquisition settings area

Table 9-3 Functions of acquisition settings area

| No. | Name | Explanation |
|-----|---------------------|--|
| 1 | Cursor settings | Sets Show/Hide of the vertical cursor (Ver) and the horizontal cursor (Hor). |
| 2 | Graph Reload button | New data is acquired each time you click. |
| 3 | Save button | Saves the acquired data. |

9.4 Explanation of Operation

9.4.1 Displaying One Shot Window

One Shot Window is activated by clicking the “One Shot” button on Control Window.

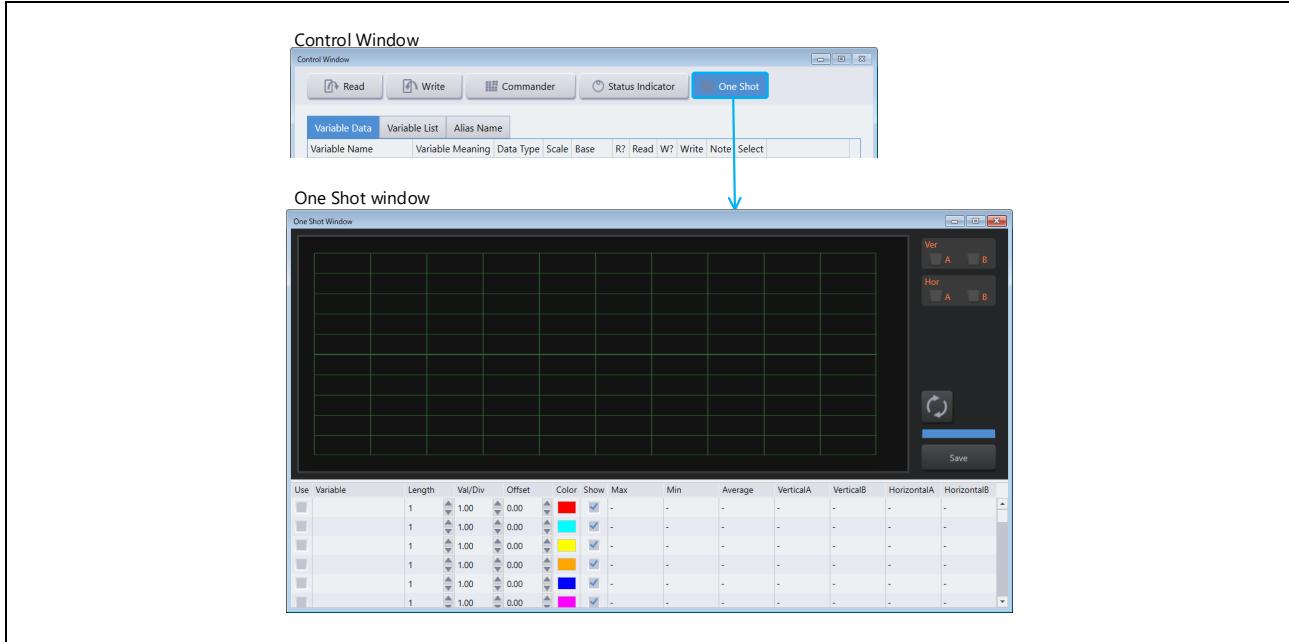


Figure 9-4 Launching One Shot window

9.4.2 Settings of Channel Settings area

The following shows the settings of the channel information area on One Shot window.

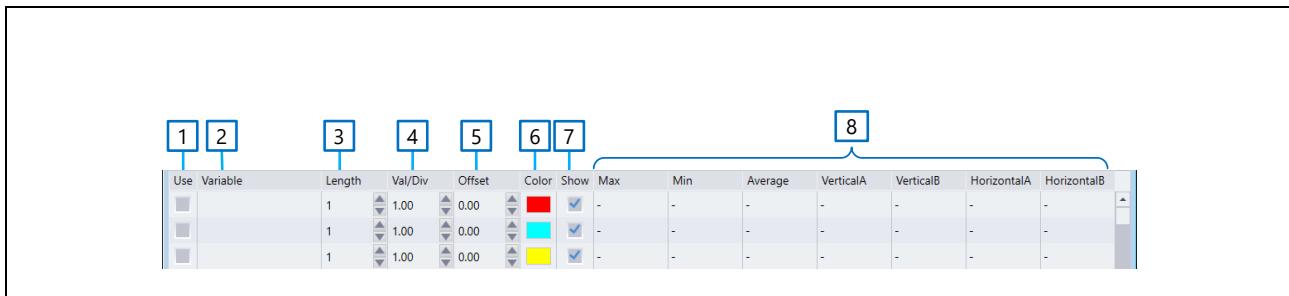


Figure 9-5 Channel information area

(1) Use

When this checkbox is ON, information about that channel is acquired.

(2) Variable

Specify the variable name of the start address of the data to be acquired.

(3) Length

Specify the number of data to be acquired.

(4) Val/Div

Enter the 1 dive value of the vertical axis for displaying the data as a waveform. You can also change it with **▼▲** on the right side of the input box.

(5) Offset

Enter the value of the vertical axis offset for displaying the data as a waveform. You can also change it with **▼▲** on the right side of the input box.

(6) Color

Select the color of the waveform display.

(7) Show

When this checkbox is ON, the waveform is displayed.

(8) Information area

Displays information of the acquired data (maximum, minimum, average, and values at each cursor position).

9.4.3 Data Acquisition

To acquire the data, click the "Graph Reload" button on the acquisition settings area. (The data is updated each time you click.)

9.4.4 Cursor Settings

Turn ON the checkbox in Cursor at the top-right of Scope Window to show two Hor (horizontal) and Ver (vertical) cursors. You can adjust the position of each cursor by dragging it with a mouse in the waveform display area.

The value of the waveform data at the cursor position is displayed in the channel information area.

9.4.5 Saving Acquired Data

The acquired data can be saved by clicking the "Save" button in the acquisition settings area.

10. [Analyzer] Parameter Output

10.1 Overview

Parameter Output is a function to output parameters adjusted by Analyzer as a header file of the motor control program. You can launch Parameter Output by pressing the “Output Header” button on Analyzer’s Control Window or selecting the menu item “Output Header File” on User Button Control Window.

10.2 Features

- Outputs the variables adjusted with Control Window or User Button to a header file as macro definitions.
- On the select window, you can select a variable tied to the macro definition to be output to a header file.
- When entering a new macro name on the select window, you can output the variable, adding it to the tail of the header file.

10.3 Window Structure

The structure of Parameter Output window is shown below.

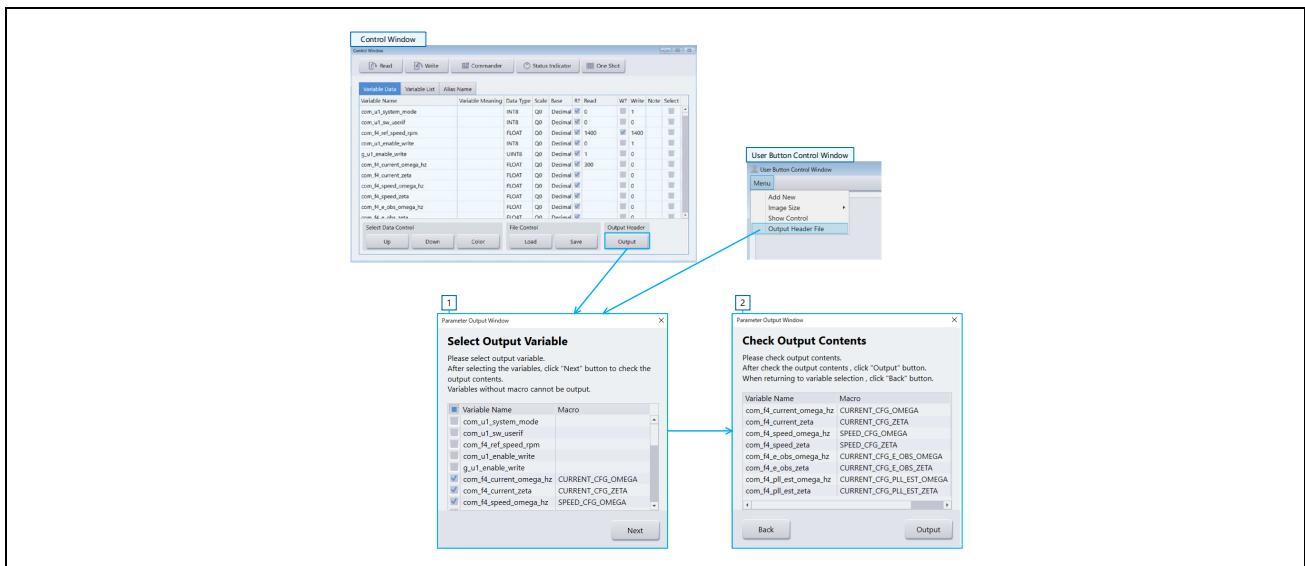


Figure 10-1 Parameter Output window structure

Table 10-1 Functions of Parameter Output window

| No. | Name | Explanation |
|-----|-------------------------------|---|
| 1 | Select output variable window | Select variables to be output and enter the macro name. |
| 2 | Check output contents window | Check the output contents and output a header file. |

10.3.1 Select Output Variable Window

Select Output Variable window is launched from the “Output Header” button on Control Window or the menu item “Output Header File” of User Button Control Window. You can select variables and macro definitions to be output to a header file on this window.

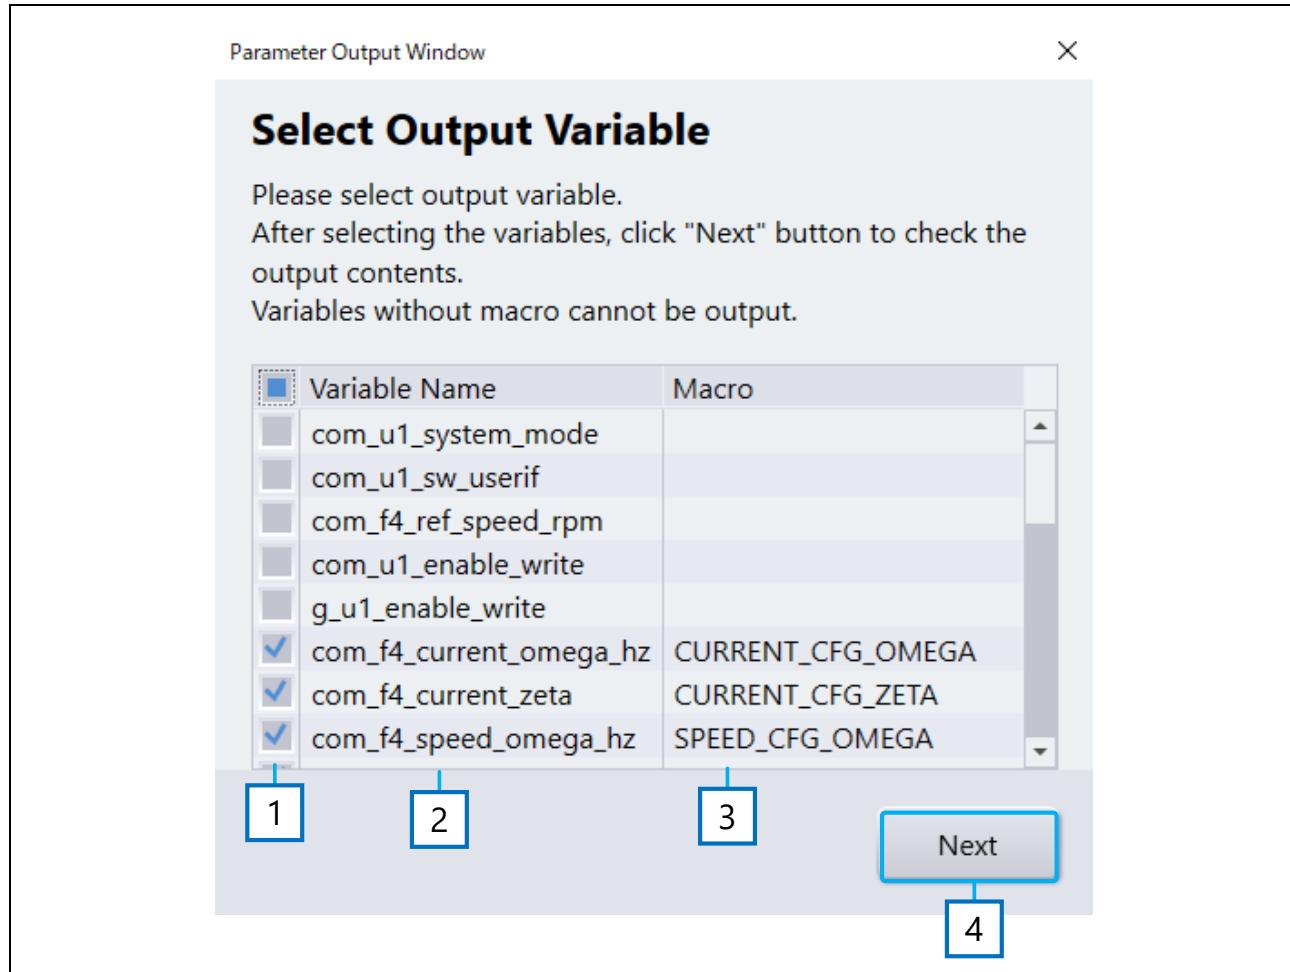


Figure 10-2 Select Output Variable window

Table 10-2 Functions of Select Output Variable window

| No. | Name | Explanation |
|-----|---------------------------------|---|
| 1 | Select output variable checkbox | Select variables to be output as macro definitions. |
| 2 | Variable Name | Displays variables that are subject to be read on Control Window and User Button. |
| 3 | Macro | Outputs the macro name. If it is blank, enter a macro name to be output. |
| 4 | Next button | Moves to Check Output Contents window. |

10.3.2 Check Output Contents Window

Check Output Contents window is displayed by pressing the “Next” button on Select Output Variable window. You can check variables, macro definitions, and values to output to a header file here.

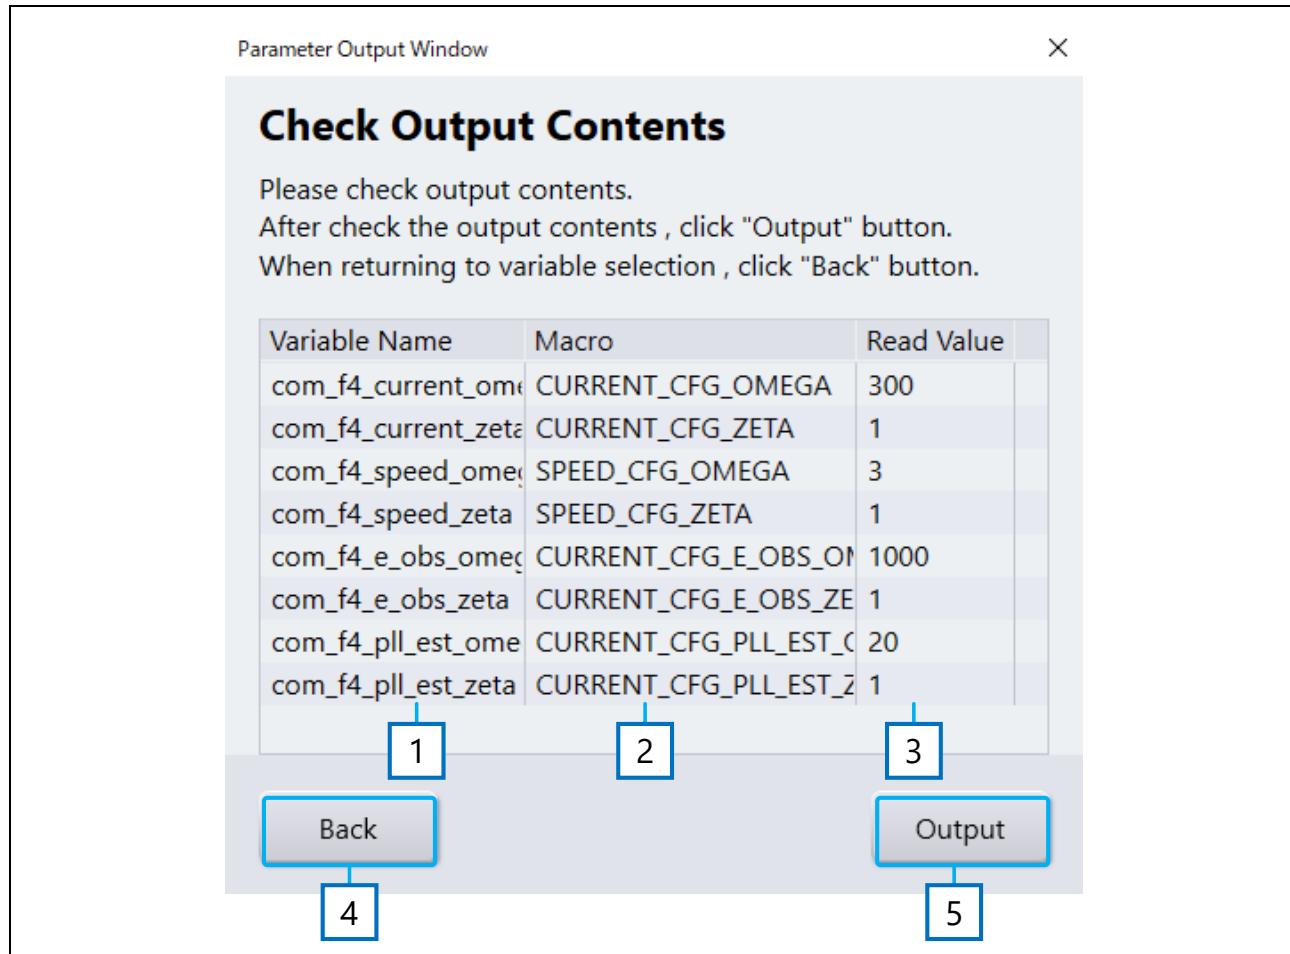


Figure 10-3 Check Output Contents window

Table 10-3 Functions of Check Output Contents window

| No. | Name | Explanation |
|-----|---------------|--|
| 1 | Variable Name | Displays variables to be output as macro definitions. |
| 2 | Macro | Displays macro names to be output. |
| 3 | Read Value | Displays setting values to be output as macro definitions. * Displays values that have been written in the motor control program. |
| 4 | Back button | Returns to Select Output Variable window. |
| 5 | Output button | Select the destination to output a header file. |

10.4 Explanation of Operation

10.4.1 Displaying Parameter Output Window

To open Select Output Variable window, press the “Output” button on Control Window or select “Output Header File” from the menu on User Button Control Window.

For the variable included in the header template file information, the corresponding macro name is displayed in the Macro column with the checkbox selected as the output target.

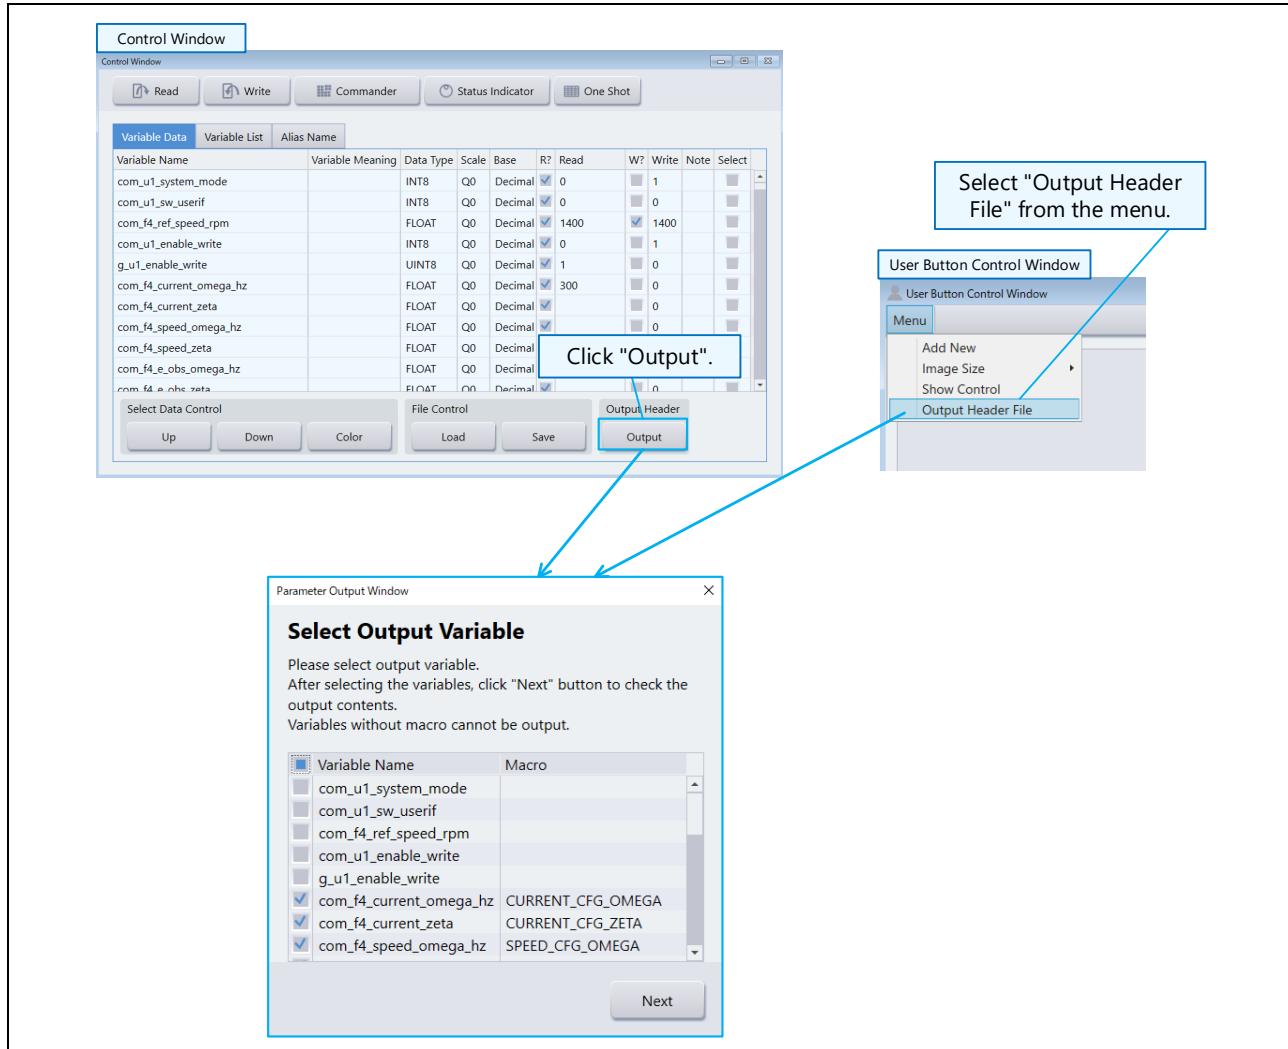


Figure 10-4 Displaying Parameter Output Window

10.4.2 Selecting Output Variable

By checking the checkboxes on Select Output Variable window, you can select the variables and the macro names to be output to a header file.

In addition, you can select or clear all the variables at once by switching the checkbox on the header line.

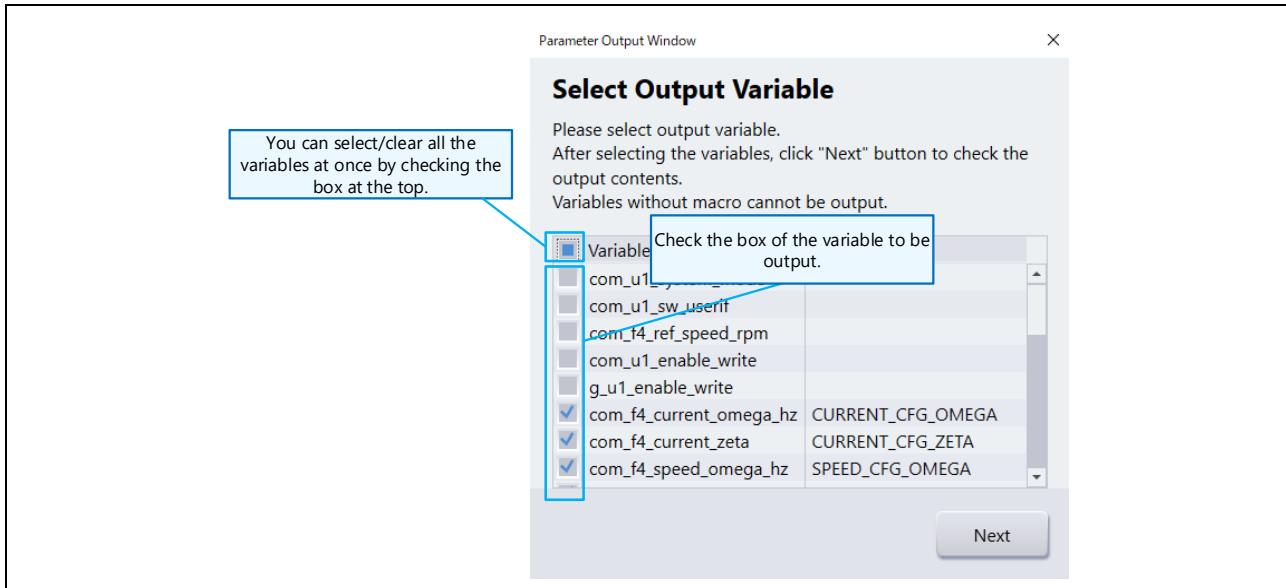


Figure 10-5 Selecting output variables

10.4.3 Entering Macro Name

In the Macro column on Select Output Variable window, you can edit a macro name to be output to a header file. However, you cannot edit the cell including the macro name for the header template file information. For the header template file, refer to "10.4.6 Setting Header Template File".

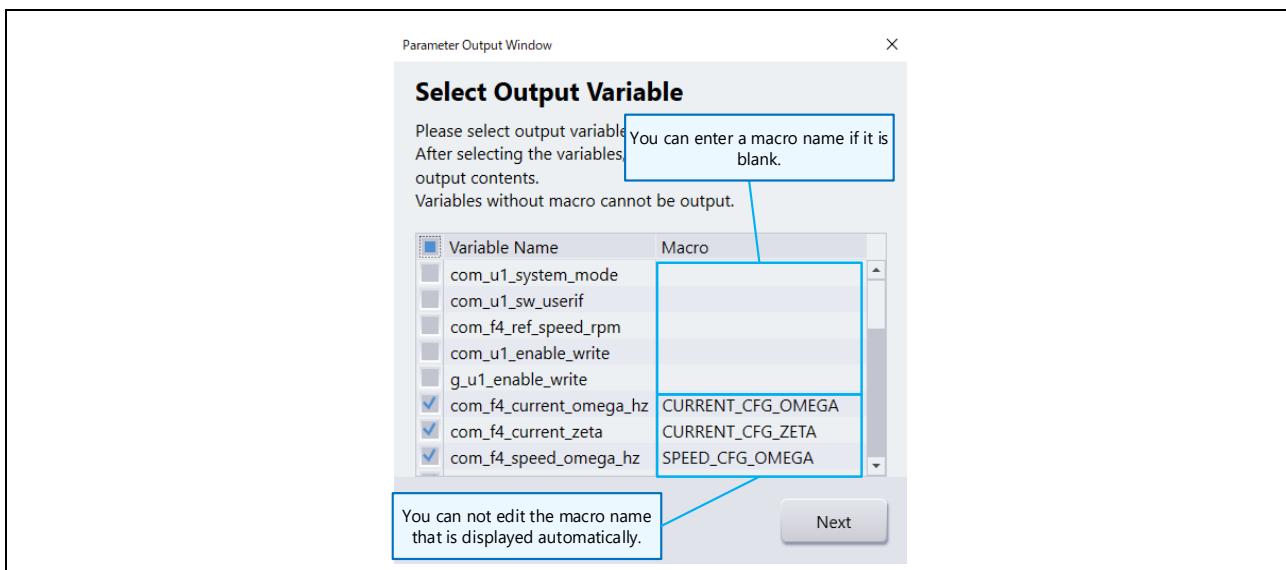


Figure 10-6 Entering macro name

10.4.4 Checking Output Contents

Press the “Next” button on Select Output Variable window to move to Check Output Contents window. This window shows variables, macro names, and values set in the motor control program that are to be output.

Note that if the variable without a macro name is selected for output, it is impossible to move to Check Output Contents window.

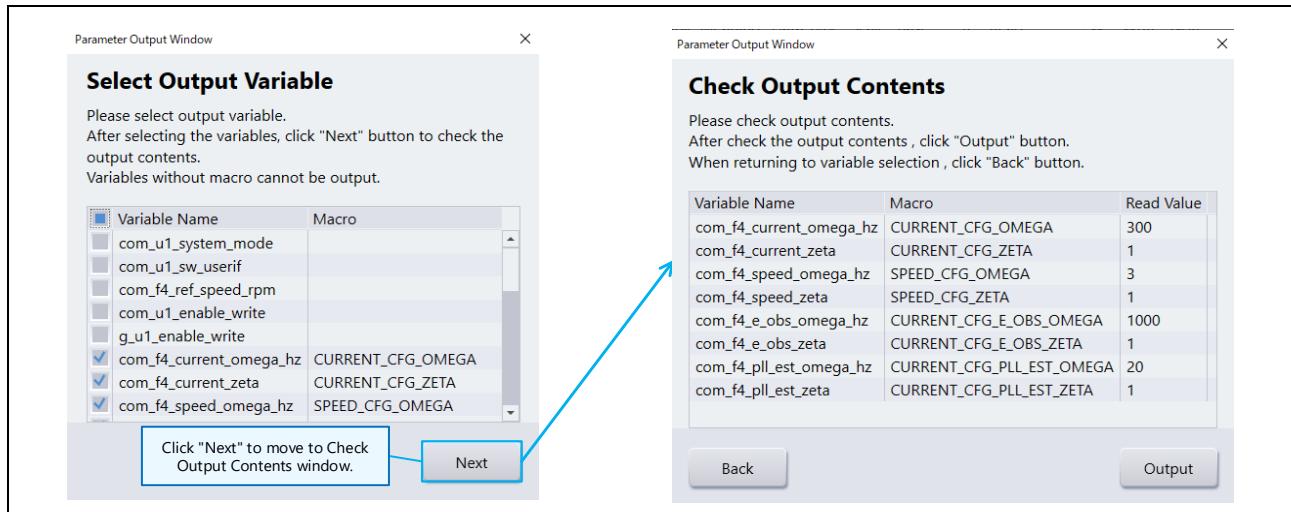


Figure 10-7 Checking output contents

10.4.5 Header File Output

Press the “Output” button on Check Output Contents window and select the output destination, and a header file will be output. The contents of header file are generated based on the information of the header template file and the contents of the Check Output Contents window.

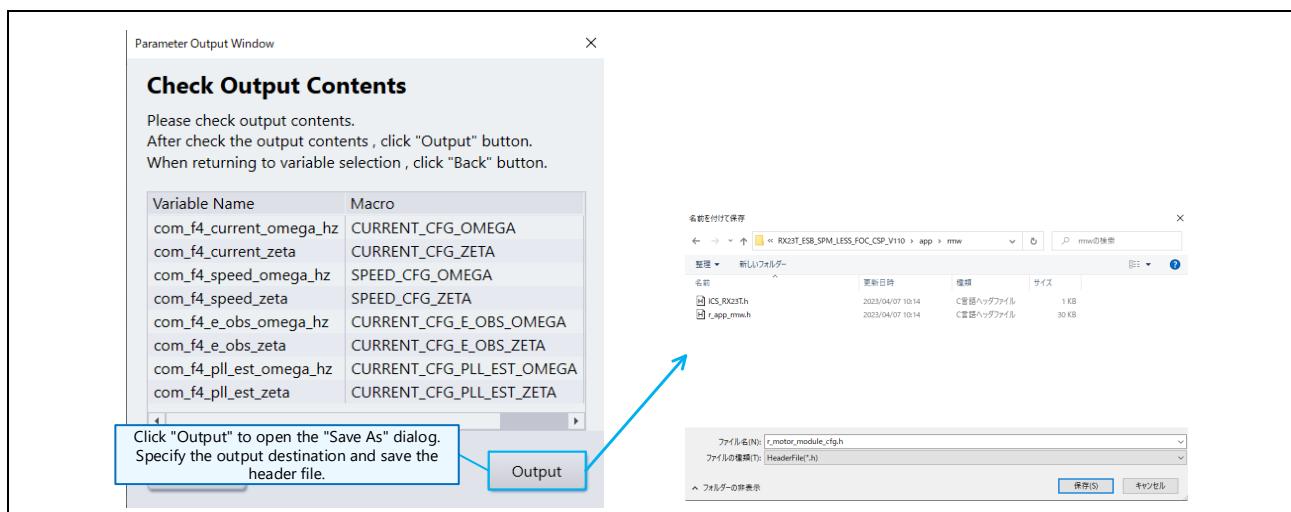


Figure 10-8 Header file output

10.4.6 Setting Header Template File

Create a template in XML format for a header file to be output.

The created file is applied to by saving it to the same folder as the rmt file.

Name the file as below.

XML file name: OutputHeaderFileInfoForAnalyzer.xml

The XML file consists of the “header part”, “data part” and “footer part”, which are described within the root element “OutputHeaderFileInfoForAnalyzerSetting”.

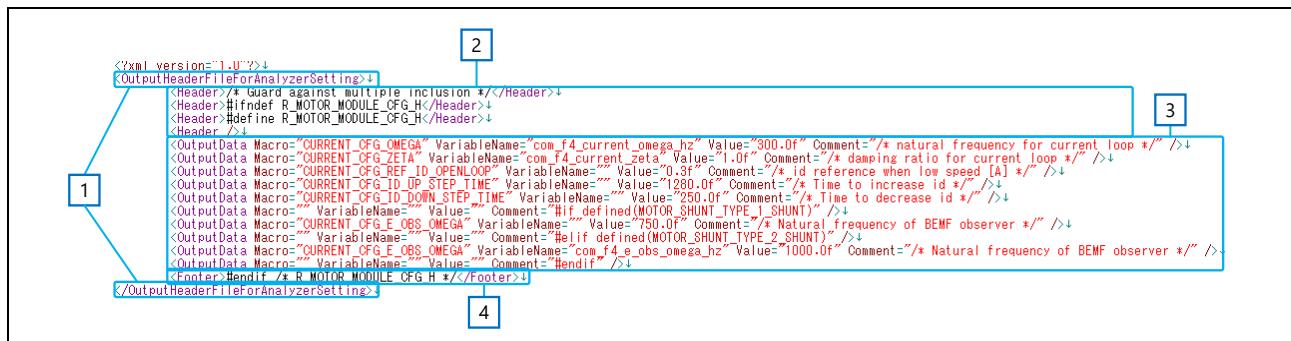


Figure 10-9 Elements of header template file

Table 10-4 Elements of header template file

| No. | Name | Element name | Explanation |
|-----|--------------|--|--|
| 1 | Root element | OutputHeaderFileInfoForAnalyzerSetting | Root element of header template file |
| 2 | Header part | Header | Defines the header of the output file. |
| 3 | Data part | OutputData | Defines the data of the output file. |
| 4 | Footer part | Footer | Defines the footer of the output file. |

10.4.6.1 Root element

Describe the information of the header template within the OutputHeaderFileInfoForAnalyzerSetting tab.

10.4.6.2 Header part

Outputs the text described with the Header tabs to a file.

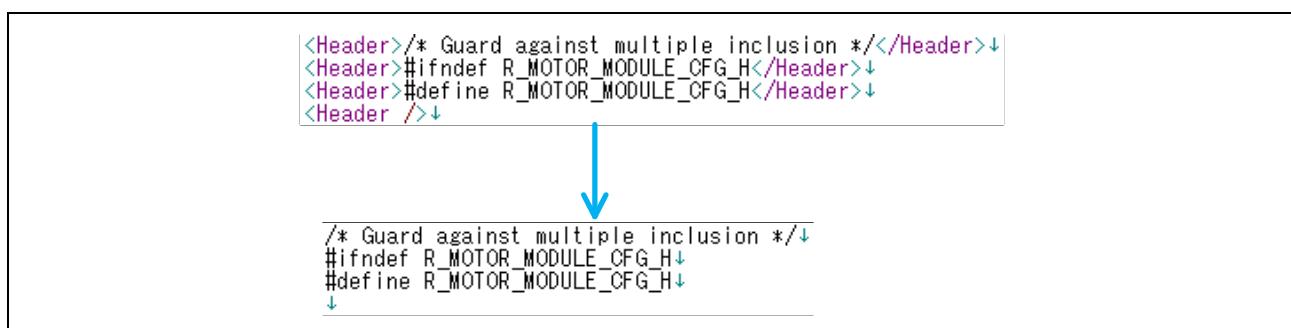


Figure 10-10 Header part

10.4.6.3 Data part

The OutputData tab consists of the following attributes.

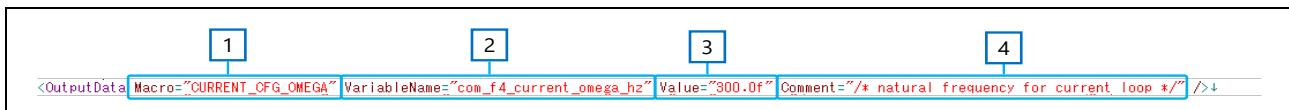


Figure 10-11 Attributes of OutputData tab

Table 10-5 Attributes of OutputData

| No. | Attribute | Explanation |
|-----|--------------|--|
| 1 | Macro | Defines a macro name. |
| 2 | VariableName | Defines a variable name for the macro name. |
| 3 | Value | Defines the initial value of the macro definition. |
| 4 | Comment | Defines a comment for the macro. |

Parameter Output combines the contents of each attribute with the OutputData tab and outputs them to a file. There are three output patterns according to the description of each attribute and the selection on Parameter Output Window.

- ① When a VariableName attribute is described, and when the described VariableName is selected for output, this function replaces the value in Read Value with the value described in the Value attribute and outputs it.

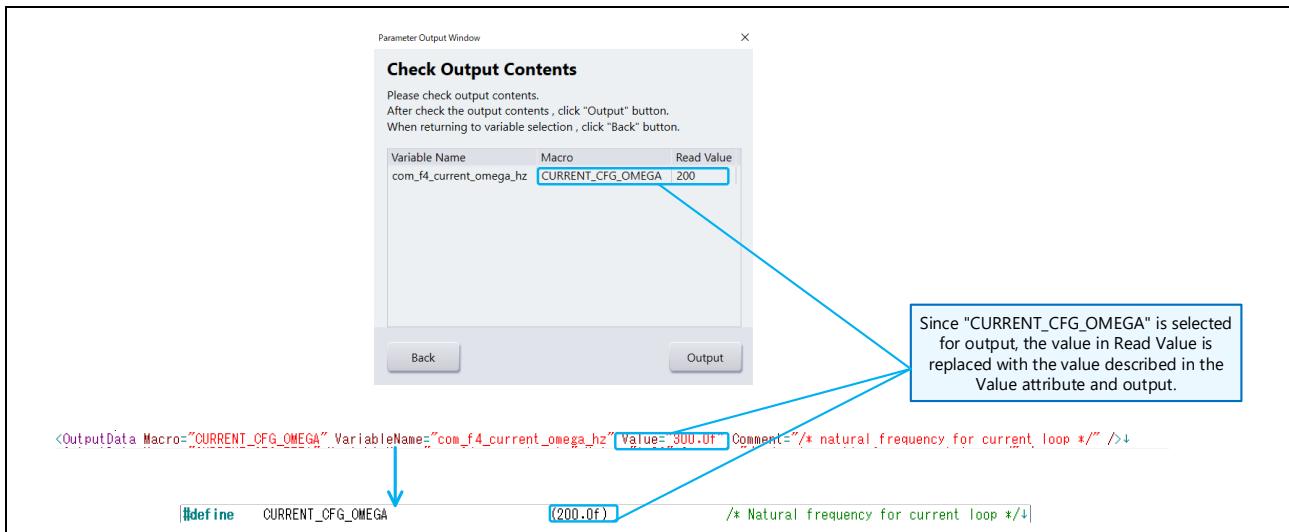


Figure 10-12 Example of data part output

- ② When a VariableName attribute is not described, or when a described VariableName is not selected for output, this function outputs the description of the Value attribute as it is. When a VariableName attribute is not described, this function combines the macro name described in the Macro attribute with the value described in the Value attribute, and outputs the macro definition.

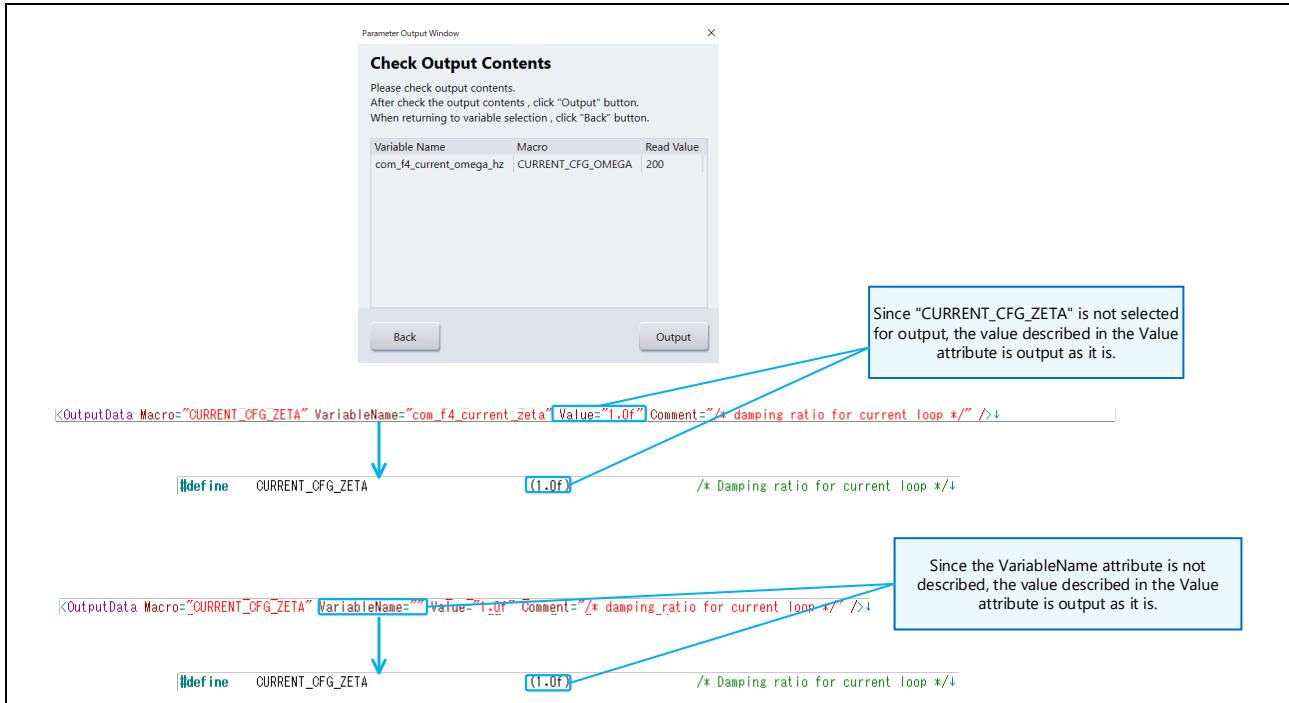


Figure 10-13 Example of data part output

When a Macro attribute is not described, this function outputs only the description of the Comment attribute. This is used to output descriptions other than macro definitions such as compile options and comments.

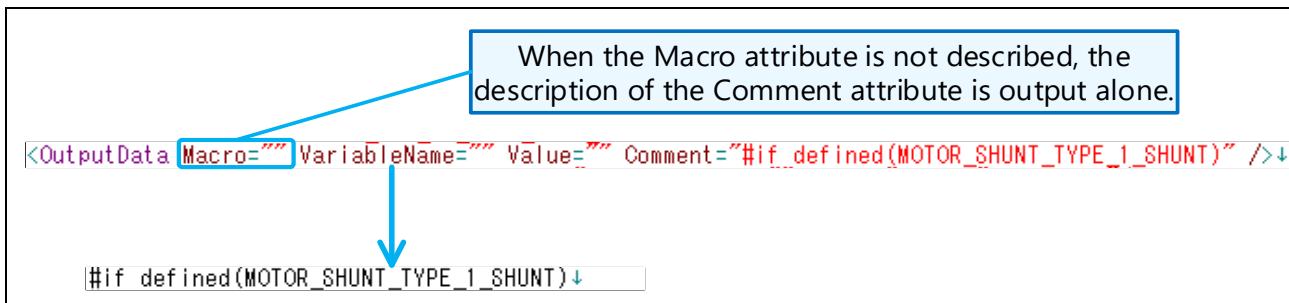


Figure 10-14 Example of data part output

10.4.6.4 Footer part

Outputs the text described with the Footer tab to a file.

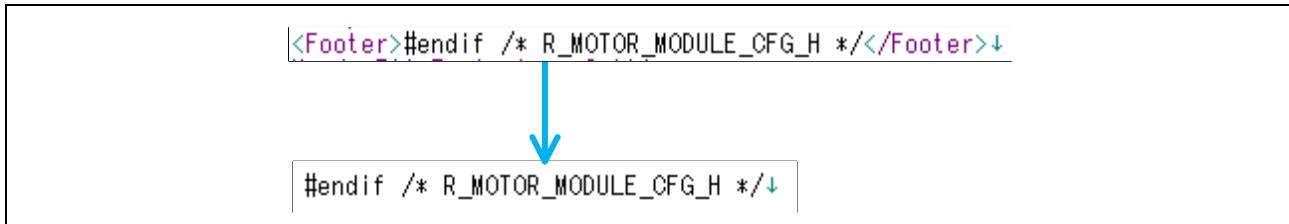


Figure 10-15 Footer part

11. Navigation

11.1 Overview

Navigation is a function that explains how to operate each function of Renesas Motor Workbench. In the default settings, Navigation is displayed when Analyzer or Tuner is launched.

Since the window structure is same for each tool, this chapter explains Analyzer's Navigation as an example.

11.2 Features

- Explains the operation procedure with text and images.

11.3 Window Structure

11.3.1 Navigation Window

The structure of Navigation Window is shown below.

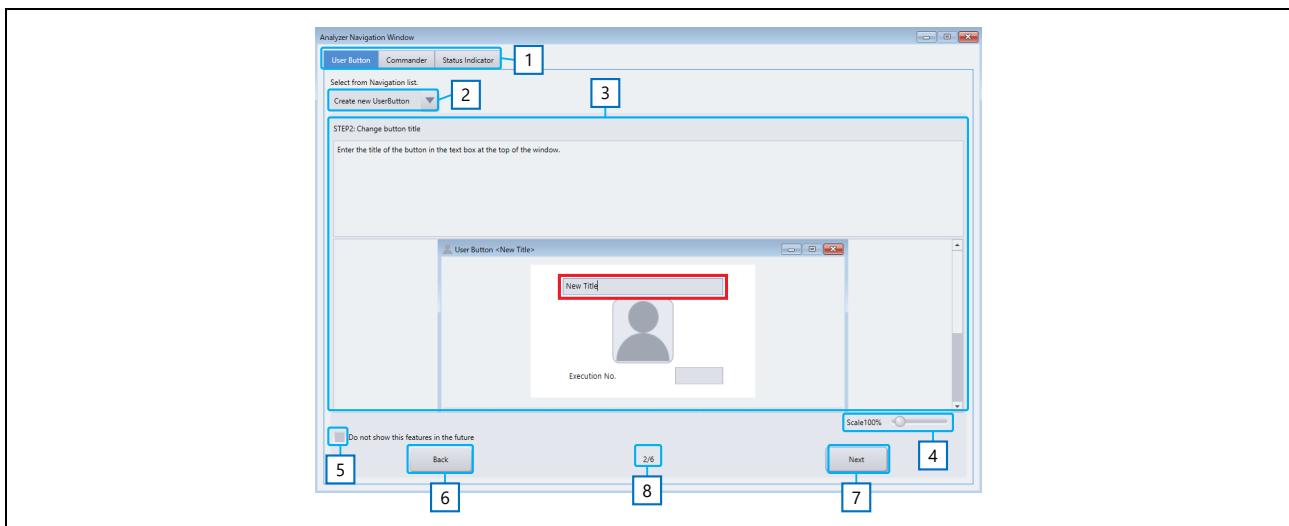


Figure 11-1 Navigation Window

Table 11-1 Functions of Navigation Window

| No. | Name | Explanation |
|-----|--------------------------------|---|
| 1 | Function select tab | Select the function for which you want to display Navigation. |
| 2 | Operation procedure select box | Select the operation procedure you want to check. |
| 3 | Operation procedure display | Displays the selected operation procedure. |
| 4 | Image scaling slider | Changes scaling of the displayed image. |
| 5 | Disable auto-start checkbox | Enables/disables auto-start of Navigation Window. |
| 6 | Back button | Returns to the previous page. |
| 7 | Page number display | Displays the numbers of the current page and the last page. |
| 8 | Next button | Moves to the next page. |

11.4 Explanation of Operation

11.4.1 Switching Displayed Function

When selecting the upper-left tab on Navigation Window, you can switch the function for which Navigation is displayed.

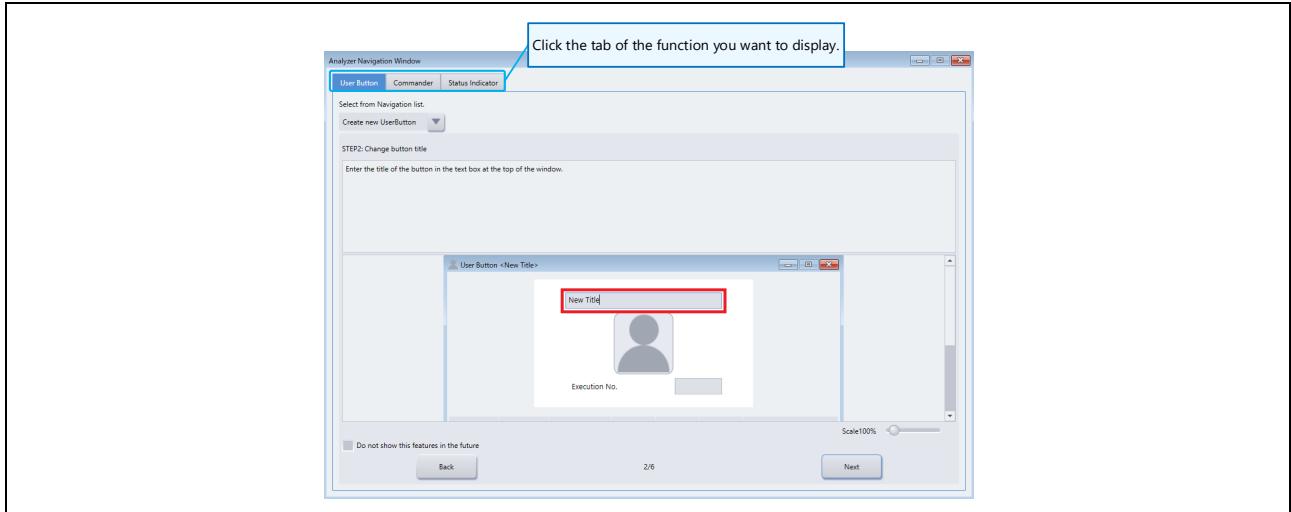


Figure 11-2 Switching displayed function

11.4.2 Selecting Operation Procedure

The operation procedure is displayed in the window by selecting it in the operation procedure select box on Navigation window,

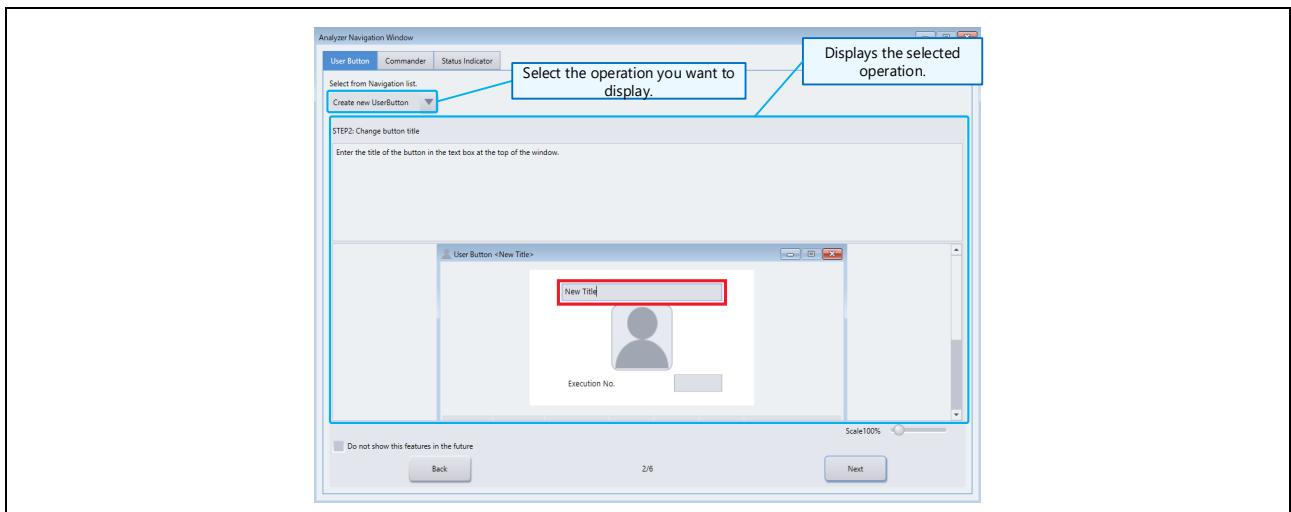


Figure 11-3 Selecting operation procedure

11.4.3 Changing Image Scaling

You can change the scaling of the displayed image by using the slider or Ctrl key + mouse wheel.

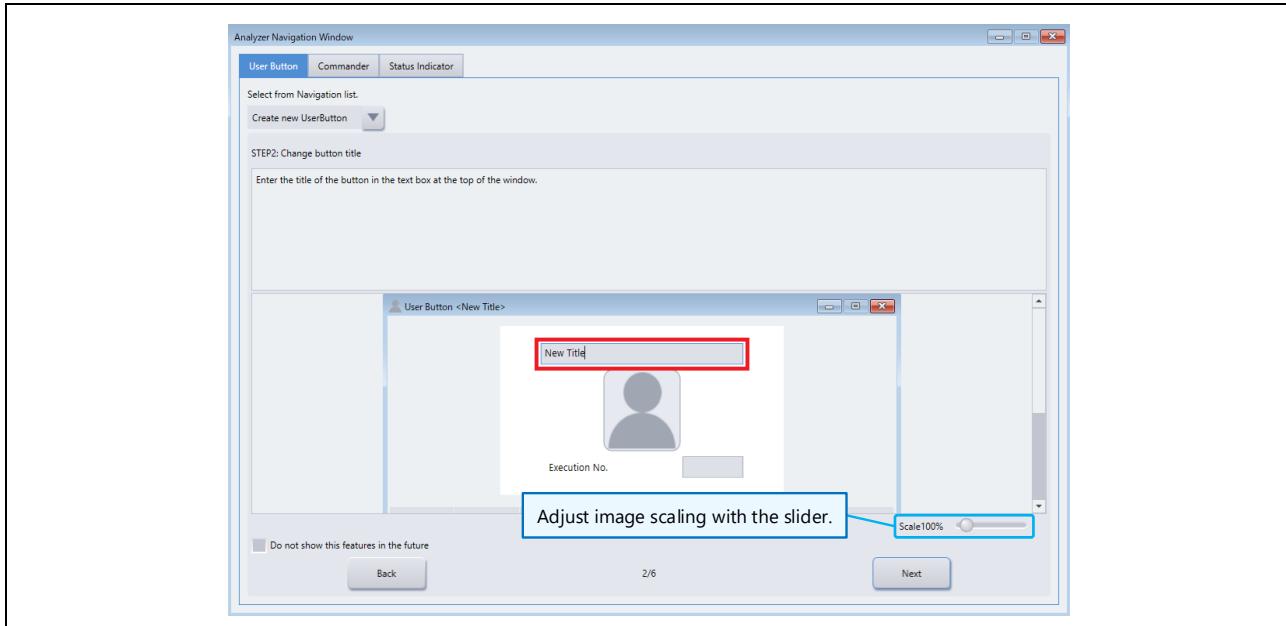


Figure 11-4 Changing image scaling

11.4.4 Disabling Navigation Auto-Start

By checking the Disable auto-start checkbox, you can disable auto-start of Navigation when Analyzer or Tuner is launched.

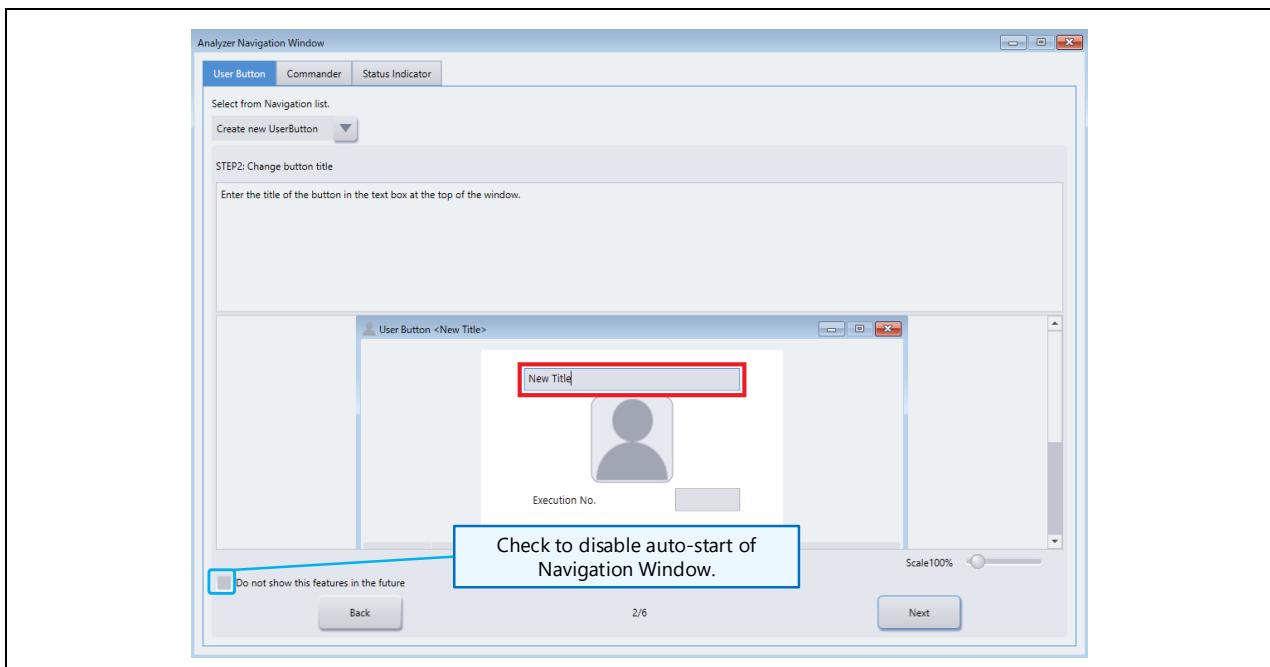


Figure 11-5 Disabling Navigation auto-start

If you have disabled Navigation auto-start, you can display Navigation by selecting Analyzer Navigation or Tuner Navigation from Help menu.

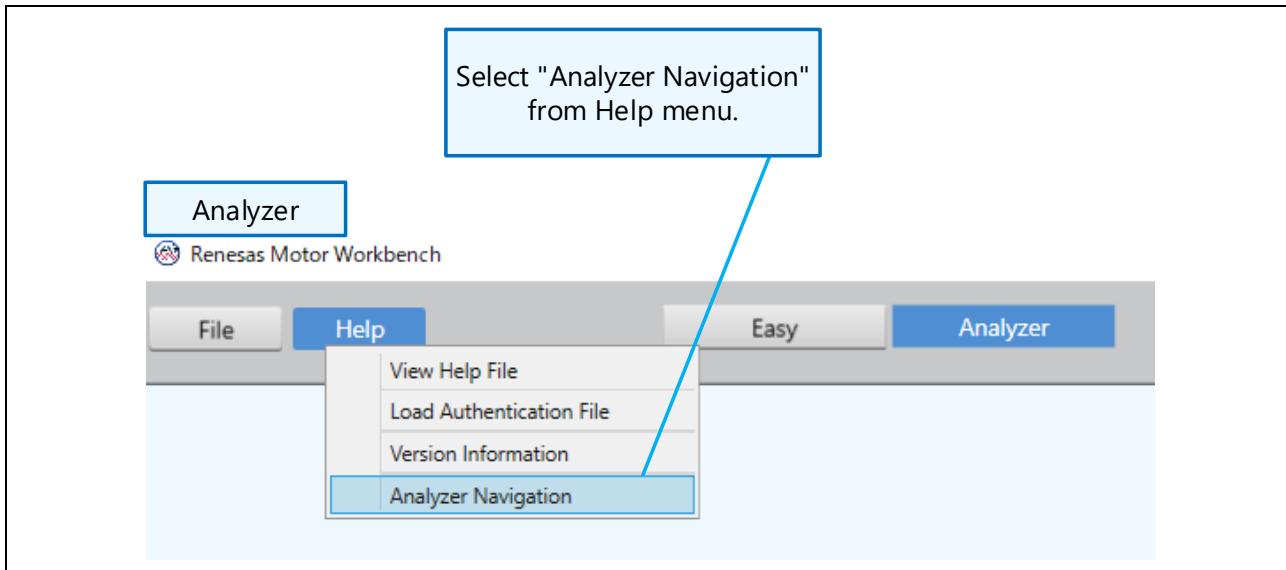


Figure 11-6 Launching Analyzer Navigation

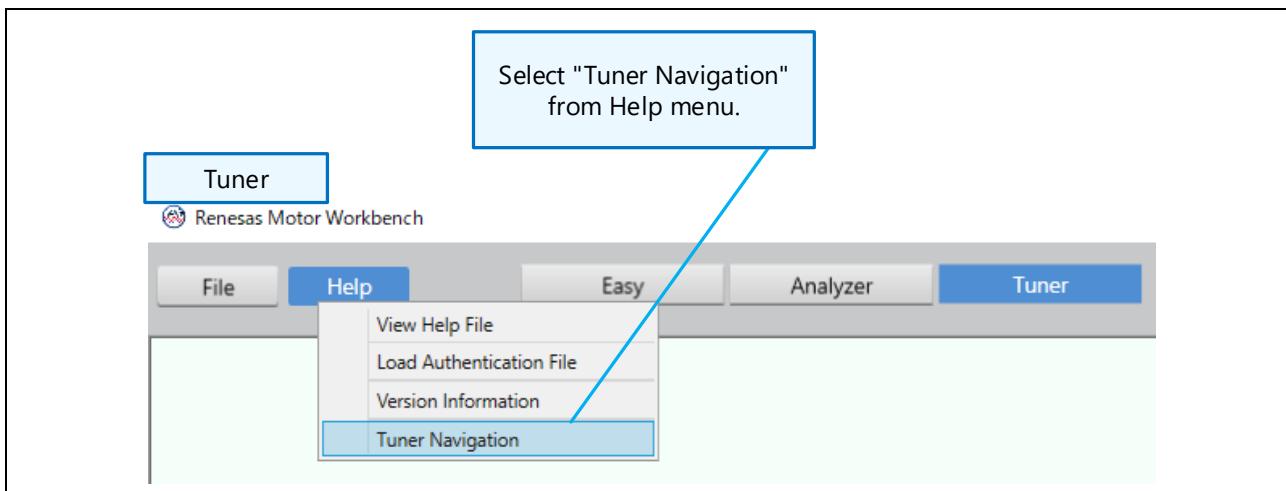


Figure 11-7 Launching Tuner Navigation

11.4.5 Moving to Next/Previous Page

Click the Back/Next button to move to the previous/next Navigation page.

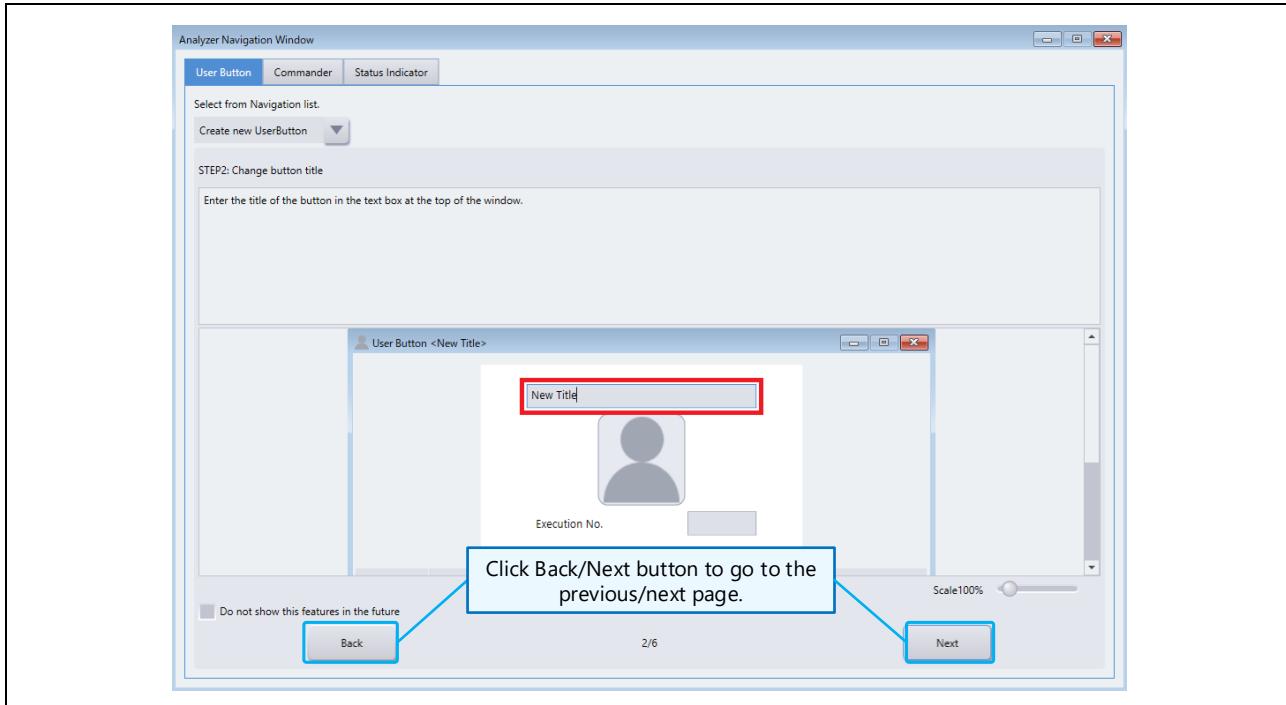


Figure 11-8 Moving to next/previous page

12. Easy GUI

12.1 Overview

Easy GUI is a dedicated GUI tool that allows you to operate and measure the motor driving easily. The GUI configuration is simpler than Analyzer, so you can easily operate a motor even if you are not familiar with it. In addition, the status of the motor can be visualized by GUI, so you can use this tool for demonstrations and other purposes.

12.2 Features

By using Easy GUI, you can easily set the speed and position of the motor through intuitive operations using sliders and sequences, and visually measure the status of the motor with meters and graphs. You can also repeatedly execute sequence operations that change the values of the variables. Variables displayed in GUI can be set optionally according to the user's program.



Figure 12-1 Features of Easy GUI

12.3 Explanation of Window

The functions of the Easy GUI window are shown in Figure 12-2 and Table 12-1.

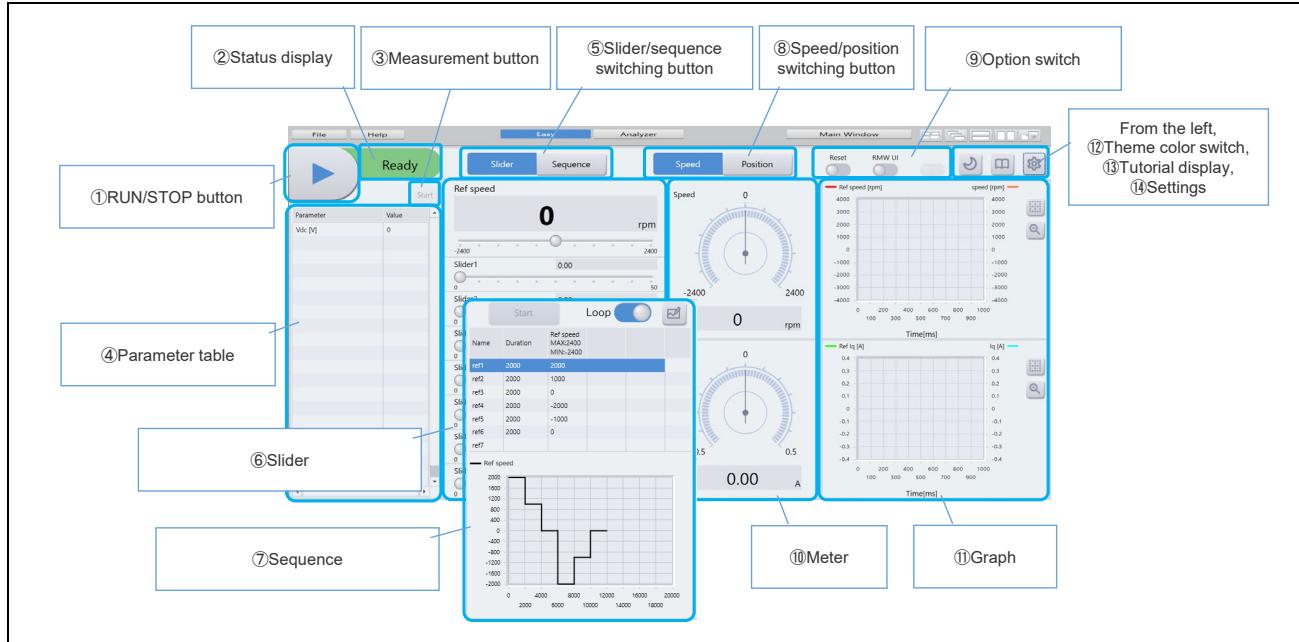


Figure 12-2 Functions of Easy GUI window

Table 12-1 Functions of Easy GUI window

| No. | Name | Explanation |
|-----|----------------------------------|--|
| 1 | Run/Stop button | Drives or stops the motor. |
| 2 | Status display | Displays the drive status. |
| 3 | Measure button | Starts measurement |
| 4 | Parameter table | Reads parameter values periodically. |
| 5 | Slider/sequence switching button | Switches between control parameter input and sequence input. |
| 6 | Slider | Specifies command values and control parameters. |
| 7 | Sequence | Specifies command value sequences. |
| 8 | Speed/position switching button | Switches between speed control mode and position control mode. |
| 9 | Option switch | ON/OFF of optional functions. |
| 10 | Meter | Displays the drive status in meter view |
| 11 | Graph | Displays the drive status in graph view. |
| 12 | Theme color switch | Switches the screen theme colors. |
| 13 | Tutorial display | Launches the tutorial screen. |
| 14 | Settings | Launches the settings screen. |

12.4 Preparation

12.4.1 Displaying Easy GUI Window

When Renesas Motor Workbench starts, Main Window is displayed. Press “Easy” in the center of Main Window to display the Easy GUI window. Press “Main Window” in the upper-right of the Easy GUI window to return to Main Window.



Figure 12-3 Displaying Easy GUI window

12.4.2 Setting Variables to display in GUI

Before using Easy GUI, you are required to associate the GUI display with variables in the program. For the method for setting variables for GUI display, see chapter 12.6.

12.5 Explanation of Operation

This section explains how to operate each function.

12.5.1 Basic Function

- ① Drive/stop motor: Switches driving or stopping the motor with the RUN/STOP button.
▶ is displayed when the motor is running. -> Click this button to stop the motor.
▶ is displayed when the motor is stopped. -> Click this button to drive the motor.
- ② Status display : Displays the drive status of the motor.



Figure 12-4 Basic functions

12.5.2 Slider Function.

The slider function allows you to change variable values dynamically by moving sliders while the motor is running. The slider function is operated as follows.

- ① Display the slider view : Press “Slider” (of slider/sequence switching button).
- ② Drive the motor : If the motor is stopped, press the RUN/STOP button to drive the motor.
- ③ Move the slider : Move the slider to change the variable value.
You can also enter the value directly without using the slider.
- ④ Stop the motor : To finish the operation, press the RUN/STOP button to stop the motor.

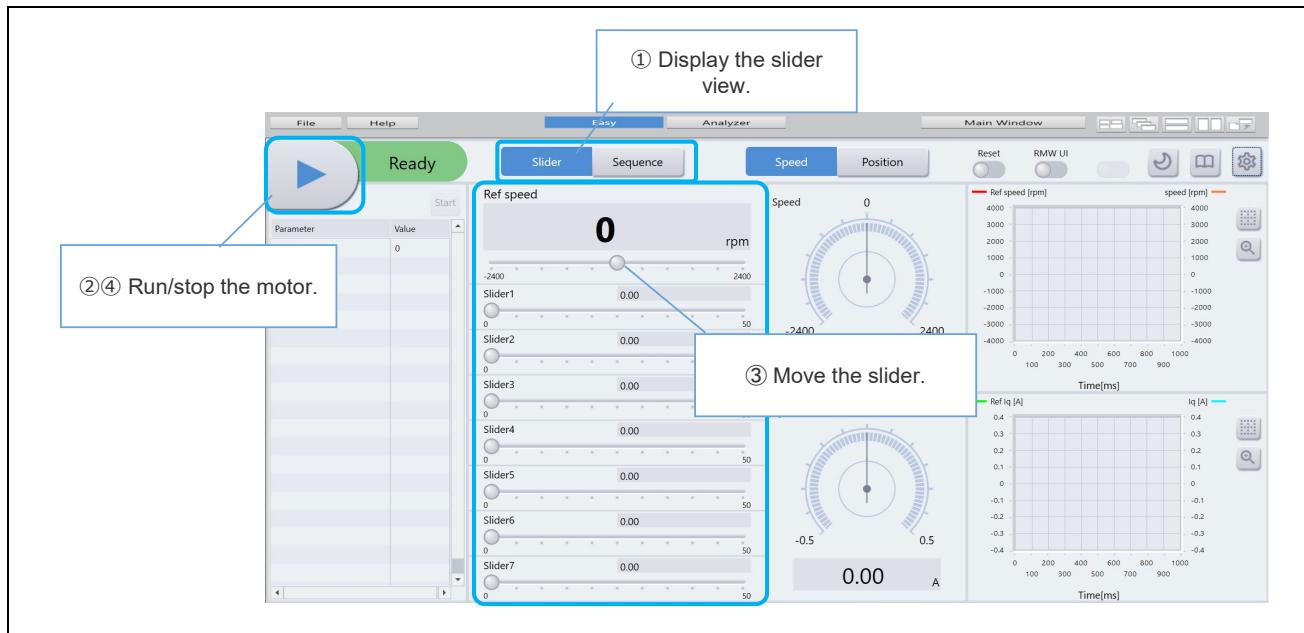


Figure 12-5 Slider function

12.5.3 Sequence Function

The sequence function allows you to change the variable value sequentially in the order preset in the sequence table while the motor is running.

12.5.3.1 Setting Sequence

The sequence is set by the following operations.

- ① Display sequence view :Press “Sequence” (of slider/sequence switching button).
- ② Create a sequence table :Set the variable value to be checked from ref1 in order of the sequence table. Specify the execution time (unit: msec) in the Duration field.
- ③ Check graph :The execution image of the sequence table is displayed in the graph. If you change the values in the sequence table, the graph is redrawn. The horizontal axis of the graph is the time, and the vertical axis is the value of each variable.

To create a sequence table, you can use the sequence graphical function as well as enter values directly in the sequence table. Refer to chapter 12.5.3.2 for the sequence graphical function.

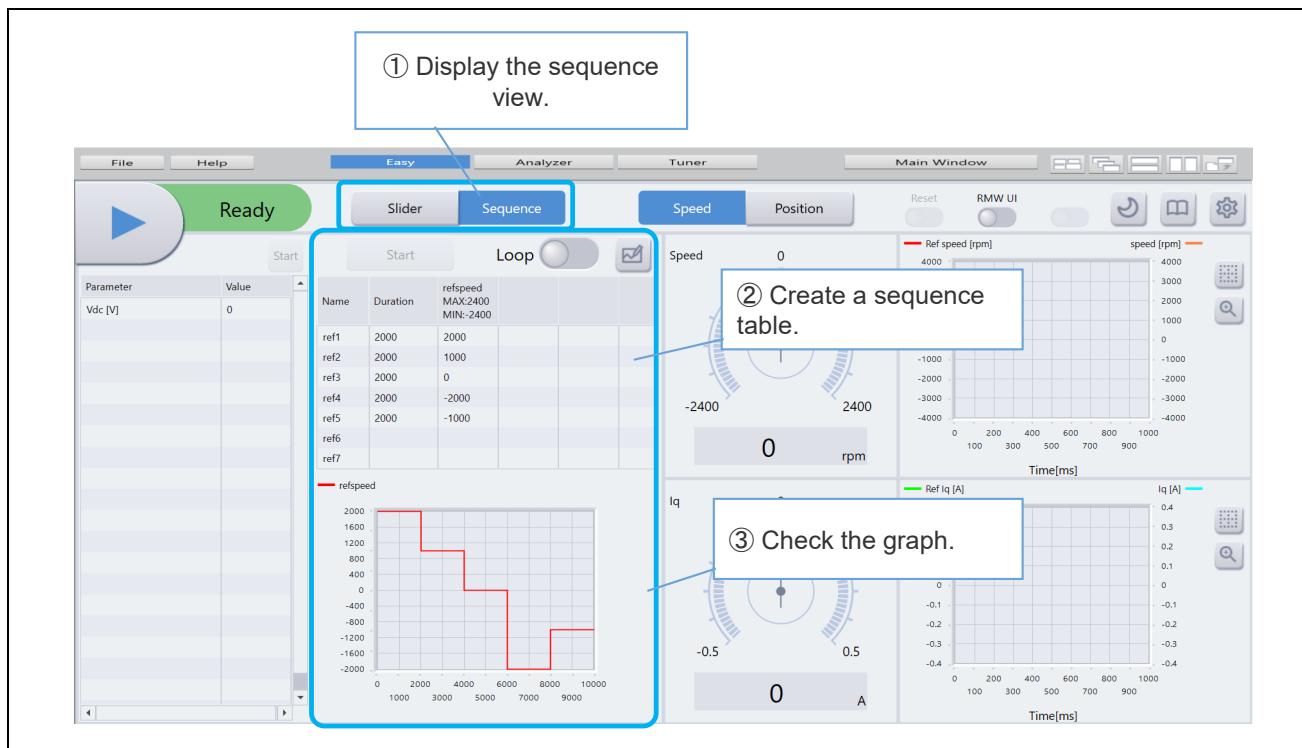


Figure 12-6 Sequence setting

12.5.3.2 Sequence Graphical Function

If you have created a sequence table by entering values directly into the sequence table, the settings in this section are not required.

The sequence graphical function allows you to set the sequence while checking the setting points in the graph of the template data.

The sequence graphical function is set as follows.

- ① Display the sequence view : Press “Sequence” (slider/sequence switching button).
- ② Display the graphical input window : Press the sequence graphical input button.
- ③ Set the sequence value : Set values in the boxes below while checking the setting points in the graph above. Since this graph is of template data, the set value is not reflected.
- ④ Reflect to the sequence table and RMT : Press “Set” to close the sequence graphical input window. The set value is reflected in the sequence table and the RMT file.

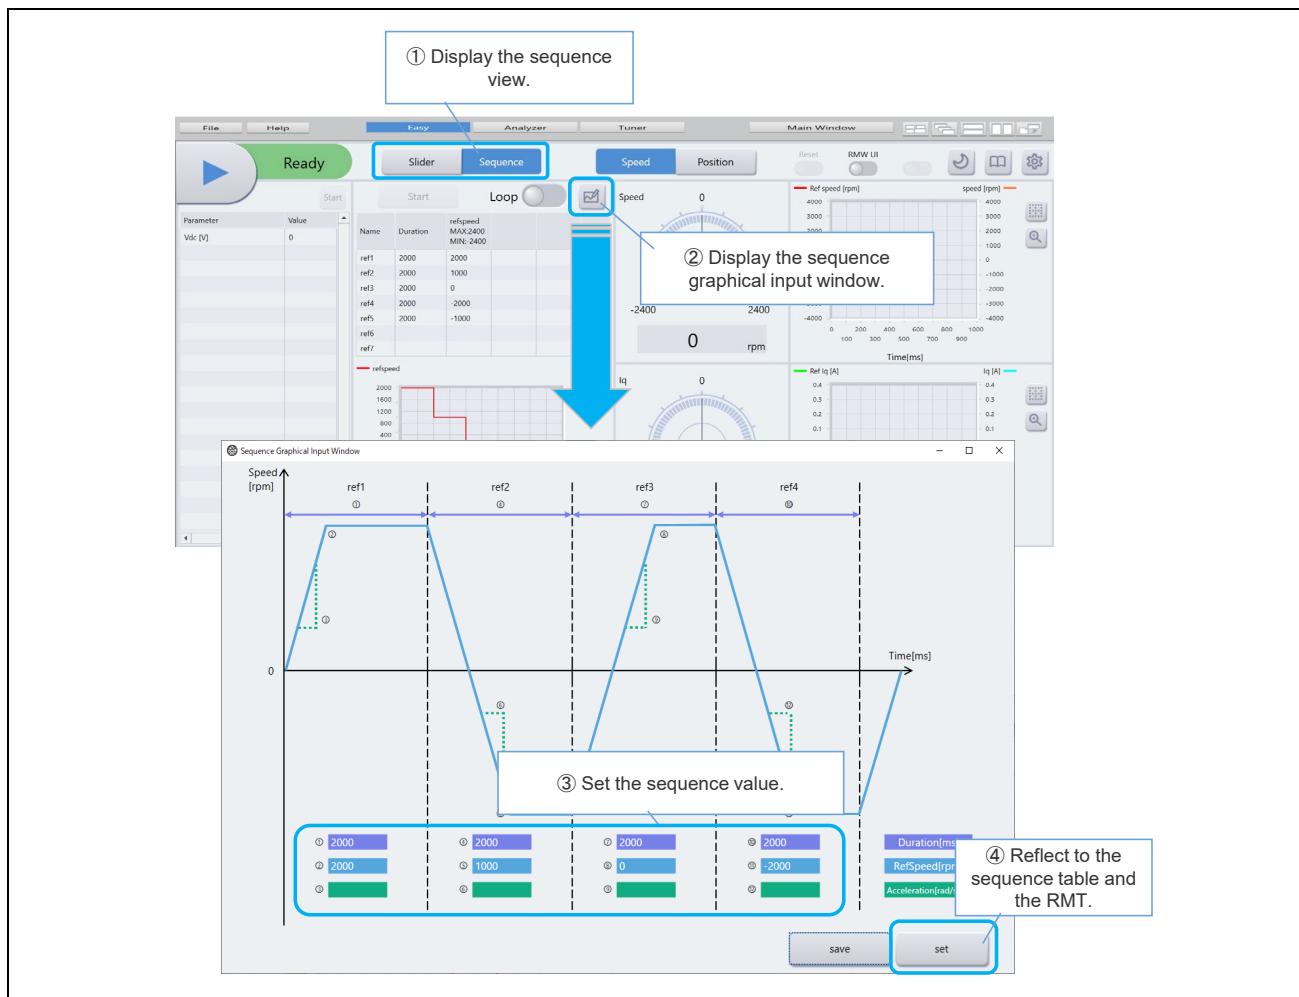


Figure 12-7 Sequence graphical function

12.5.3.3 Executing Sequence

Follow the procedure below to execute the sequence for changing the variable value in the order preset in the sequence table while driving a motor.

- ① Display sequence view : Press “Sequence” (slider/sequence switching button)
- ② Drive motor : If the motor is stopped, press the RUN/STOP button to drive the motor.
- ③ Enable looping : To repeat the sequence operation, enable the Loop button.
- ④ Start the sequence : Press the Start/Stop button.
- ⑤ Stop the sequence : Press the Start/Stop button to stop the operation.
- ⑥ Stop the motor : Press the RUN/STOP button to stop the motor.

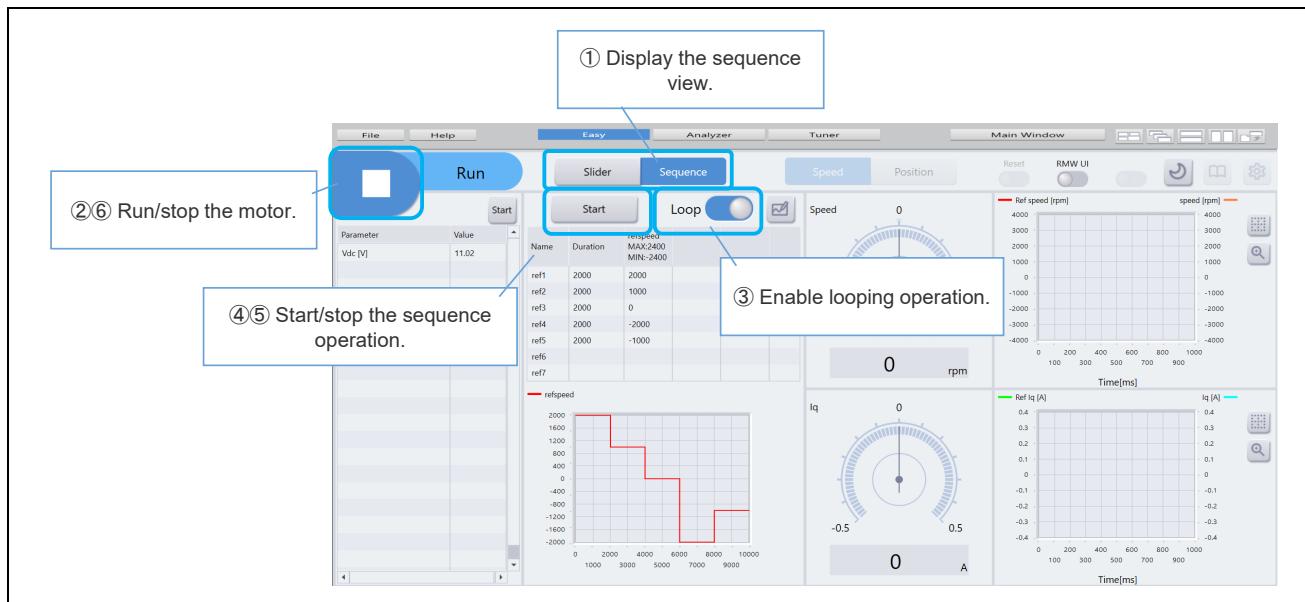


Figure 12-8 Sequence execution

12.5.4 Measurement Function

The measurement function allows you to check the current drive status of a motor in meters and graphs by the following procedures.

- ① Drive the motor : If the motor is stopped, press the RUN/STOP button to drive the motor.
- ② Start measurement : Press the measurement button.
- ③ Check the measurement result : The status of the motor is reflected in the meter and graph.
- ④ Zoom the graph : When zooming the graph, you can copy or save it.
- ⑤ Stop measurement : Press the measurement button to stop measurement.
- ⑥ Stop the motor : Press the RUN/STOP button to stop the motor.

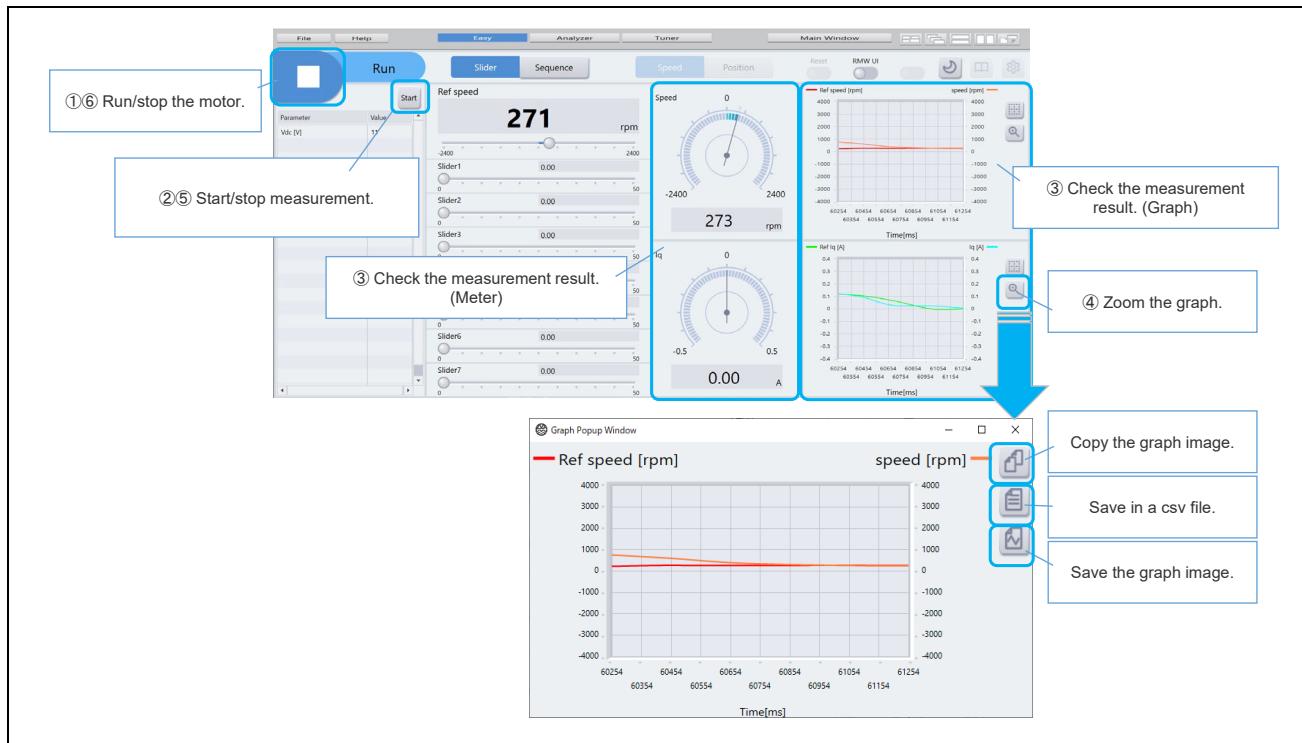


Figure 12-9 Measurement function

12.6 Setting Variable

You can set the variable to be operated and measured with Easy GUI from the settings button.

When you press the settings button, the settings screen will appear as shown in Figure 12-10. Select a tab on the settings screen and set the variables to be associated with each GUI.

When specifying a variable name in each settings screen, double-click the corresponding variable name from “Variable Find” that appears when you click the variable name field. You can also search a variable name by entering keywords in the “Find” field of “Variable Find”. An example of variable name setting is shown in Figure 12-11.

This section describes examples of settings for each GUI.

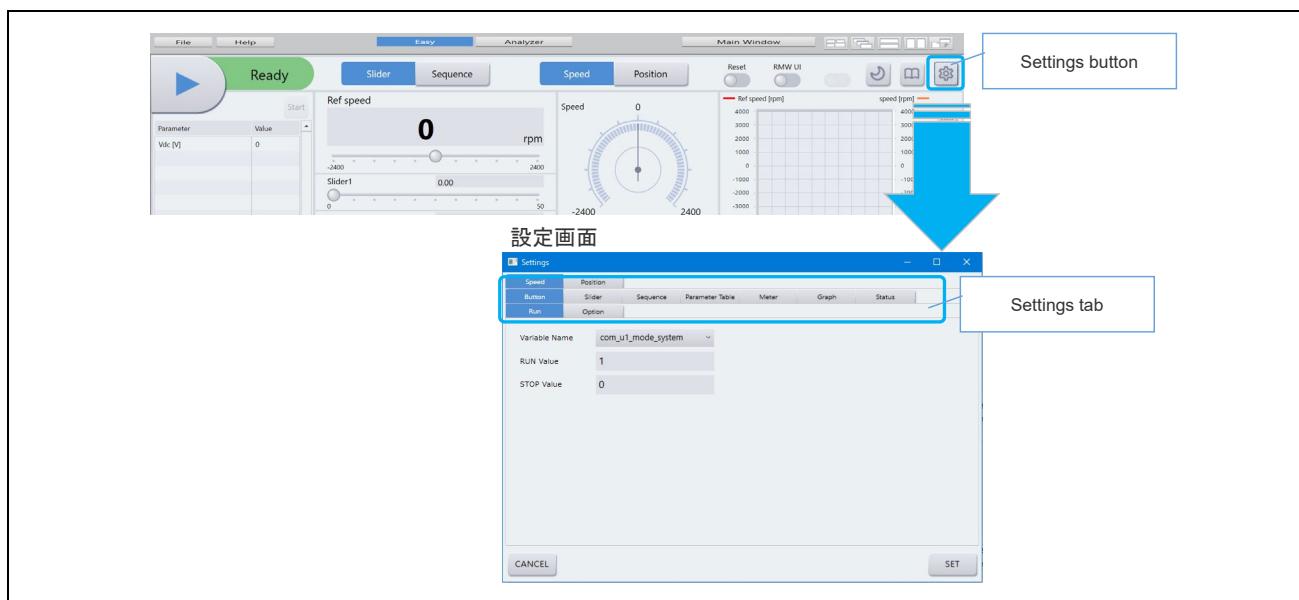


Figure 12-10 Displaying Setting window

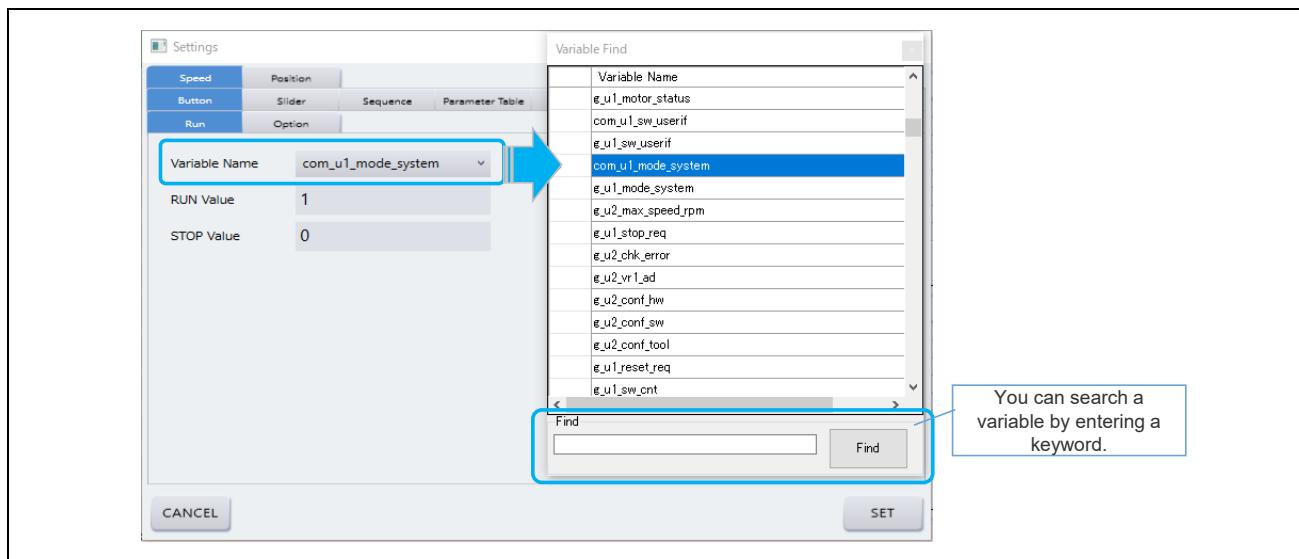


Figure 12-11 Example of specifying variable name

12.6.1 RUN/STOP Button

The value is written to the variable each time you press the RUN/STOP button.

The following is an example of setting variables to associate with the RUN/STOP button.

Table 12-2 Example of setting RUN/STOP button

| Item | | Description |
|-----------------|-------------------------------|---|
| Settings tab | When Speed tab is selected | Speed → Button → Run |
| | When Position tab is selected | Position → Button → Run |
| RUN/STOP button | | <ul style="list-style-type: none"> When “com_u1_mode_system=1 (RUN Value)”, display  When “com_u1_mode_system=0 (STOP Value)”, display  |

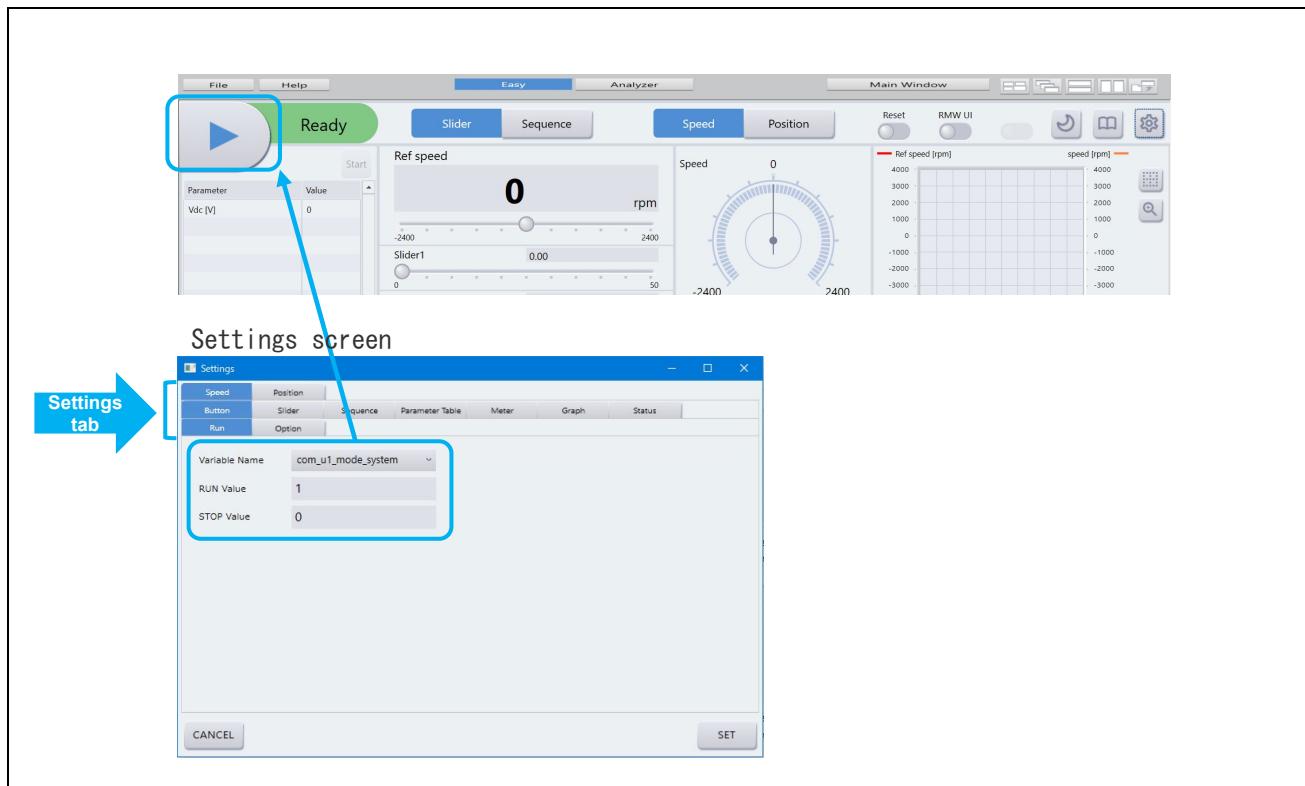


Figure 12-12 Example of setting RUN/STOP button

12.6.2 Status Display

If the status is matching the preset condition, the set color and status name will be displayed.

The following is an example of setting variables to associate with the status display.

Table 12-3 Example of setting RUN/STOP button

| Item | | Description |
|----------------|-------------------------------|--|
| Settings tab | When Speed tab is selected | Speed → Status |
| | When Position tab is selected | Position → Status |
| Status display | | <ul style="list-style-type: none"> When “g_u1_motor_status=0”, display  When “g_u1_motor_status=1”, display  When “g_u1_motor_status=2”, display  Update the status display at the cycle of 1000ms. |

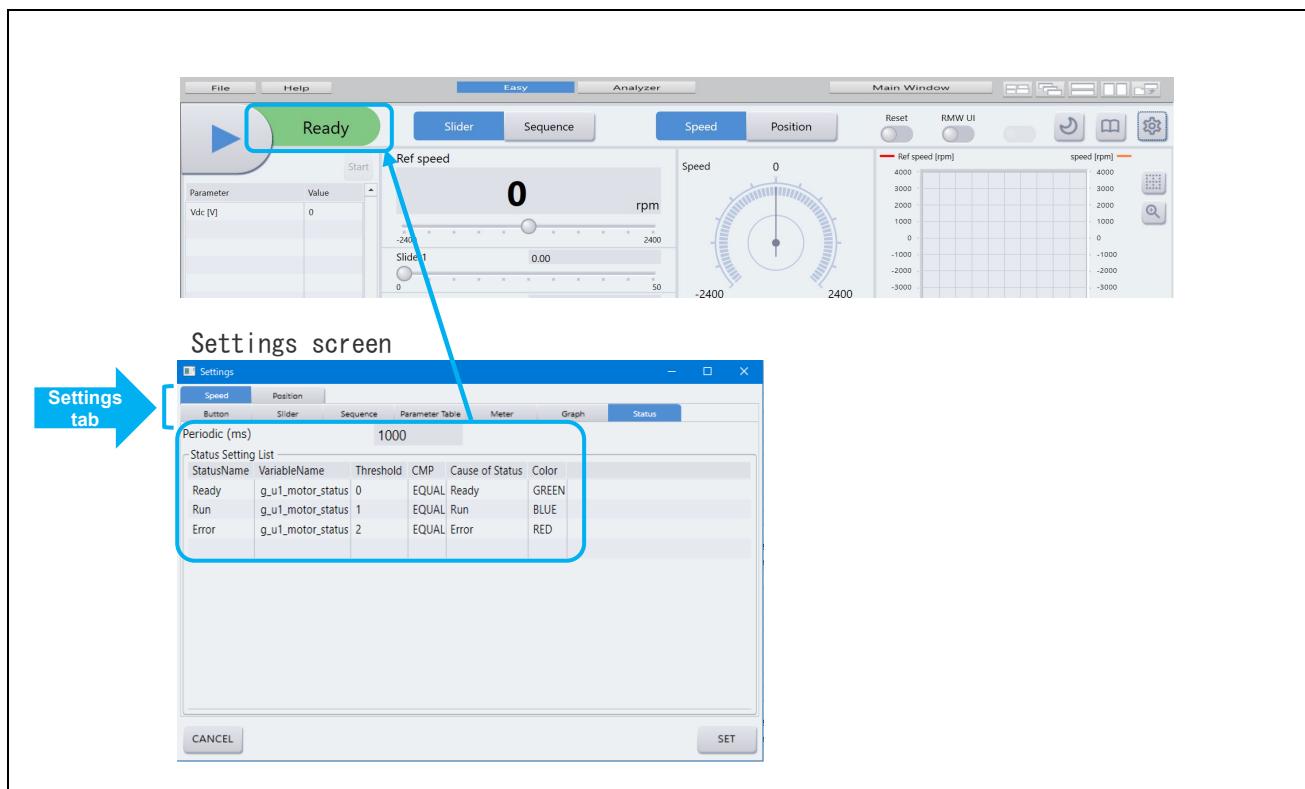


Figure 12-13 Example of setting status display

12.6.3 Parameter Table

The variable value set in the parameter table is periodically read and displayed. Up to 20 parameters can be set in the parameter table.

The following is an example of setting variables to associate with the parameter table.

Table 12-4 Example of setting parameter table

| Item | | Description |
|-----------------|-------------------------------|---|
| Settings tab | When Speed tab is selected | Speed → Parameter Table |
| | When Position tab is selected | Position → Parameter Table |
| Parameter table | | <ul style="list-style-type: none"> Display the value of the variable “g_f4_vdc_ad_monitor” in the “Vdc [V]” field. Update the parameter table at the cycle of 1000ms. |

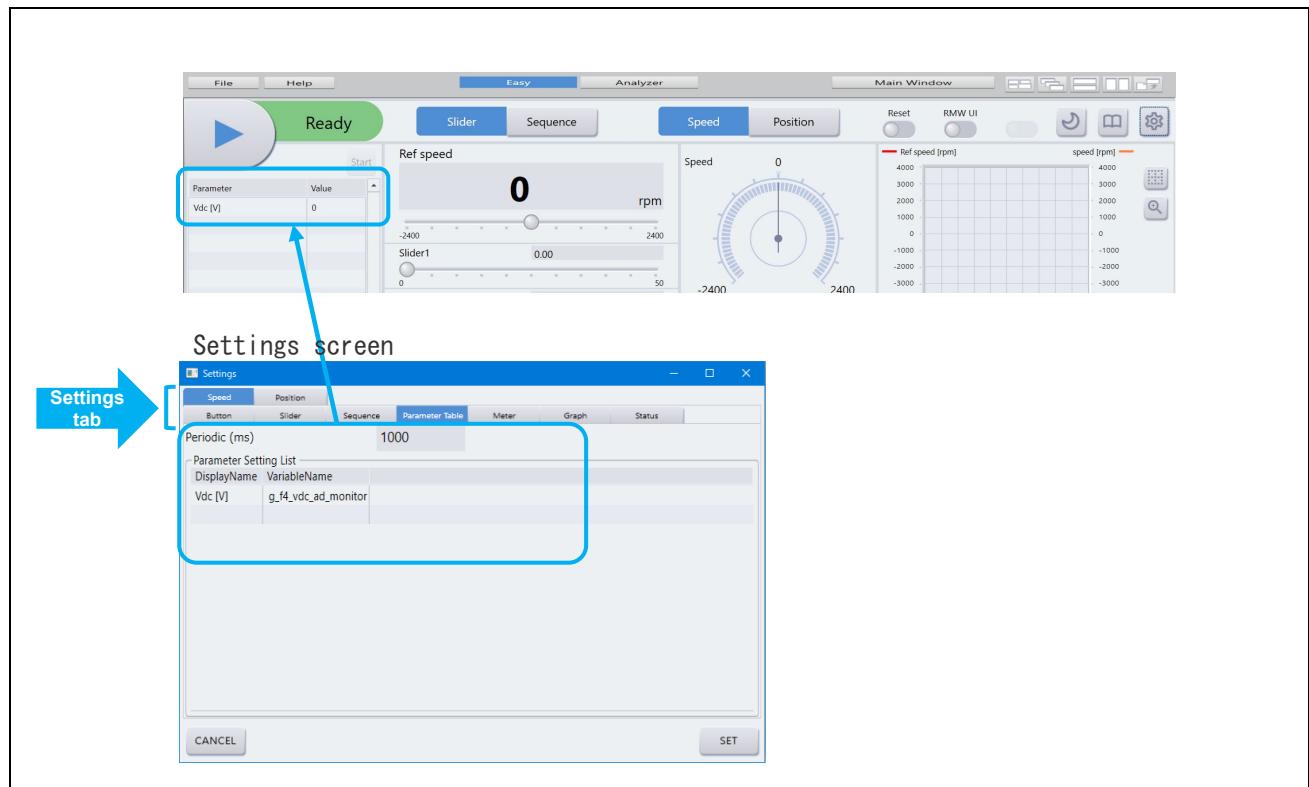


Figure 12-14 Example of setting parameter table

12.6.4 Slider

Writes the value set by the slider operation to the variable. Up to 8 sliders can be set. If there is a variable of the rotation direction, you can set a variable to overwrite its value with a positive or negative slider. The following is an example of setting variables to associate with sliders.

Table 12-5 Example of setting slider

| Item | | Description |
|--------------|-------------------------------|---|
| Settings tab | When Speed tab is selected | Speed → Slider → Slider1 to 8 |
| | When Position tab is selected | Position → Slider → Slider1 to 8 |
| Slider | | <ul style="list-style-type: none"> Display “Ref speed” in Slider1 Set the range of “Ref speed” between -2400rpm to 2400rpm. Set the value set in “Ref speed” to the variable “com_f4_ref_speed_rpm” Reflect the value of the slider to the variable at the cycle of 1000ms. |

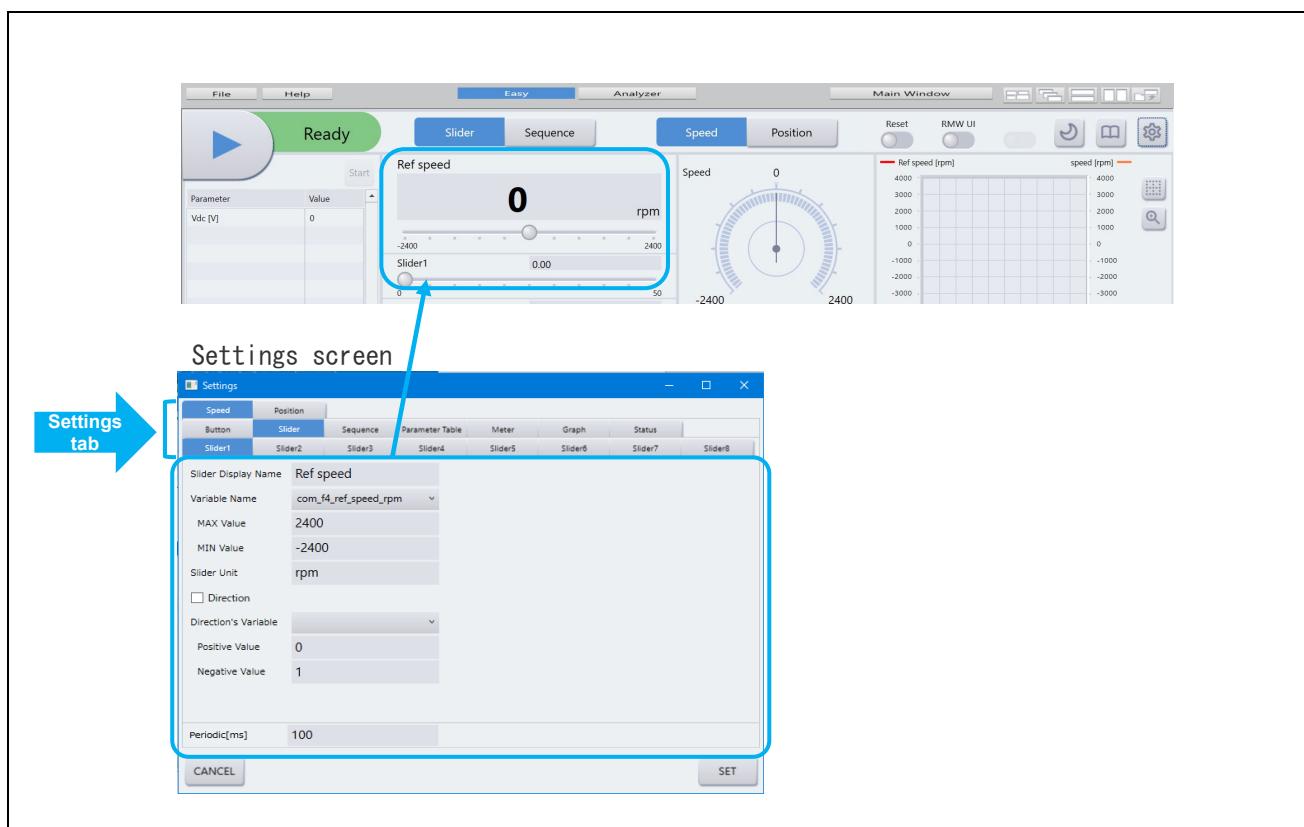


Figure 12-15 Example of setting slider

12.6.5 Sequence

Writes the value set in the sequence table to the variable. Up to 3 variables can be set in the sequence table.

The following is an example of setting variables to associate with the sequence.

Table 12-6 Example of setting sequence

| Item | | Description |
|--------------|-------------------------------|---|
| Settings tab | When Speed tab is selected | Speed → Sequence → Table → Variable1 to 3 |
| | When Position tab is selected | Position → Sequence → Table → Variable1 to 3 |
| Sequence | | <ul style="list-style-type: none"> Display “Ref speed” in Variable1. Sets the range of “Ref speed” between -2400 to 2400. Set the value set in “Ref speed” to the variable “com_f4_ref_speed_rpm” Display changes in the set value of “Ref speed” with red color in the graph. |

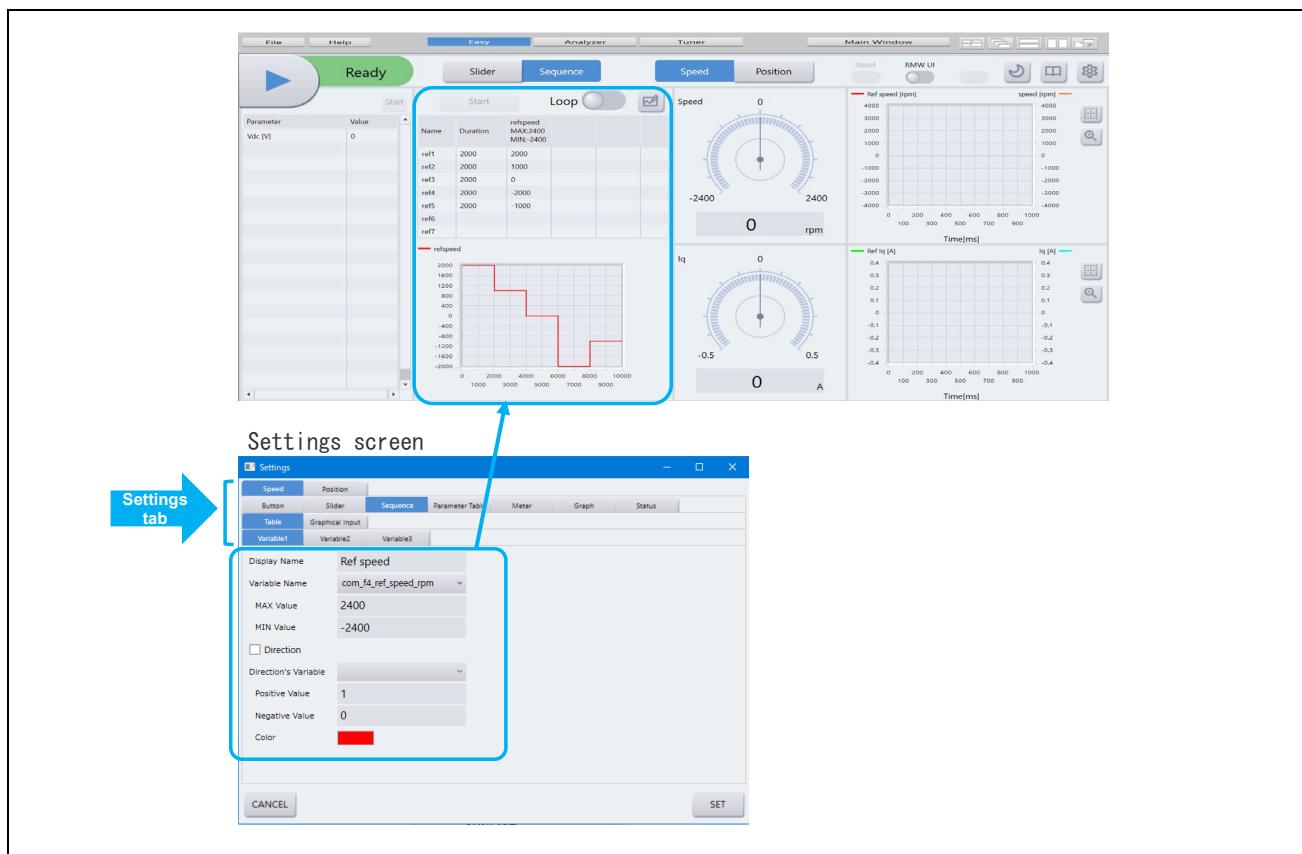


Figure 12-16 Example of setting sequence

12.6.6 Sequence Graphical Input

Writes the value set by the sequence graphical input to the variable.

The following is an example of setting variables to associate with the sequence graphical input.

Table 12-7 Example of setting sequence graphical input

| Item | | Description |
|--------------------------|-------------------------------|--|
| Settings tab | When Speed tab is selected | Speed → Sequence → Graphical Input → Variable1 to 3 |
| | When Position tab is selected | Position → Sequence → Graphical Input → Variable1 to 3 |
| Sequence graphical input | | <ul style="list-style-type: none"> Display “Ref speed” in Variable1. Set the range of “Ref speed” between -2400 to 2400. Set the value set in “Ref speed” to the variable “com_f4_ref_speed_rpm”. |

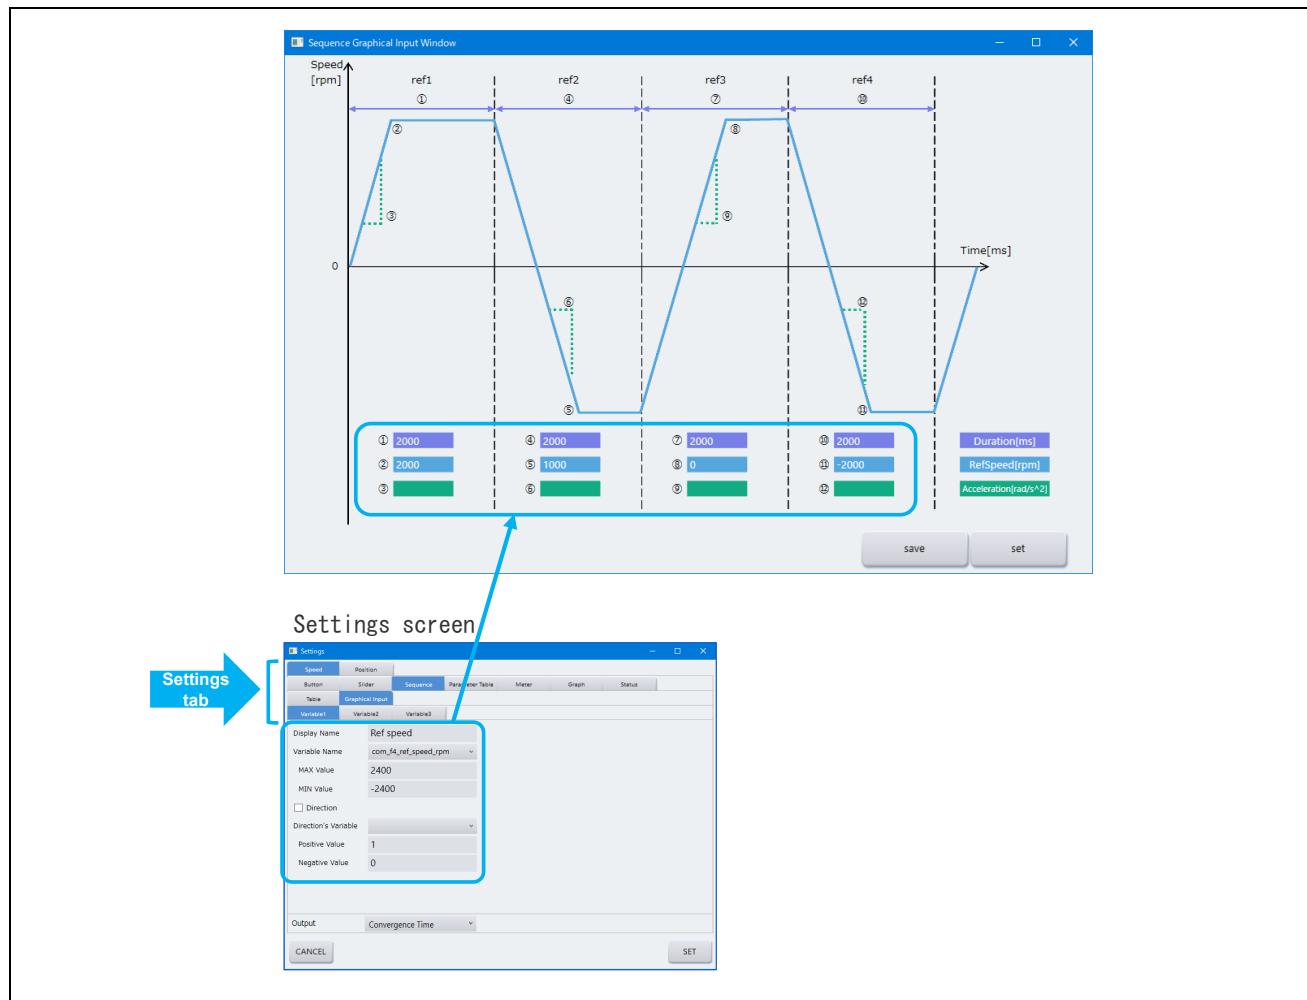


Figure 12-17 Example of setting sequence graphical input

12.6.7 Option Switch

A value is written to the variable when the Option switch is turned ON / OFF. Up to 3 option switches can be set.

The following is an example of setting variables to associate with the option switches.

Table 12-8 Example of setting option switch

| Item | | Description |
|---------------|-------------------------------|---|
| Settings tab | When Speed tab is selected | Speed → Button → Option |
| | When Position tab is selected | Position → Button → Option |
| Option switch | | <ul style="list-style-type: none"> Display "RMW UI" in Option2. When "com_u1_sw_userif=0 (ON Value)", display . When "com_u1_sw_userif=1 (OFF Value)", display . |

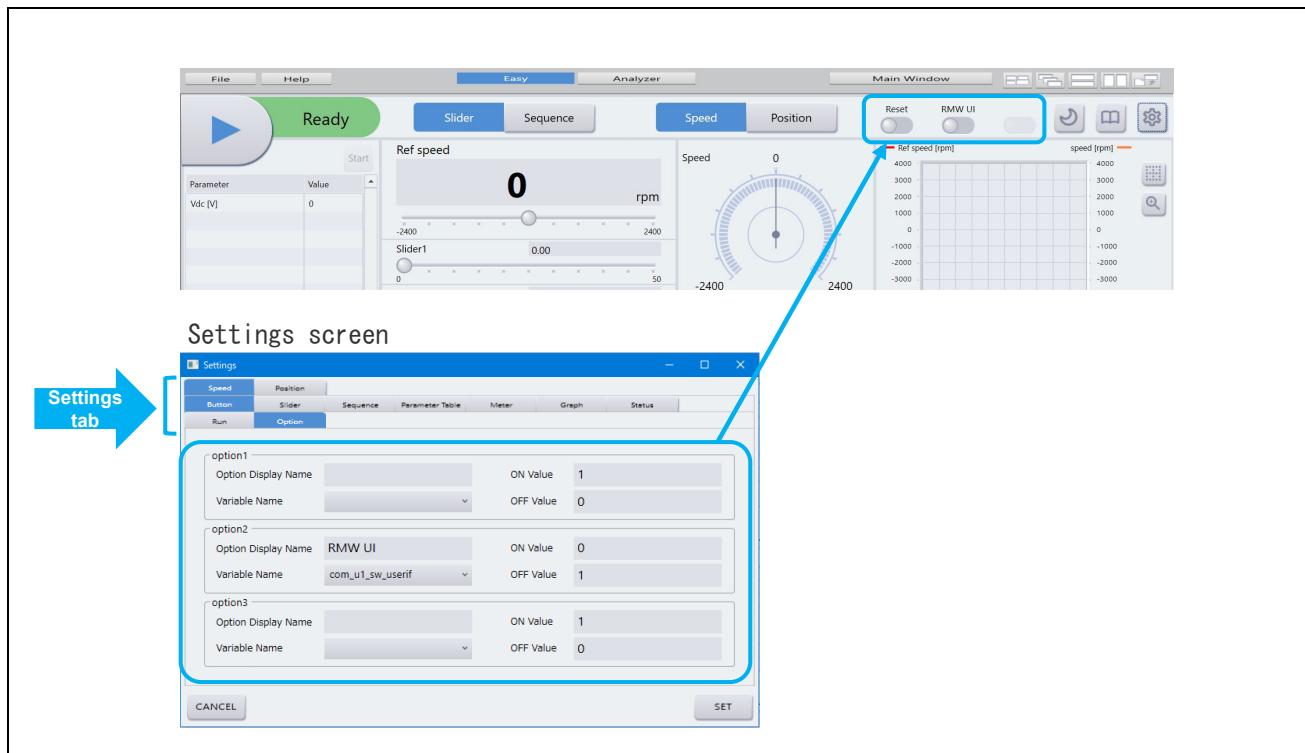


Figure 12-18 Example of setting option switch

12.6.8 Meters

Displays the variable values in meters. Up to 2 meters can be displayed.

When you set the command value variable, the \blacktriangle symbol indicates the position of the command value on the meter. When the meter type is Speed, there is a function that converts the unit from rad/s to rpm. The following is an example of setting variables to associate with the meters.

Table 12-9 Example of setting meter

| Item | | Description |
|--------------|-------------------------------|---|
| Settings tab | When Speed tab is selected | Speed \rightarrow Meter \rightarrow Top/Bottom |
| | When Position tab is selected | Position \rightarrow Meter \rightarrow Top/Bottom |
| Meter | | <p>To set the upper meter, select "Top" tab.</p> <ul style="list-style-type: none"> Display the meter with "Speed". Select "Speed" for the meter type. Set the value of "g_f4_speed_rpm_monitor" to "Speed". Enable switching from rad/s to rpm and set the pole pairs to "com_u2_mtr_pp". Enable display of the command value variable and set the command value variable to "com_f4_ref_speed_rpm". Set the display range of the meter to -2400 to 2400. Display the color  for before changing and the color  for after changing. Display the variable value on the meter at the cycle of 100ms. |

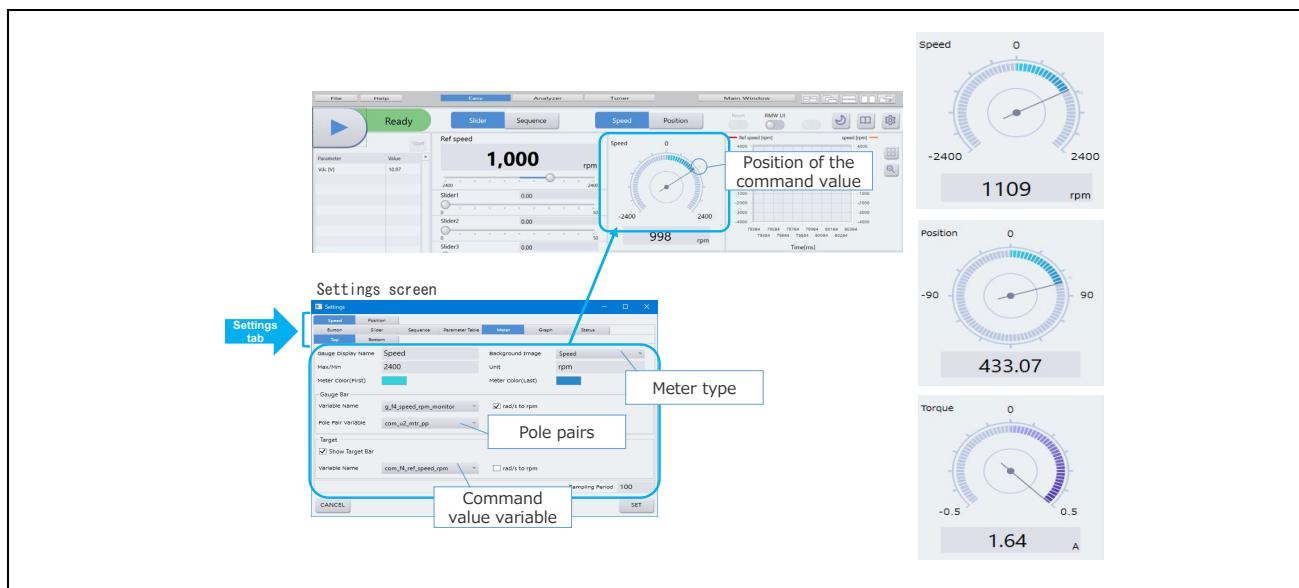


Figure 12-19 Example of setting meter

12.6.9 Graph

Displays the variable value in graphs. Up to 2 graphs can be displayed, and up to 2 variables can be displayed in each graph.

The following is an example of setting variables to associate with the graphs.

Table 12-10 Example of setting graphs

| Item | | Description |
|--------------|-------------------------------|---|
| Settings tab | When Speed tab is selected | Speed → Graph → Top/Bottom |
| | When Position tab is selected | Position → Graph → Top/Bottom |
| Graph | | <p>To set the upper graph, select "Top" tab.</p> <ul style="list-style-type: none"> Set "Ref speed [rpm]" to Parameter1 and display it in the color . Set "speed [rpm]" to Parameter2 and display it in the color . Set the value of "com_f4_ref_speed_rpm" to "Ref speed [rpm]". Set the value of "g_f4_speed_rpm_monitor" to "speed [rpm]". Set the variable type as single precision floating point type (FLOAT). Set the X-axis scale to 100ms, the range of Y-axis between -1000 to 1000. Display the variable value at the cycle of 100ms. |

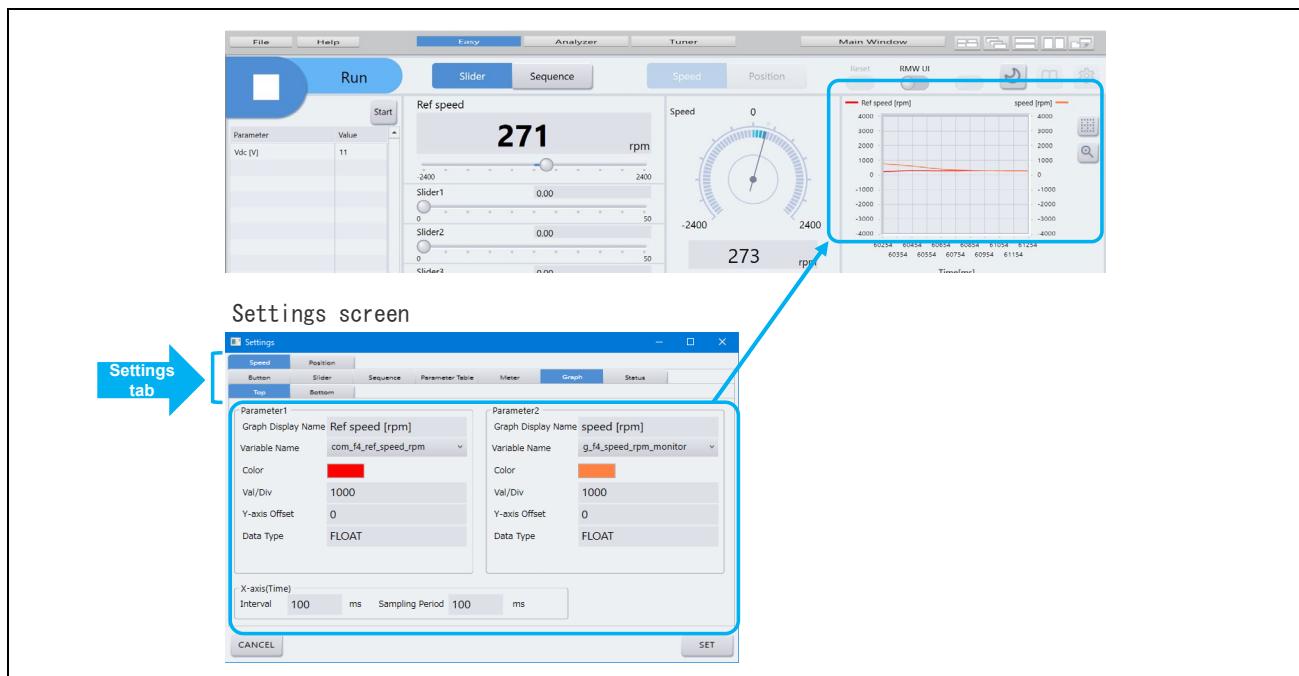


Figure 12-20 Example of setting graph

12.7 Switching Theme Color

You can switch the theme color of the screen by pressing  on the upper-right of the GUI window.

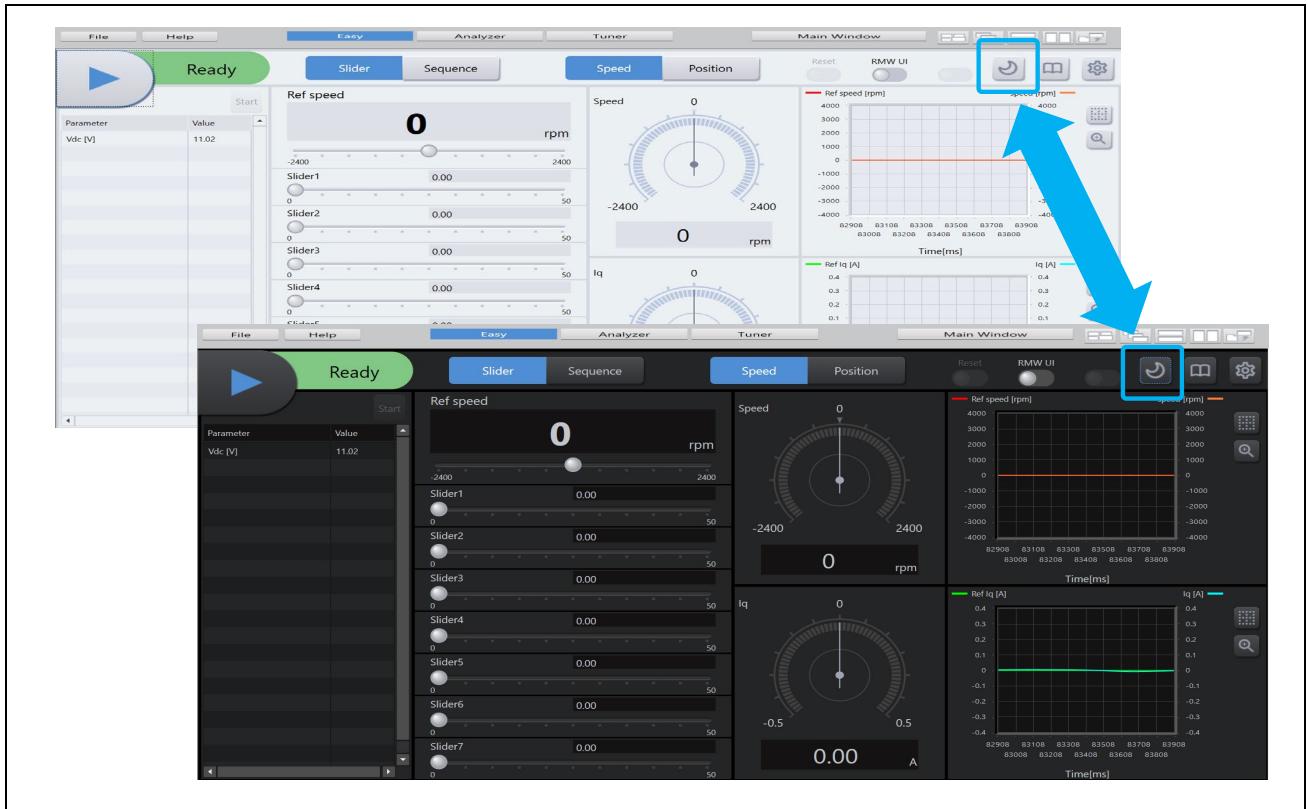


Figure 12-21 Switching theme color

12.8 Tutorial

When you click  on the upper-right of the GUI window, the tutorial is displayed.

The explanations are displayed sequentially while the item being explained is highlighted. To exit the tutorial, press "END".

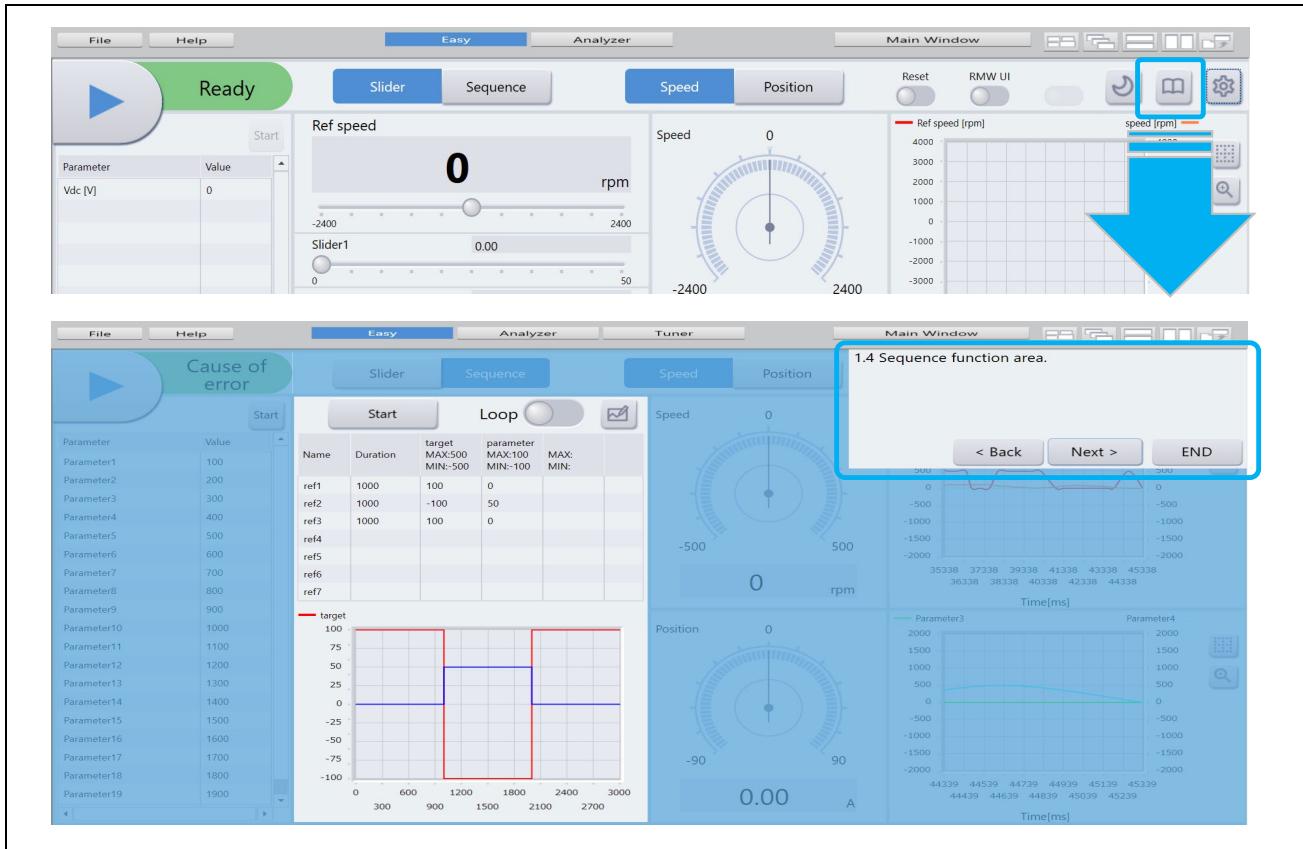


Figure 12-22 Example of tutorial display

13. Servo Tool

13.1 Overview

Servo Tool supports adjustment of control parameters for serve control. It can perform inertia estimation, servo adjustment, return to origin, and PTP operations with the GUI.

During Servo Tool operation, the motor is running actually. If connected to a mechanical unit and the position command is set outside of the allowable range, it may cause malfunction. Make sure to use it with caution.

Servo Tool is available only when the motor control program supports the Servo function. In this case, Servo is displayed as available in Main Window's Select Tool.

13.2 Features

- It can estimate the load inertia and the rotor inertia connected with the motor-axis.
- It can configure servo settings such as position control method and control natural frequencies.
- It can set the method for return to origin, the return speed, etc.
- It can perform PTP (Point to Point) operation for one axis.

13.3 Window Structure

13.3.1 Servo Adjustment Window (Inertia Estimation tab)

This section explains each part of Inertia Estimation Tab window and its function.

In Inertia Estimation tab, the inertia connected to the motor axis can be estimated.

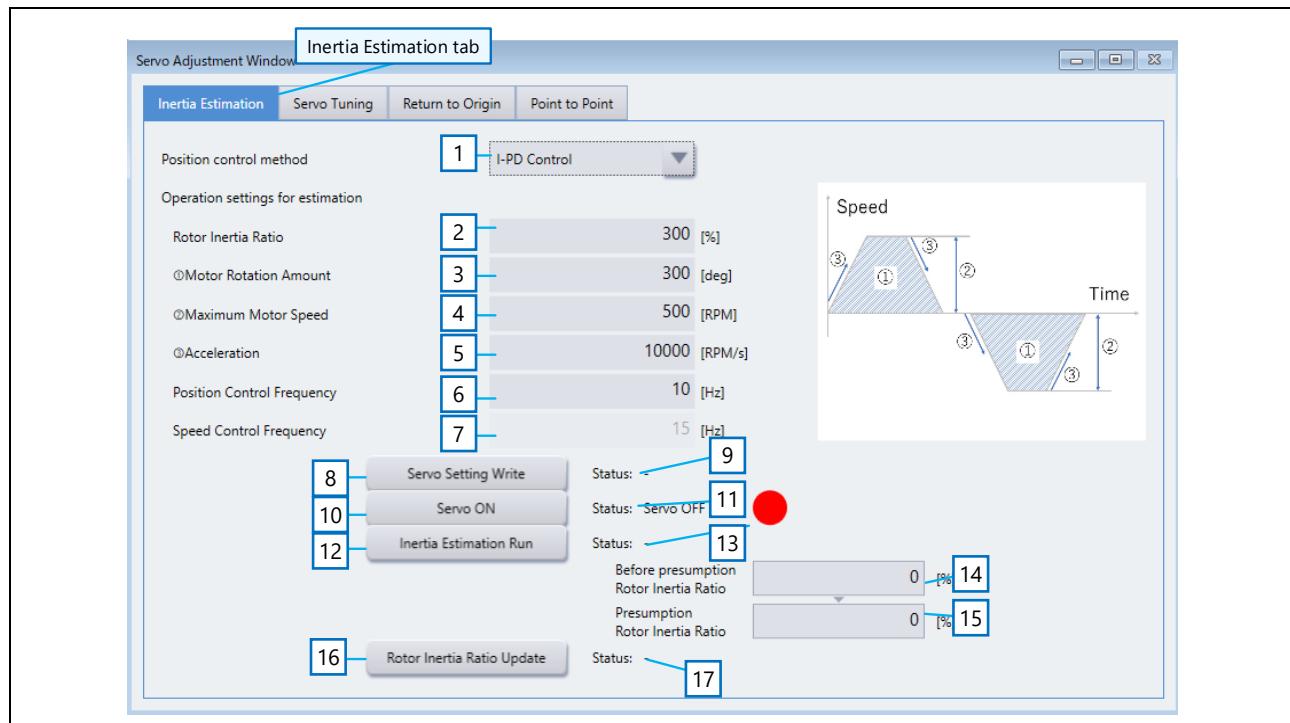


Figure 13-1 Inertia Estimation tab window

Table 13-1 Functions of Inertia Estimation tab window

| No. | Name | Explanation |
|-----|--|---|
| 1 | Position control method | Specify the method for position control. |
| 2 | Rota Inertia Ratio | Set the rotor inertia ratio. |
| 3 | Motor Rotation Amount | Set the motor rotation amount. |
| 4 | Max Motor Speed | Set the maximum motor speed. |
| 5 | Acceleration | Set the acceleration. |
| 6 | Position Control Frequency | Set the position control natural frequency. |
| 7 | Speed Control Frequency | Set the speed control natural frequency. You can enter it when "Position control method" is "PID Control". |
| 8 | Servo Setting Write button | Write the settings from No.1 to 7. |
| 9 | Servo Setting Write Status | Displays the writing status after pressing the Servo Setting Write button (No.8). |
| 10 | Servo ON/OFF button | Switches ON/OFF of servo. Labels of the button and operations when clicked: Servo ON: Servo control starts when clicked Servo OFF: Servo control stops when clicked. |
| 11 | Servo Status | Displays the servo status. Green: servo is ON. Red: servo is OFF. |
| 12 | Inertia Estimation Run/Stop button | Inertia estimation starts when "Run" is clicked. Inertia estimation stops when "Stop" is clicked. Labels of the button: During inertia estimation: "Inertia Estimation Stop" While inertia estimation is stopped: "Inertia Estimation Run" |
| 13 | Inertia Estimation Status | Displays the status of inertia estimation. |
| 14 | Before presumption Rotor Inertia Ratio | Displays the rotor inertia ratio before presumption. |
| 15 | Presumption Rotor Inertia Ratio | Displays the presumption rotor inertia ratio. |
| 16 | Rotor Inertia Ratio Update button | Writes the presumption rotor inertia ratio. |
| 17 | Rotor Inertia Ratio Update Status | Displays the status of writing the presumption rotor inertia ratio. |

13.3.2 Servo Adjustment Window (Servo Tuning Tab)

This section explains each part of Servo Tuning Tab window and its function.

In Servo Tuning tab, you can perform the servo settings such as the position control method and control natural frequencies.

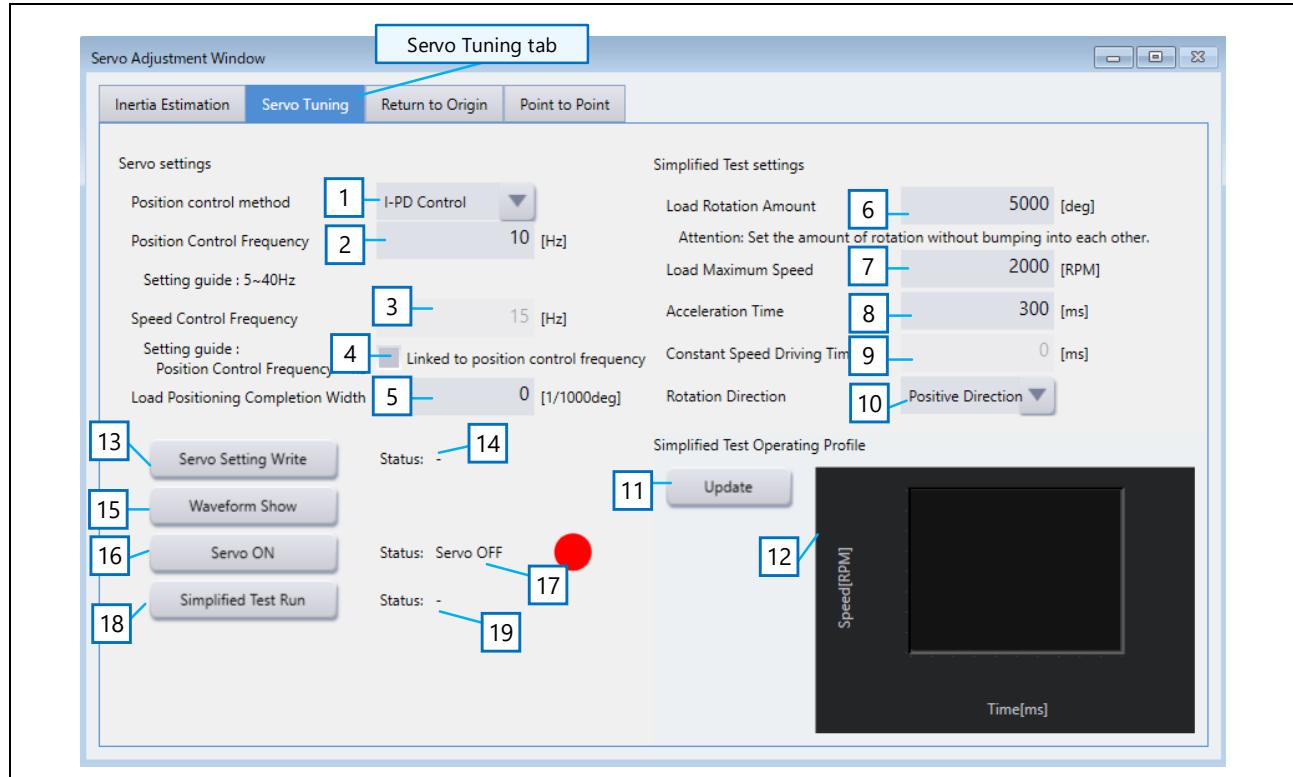


Figure 13-2 Servo Tuning tab window

Table 13-2 Functions of Servo Tuning tab window

| No. | Name | Explanation |
|-----|--------------------------------------|---|
| 1 | Position control method | Specify the method for position control |
| 2 | Position Control Frequency | Set the position control natural frequency. |
| 3 | Speed Control Frequency | Set the speed control natural frequency. You can enter it when "Position control method" is "PID Control". |
| 4 | Linked to position control frequency | When checked, the position control natural frequency is multiplied by 1.5, and the value is set to the speed control natural frequency automatically. The value set in No.3 is overwritten. |
| 5 | Load Positioning Completion | Set the range of the load positioning completion. |
| 6 | Load Rotation Amount | Set the load rotation amount. |
| 7 | Load Maximum Speed | Set the load maximum speed. |
| 8 | Acceleration Time | Set the acceleration time. |
| 9 | Constant Speed Driving Time | Set the constant speed driving time. |
| 10 | Rotation Direction | Set the rotation direction. |
| 11 | Update button | Updates the display of operation profile. |
| 12 | Operation profile | Displays the operation profile of the settings. |
| 13 | Servo Setting Write button | Writes settings from No.1 to 10. |
| 14 | Servo Setting Write Status | Displays the writing status after pressing the Servo Setting Write button (No.13). |
| 15 | Waveform Show button | Displays the waveform window. |
| 16 | Servo ON/OFF button | Switches ON/OFF of servo. Labels of the button and operations when clicked: Servo ON: Servo control starts when clicked Servo OFF: Servo control stops when clicked. |
| 17 | Servo Status | Displays the servo status. Green: servo is ON. Red: servo is OFF. |
| 18 | Simplified Test Run/Stop button | When "Run" is clicked, the simplified test starts. When "Stop" is clicked, the simplified test stops. Labels of the button: During the simplified test: "Simplified Test Stop" While the simplified test is stopped: "Simplified Test Run" |
| 19 | Simplified Test Status | Displays the status of the simplified test execution. |

13.3.3 Servo Adjustment Window (Return to Origin Tab)

This section explains each part of Return to Origin Tab window and its function.

In Return to Origin tab, you can execute the settings such as the return to origin method and the return speed.

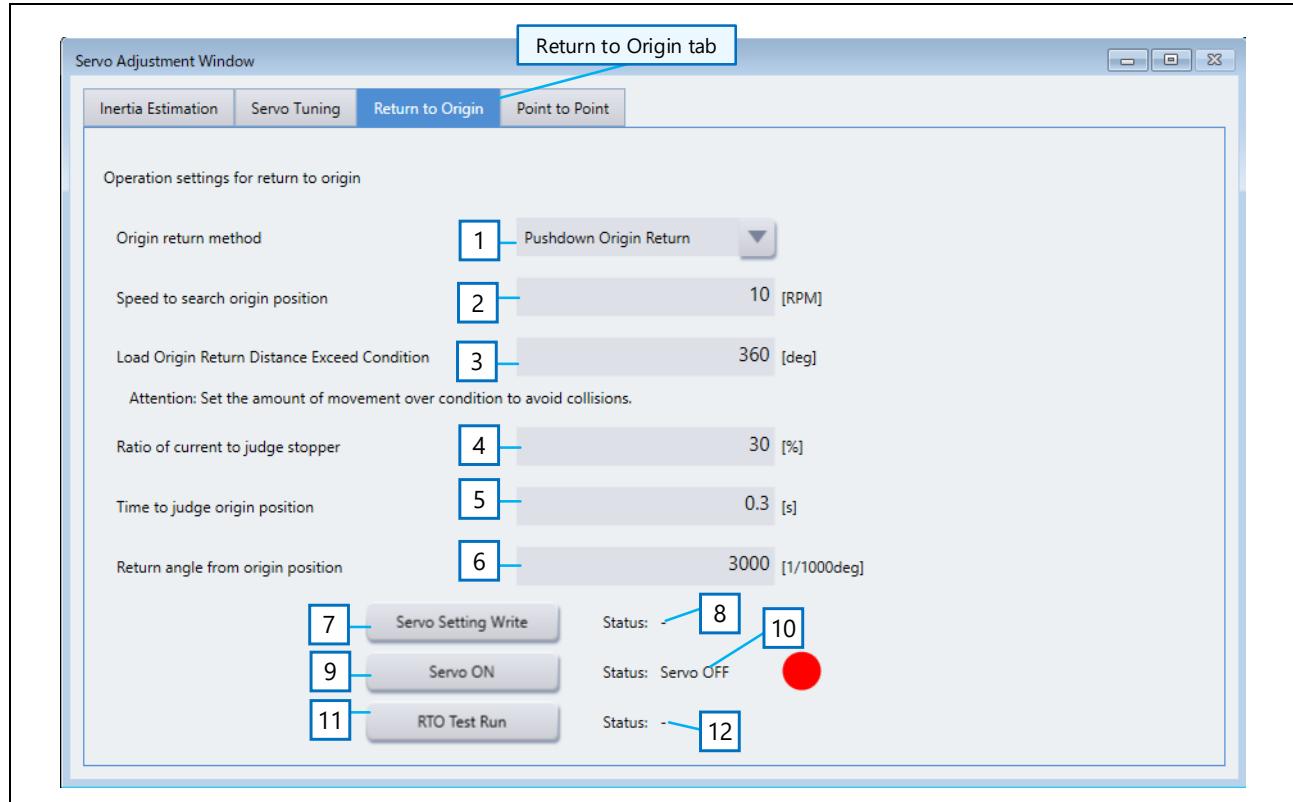


Figure 13-3 Return to Origin tab window

Table 13-3 Functions of Return to Origin tab window

| No. | Name | Explanation |
|-----|--|---|
| 1 | Origin return method | Specify the method for return to origin. |
| 2 | Load Origin Return Speed | Set the load speed for return to origin. |
| 3 | Load Origin Return Distance Exceed Condition | Set the angle to determine impossibility of search during origin search. |
| 4 | Push Motion Origin Return Operating Current | Set the push motion origin return operating current. |
| 5 | Push Motion End Time | Set the push motion ending time. |
| 6 | Load Push Motion Origin Return Value | Set the return value of the load push motion origin return. |
| 7 | Servo Setting Write button | Writes the settings from No.1 to 6. |
| 8 | Servo Setting Write Status | Displays the writing status after pressing the Servo Setting Write button (No.7) |
| 9 | Servo ON/OFF button | Switches ON/OFF of servo. Labels of the button and operations when clicked: Servo ON: Servo control starts when clicked Servo OFF: Servo control stops when clicked. |
| 10 | Servo Status | Displays the servo status. Green: servo is ON. Red: servo is OFF. |
| 11 | RTO Test Run/Stop button | When "Run" is clicked, the return to origin test starts. When "Stop" is clicked, the return to origin test stops. Labels of the button: During the return to origin test: "RTO Test Stop" While the return to origin test is stopped: "RTO Test Run" |
| 12 | RTO Test Status | Displays the status of the return to origin test execution. |

13.3.4 Servo Adjustment Window (Point to Point Tab)

This section explains each part of Point to Point Tab window and its function.
In Point to Point tab, you can execute Point to Point operation for one axis.

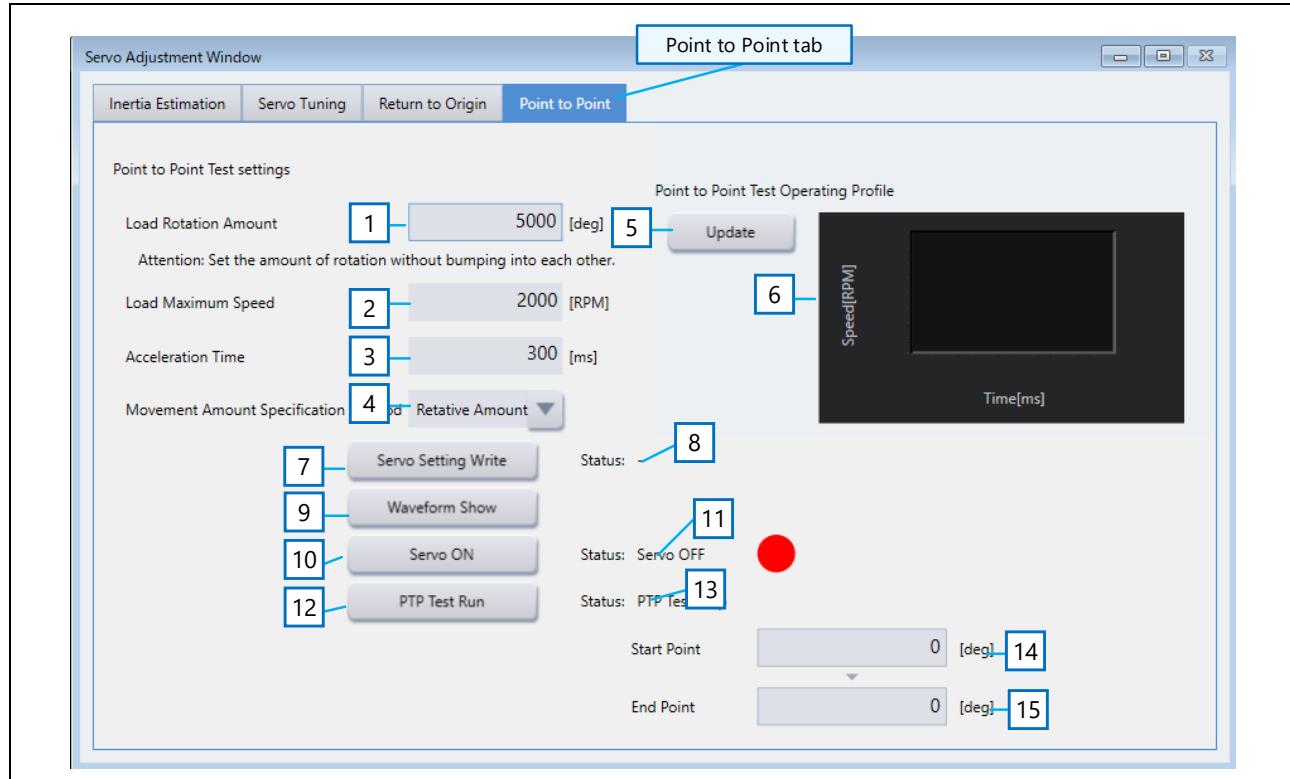


Figure 13-4 Point to Point tab window

Table 13-4 Functions of Point to Point tab window

| No. | Name | Explanation |
|-----|--------------------------------------|---|
| 1 | Load Rotation Amount | Set the load rotation amount. |
| 2 | Load Maximum Speed | Set the load maximum speed. |
| 3 | Acceleration Time | Set the acceleration time. |
| 4 | Movement Amount Specification Method | Set the method for specifying movement amount. |
| 5 | Update button | Updates the display of the operation profile. |
| 6 | Operation profile | Displays the operation profile of the settings. |
| 7 | Servo Setting Write button | Writes the settings from No.1 to 4. |
| 8 | Servo Setting Write Status | Displays the writing status after pressing the Servo Setting Write button (No.7). |
| 9 | Waveform Show button | Displays the waveform window. |
| 10 | Servo ON/OFF button | Switches ON/OFF of servo. Labels of the button and operations when clicked: Servo ON: Servo control starts when clicked Servo OFF: Servo control stops when clicked. |
| 11 | Servo Status | Displays the servo status. Green: servo is ON. Red: servo is OFF. |
| 12 | PTP Test Run/Stop button | When "Run" is clicked, the Point to Point test starts. When "Stop" is clicked, the Point to Point test stops. Labels of the button: During the Point to Point test: "PTP Test Stop" While the Point to Point test is stopped: "PTP Test Run" |
| 13 | PTP Test Status | Displays the status of the Point to Point test execution. |
| 14 | Start Point | Displays the value of the start point. |
| 15 | End Point | Display the value of the end point. |

13.3.5 Waveform Window

Waveform window is opened by pressing the “Waveform Show” button on Servo Tuning or Point to Point tab of Servo Adjustment Window.

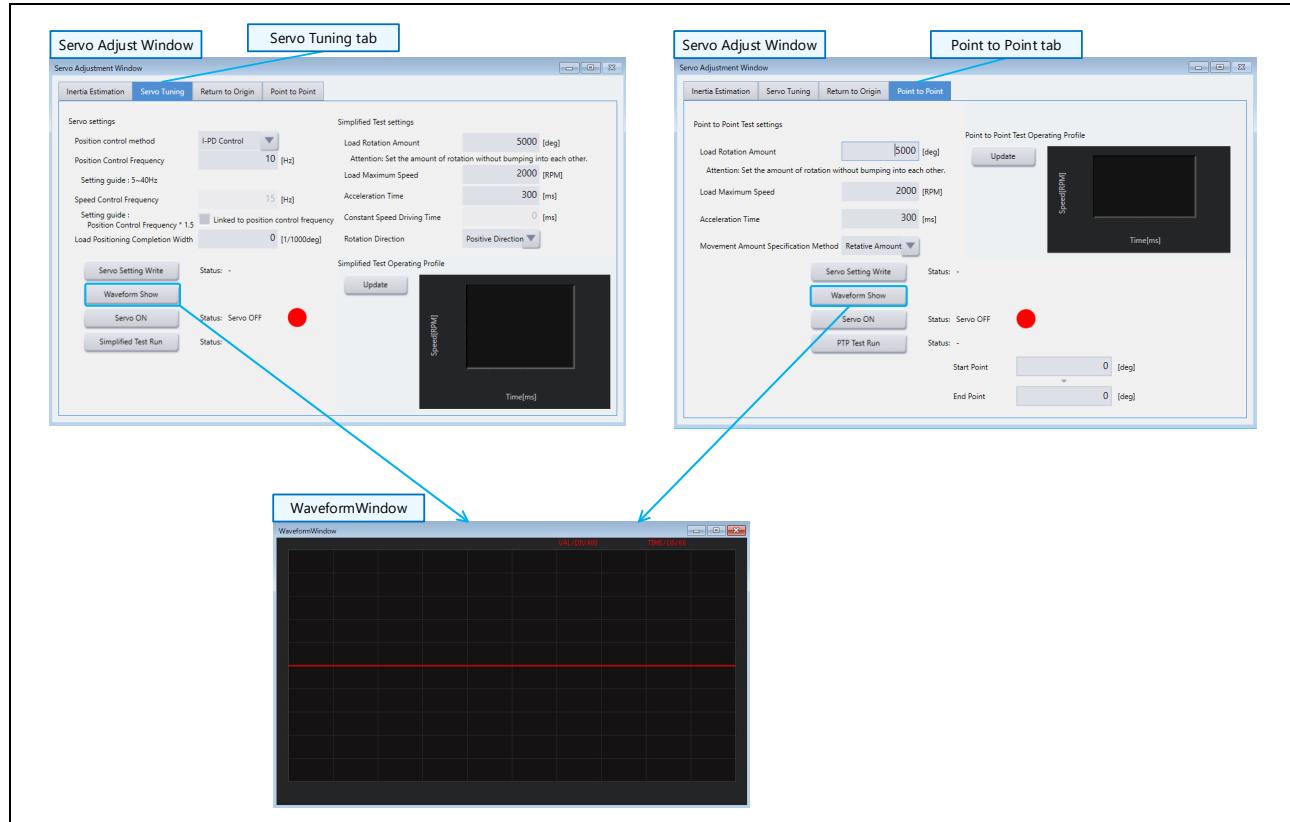


Figure 13-5 Waveform window

13.4 Explanation of Operation

13.4.1 Displaying Servo Adjustment Window

Servo Adjustment Window is displayed by selecting “Servo” in Main Window’s Select Tool.

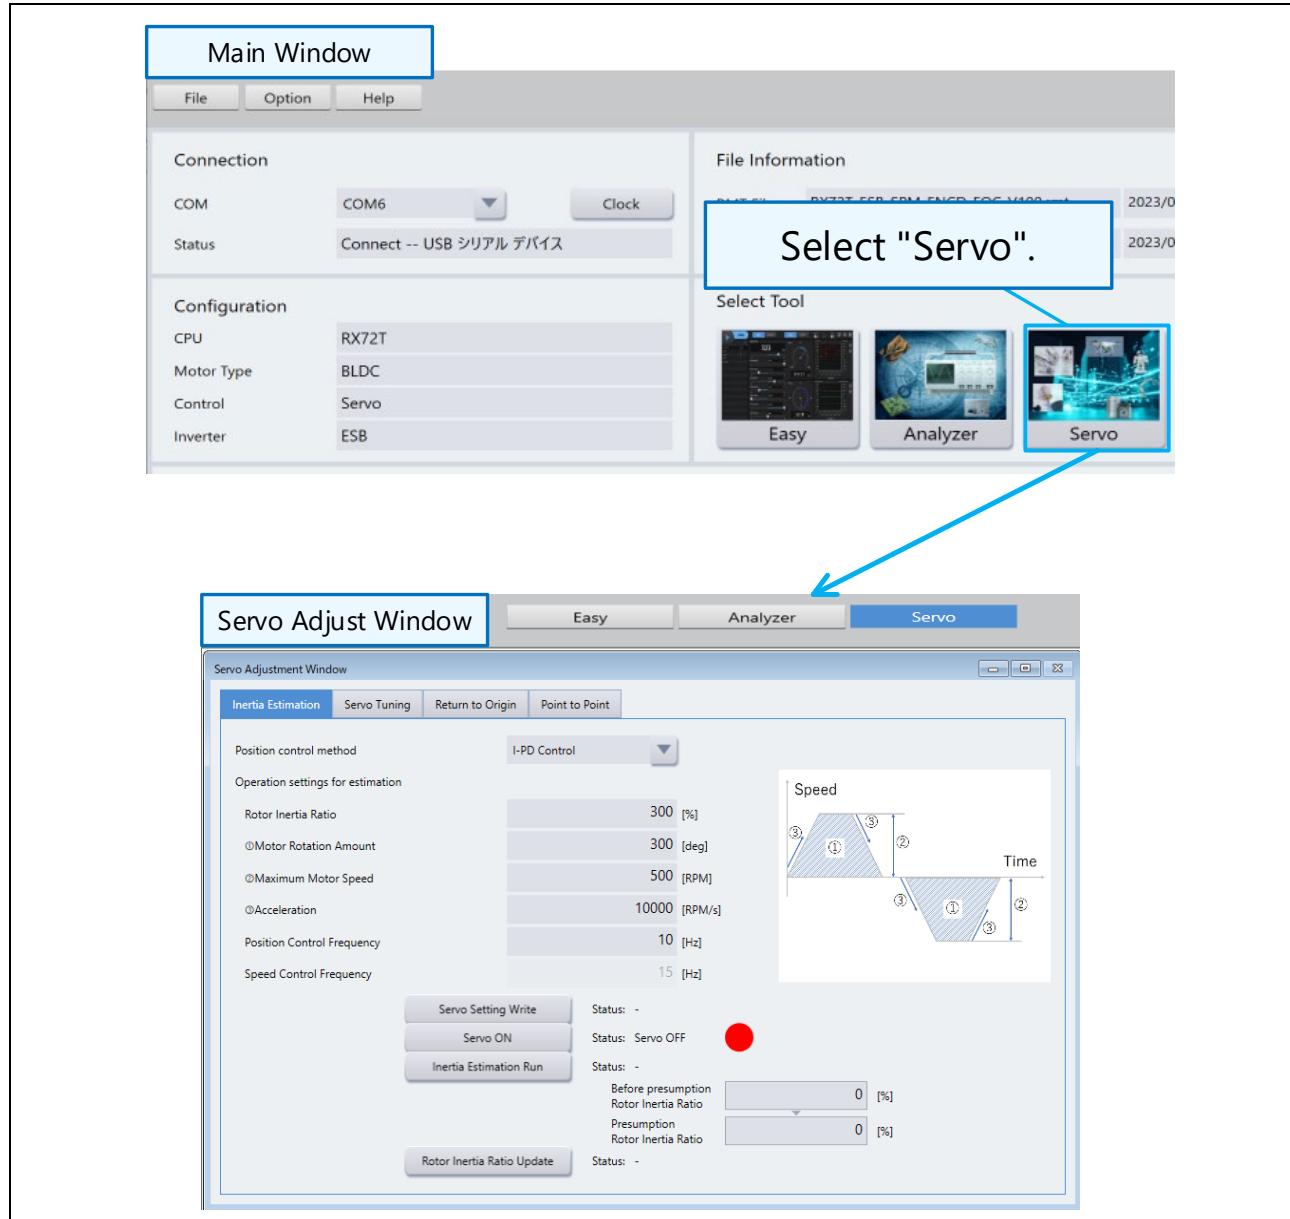


Figure 13-6 Displaying Servo Adjustment window

13.4.2 Switching Displayed Function

When selecting the upper-left tabs on Servo Adjustment window, you can switch displayed functions of Servo Tool.

When Servo Status is “Servo ON”, or when Servo Setting Write Status is “Servo Setting Write Writing”, you cannot switch the displayed function.

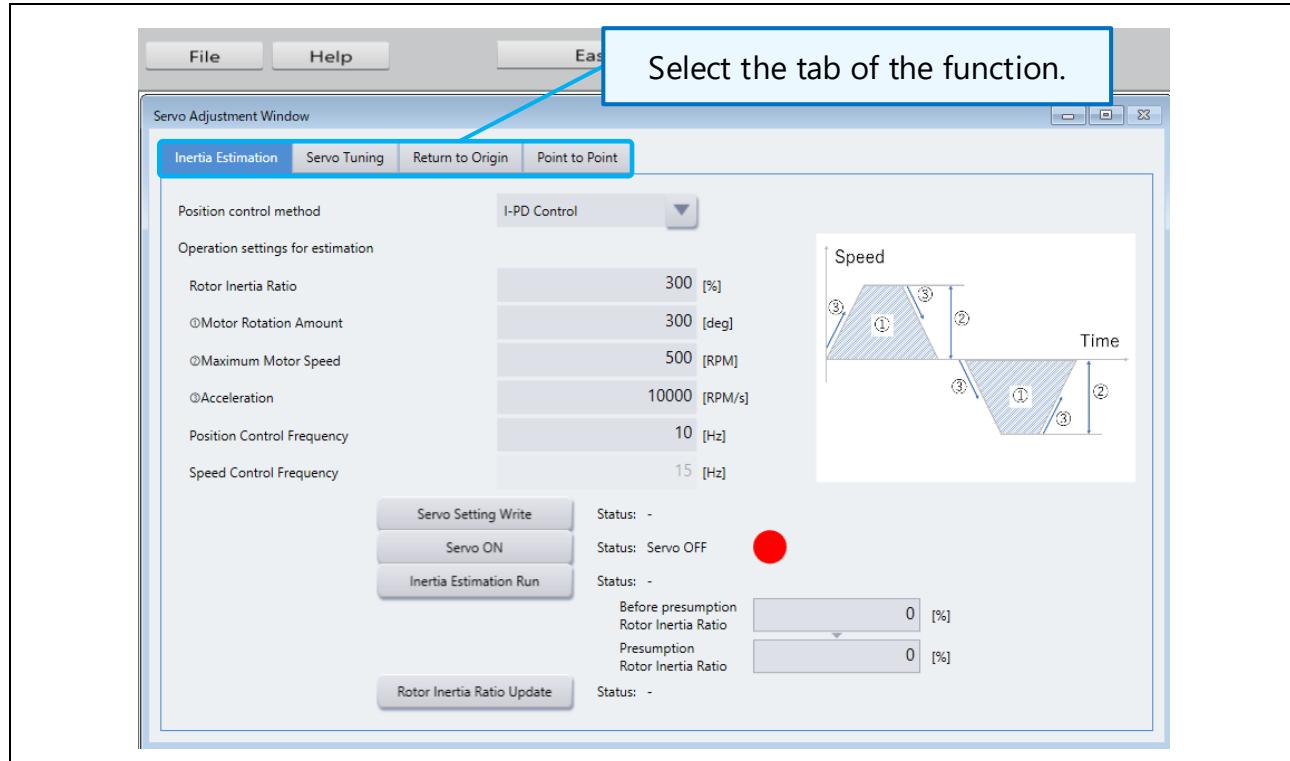


Figure 13-7 Switching displayed function

13.4.3 Performing Inertia Estimation

The procedure for inertia estimation is described below.

13.4.3.1 Set parameters for inertia estimation

The following explains how to set parameters for inertia estimation.

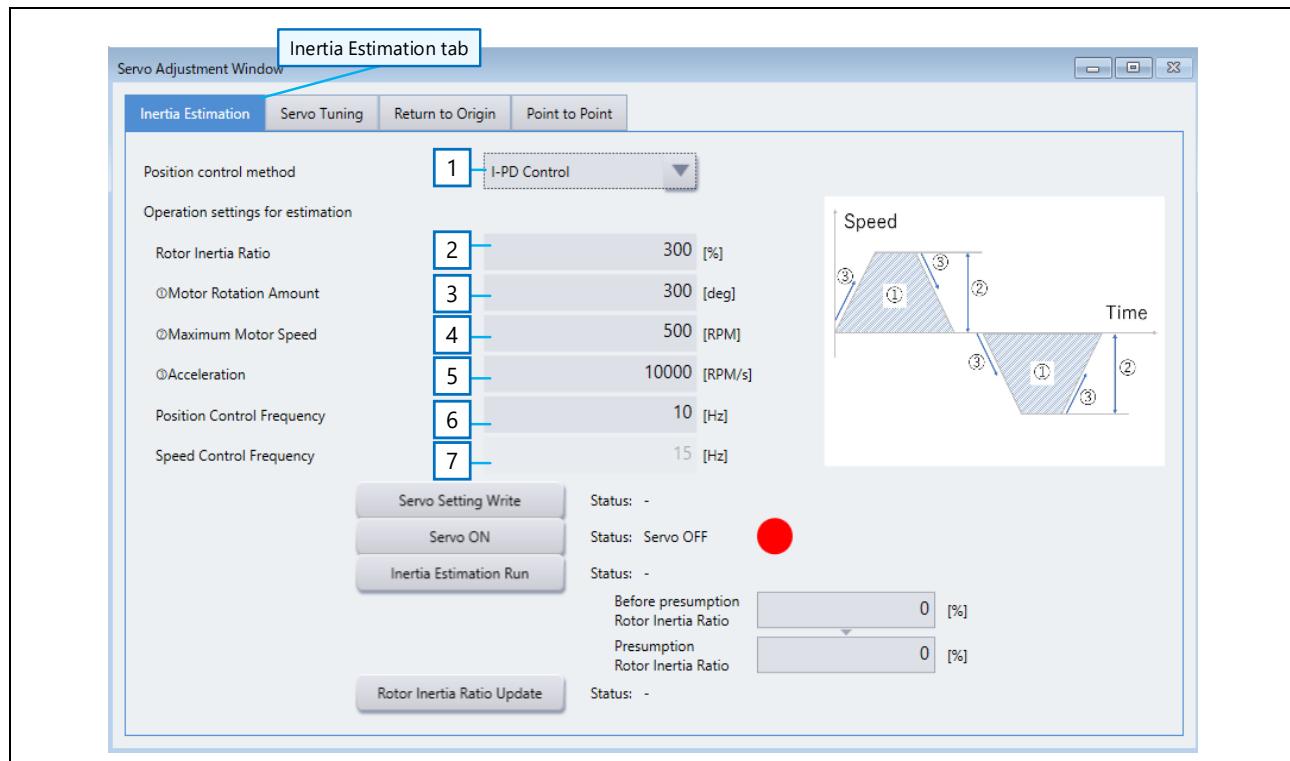


Figure 13-8 Setting inertia estimation parameters view

Table 13-5 Setting inertia estimation parameters

| No. | Name | Explanation |
|-----|----------------------------|---|
| 1 | Position control method | Specify the method for position control. |
| 2 | Rota Inertia Ratio | Set the rotor inertia ratio. |
| 3 | Motor Rotation Amount | Set the motor rotation amount. |
| 4 | Max Motor Speed | Set the maximum motor speed. |
| 5 | Acceleration | Set the acceleration. |
| 6 | Position Control Frequency | Set the position control natural frequency. |
| 7 | Speed Control Frequency | Set the speed control natural frequency. You can enter it when "Position control method" is "PID Control". |

13.4.3.2 Write inertia estimation parameters

Press the “Servo Setting Write” button to write the parameters set in 13.4.3.1 Set parameters for inertia estimation.

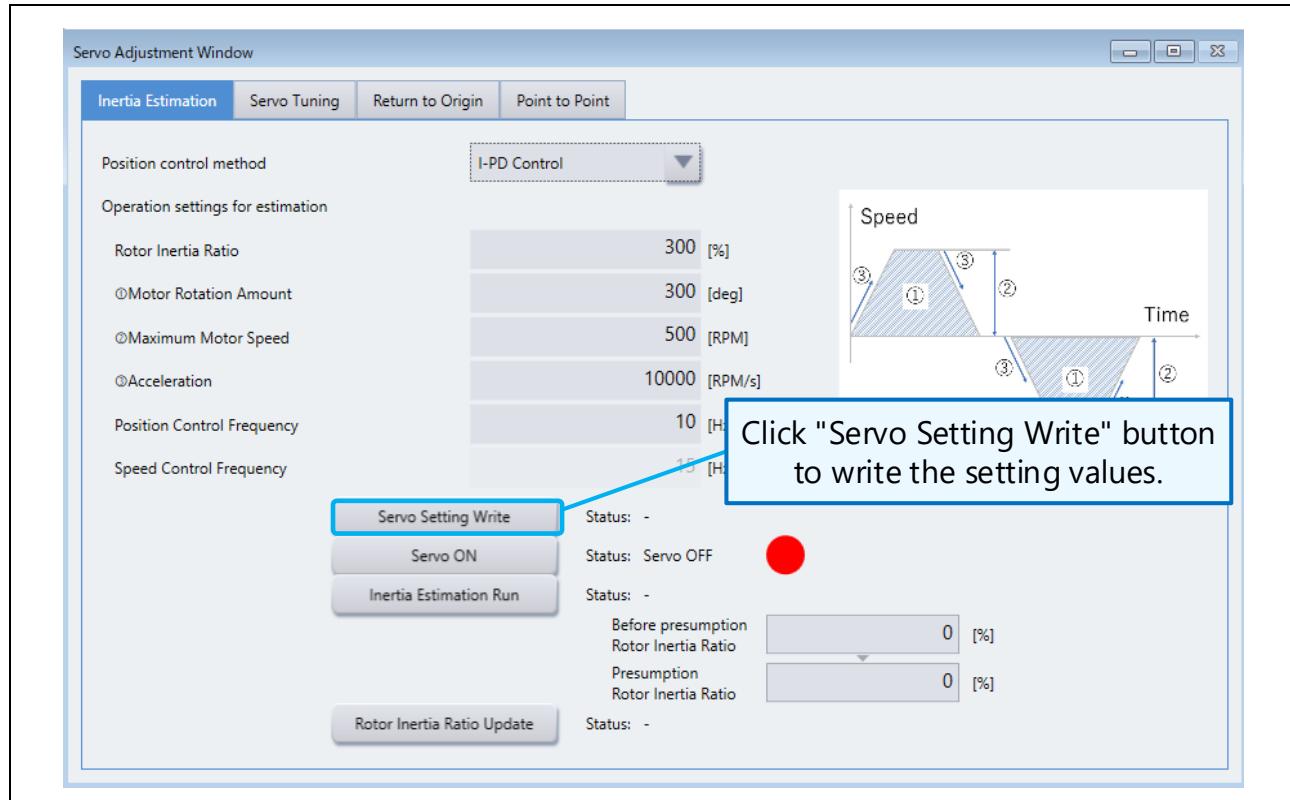


Figure 13-9 Writing inertia estimation parameters

13.4.3.3 Start servo control

Before starting inertia estimation, press the “Servo ON” button to start servo control,

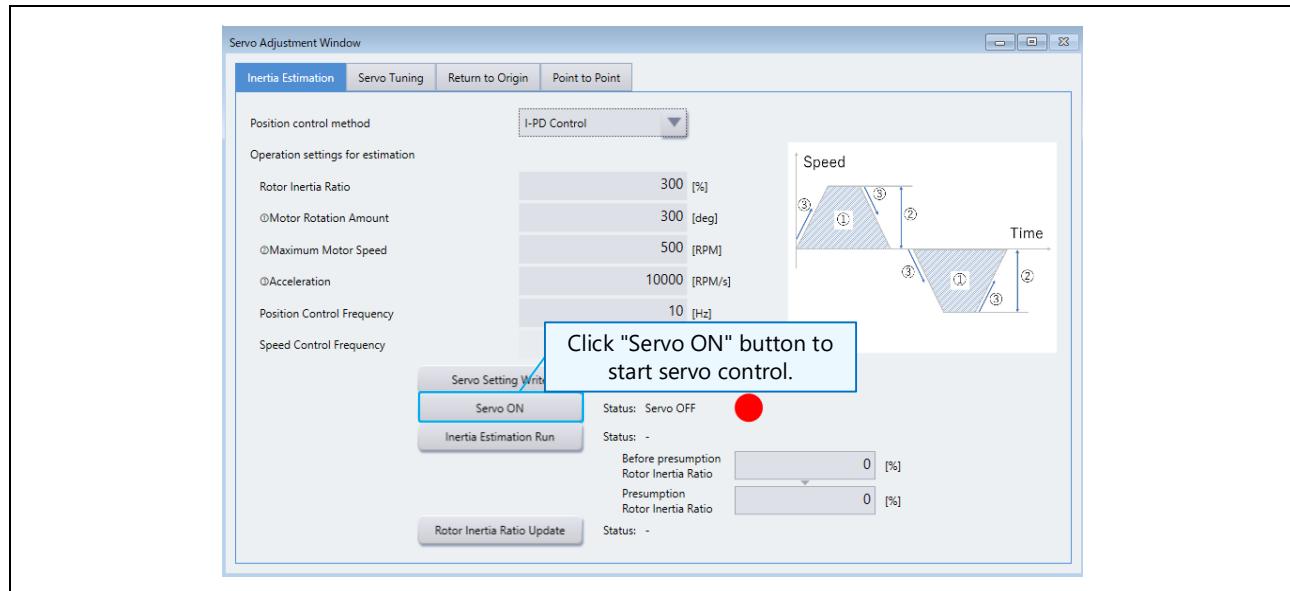


Figure 13-10 Starting servo control

13.4.3.4 Start/stop inertia estimation

Press the “Inertia Estimation Run” button with “Servo ON” to start inertia estimation. Inertia estimation stops automatically when it is completed, you can stop inertia estimation by pressing the “Inertia Estimation Stop” button.

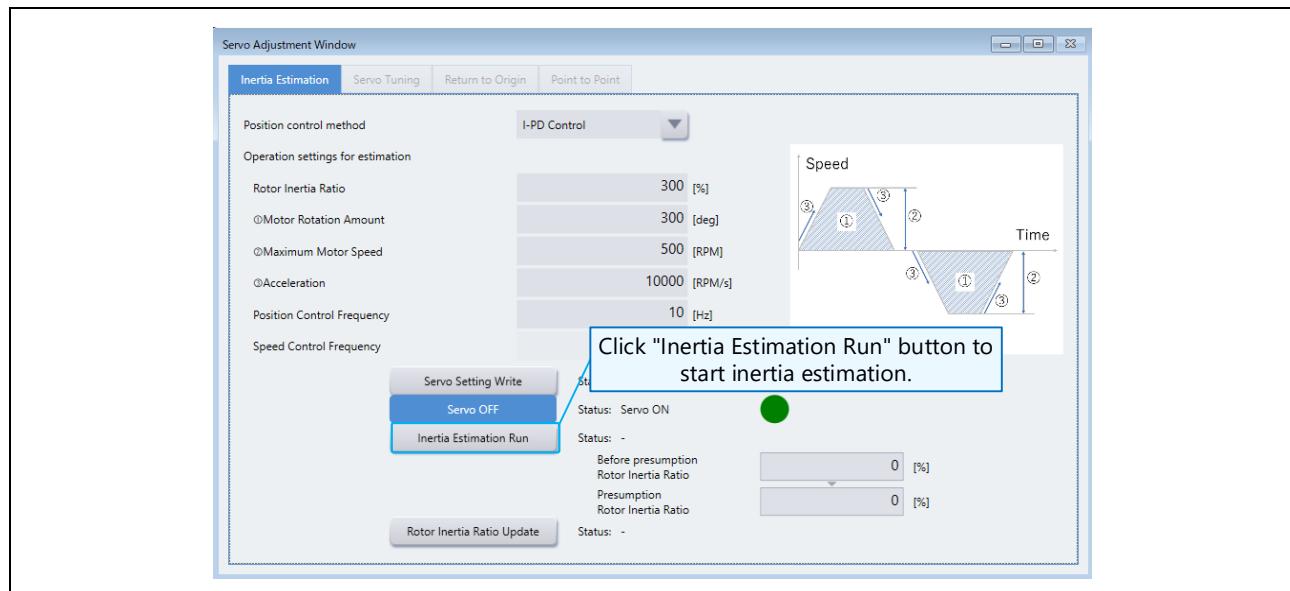


Figure 13-11 Starting/stopping inertia estimation

13.4.3.5 Write estimated rotor inertia ratio

After inertia estimation, press the “Rotor Inertia Ratio Update” button to write the estimated rotor inertia ratio.

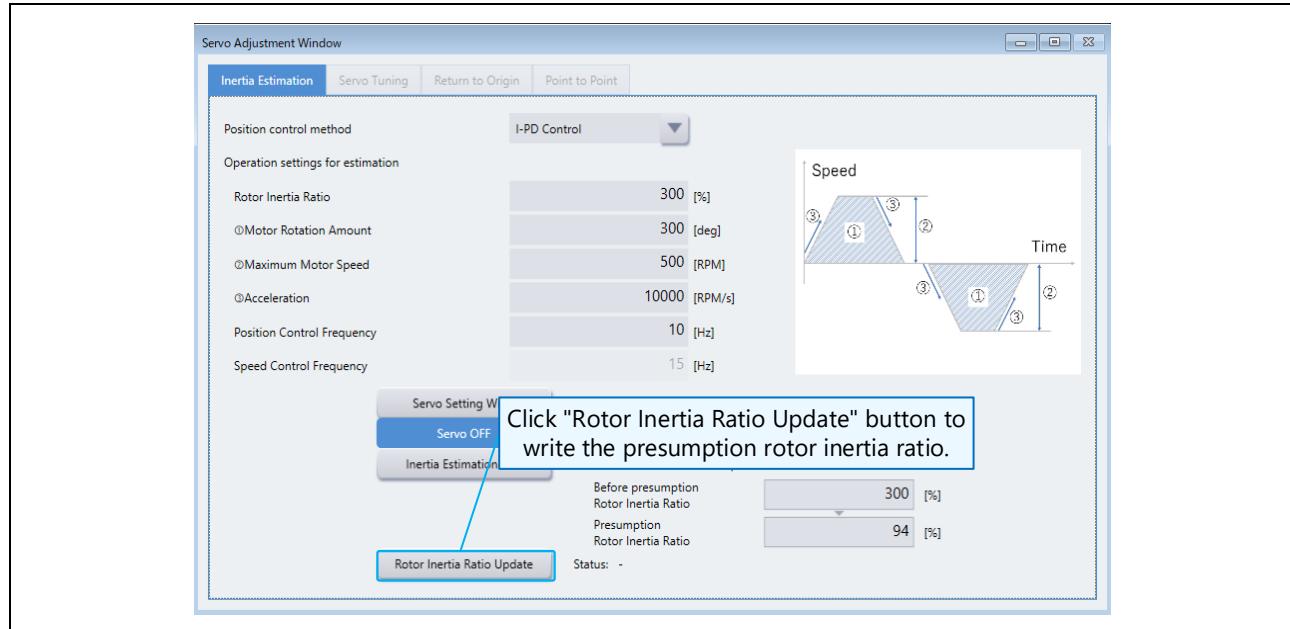


Figure 13-12 Writing estimated rotor inertia ratio

13.4.3.6 Stop servo control

Press the “Servo OFF” button to stop servo control.

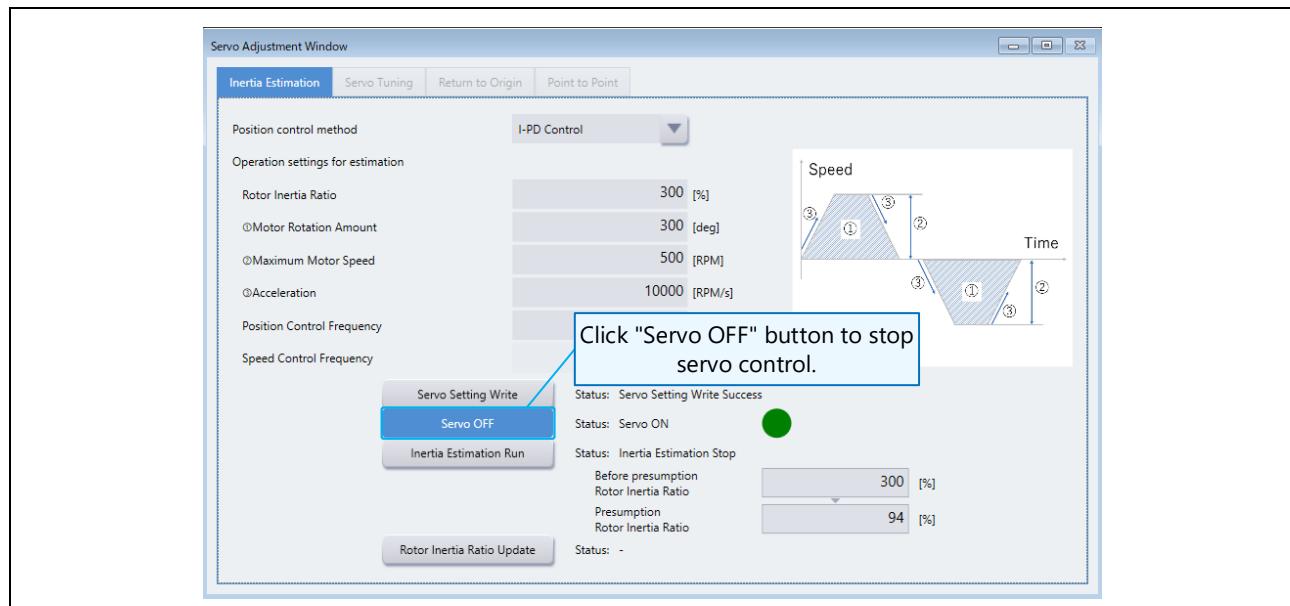


Figure 13-13 Stopping servo control

13.4.4 Performing Servo Adjustment

The procedure of servo adjustment is described below.

13.4.4.1 Set parameters for servo adjustment

The following explains how to set parameters for servo adjustment.

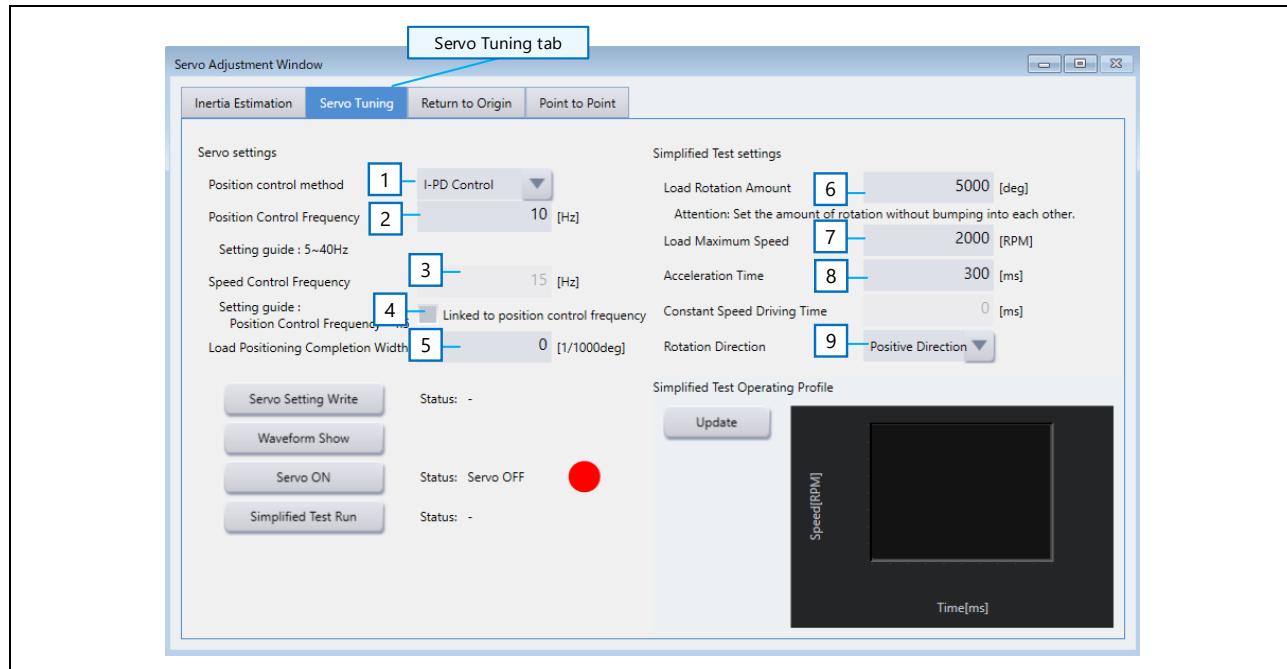


Figure 13-14 Setting servo adjustment parameters view

Table 13-6 Setting servo adjustment parameters

| No. | Name | Explanation |
|-----|--------------------------------------|---|
| 1 | Position control method | Specify the method for position control |
| 2 | Position Control Frequency | Set the position control natural frequency. |
| 3 | Speed Control Frequency | Set the speed control natural frequency. You can enter it when "Position control method" is "PID Control". |
| 4 | Linked to position control frequency | When checked, the position control natural frequency is multiplied by 1.5, and the value is set to the speed control natural frequency automatically. The value set in No.3 is overwritten. |
| 5 | Load Positioning Completion | Set the range of the load positioning completion. |
| 6 | Load Rotation Amount | Set the load rotation amount. |
| 7 | Load Maximum Speed | Set the load maximum speed. |
| 8 | Acceleration Time | Set the acceleration time. |
| 9 | Rotation Direction | Set the rotation direction. |

13.4.4.2 Write parameters for servo adjustment

Press the “Servo Setting Write” button to write the parameters set in 13.4.4.1 Set parameters for servo adjustment.

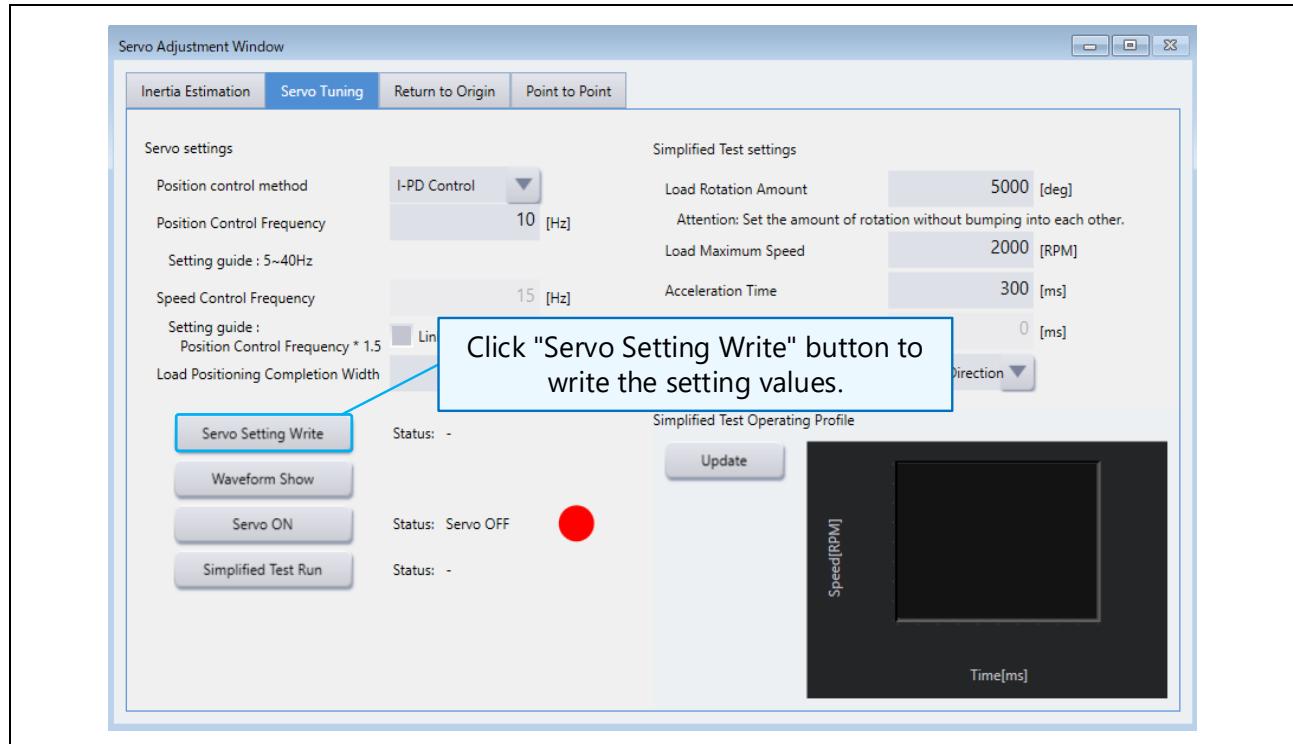


Figure 13-15 Writing servo adjustment parameters

13.4.4.3 Start servo control

Before starting servo adjustment, press the “Servo ON” button to start servo control,

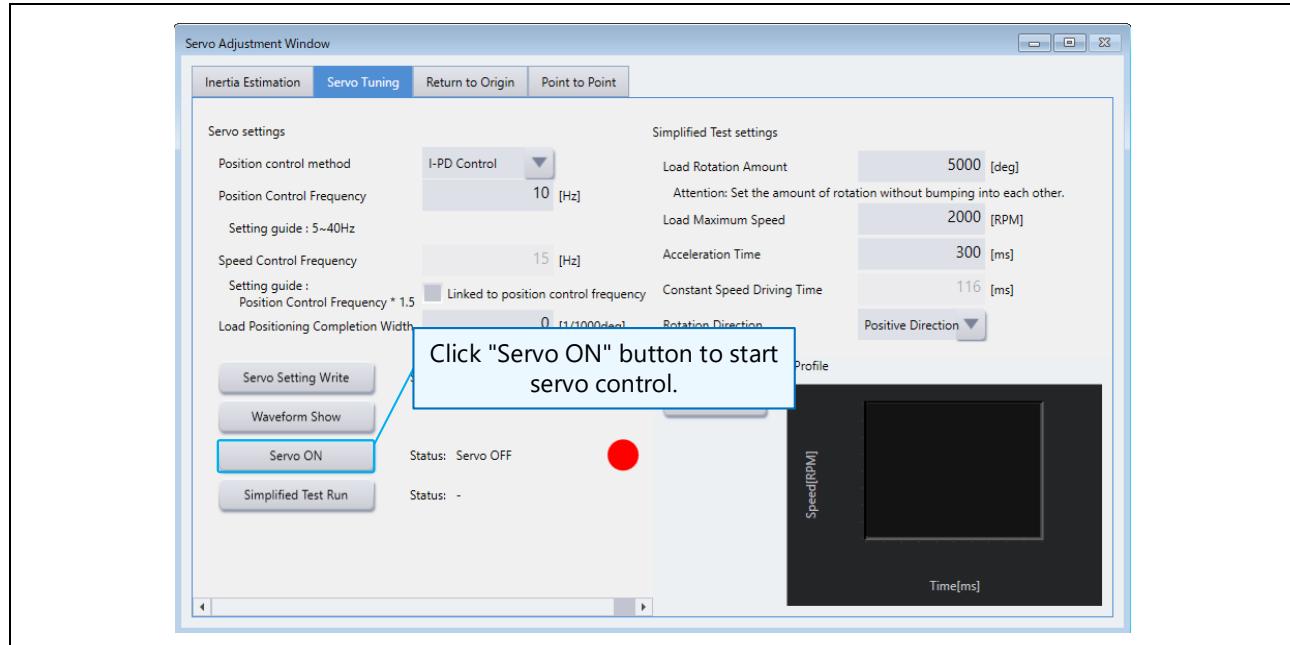


Figure 13-16 Starting servo control

13.4.4.4 Update operation profile

Press the “Update” button to update the operation profile.

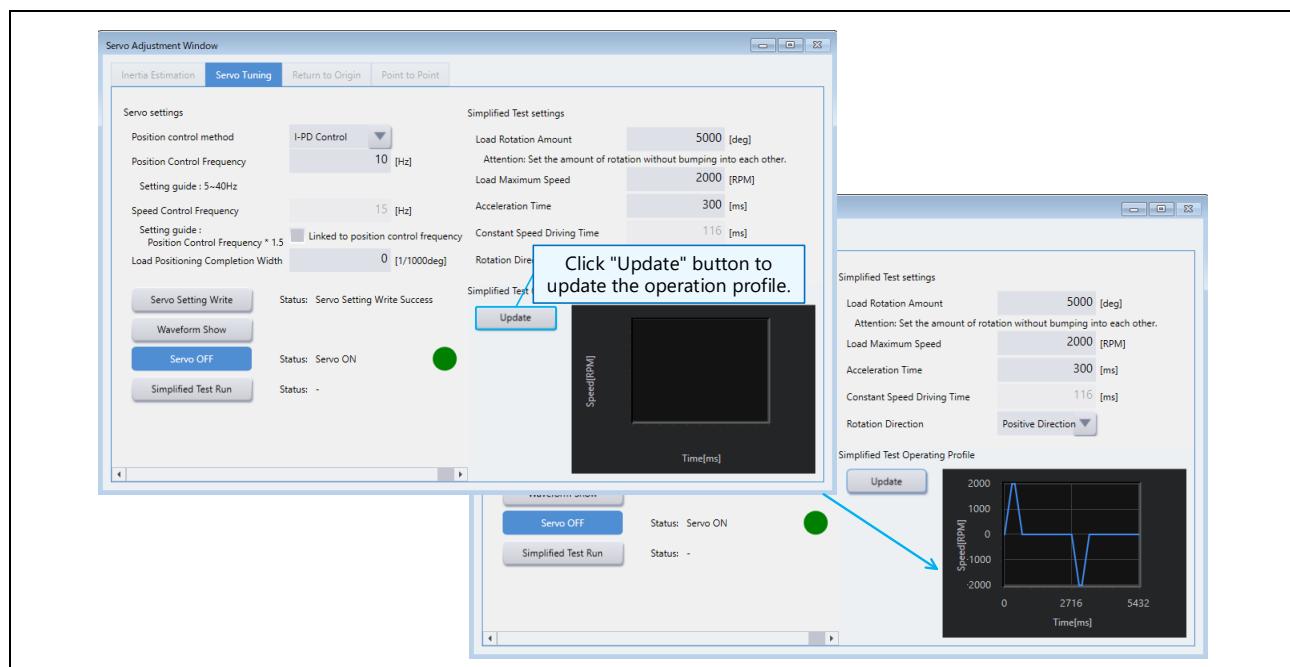


Figure 13-17 Updating operation profile of servo adjustment

13.4.4.5 Start/stop servo adjustment

Press the “Simplified Test Run” button with “Servo ON” to start servo adjustment. Servo adjustment stops automatically when it is completed, you can finish servo adjustment by pressing the “Simplified Test Stop” button.

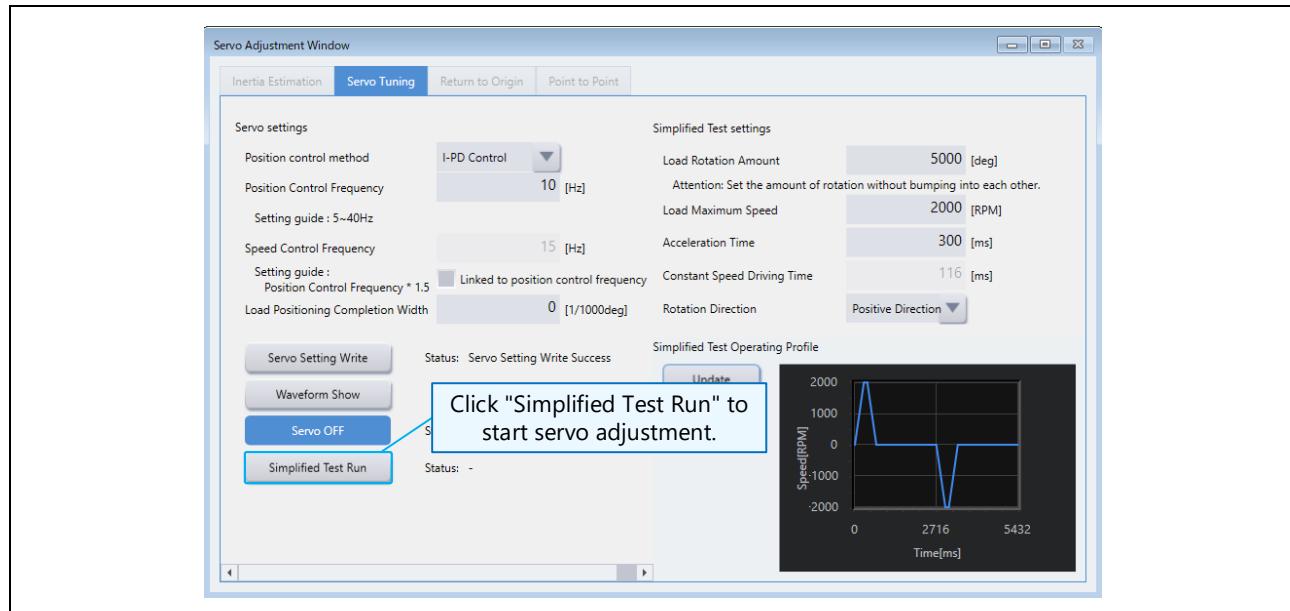


Figure 13-18 Starting/stopping servo adjustment

13.4.4.6 Stop servo control

Press the “Servo OFF” button to stop servo control.

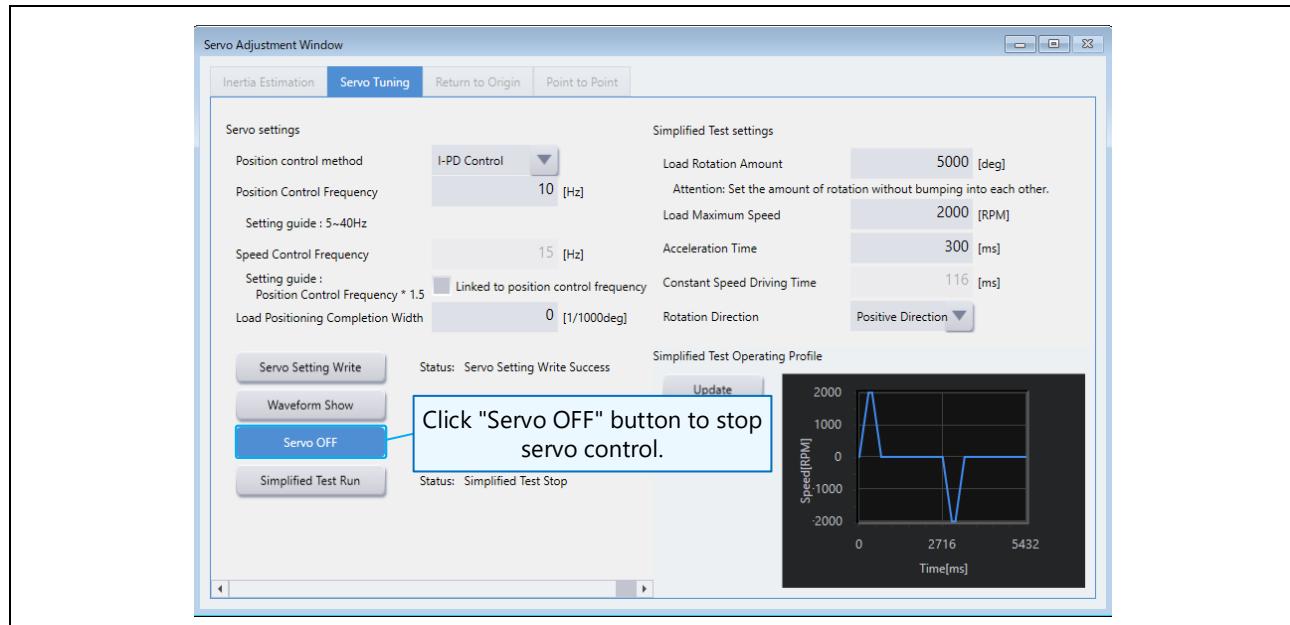


Figure 13-19 Stopping servo control

13.4.5 Performing Return to Origin

The procedure of return to origin is described below.

13.4.5.1 Set parameters for return to origin

The following explains how to set parameters for return to origin.

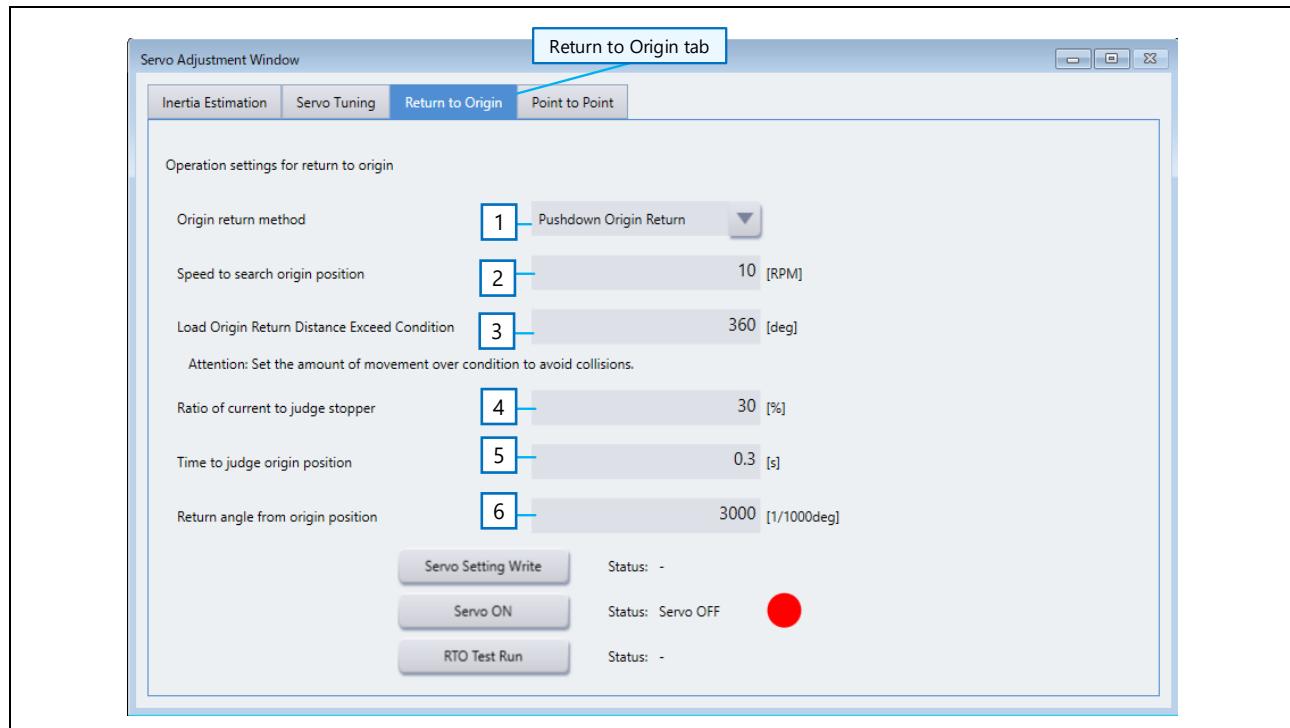


Figure 13-20 Setting parameters for return to origin view

Table 13-7 Setting parameters for return to origin

| No. | Name | Explanation |
|-----|--|--|
| 1 | Origin return method | Specify the method for return to origin. |
| 2 | Load Origin Return Speed | Set the load speed for return to origin. |
| 3 | Load Origin Return Distance Exceed Condition | Set the angle to determine impossibility of search during origin search. |
| 4 | Push Motion Origin Return Operating Current | Set the push motion origin return operating current. |
| 5 | Push Motion End Time | Set the push motion ending time. |
| 6 | Load Push Motion Origin Return Value | Set the return value of the load push motion origin return. |

13.4.5.2 Write parameters for return to origin

Press the “Servo Setting Write” button to write the parameters set in 13.4.5.1 Set parameters for return to origin.

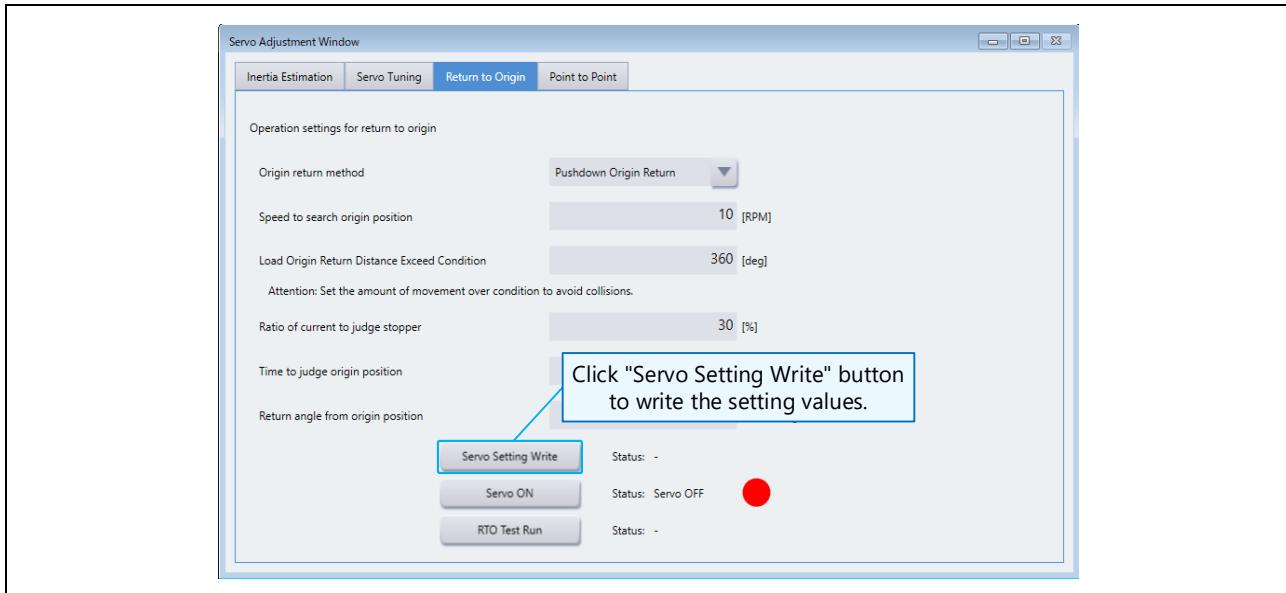


Figure 13-21 Writing parameters for return to origin

13.4.5.3 Start servo control

Before starting the return to origin test, press the “Servo ON” button to start servo control.

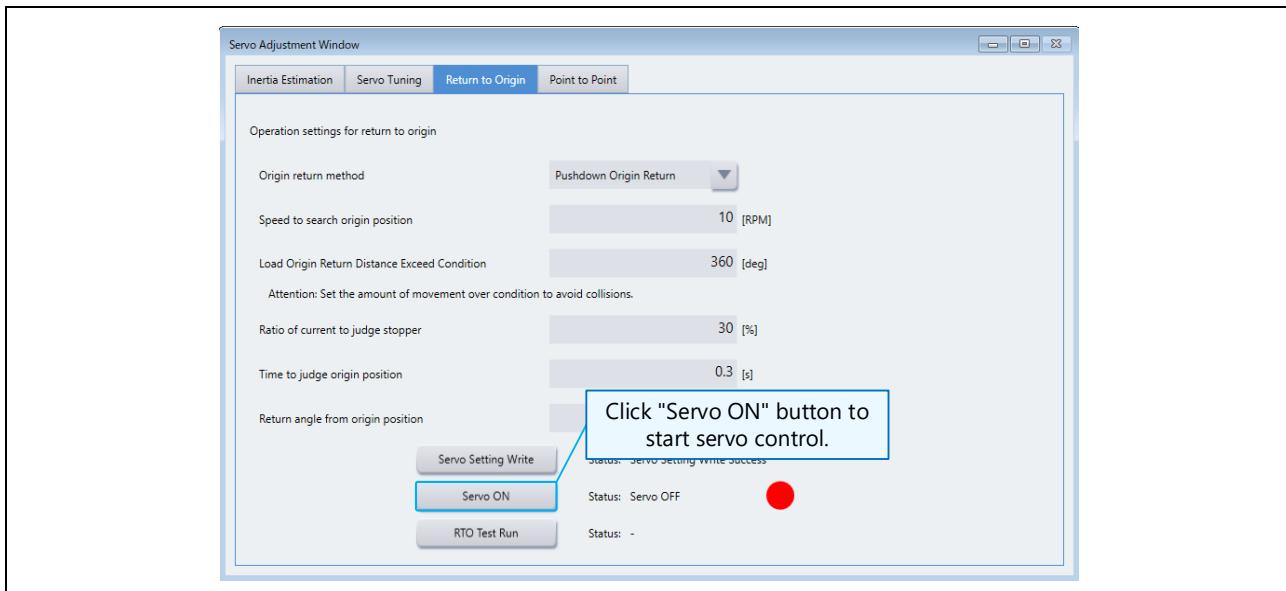


Figure 13-22 Starting servo control

13.4.5.4 Start/stop return to origin

Press the “RTO Test Run” button with “Servo ON” to start the return to origin test. The return to origin test stops automatically when it is completed, you can finish the test by pressing the “RTO Test Stop” button.

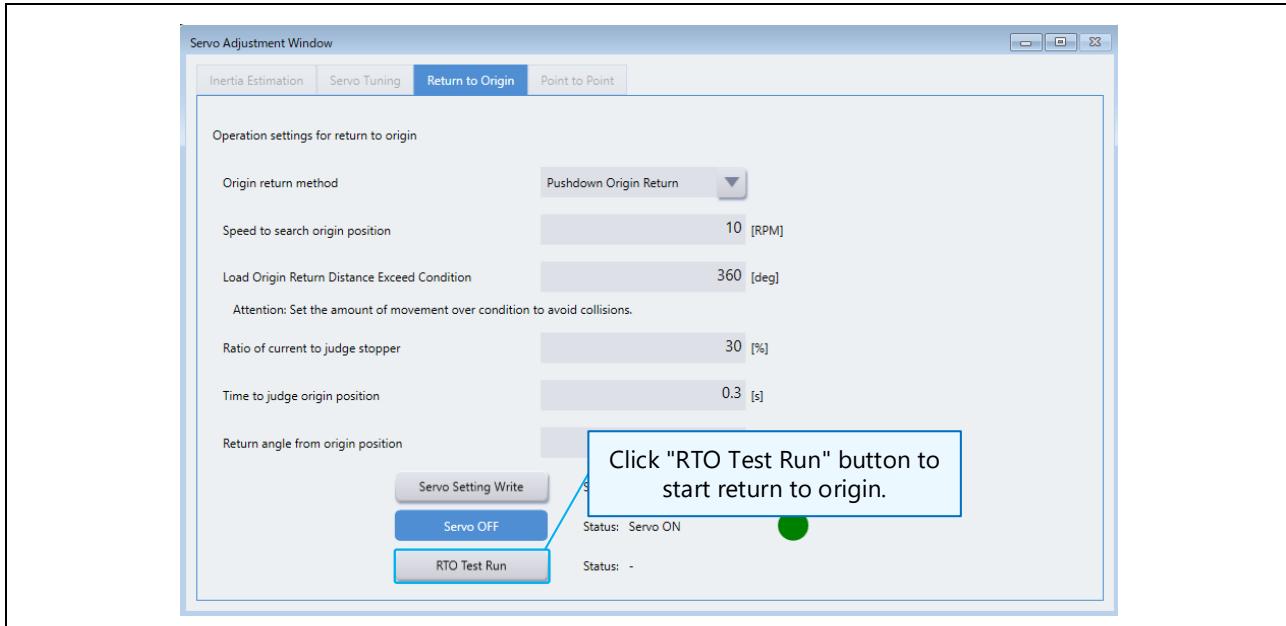


Figure 13-23 Starting/stopping return to origin test

13.4.5.5 Stop servo control

Press the “Servo OFF” button to stop servo control.

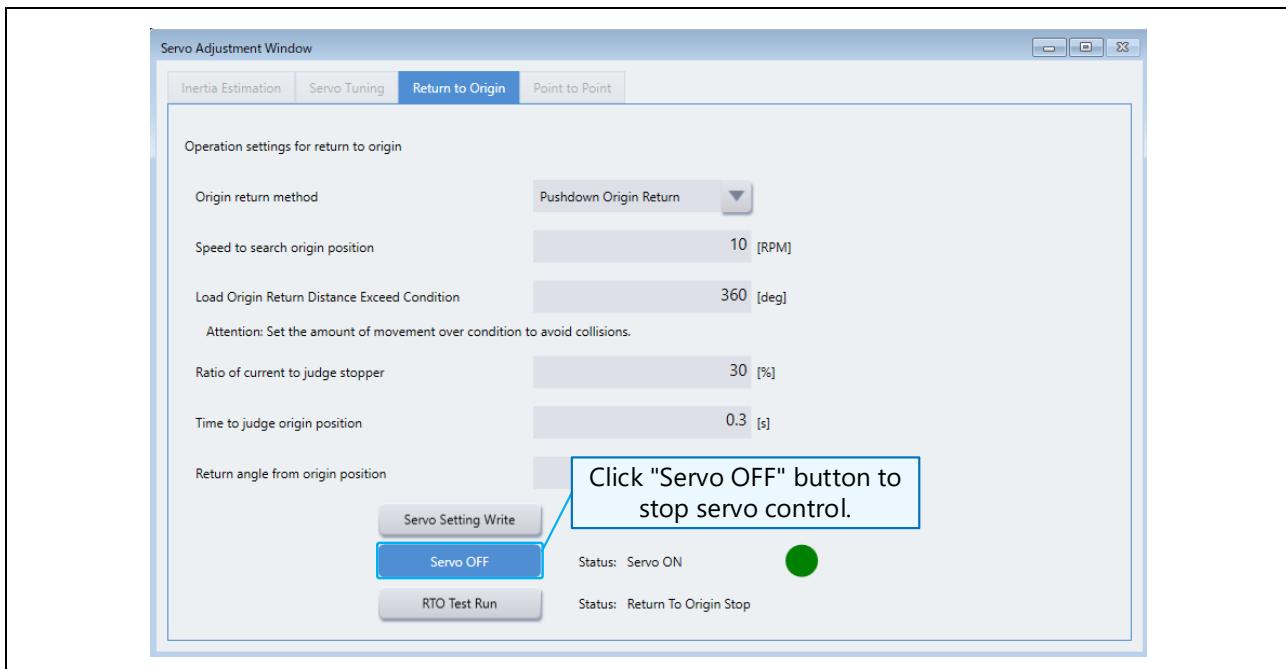


Figure 13-24 Stopping servo control

13.4.6 Performing Point to Point Operation

The procedure of Point to Point operation is described below.

13.4.6.1 Set parameters for Point to Point operation

The following explains how to set parameters for Point to Point operation.

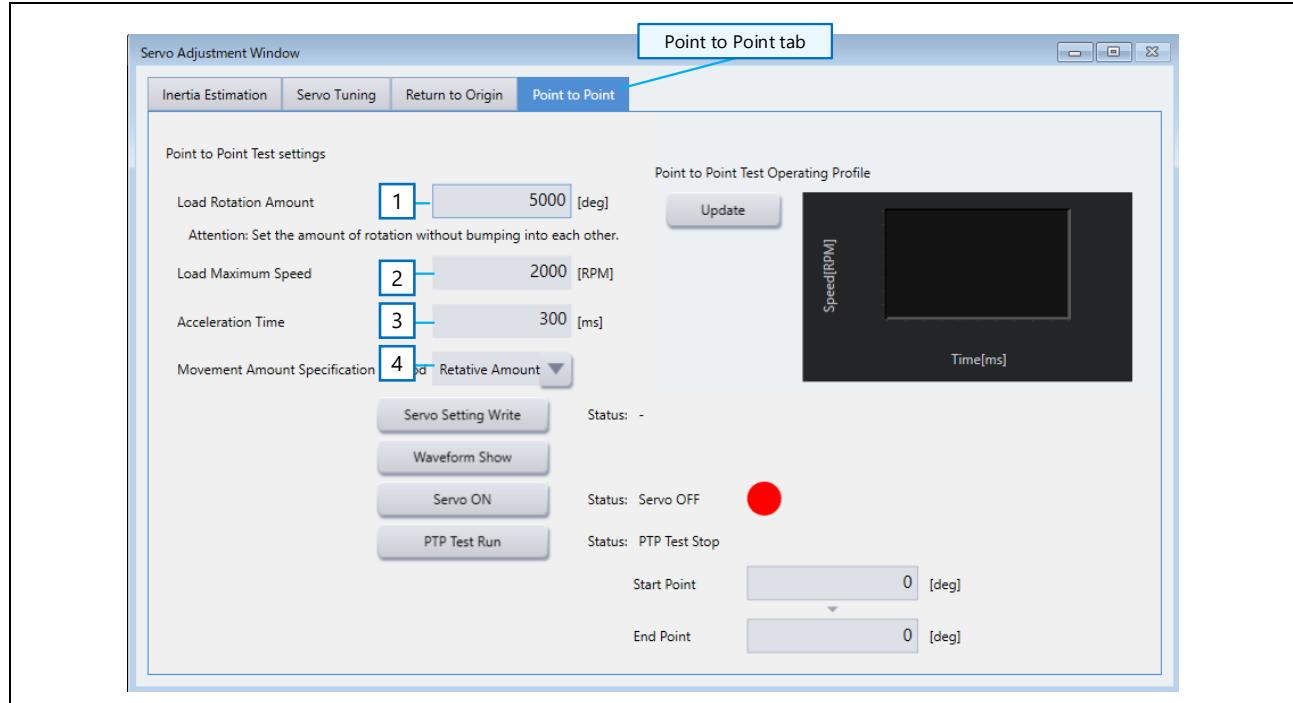


Figure 13-25 Setting parameters for Point to Point operation view

Table 13-8 Setting parameters for Point to Point operation

| No. | Name | Explanation |
|-----|--------------------------------------|--|
| 1 | Load Rotation Amount | Set the load rotation amount. |
| 2 | Load Maximum Speed | Set the load maximum speed. |
| 3 | Acceleration Time | Set the acceleration time. |
| 4 | Movement Amount Specification Method | Set the method for specifying movement amount. |

13.4.6.2 Write parameters for Point to Point operation

Press the “Servo Setting Write” button to write the parameters set in 13.4.6.1 Set parameters for Point to Point operation.

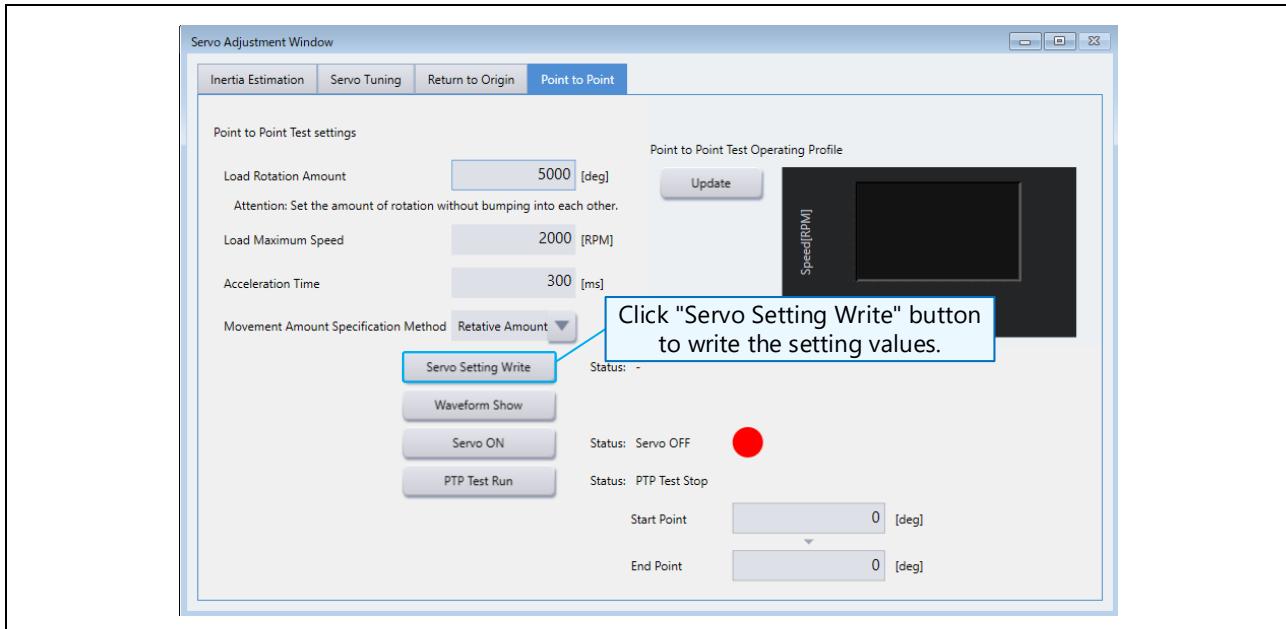


Figure 13-26 Writing parameters for Point to Point operation

13.4.6.3 Start servo control

Before starting Point to Point operation, press the “Servo ON” button to start servo control,

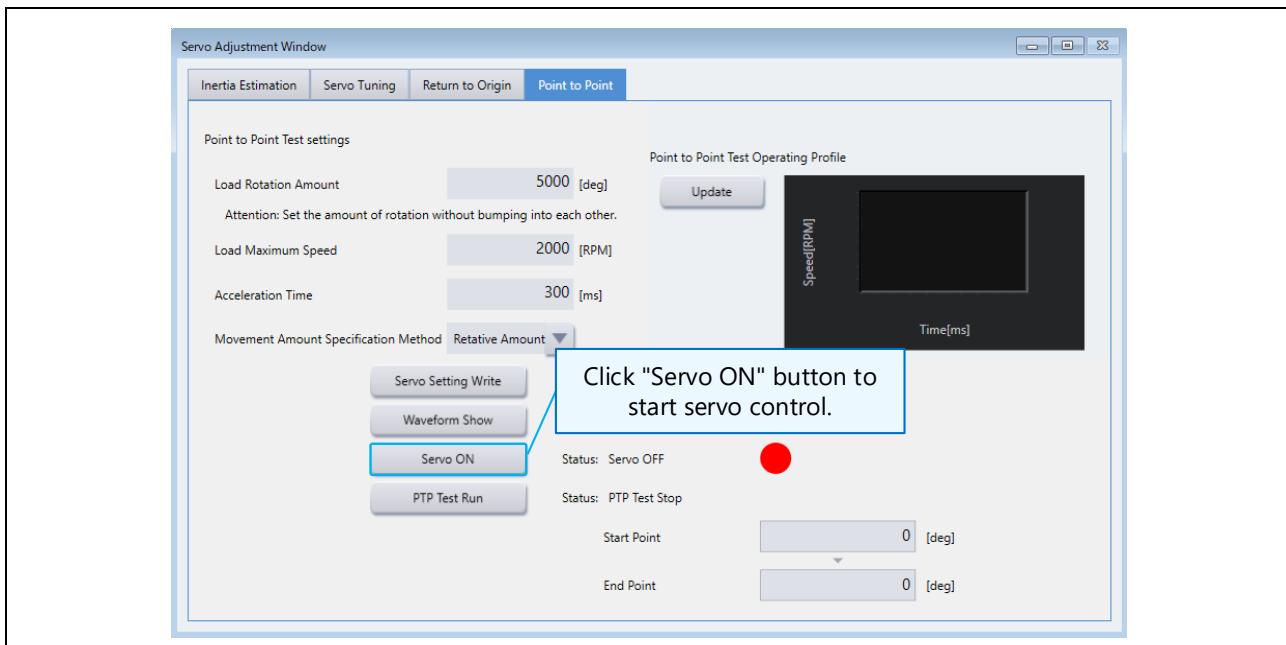


Figure 13-27 Starting servo control

13.4.6.4 Update operation profile

Press the “Update” button to update the operation profile.

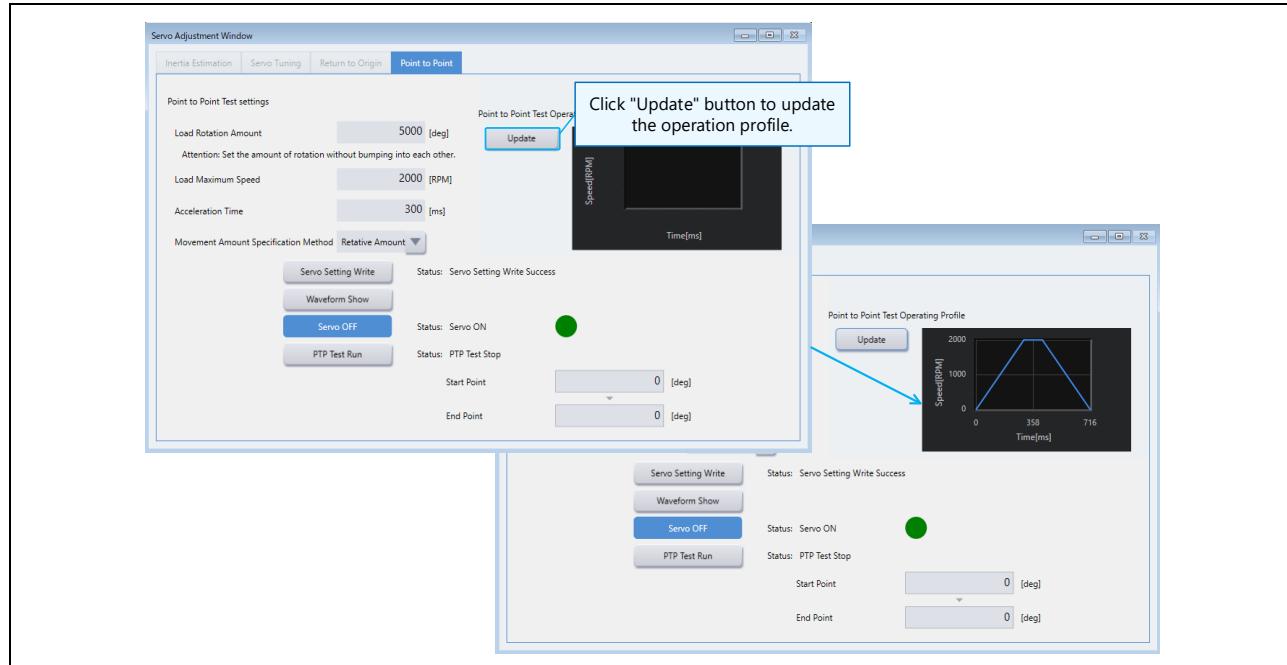


Figure 13-28 Updating operation profile of Point to Point test

13.4.6.5 Start/stop Point to Point operation

Press the “PTP Test Run” button with “Servo ON” to start Point to Point operation. Point to Point operation stops automatically when it is completed, you can finish Point to Point operation by pressing “PTP Test Stop” button.

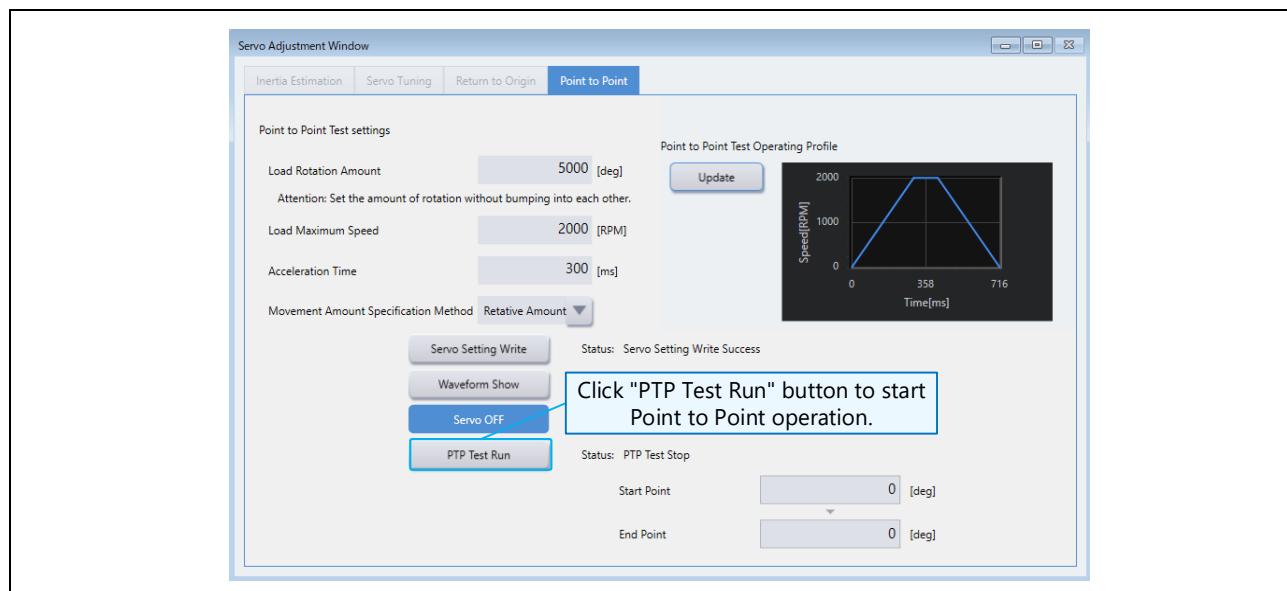


Figure 13-29 Starting/stopping Point to Point operation

13.4.6.6 Stop servo control

Press the “Servo OFF” button to stop servo control.

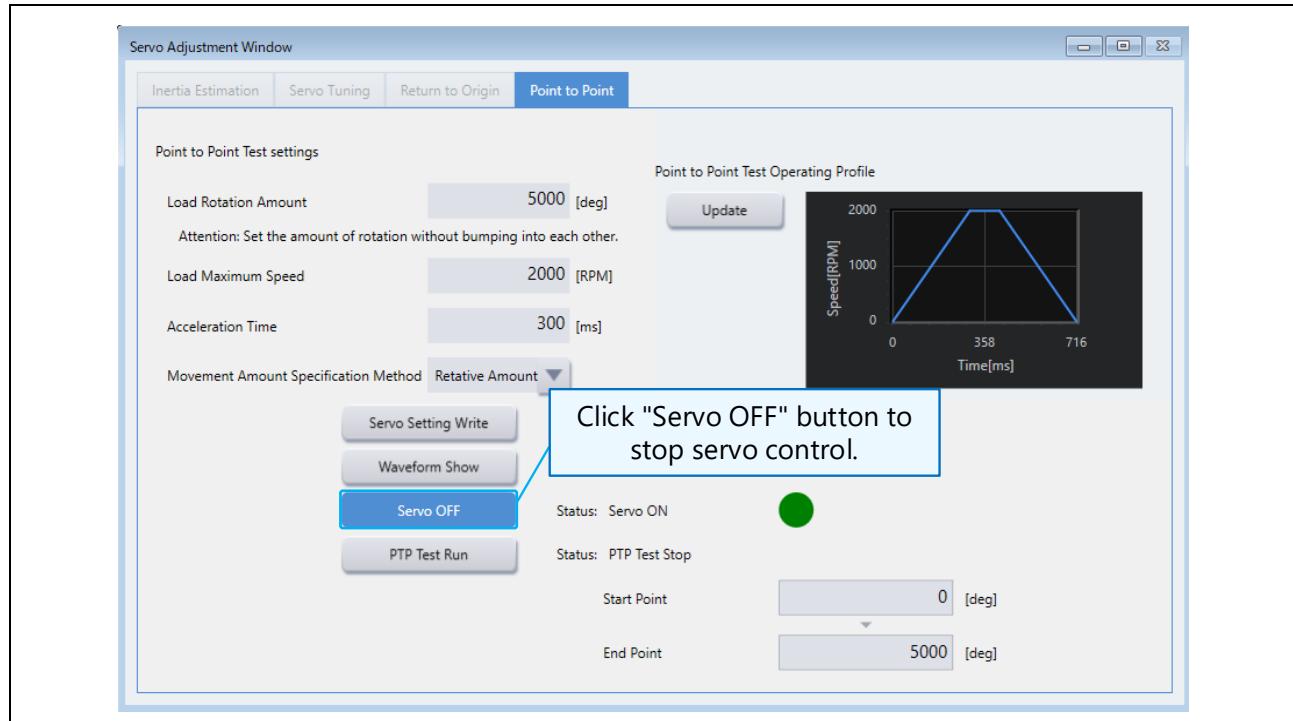


Figure 13-30 Stopping servo control

13.4.7 Displaying Waveform Window

To display Waveform Window, press the “Waveform Show” button on Servo Tuning or Point to Point tab.

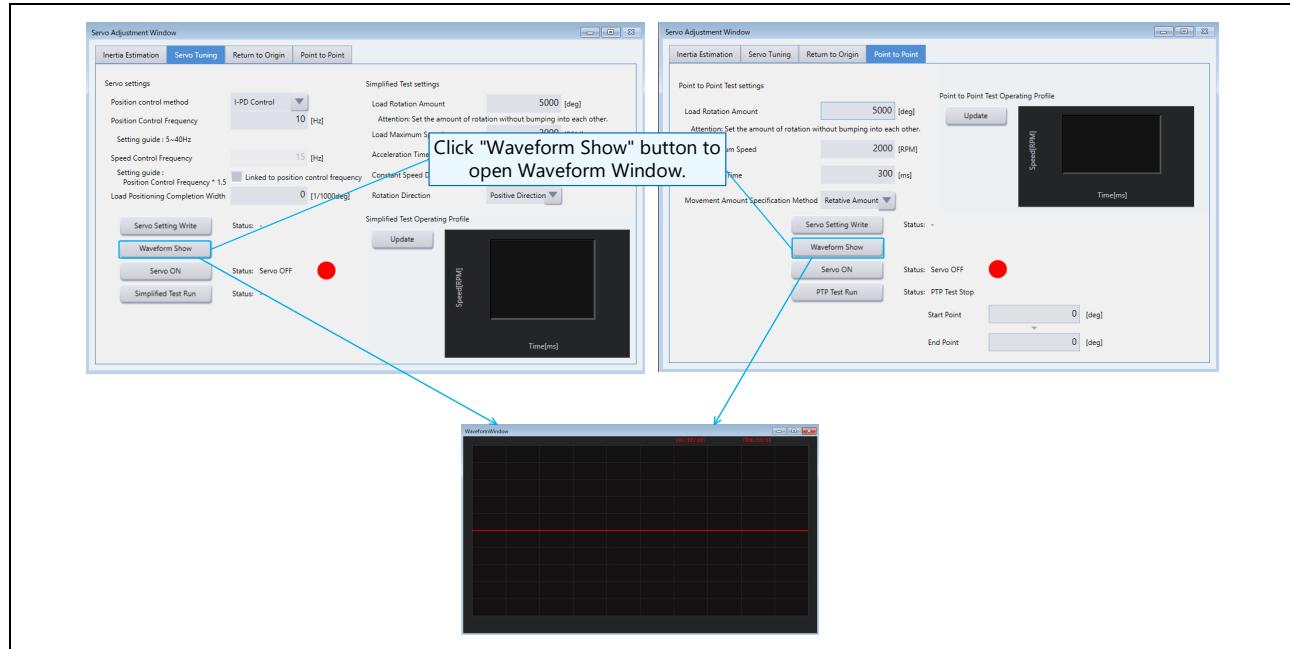


Figure 13-31 Displaying Waveform Window

When you switch tabs of Servo Tuning or Point to Point, the waveform obtained most recently is displayed. When RMW is terminated, the waveform is cleared.

14. Tuner Tool

14.1 Overview

Tuner tool automatically measures specific parameters (e.g resistance, inductance) of a permanent magnet synchronous motor and adjusts various control parameters (PI control gain etc.) required for encoder position control or sensorless speed control.

Tuner tool is available only when the tuning function is supported by the control program. “Tuner” will be displayed as selectable in the “Select Tool” on the Main Window when it is available.

Note : This tool is not guaranteed to work effectively for all motor.

14.2 Features

- Provides two tuning modes: Manual and Easy.
- Tuning result (adjusted parameters) can be output as a PDF report or as a header file in the Renesas control program.

14.3 Window Structure

The window structure of Tuner tool is shown below.

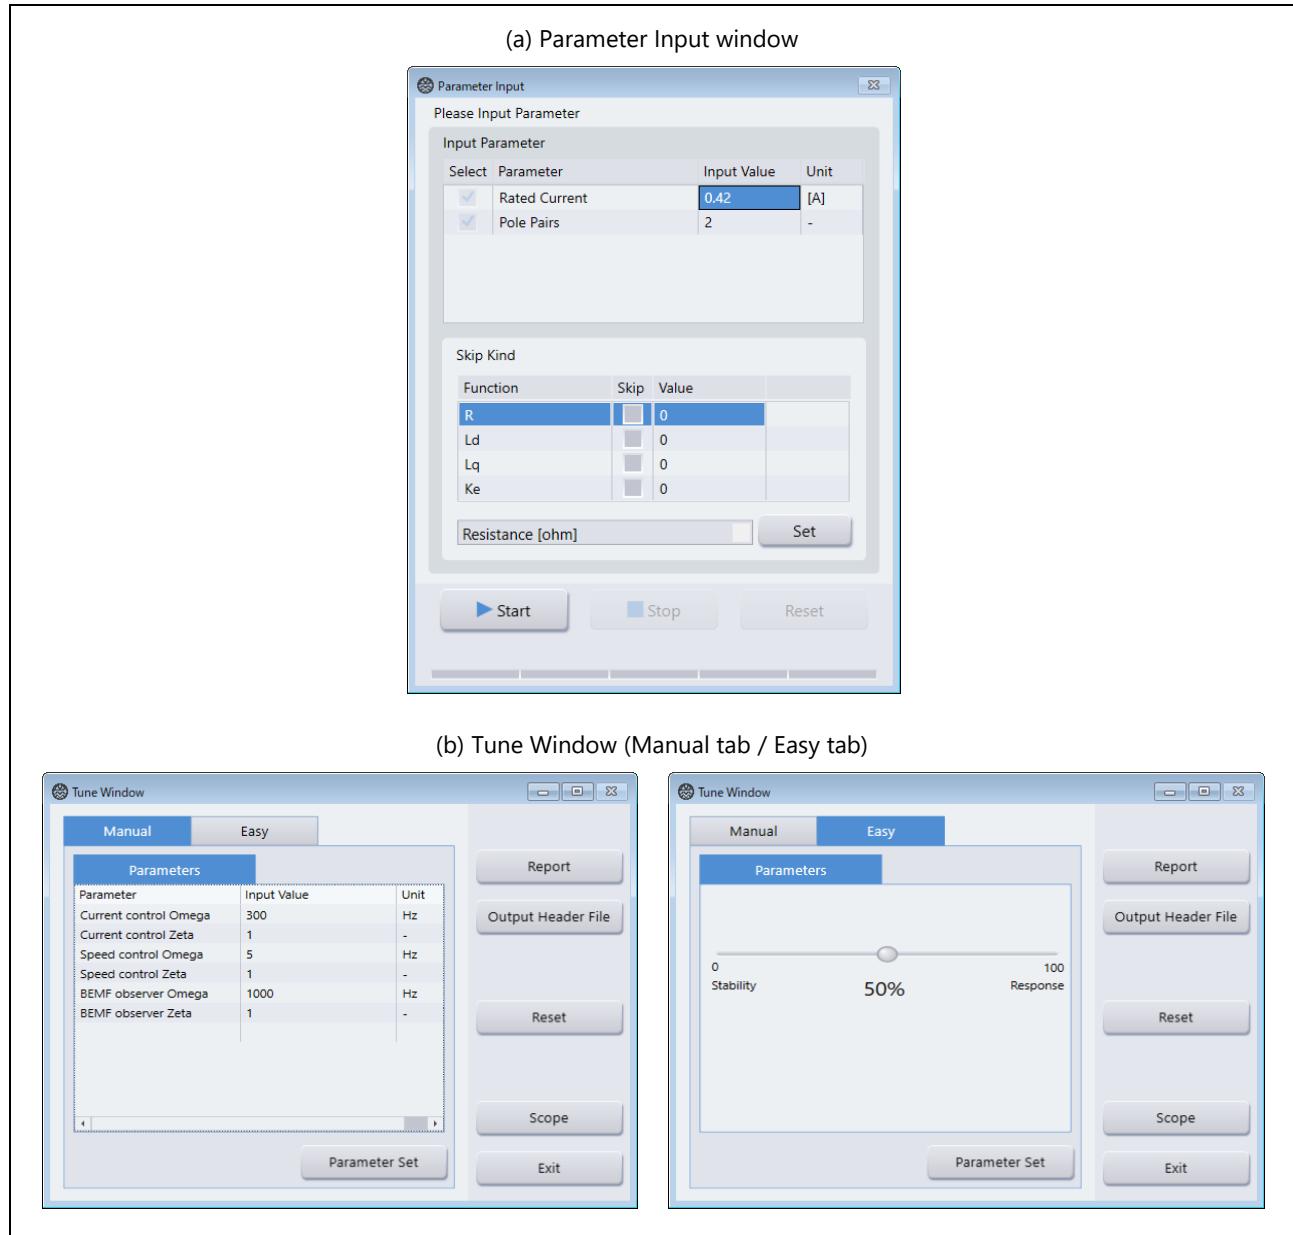


Figure 14-1 Tuner tool window

14.4 Explanation of Operation

This chapter describes the tuning procedure. For details on the functions on each window, see section 14.5, Function Description.

14.4.1 Preparation

14.4.1.1 Write execution file

(a) For execution files attached with Renesas Motor Workbench

Write the execution file for Tuner (mot format, hex format for RA MCUs) to the CPU board

- R***_***_SPM_ENCD_FOC_TUNER_***.mot (position control with encoder)
- R***_***_SPM_LESS_FOC_TUNER_***.mot (sensorless speed control)

(b) For sample program (project format) provided by Renesas

Write the built execution file for Tuner to the CPU board.

14.4.1.2 Start Renesas Motor Workbench

Click the short-cut icon on the desktop to start-up Renesas Motor Workbench.

14.4.1.3 Load the RMT file

Load the RMT file for Tuner to Renesas Motor Workbench.

- R***_***_SPM_ENCD_FOC_TUNER_***.rmt (position control with encoder)
- R***_***_SPM_LESS_FOC_TUNER_***.rmt (sensorless speed control)

14.4.1.4 Establish communication

Establish communication between Renesas Motor Workbench and the evaluation board.

14.4.1.5 Start Tuner tool

Select Tuner tool from Select Tool of Renesas Motor Workbench and start it.

14.4.2 Performing Tuning

14.4.2.1 Input parameters for tuning

When you start Tuner tool, the "Parameter Input" window will be displayed. In the Input Parameter section above, enter the rated current and pole pairs of the motor referring to the specifications of the motor.

If you know the properties of the motor in advance and want to skip some tuning, specify those parameters in the Skip Kind field at the bottom (for details, refer to "14.5.1 Skip Function (Parameter Input window)").

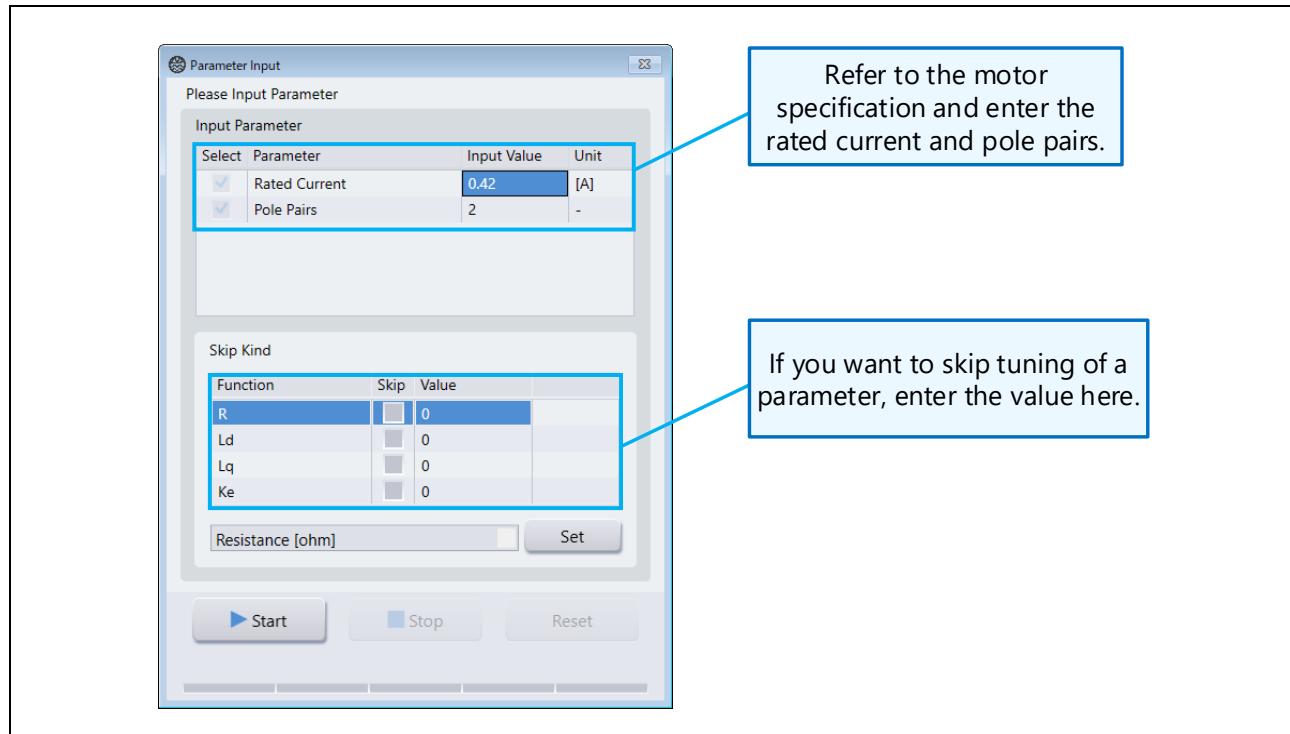


Figure 14-2 Parameter Input window

14.4.2.2 Perform tuning

Click the Start button to start tuning, and the progress bar will be displayed while tuning. To stop tuning, click the "Stop" button. When tuning is completed, "Tune Window" will be displayed.

Note : The motor rotates during tuning.

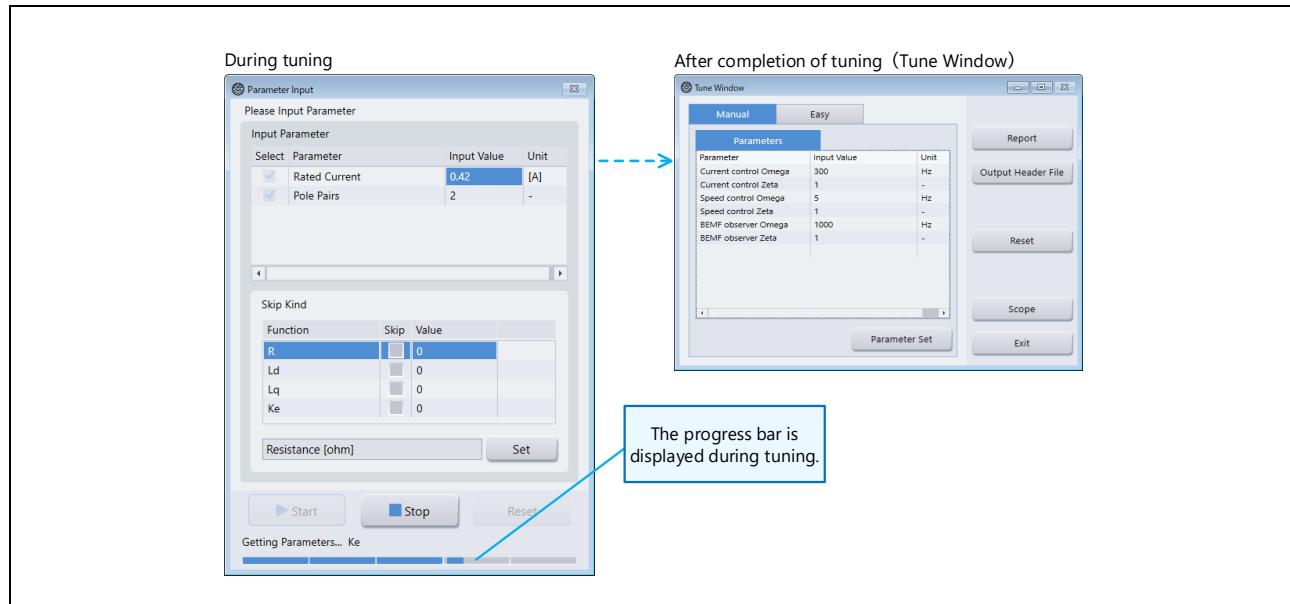


Figure 14-3 Tune Window display under tuning and after tuning

If an error occurs during tuning, check the error message and click the "Reset" button.

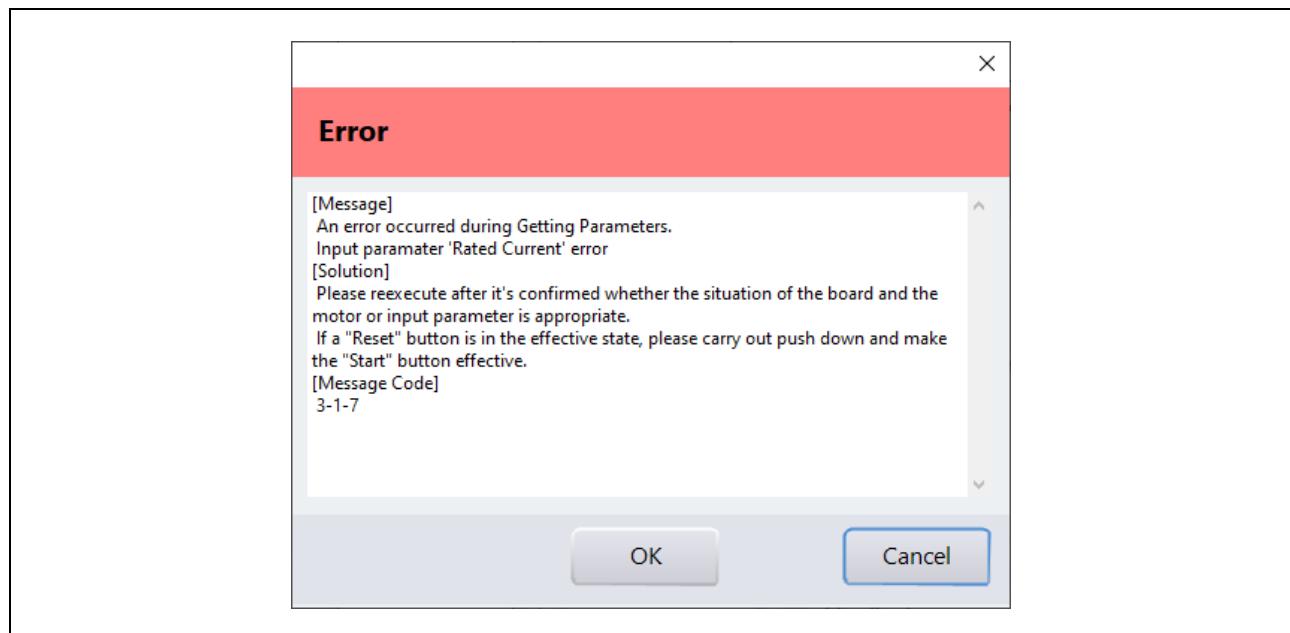


Figure 14-4 Error message example

14.4.2.3 Confirm tuning result

Click the “Report” button on the “Tune Window” and confirm details about tuning on the “Result Report” screen.

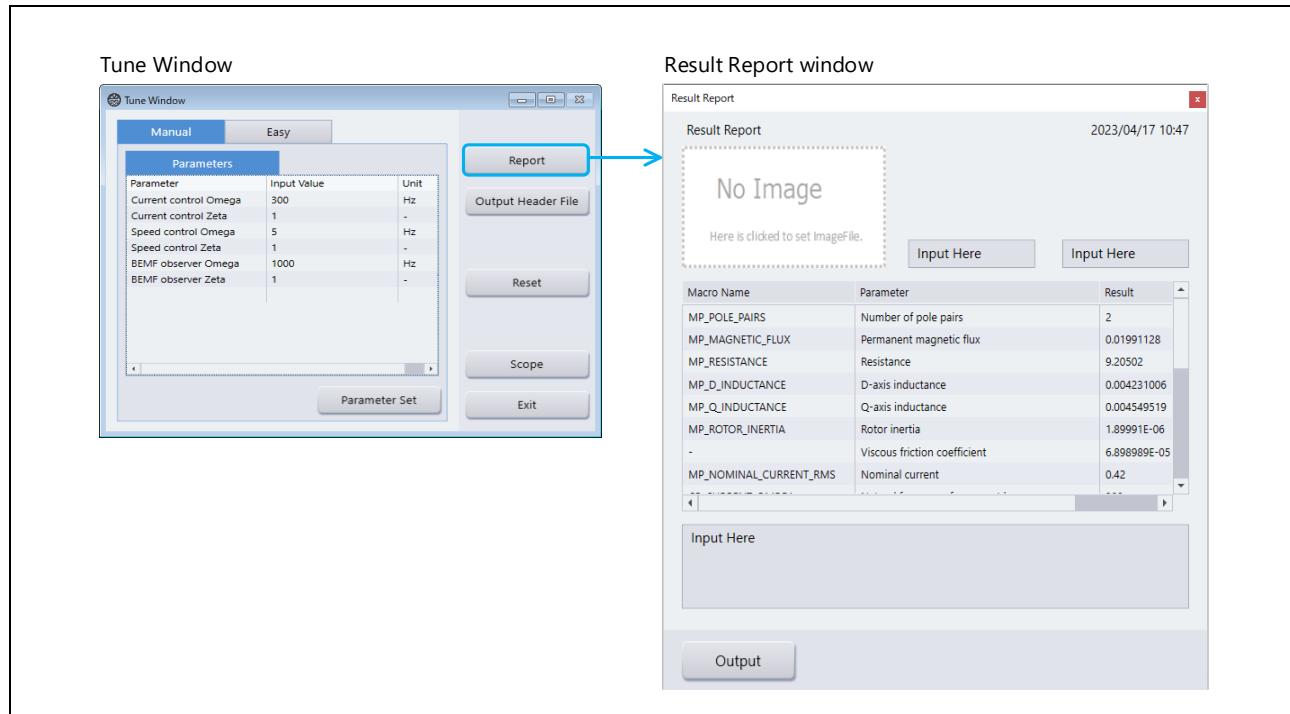


Figure 14-5 Result Report view

14.4.2.4 Terminate tuning

Click the "Exit" button on "Tune Window" to return to the Parameter Input window.

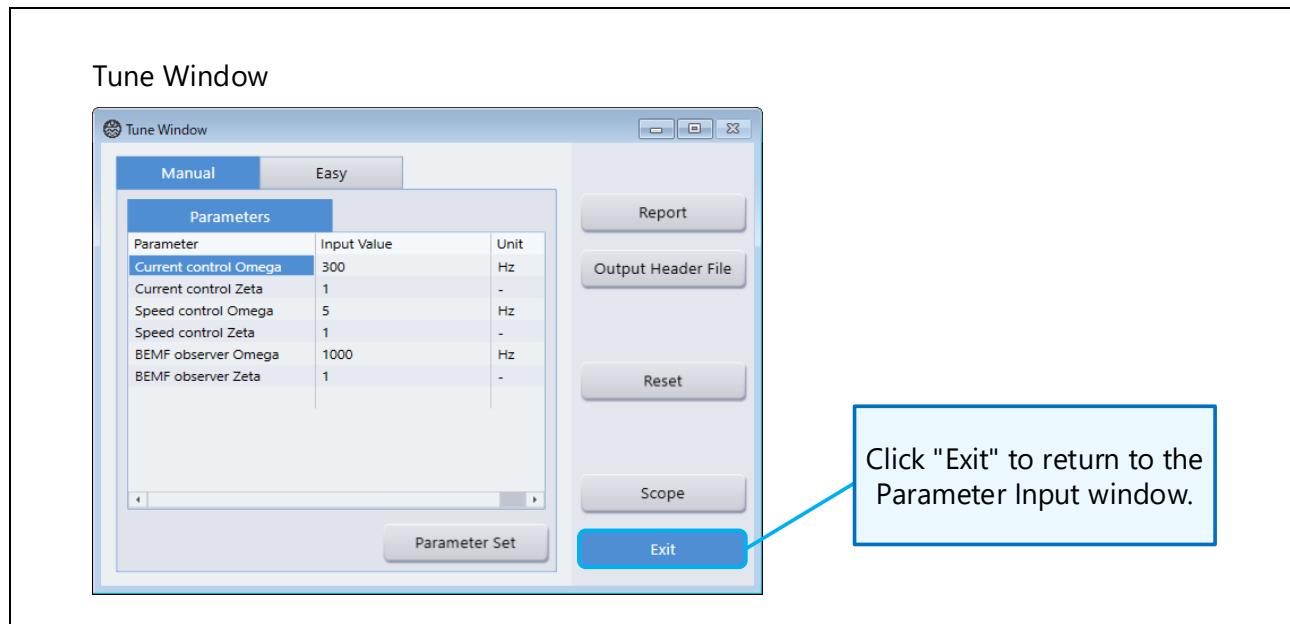


Figure 14-6 Exit button

14.4.3 Checking Operation

14.4.3.1 [Only for encoder program] Input of encoder pulse number per rotation.

Input of encoder pulse number per rotation on “Tune Window” and click the “Parameter SET” button.

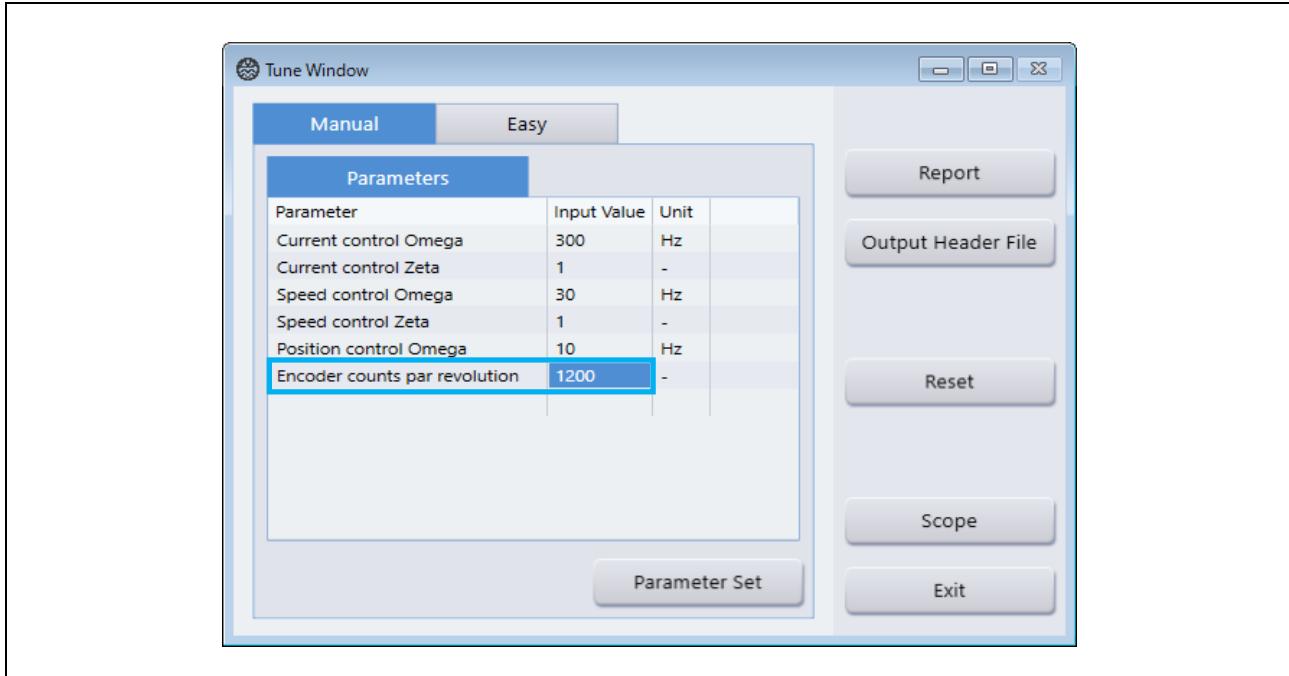


Figure 14-7 Input of encoder pulse number (encoder program only)

14.4.3.2 Test drive of motor

Drive the motor with "Drive Test" of Scope window.

Click the "Scope" button on Tune Window, Scope Window will be displayed. Select "Drive Test" in Control's Operation and click the "RUN" button to drive the motor in speed control mode.

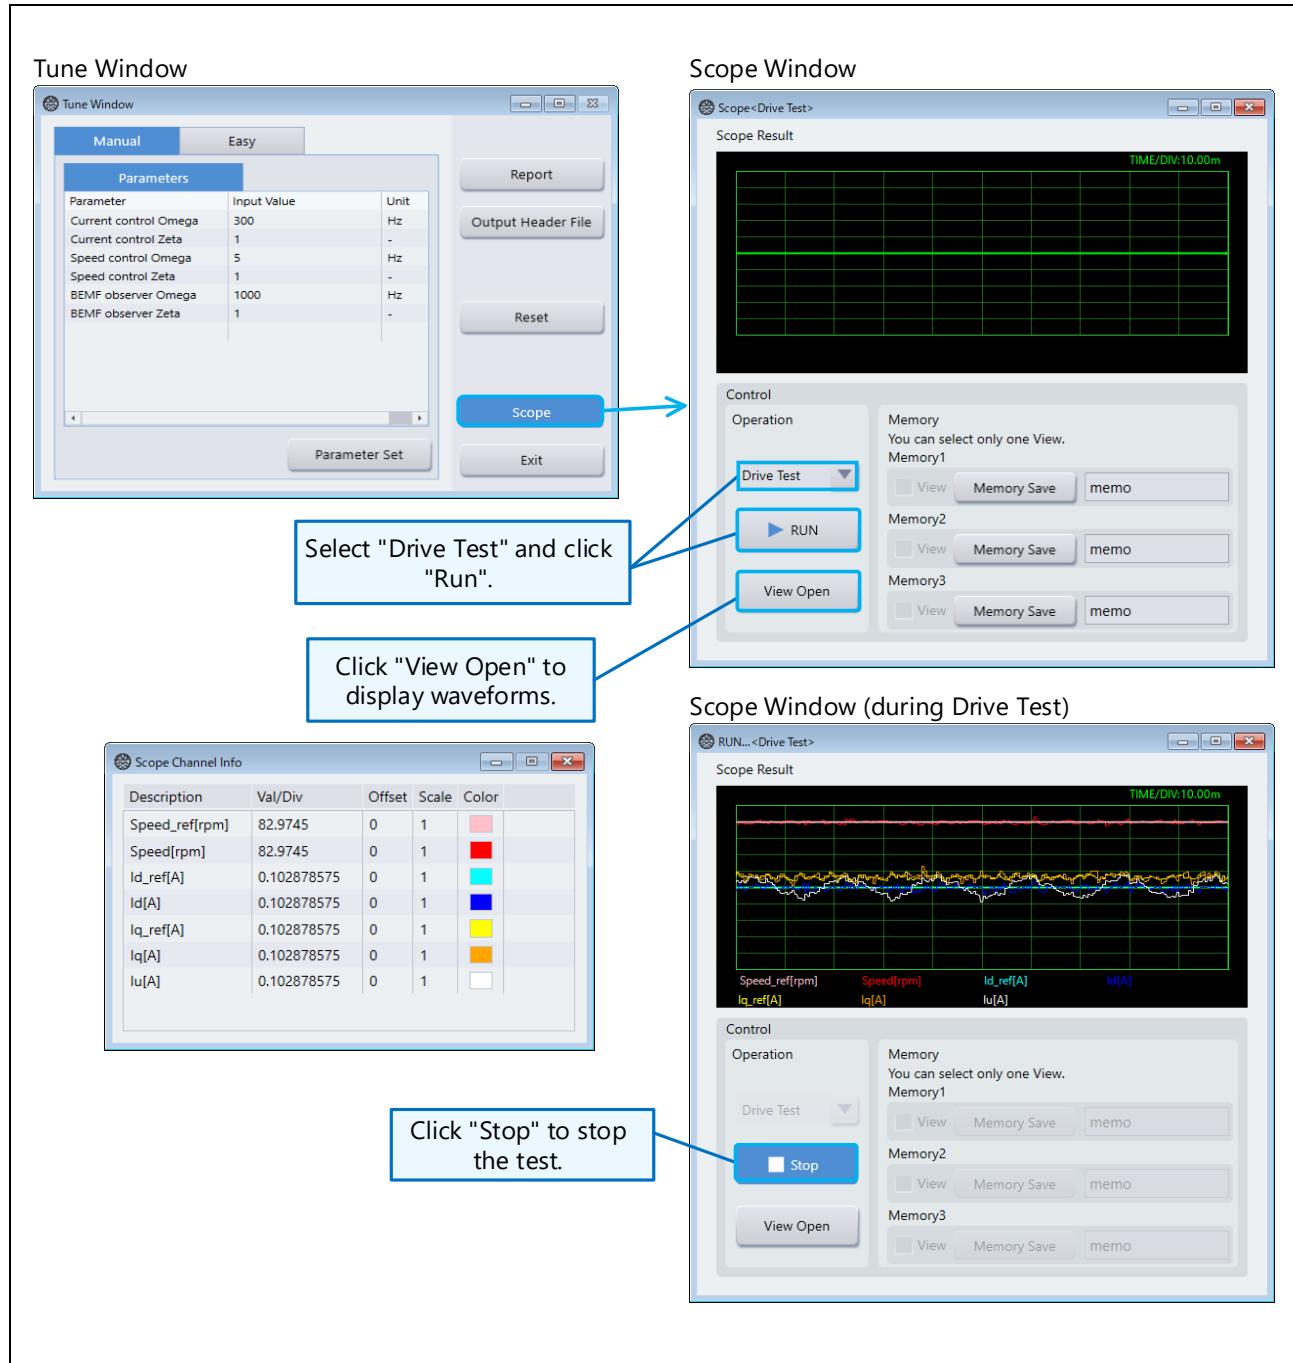


Figure 14-8 Drive Test view

14.4.3.3 Other driving test

In the Control's Operation section, you can select Position Control for encoder-position control and Starting for sensorless-speed control.

In Position Control, you can check the operation in the position control mode.

In "Starting, you can check the operation when starting sensorless vector control.

Note In 14.4.3.2 and 14.4.3.3, the waveform is displayed automatically. However, the waveform may not be fully displayed depending on the connected motor.

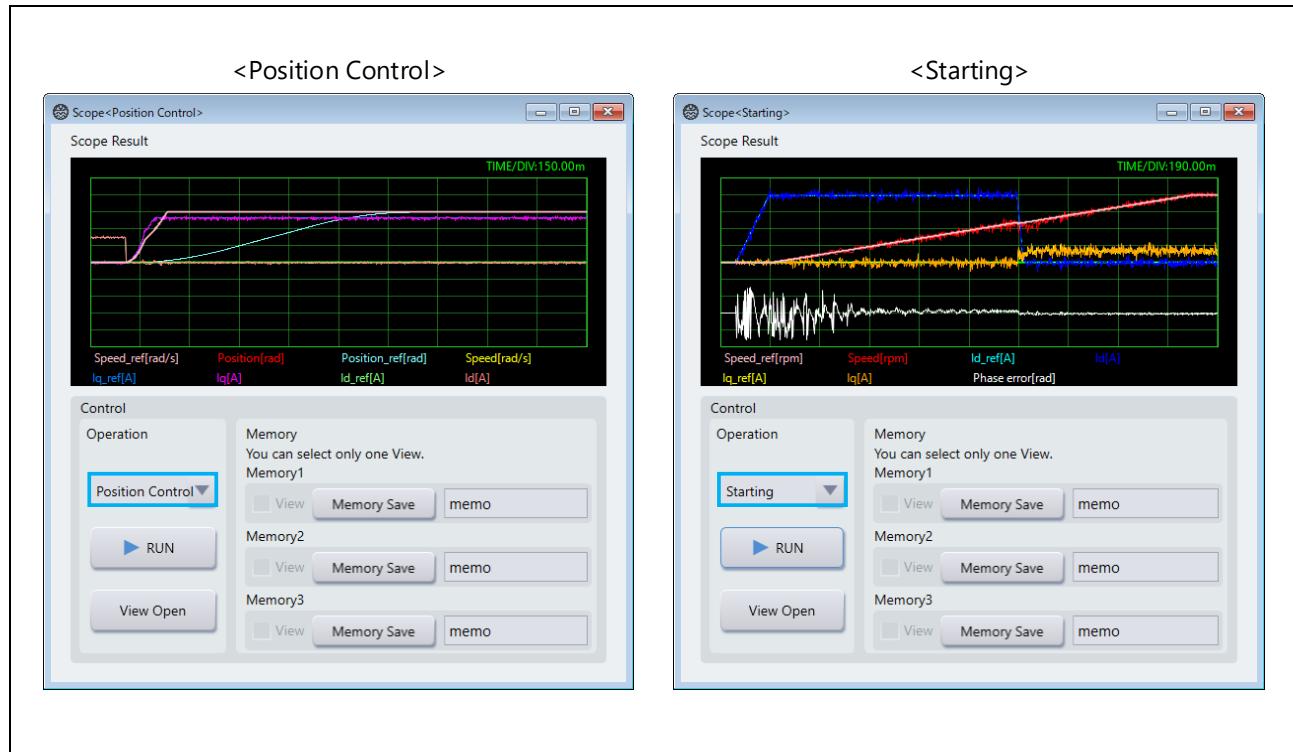


Figure 14-9 Position Control / Starting

14.4.4 Terminating Tuner tool

If you are testing the motor drive, press the "STOP" button to finish the test. Click the "Exit" button on Tune Window to return to the Parameter Input window. After that, return to Main Window by clicking the "Main Window" button, or operate the tool switch button.

14.5 Function Description

14.5.1 Skip Function (Parameter Input Window)

You can skip measurement of some parameters by entering those tuning parameters such as the resistive, d-axis/q-axis inductance, and magnetic flux before tuning.

In the “Skip Kind” area of the Parameter Input window, select the Skip checkbox of the parameter to be omitted and enter the parameter. When you have finished entry, press the “SET” button.

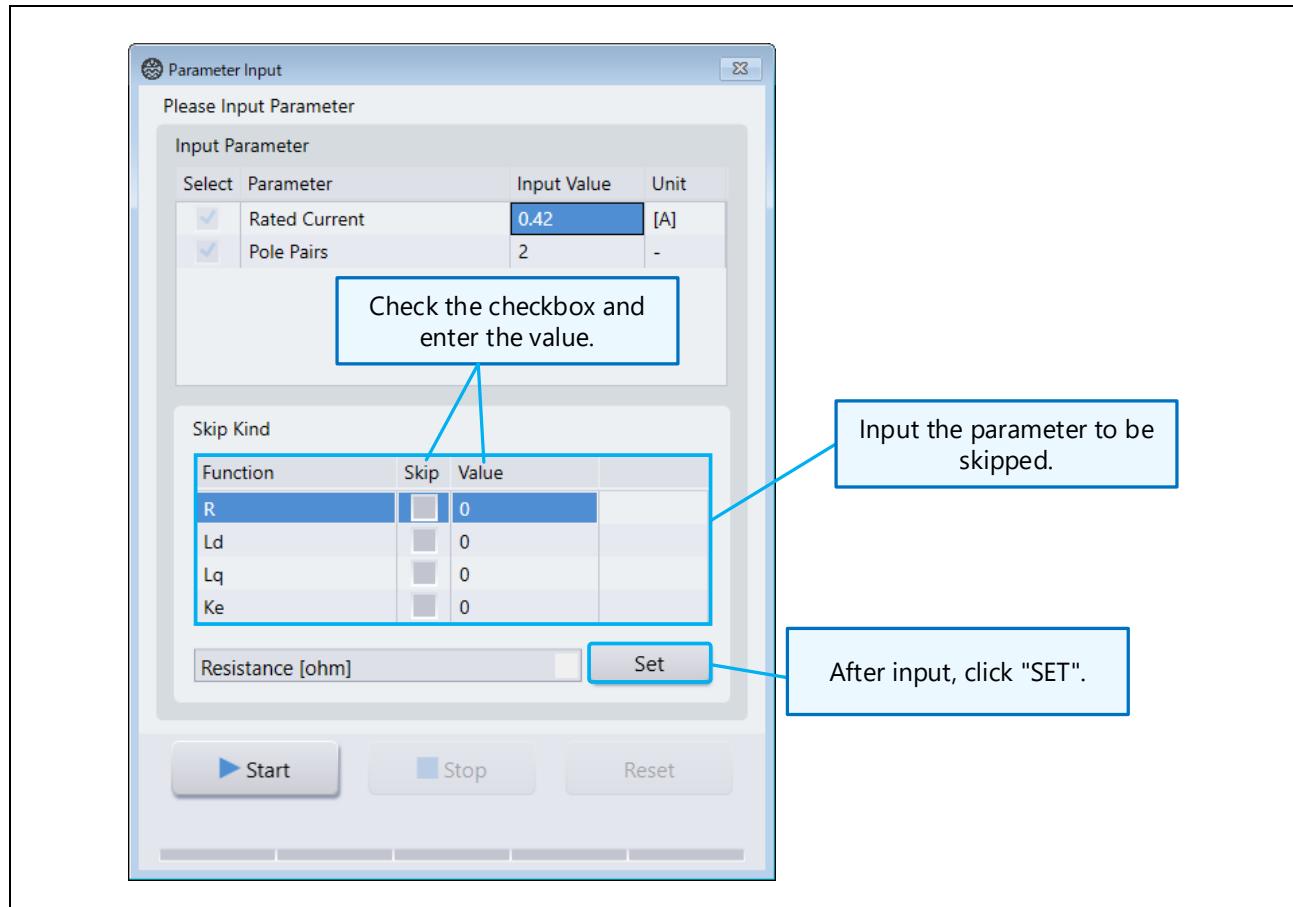


Figure 14-10 Skip Input view

14.5.2 Tuning Control Parameters (Tune Window)

"Tune Window" is a window for control parameter setting. There are two ways to set parameters. You can switch tabs between Manual tab and Easy tab.

On the Manual tab, you can adjust the natural frequency of each feedback loop and damping coefficient to be used and reflect the adjustment to the control.

On the Easy tab, you can adjust parameters that are set to 50% as default by moving the slider from side to side and reflect the adjustment to the control.

To reflect the adjustment to the control, click the "Parameter SET" button.

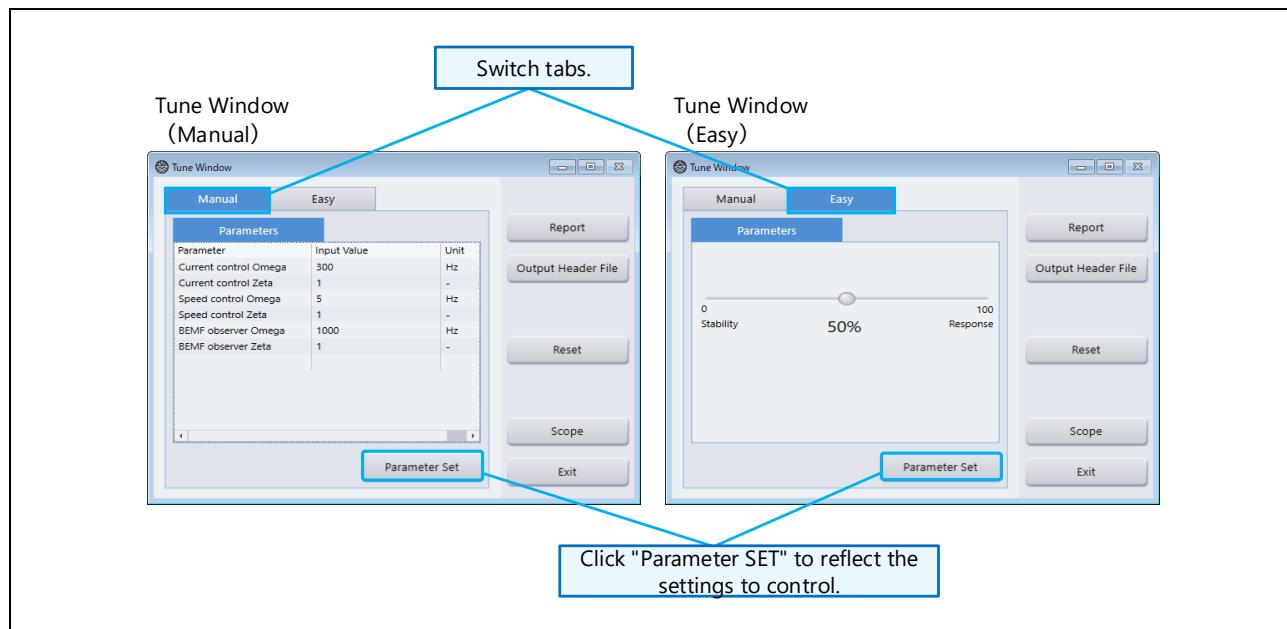


Figure 14-11 Manual and Easy Tab

Table 14-1 Tuning parameter list (Manual tab)

| Display | Adjustable parameter | Remark |
|-------------------------------|---|-------------------------------|
| Current control Omega | Natural frequency related to current control [Hz] | |
| Current control Zeta | Damping coefficient related to current control | |
| Speed control Omega | Natural frequency related to speed control [Hz] | |
| Speed control Zeta | Damping coefficient related to speed control | |
| BEMF observer Omega | Natural frequency related induced-voltage estimation [Hz] | Sensorless speed control only |
| BEMF observer Zeta | Damping coefficient related induced-voltage estimation | Sensorless speed control only |
| Position control Omega | Natural frequency related to position control [Hz] | Encoder position control only |
| Encoder counts per revolution | Encoder pulse counts per revolution | Encoder position control only |

14.5.3 Reset Function (Tune Window)

If an error occurs in the driving program after tuning, select the reset type then reset. You can display the selection screen by clicking "Reset" button in Tune Window.

- All Reset

Resets all adjustment parameters. Parameter Input window will be displayed, so perform tuning again.

- Error Reset

Resets only the error state and the tuned adjustment parameters are retained.

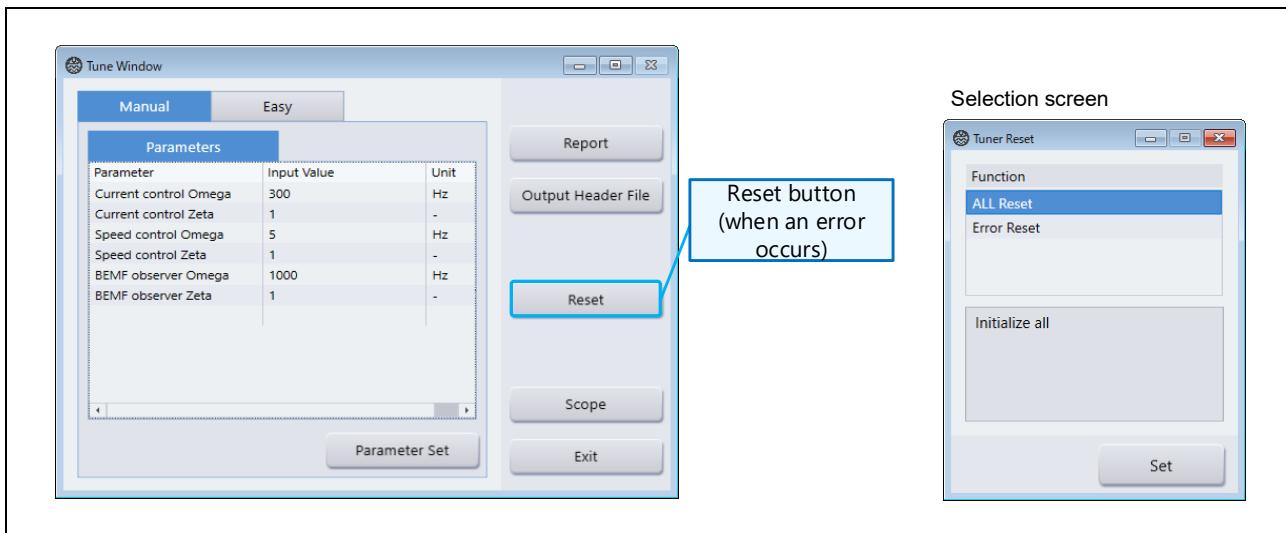


Figure 14-12 Reset function

14.5.4 Header Output (Tune Window)

The tuning result can be output in the header file format of the Renesas motor control program.

Click the "Output Header File" button on Tune Window, and the saving window for "r_mtr_control_parameter.h" and "r_mtr_motor_parameter.h" will be displayed.

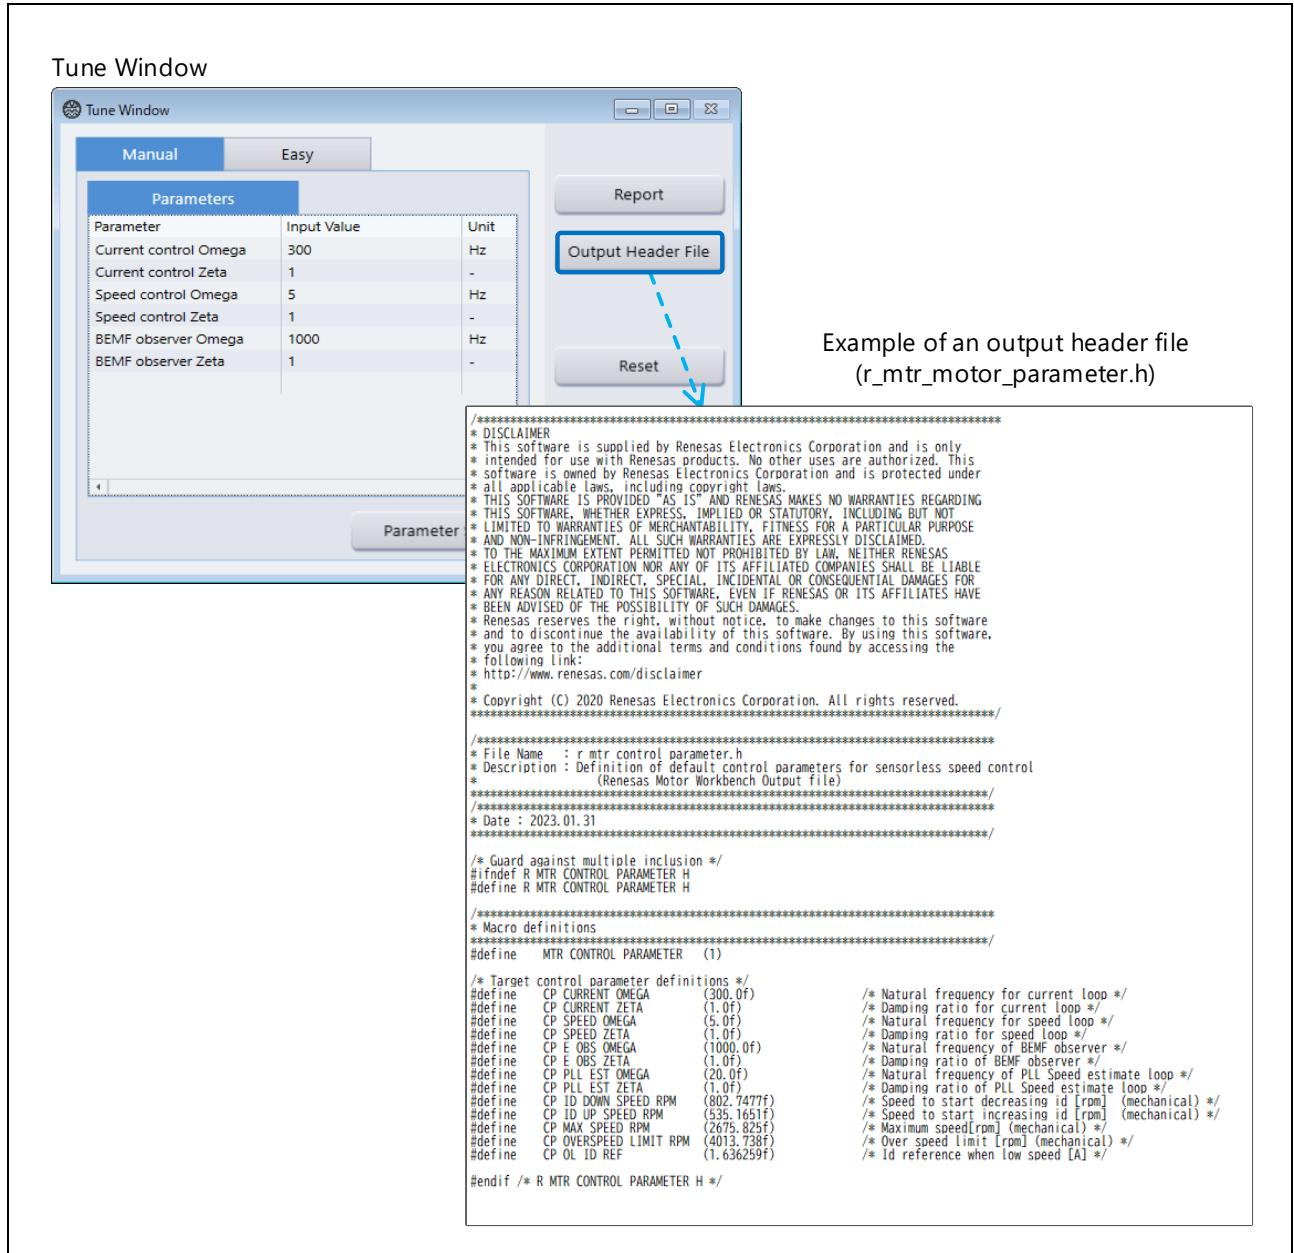


Figure 14-13 Output Header File button

For the encoder position control program, refer to the application note and specify the encoder pulse count separately when including into the sample program.

14.5.5 PDF Output (Tune Window)

Click the “Report” button on “Tune Window” to display the Result Report window. You can output the tuning result in a PDF file with the “Output” button on this window.

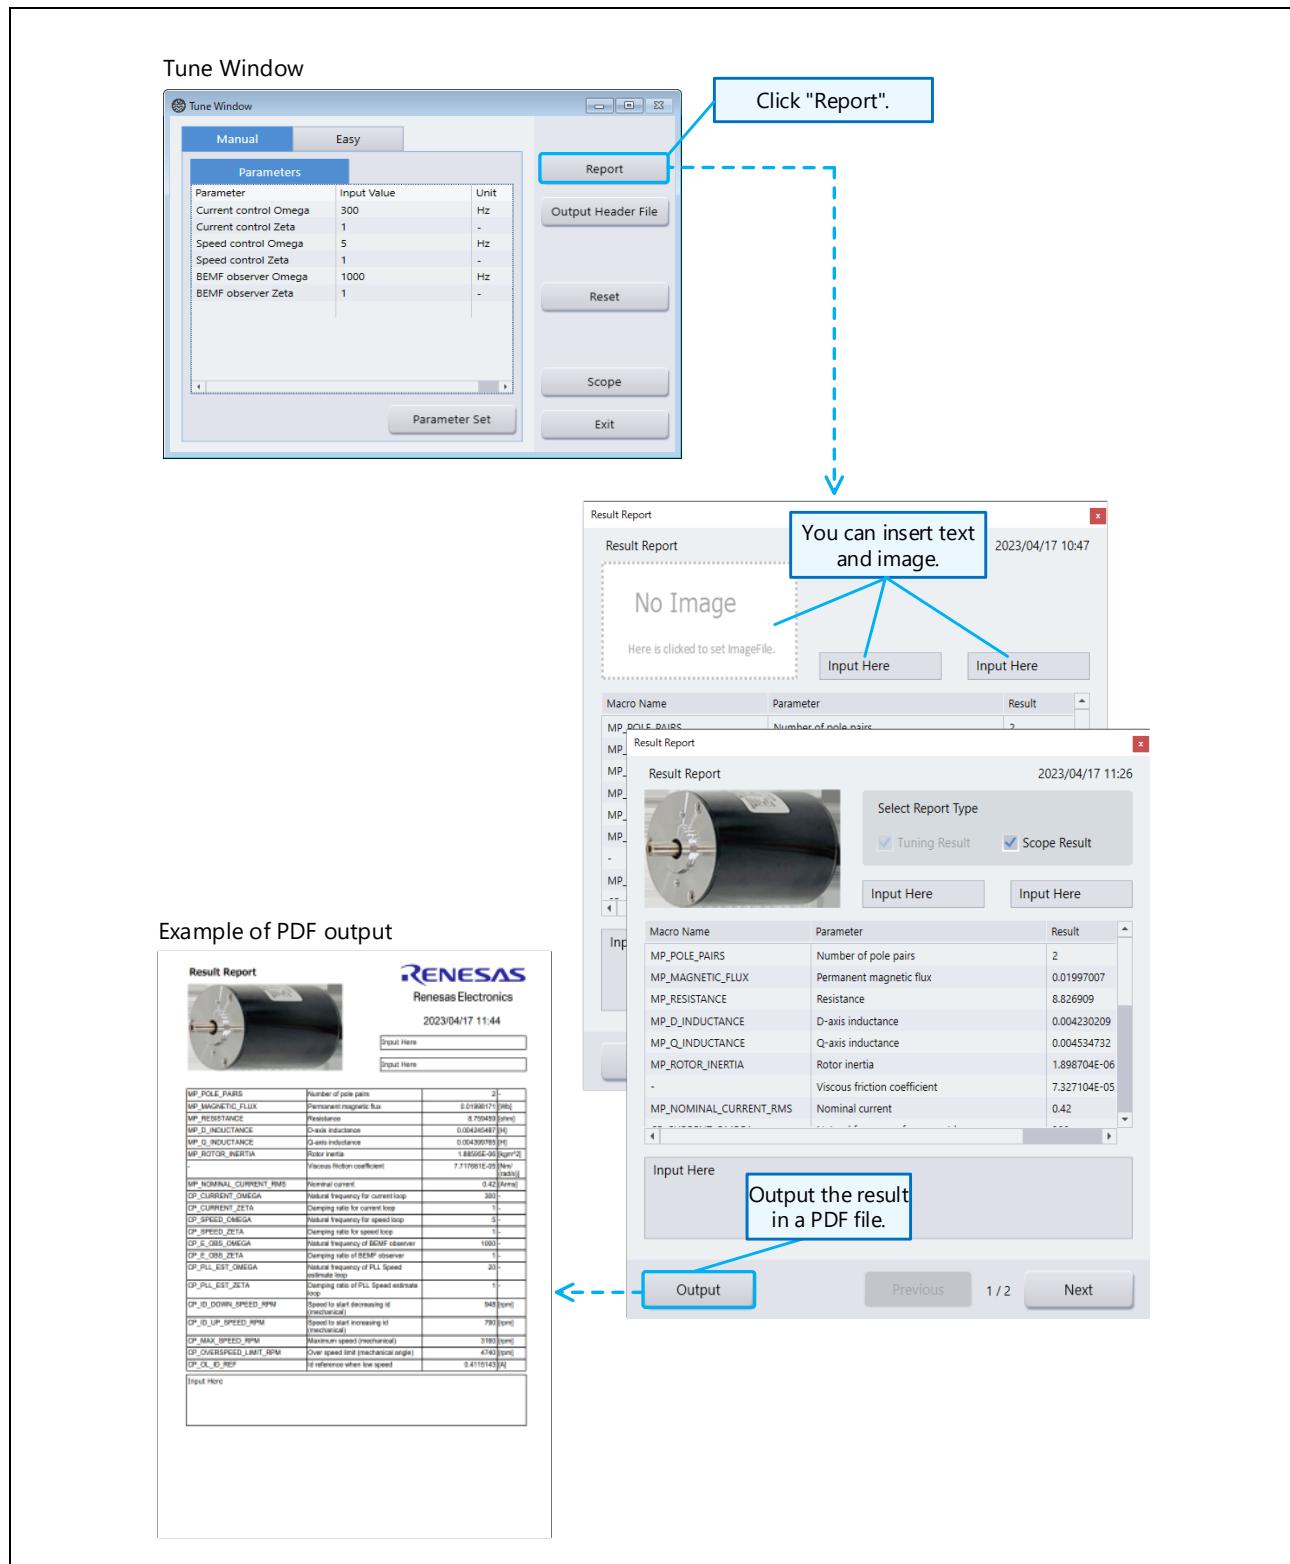


Figure 14-14 Output button (PDF output)

14.5.6 Waveform Information Display (Scope Window)

When you click the “View Open” button on Scope Window, you can check the information about the waveform display.



Figure 14-15 View Open button

14.5.7 Memory Function (Scope Window)

In Scope Window, up to three waveforms of motor driving can be memorized, and individual waveforms can be switched and displayed.

When you click the "Memory Save" button, the waveform is memorized and the label of the button changes to "Memory Clear". Click it again to clear the memory.

When you select the View checkbox, the memorized waveform is displayed.

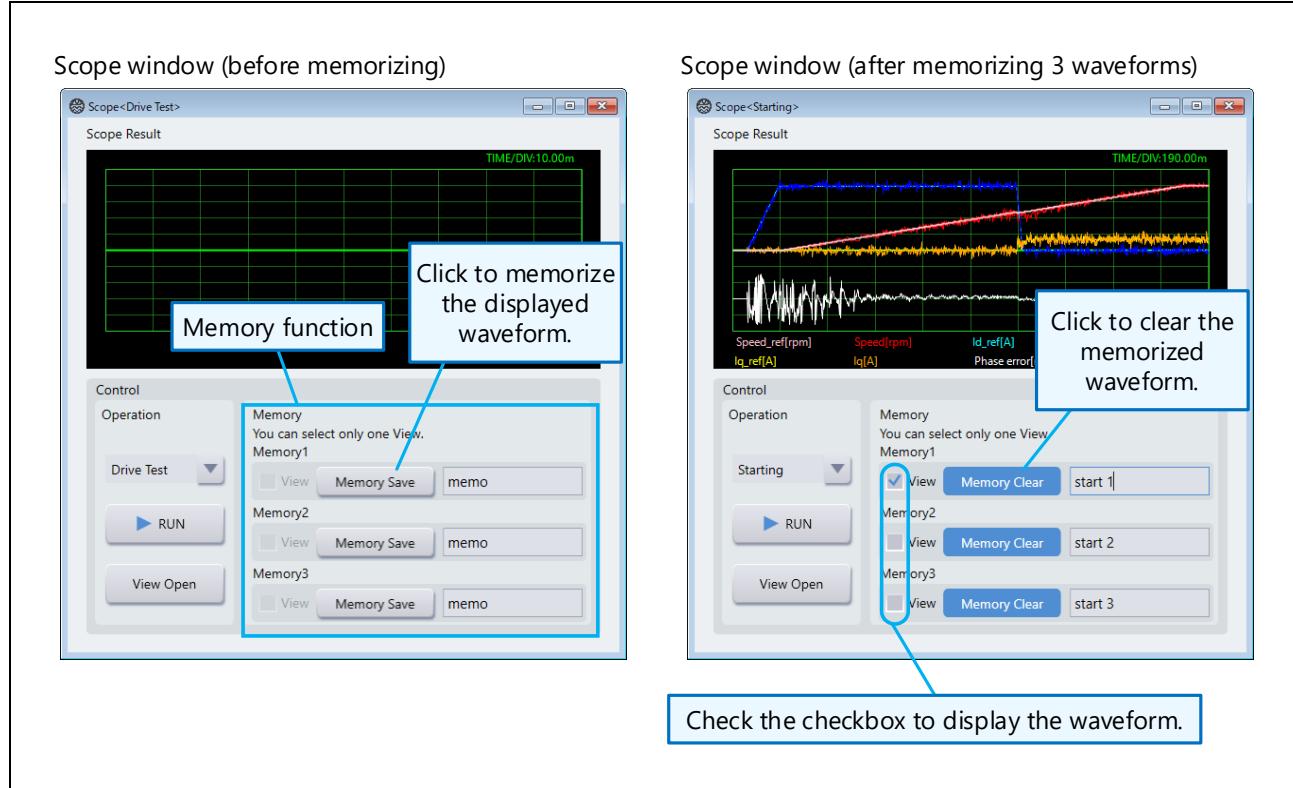


Figure 14-16 Memory function

15. Built-in Type Communication Library

15.1 Overview

A motor control development support tool, Renesas Motor Workbench (hereafter, "RMW"), communicates the variable information with MCUs. RMW and a MCU can easily communicate by including a communication library or built-in type communication library into the MCU program.

The built-in type communication library can perform the same functions as communication libraries, as well as command processing and scope-processing of RMW.

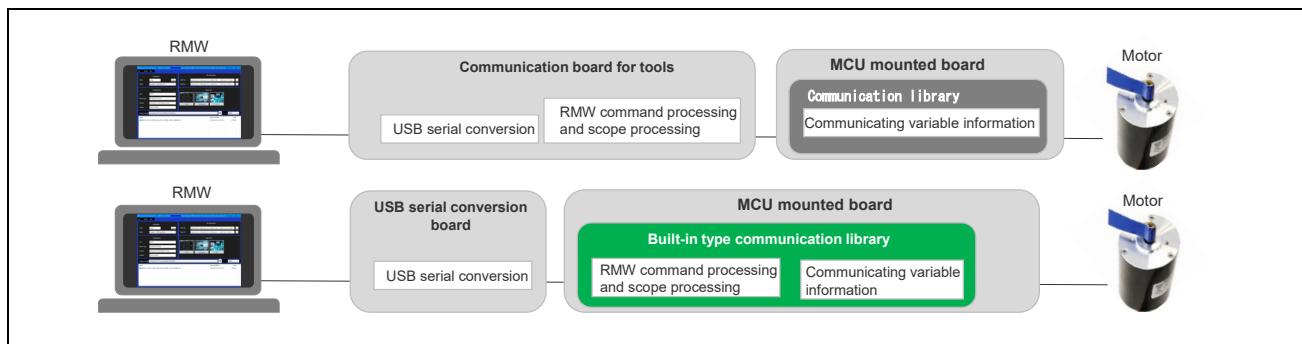


Figure 15-1 Overview of communication library

15.2 Features

The built-in type communication library enables the communication between RMW and the MCU using a commercially available USB serial conversion board, instead of a communication board for tools.

Since the built-in type communication library uses the RAM area of the motor control MCU, the number of data displayed in Scope Window is limited. However, it is ideal for simple viewing and debugging. If you want to display faster sampling data, we recommend you to use a communication board for tools and communication libraries.

Table 15-1 Differences between communication library and built-in type communication library

| Item | | Communication library | Built in type communication library |
|--|-------------|---|---|
| Recommended application | | Displaying faster sampling data | Simple displaying and debugging |
| Supported MCU | RX Family | RX13T, RX23T, RX24T, RX24U RX26T, RX66T, RX72T, RX72M | - |
| | RL78 Family | RL78/G14, RL78/G1F | - |
| | RA Family | RA6T1, RA6T2, RA6T3, RA4T1 | RA6T2, RA6T3, RA4T1 |
| Required communication board | | MC-COM | Commercially available serial USB conversion board |
| Number of data displayed in Scope Window | | 100,000 | <ul style="list-style-type: none"> • 1,024 (RA6T2) • 512 (RA6T3, RA4T1) |
| Sampling period | | Max. 20us/4ch | Any period |
| Available function | | All | All |
| RAM capacity used in Scope Window | | - | <ul style="list-style-type: none"> • 32KB (RA6T2) • 8KB (RA6T3, RA4T1) |
| Library role | | Communicates variable information between PC and MCU. | Communicates variable information between PC and MCU. RMW command processing and scope processing. |
| Library specification | | Same specifications for both communication library and built-in type communication library <ul style="list-style-type: none"> • The argument of the initialization function differs depending on the target MCU. • Available pins differ depending on the target MCU. | |

15.3 HW Configuration

This section explains the HW configuration when including a library and using RMW.

15.3.1 When Using MCK Motor Control Evaluation Kit

Figure 15-2 shows an example of HW configuration when RMW is used with the MCK motor control evaluation kit.

- Example of MCK motor control evaluation kit:

MCK-RA6T2

- Example of HW configuration when using a communication library

Download the program that includes the communication library to the MCU on the PC.

Connect a communication board for tools between the PC with RMW installed and the CPU board.

- Example of HW configuration when using the built-in type communication library.

Download the program that includes the built-in type communication library to the MCU on the PC.

Connect a commercially available serial USB conversion board between the PC with RMW installed and the CPU board.

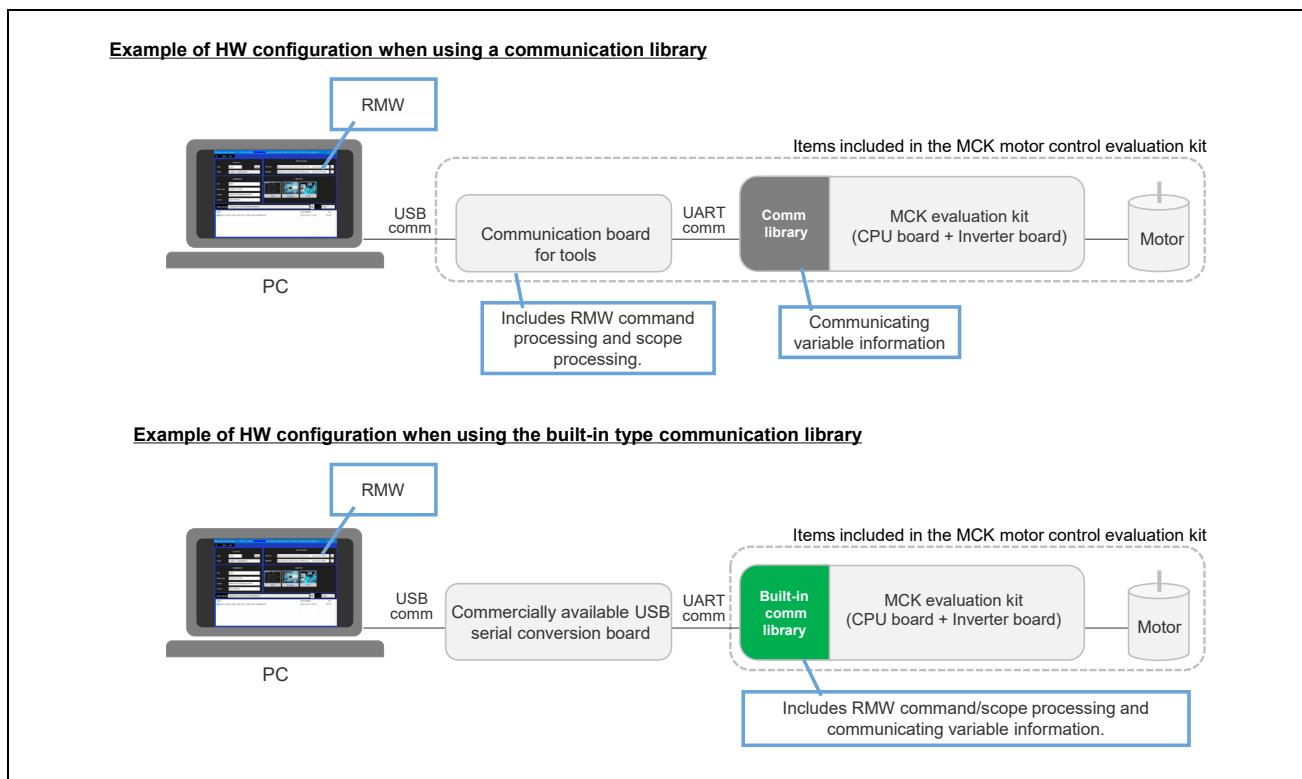


Figure 15-2 Example of HW configuration when using MCK motor control evaluation kit

15.3.2 When Using Evaluation System

Figure 15-3 shows an example of HW configuration when RMW is used with an evaluation system.

- Examples of evaluation systems
 - Evaluation System for Stepping Motor with Resolver
 - Evaluation System for BLDC Motor
 - Motor Control Evaluation System for RA Family - RA6T1 Group
- Example of HW configuration when using a communication library
Download the program that includes the communication library to the MCU on the CPU card.

Connect the PC with RMW installed to the evaluation system.

- Example of HW configuration when using the built-in type communication library.
Download the program that includes the built-in type communication library to the MCU on the CPU card.
- Connect a commercially available serial USB conversion board between the PC with RMW installed and the CPU card.

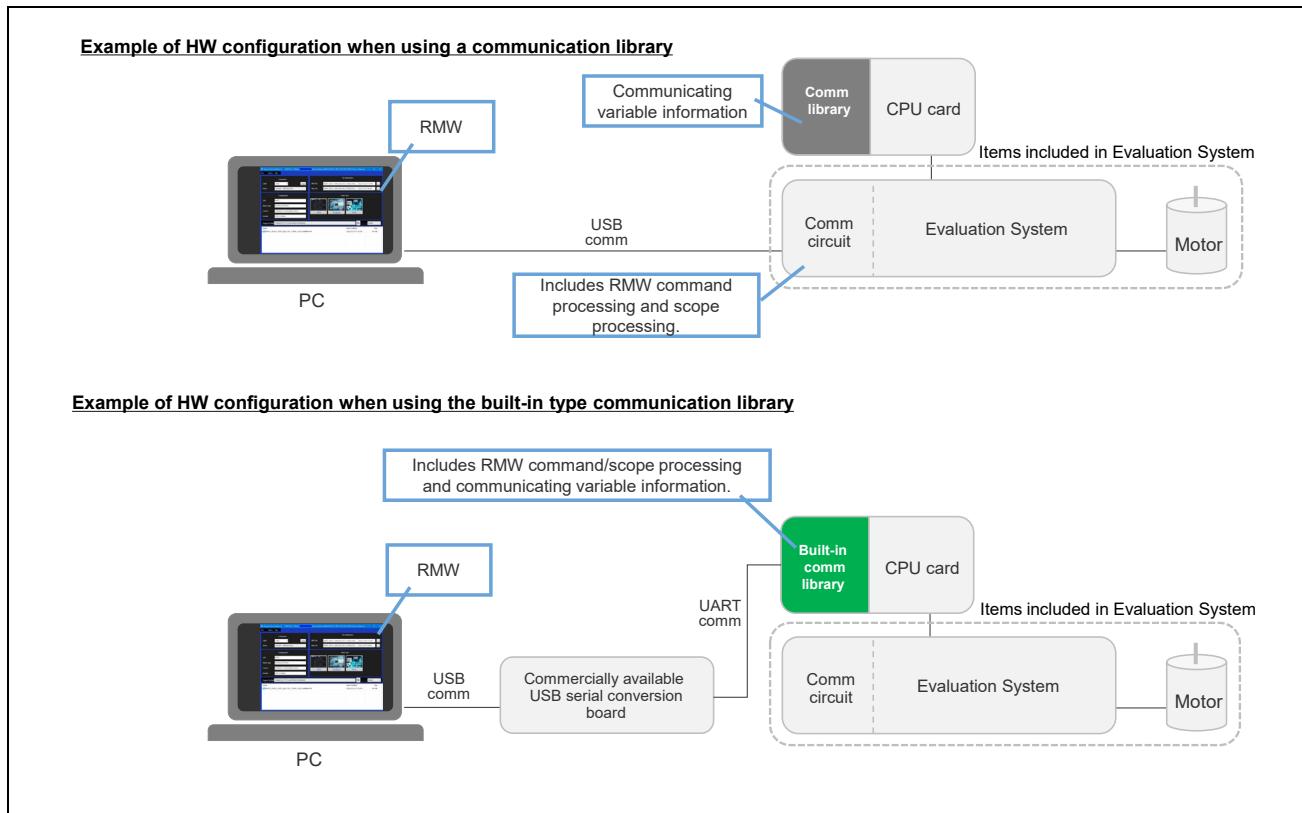


Figure 15-3 Example of HW configuration when using Evaluation System

15.3.3 When Using User Board

Figure 15-4 shows an example of HW configuration when RMW is used with a user board.

- Example of user board
A board developed by a user.

- Example of HW configuration when using a communication library

Download the program that includes the communication library to the MCU on a user board.

Connect a communication board for tools between the PC with RMW installed and the user board.

- Example of HW configuration when using the built-in type communication library.

Download the program that includes the built-in type communication library to the MCU on the user board.

Connect a commercially available serial USB conversion board between the PC with RMW installed and the user board.

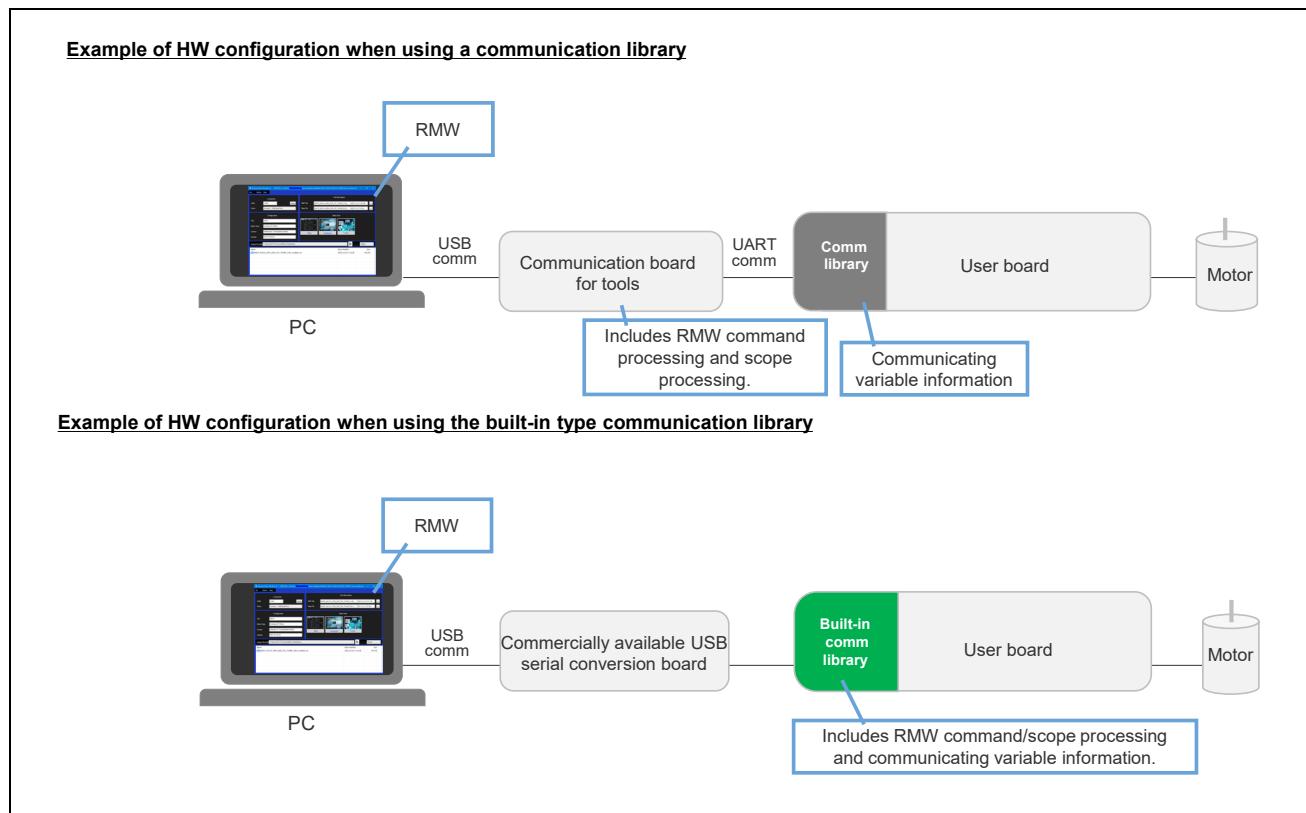


Figure 15-4 Example of HW configuration when using user board

15.4 Example of Use

To include the built-in type communication library to the motor control program and use RMW, follow the steps below.

- Determine which pins to use : determine the pin used to connect the USB serial conversion board to the MCU mounted board.
- Determine the communication speed: determine the communication speed between RMW and the board.
- Create a motor control program
 - Copy the built-in type communication library file.
 - Add the built-in type communication library file.
 - Call the built-in type communication library function.
- Download the motor control program that includes the built-in type communication library to the MCU.
- Connect with RMW.

This chapter describes an example of using RMW with a MCK Motor Control Evaluation Kit, MCK-RA6T2.

The procedure for using RMW with a user board is the same as the procedure for using RMW with a MCK motor control evaluation kit.

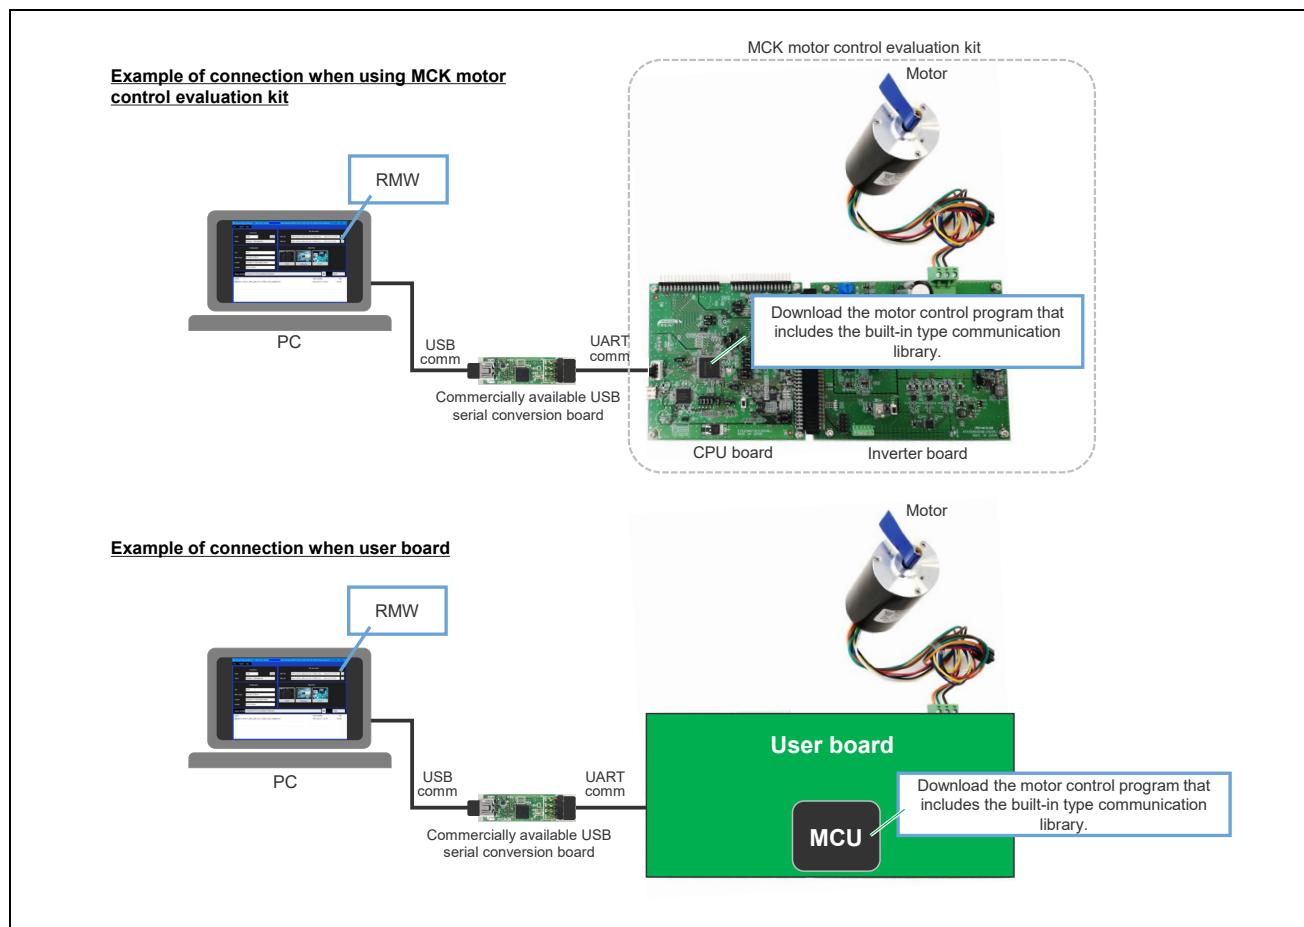


Figure 15-5 Example of connection when including built-in type communication library and using RMW

15.4.1 HW Preparation

Use an MCK-RA6T2 and a commercially available USB serial conversion board.

Since the built-in type communication library is used, the communication board included in the MCK-RA6T2 is not used.

For details on MCK-RA6T2, refer to the following documents.

- R12QS0047 MCK-RA6T2 Quick Start Guide
- R12UZ0091 MCK-RA6T2 User's Manual

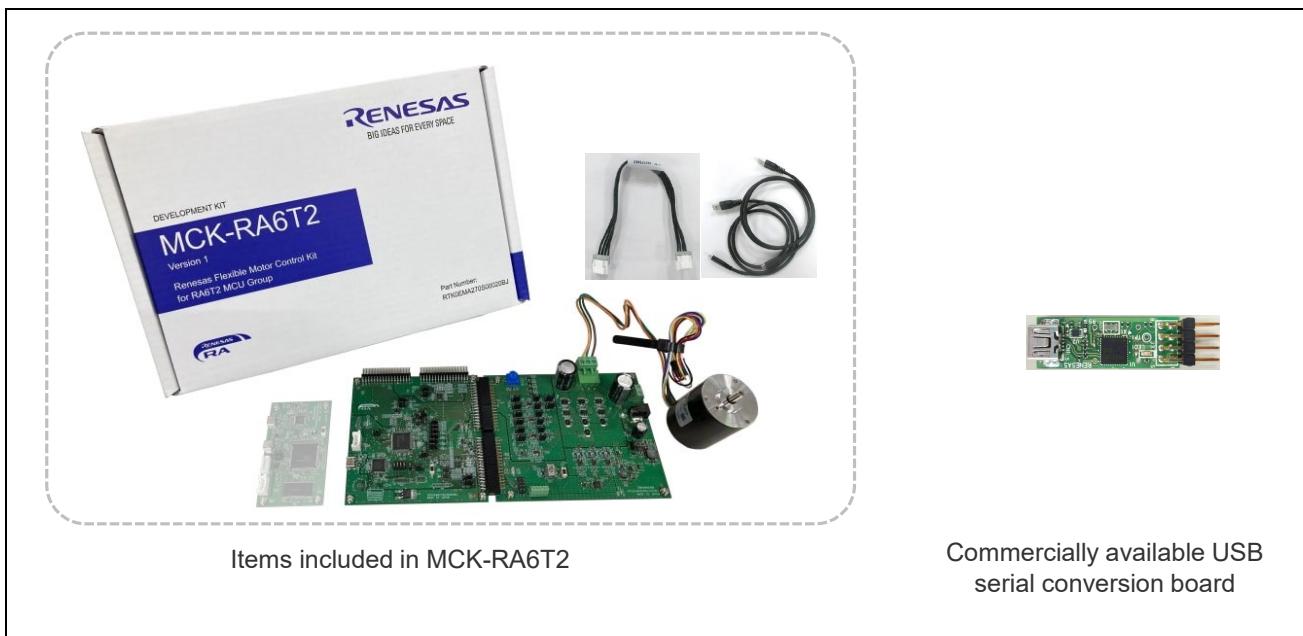


Figure 15-6 Items to be used

15.4.2 Determine Which Pin to Use

Determine the pins to connect the CPU board to the USB serial conversion board. The pins must satisfy the following conditions:

- Pins that can be used in the library
- The corresponding pins of the CPU board can be connected to the USB serial conversion board.

For MCK-RA6T2, use SCI9, PD05/TXD9_A, and PD06/RXD9_A as shown in Figure 15-7.

The pins to use determined in this chapter are used in the following chapters:

- 15.4.4.3 Call the library function : set the argument port of ics2_init()
- 15.4.6 Connecting with RMW : connect to the USB serial conversion board

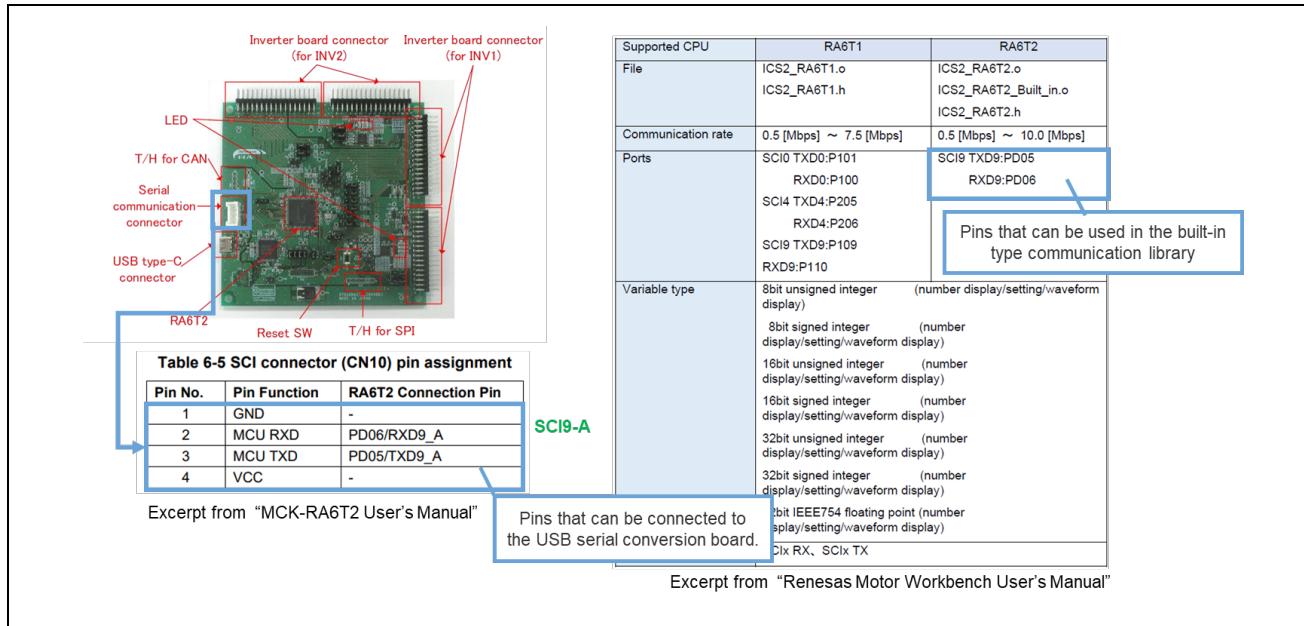


Figure 15-7 Determining pins to be used

15.4.3 Determine Communication Speed

Determine the communication speed between the PC and the USB serial conversion board/CPU board. The communication speed must satisfy the following conditions.

- The communication speed that can be used in the library.
- The communication speed can be set for the USB serial conversion board.

You can check the communication speed that can be set for the USB serial conversion board from the properties of the PC's device manager, as shown in Figure 15-8.

The communication speed determined in this chapter is used in the following chapters:

- 15.4.4.3 Call the library function : set the argument speed of ics2_init()
- 15.4.6 Connecting to RMW : set the communication speed to RMW

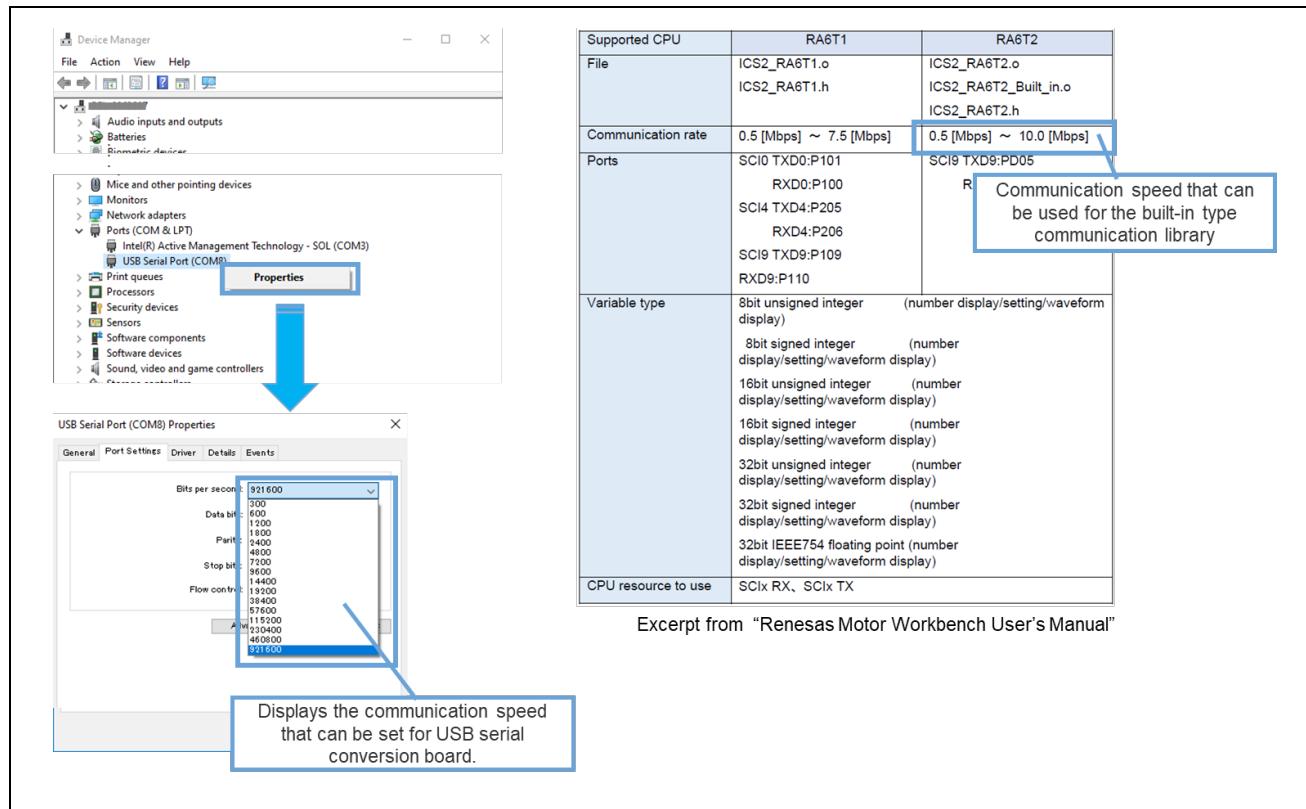


Figure 15-8 Checking the communication speed that can be set for RMW

15.4.4 Create Program

Create a motor control program to be downloaded to the RA6T2 mounted on the CPU board of MCK-RA6T2.

This chapter describes how to include the built-in type communication library into a motor control program that has already been created with e² studio.

For details about the built-in type communication library, see the following document:

- R21UZ0004 Renesas Motor Workbench User's Manual

15.4.4.1 Copy Library File

The header and object files of the built-in type communication library are included in the file where you downloaded the RMW installer. Copy the header and object files of the built-in type communication library to any locations in the motor control program.

Figure 15-9 shows the folder structure in which the library file was copied to the sample code folder.

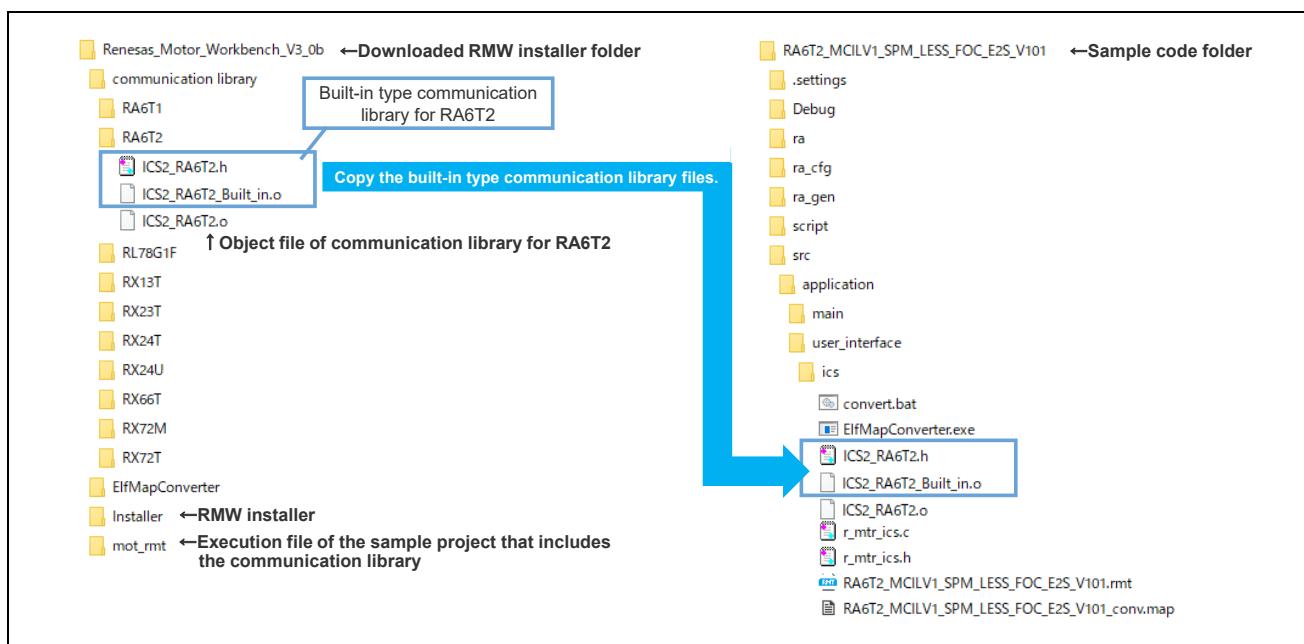


Figure 15-9 Folder structure when library files are copied

15.4.4.2 Add Library File

Add the copied library file on e² studio. Open the project's properties on e² studio, and add the object file as shown in Figure 15-10, and add the header file path as shown in Figure 15-11.

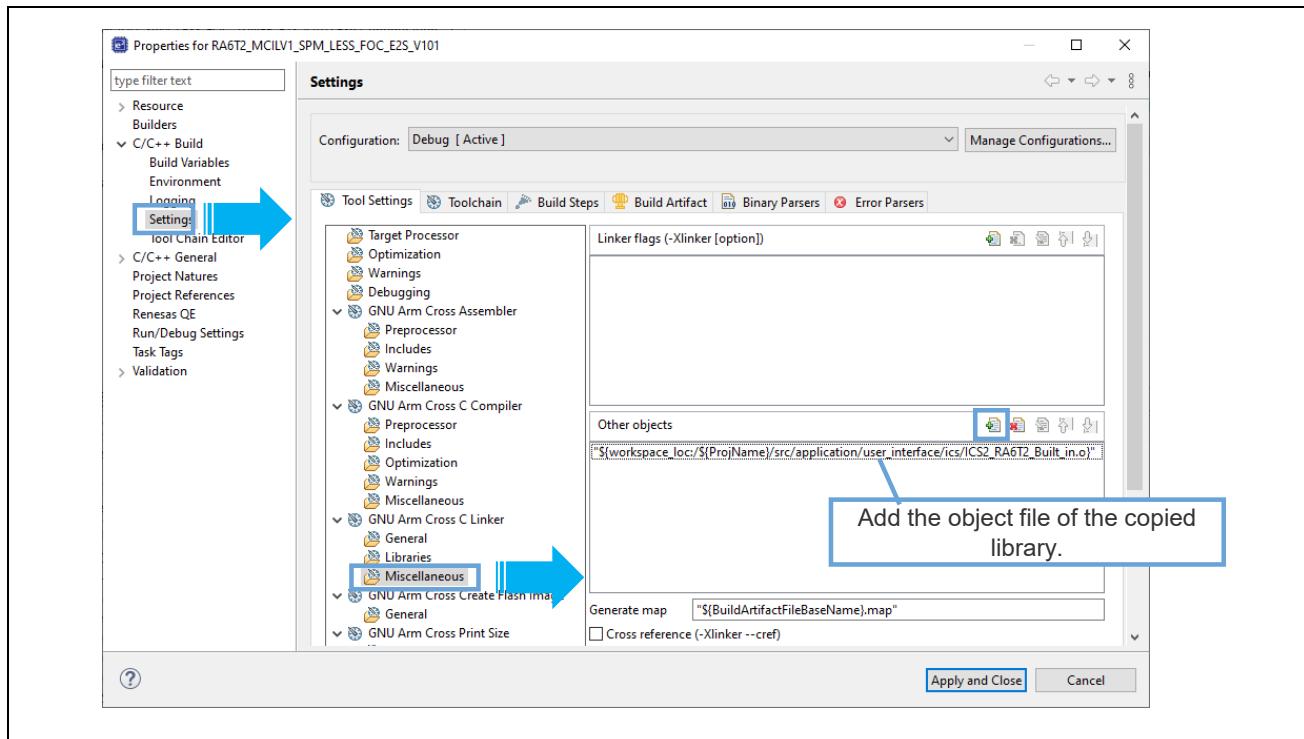


Figure 15-10 Adding library object file on e² studio

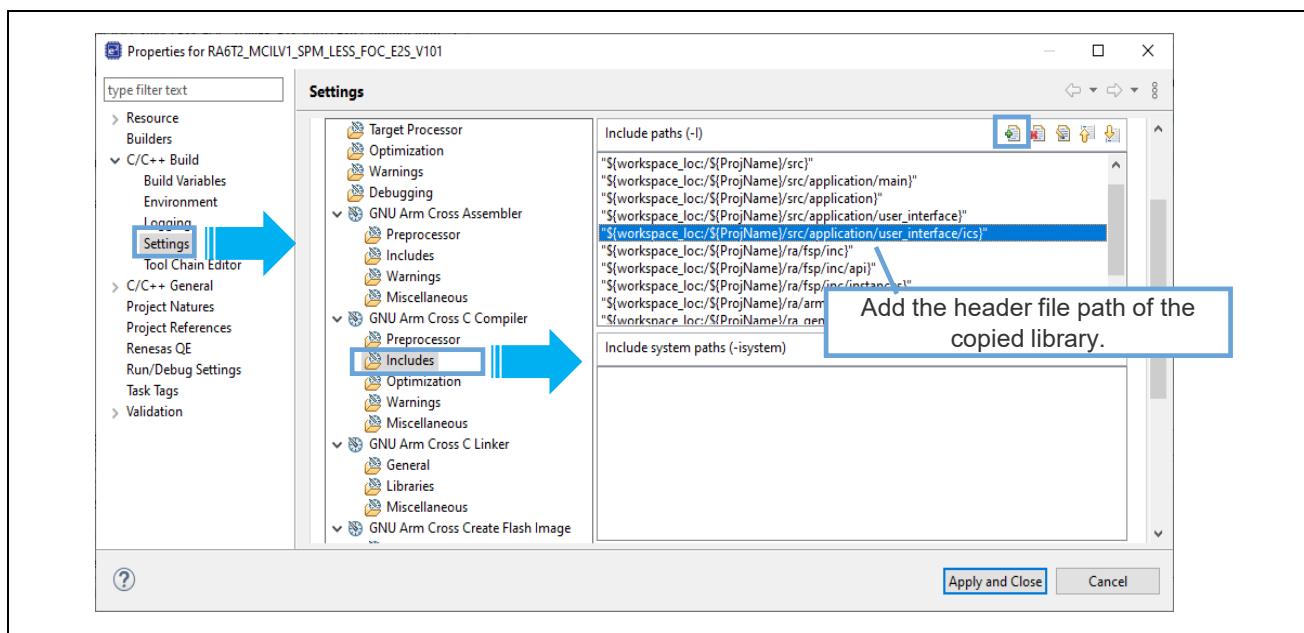


Figure 15-11 Adding library header file path on e² studio

15.4.4.3 Call Library Function

The library initialization function uses the pins to be used as determined in chapter 15.4.2 and the communication speed as determined in chapter 15.4.3.

The built-in type communication library for RA6T2 provides the following two types of functions:

- void ics2_init(uint8_t port, uint8_t speed, uint8_t mode) : initialization function
- void ics2_watchpoint(void) : data transfer function called periodically

The argument of the ics2_init() function differs depending on the target MCU. The pins set to the argument port of the ics2_init() function are defined in the header file ICS2_RA6T2.h.

The following shows an example of calling the built-in type communication library function from the motor control program of RA6T2.

```
#include "ICS2_RA6T2.h"
void main(void)
{
    /* port  = SCI9_A (PD05/TXD9 and PD06/RXD9): defined in ICS2_RA6T2.h */
    /* Rate   = (SCI Clock / (6 x (speed + 1))) [Mbps] : */
    /*           Rate = 921600bps, SCISPICLK = 120MHz -> speed = 21 */
    /* mode   = 32bit x 8ch */
    ics2_init(ICS_SCI9_PD05_PD06, 21, 1);

    test();
}

/* Call the data transfer function cyclically */
/* If the transfer rate is Rate[Mbps], the minimum sampling cycle is */
/* 70+(180/Rate) [usec], and it must be called at a cycle greater than this. */
/* */

void timer_isr(void)
{
    ics2_watchpoint();
}
```

15.4.5 Download Program

Connect the PC to the CPU board and download the motor control program to the RA6T2 on the CPU board. When downloading the motor control program to the CPU board, you are not required to connect to the inverter board and the motor.

For more information on how to download the program, see the Quick Start Guide of your evaluation kit or the documentation of your writing tool.

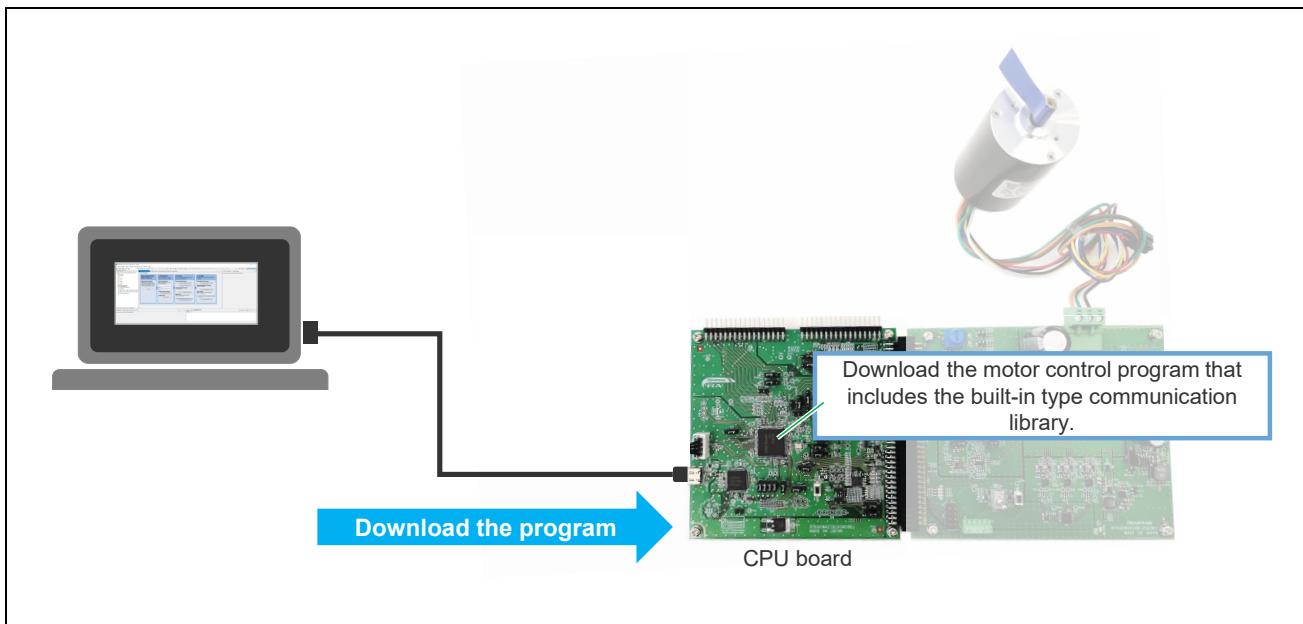


Figure 15-12 Connection when the program is being downloaded

15.4.6 Connect with RMW

Connect the PC with RMW installed to each board as shown in Figure 15-3. To connect the CPU board to the USB serial conversion board, use the pins determined in chapter 15.4.2.

Set RMW communication speed as shown in Figure 15-14. Select "Baud rate Dialog" from the "Option" menu in Main Window of RMW, and set the communication speed determined in chapter 15.4.3. The communication speed set for RMW must be the same as the communication speed set in the library initialization function `ics2_init()`.

For information on how to use RMW, refer to the documentation below.

- R21UZ0004 Renesas Motor Workbench User's Manual

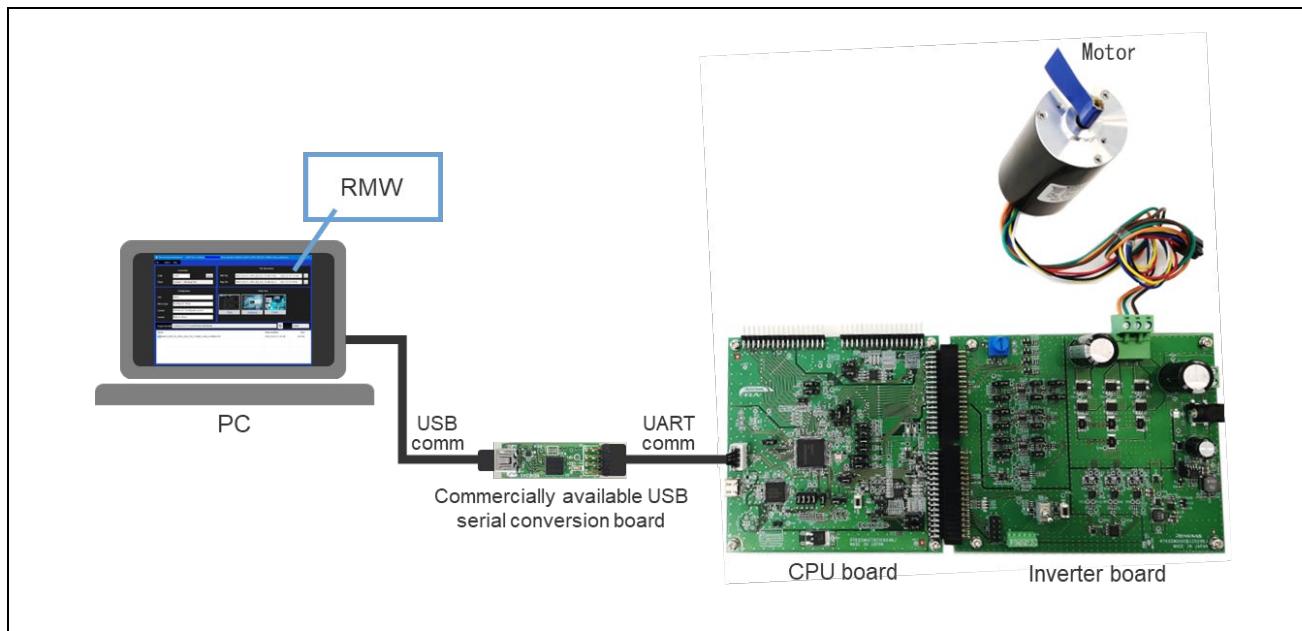


Figure 15-13 Connection when RMW is used

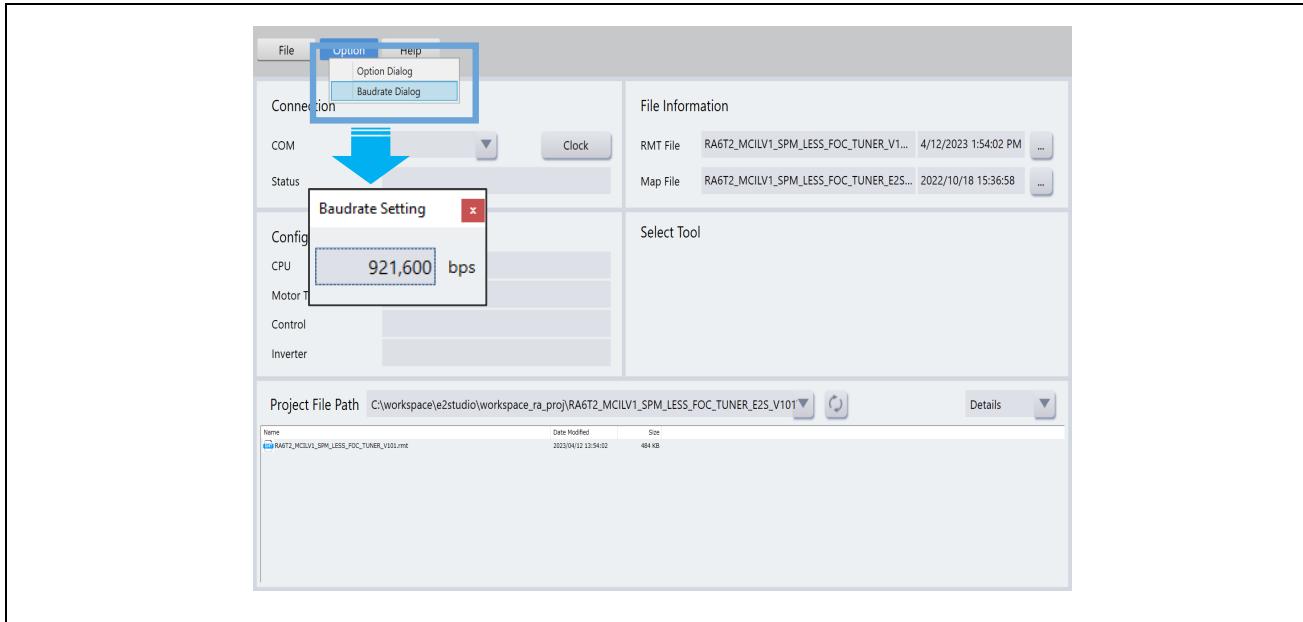


Figure 15-14 Setting RMW communication speed

Website and Support

Renesas Electronics Website

<https://www.renesas.com/>

Inquiries

<https://www.renesas.com/contact>

Revision History

| Rev. | Date | Revision | |
|------|-----------|----------|---|
| | | Page | Contents |
| 1.00 | Apr.05.17 | - | Issued |
| 2.00 | Nov.27.18 | - | Supported version 2.0 |
| 2.01 | May.16.19 | - | Supported RX72T |
| 2.02 | Nov.29.19 | - | Supported RX13T |
| 2.03 | Oct.28.20 | - | Supported RA6T1 |
| 3.00 | Dec.09.21 | - | Supported version 3.0 |
| 4.00 | May.30.23 | - | <ul style="list-style-type: none"> • Renesas Motor Workbench 3.0 User's Manual has changed to Renesas Motor Workbench 3.0 Quick Start Guide(R01QS0011EJ0100) • Revised new edition issued. • Supported Section 10, 11, 13 for Renesas Motor Workbench 3.1 • Modified Section 1, 2, 3, 4 for Renesas Motor Workbench 3.1 |

- This document is issued as Renesas Motor Workbench 3.0 User's Manual by re-editing the following two existing functional descriptions (application notes):
 - Renesas Motor Workbench Function Description(R20AN0527)
 - Renesas Motor Workbench Tuner Function Description (R20AN0528)

Ref: Revision history of old version of RMW functional description (R20AN0527)

| Rev. | Date | Revision | |
|------|------------|----------|---|
| | | Page | Contents |
| 1.00 | 2018.11.27 | - | First edition released. |
| 2.00 | 2021.12.09 | - | Revised with Renesas Motor Workbench3.0 release |

Ref: Revision history of old version of RMW Tuner functional description (R20AN0528)

| Rev. | Date | Revision | |
|------|------------|----------|---|
| | | Page | Contents |
| 1.00 | 2018.11.27 | - | First edition released. |
| 2.00 | 2021.12.09 | - | Revised with Renesas Motor Workbench3.0 release |

- The existing Renesas Motor Workbench User's Manual (R21UZ0004) has changed to Renesas Motor Workbench Quick Start Guide (R01QS0011). Please refer it together with this document.

Renesas Motor Workbench 3.1 User's Manual

Publication Date: Rev.4.00 May.30.23

Published by: Renesas Electronics Corporation

Motor Control Development Support Tool

Renesas Motor Workbench 3.1



Renesas Electronics Corporation