


Figure 4: Type ABR mikroBUS EVB Schematic

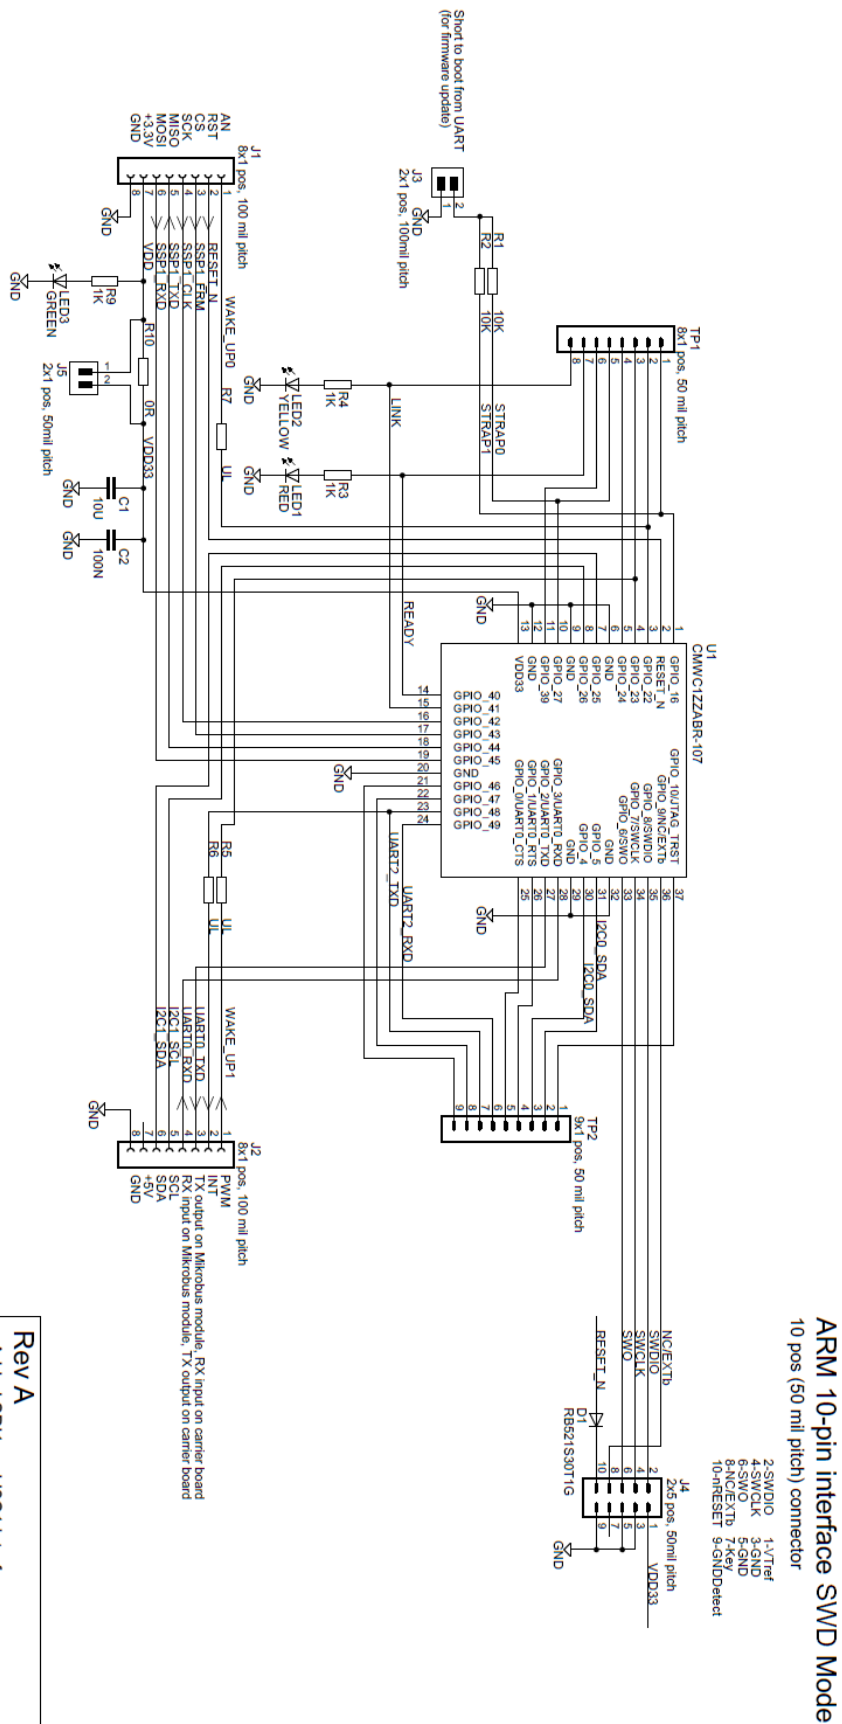

ABR Mikrobis Module

ARM 10-pin interface SWD Mode
10 pos (50 mil pitch) connector

2-SWDIO	1-VTref
4-SWCLK	3-GND
6-SWO	5-GND
8-NC/EXTp	7-Key
10-RESET	9-GNDDetect

UL = Unloaded = normally not mounted component.

Default jumper settings are indicated in the schematic. However, always check jumper positions on actual boards since there is no guarantee that all jumpers are in default place.

Rev A	
Added SPI1 and I2C1 interfaces	
	
TITLE: CM1C1Z2ABR-10P-EUB rev A	(C) Embedded Artists AB
Document Number:	
Date: 2008-11-20 18:19:35	Sheet: 1/1