


Quick Start Guide
OM2NTA5KIT

Exploring the exclusive features of NTAG 5 switch,
NTAG 5 link and NTAG 5 boost

NTAG 5 FAMILY - DEMOBOARDS




GET TO KNOW THE NTAG 5 switch board

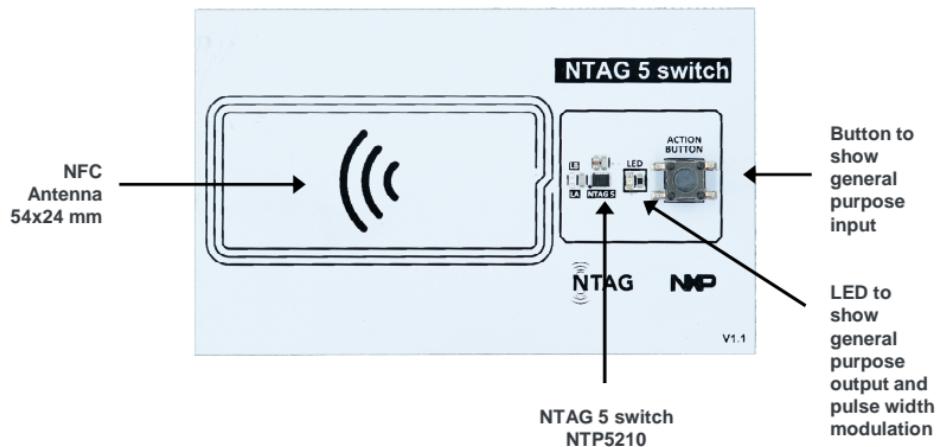


Front side of NTAG 5 switch demo board

GET TO KNOW THE NTAG 5 link board

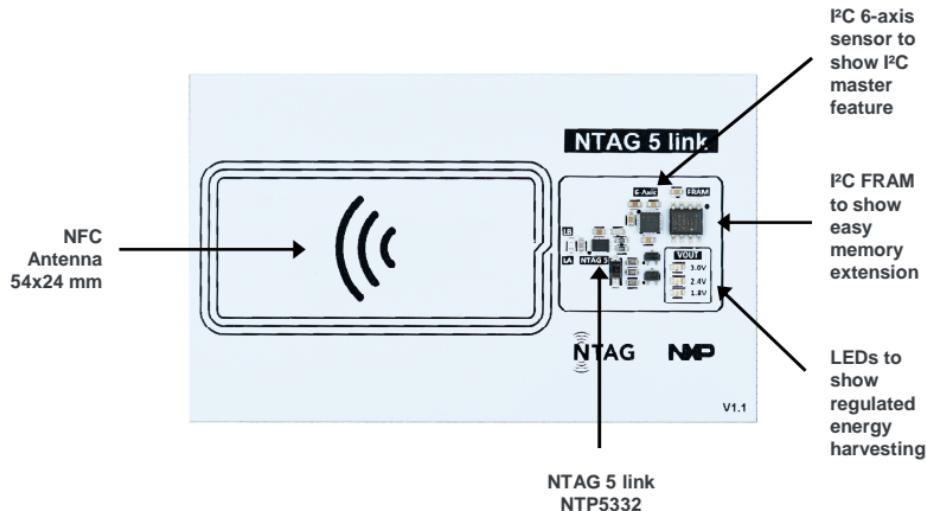

Front side of NTAG 5 link demo board

GET TO KNOW THE NTAG 5 boost board

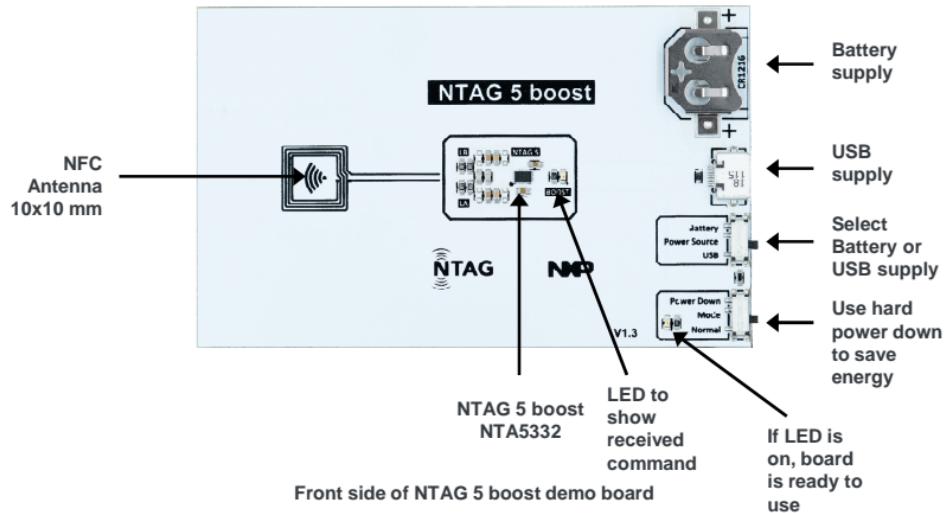


When no
board is
connected,
status
switches to
“polling”



NTAG 5 show card tab

Use side
menu to
navigate

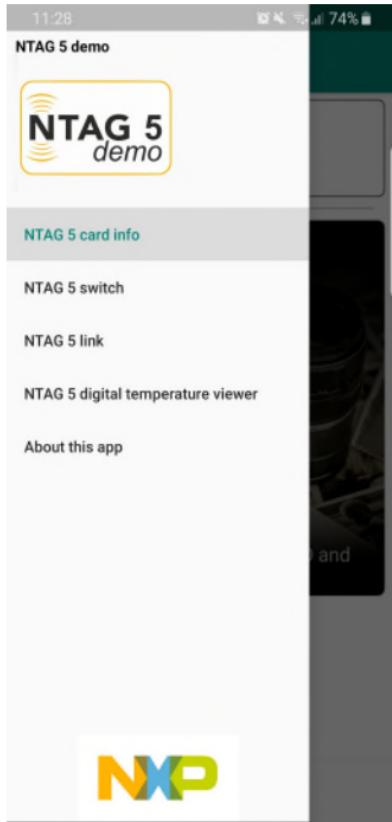


NTAG 5 demo navigation



When board is connected, status switches to "activated"

NTAG 5 switch general purpose input

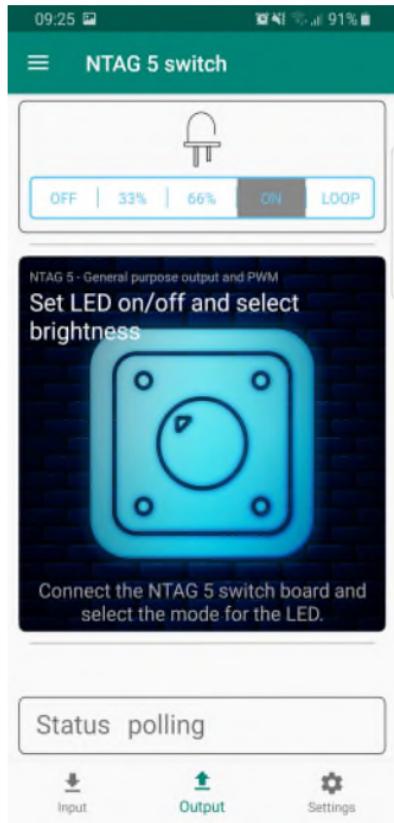

NTAG 5 switch general purpose output and pulse width modulation




NTAG 5 switch settings



X and Y
orientation
of 6 axis
sensor



When
board is
connected,
status
switches to
"activated"

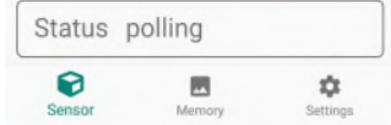

NTAG 5 link read sensor

Explore memory
extension or
configure output
voltage



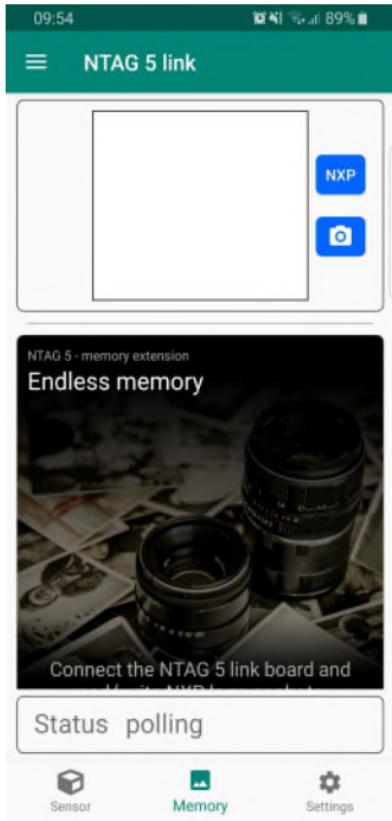


Image read
from FRAM
will be
displayed

Write NXP
logo or
photo from
camera to
FRAM

When
board is
connected,
status
switches to
"activated"

Explore
sensor tag or
configure
output voltage

NTAG 5 link extend user memory


Image read
from FRAM
will be
displayed



Change output
voltage.
You need to re-
connect the
board
afterwards to
make settings



When
board is
connected,
status
switches to
"activated"

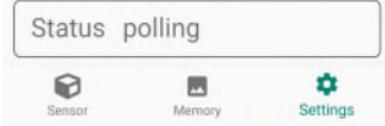

Explore
sensor tag or
memory
extension



NTAG 5 link set output voltage

NTAG 5 switch FEATURES

- ISO/IEC 15693 compliant
- NFC Forum Type 5 Tag compliant
- General Purpose Input and Output (GPIO)
- Pulse Width Modulation (PWM)
- Regulated Energy Harvesting
- 512 byte user memory
- Up to three configurable memory areas
- 32 or 64-bit password protection
- ECC based reprogrammable originality signature

On top NTAG 5 link FEATURES

- I²C master and slave up to 400 kHz
- 2048 byte user memory
- 256 byte SRAM
- AES mutual authentication

On top NTAG 5 boost FEATURE

- Active Load Modulation

STEP-BY-STEP INSTRUCTIONS

1 Install App



Install NTAG 5 demo app from Google Play Store or Apple App Store

2 Switch on NFC on mobile phone

In the settings menu of your NFC enabled mobile phone

STEP-BY-STEP INSTRUCTIONS (cont.)

3 Explore NTAG 5 switch demo board

Make sure status is “activated”
Press button on board to explore
GPIO functionality
Select ON/PWM/OFF to explore
GPIO and PWM functionality
Change brightness of LED in a loop

4 Explore NTAG 5 link demo board

Make sure status is “activated”
Move board with phone to see X/Y orientation
Write/read photo to/from the FRAM
Change Energy harvesting voltage

5 Explore read range of boards

Status changes from “polling” to
“activated” as soon board is detected

6 Curios? Order our Development board

On NTAG 5 customer development board web page you will find all documentation, source files and the boards itself

SUPPORT

Visit www.nxp.com/support for a list of phone numbers within your region.

WARRANTY

Visit www.nxp.com/warranty for complete warranty information.



Get Started

Download installation software and documentation

**“Jump Start Your Design” at
nxp.com/demoboard/OM2NTx5332**

www.nxp.com

NXP and the NXP logo are trademarks of NXP B.V. All other product or service names are the property of their respective owners. © 2016 NXP B.V.