

# Fuse accessory selection guide



Fuse family	Size	PCB fuse clip	PCB mount holder	Panel mount holder	In-line fuse holder	Fuse block
ABC AGC	1/4" x 1 1/4" (6 mm x 32 mm)		HBH-I HBV-I	HTB HK HKP HMR HGA HTJ	HRK HHB HFA HHK HHN HFB HHJ	S-4000 S-8000
AGA	1/4" x 5/8"		—	—	—	—
AGW	1/4" x 7/8"	1Axxxx	—	—	HRK HHB	—
AGX	1/4" x 1"		—	HJL HJM		3828-1
AHC(A) ADC	1/4" x 1 1/4" (6 mm x 32 mm)		HBH-I HBV-I	HVP	HVI	S-8000
AMH AML	55.4 mm x 17.7 mm x 12 mm Bolt-down fuse	—	—	—	—	FMG BSCR101
AMX(L)	48 mm x 12 mm x 8.5 mm Bolt-down fuse	—	—	—	—	HMX
ATC	Auto blade fuse (19.1 mm x 18.7 mm)	1A5600	—	—	HHF JFCU	—
ATM	Auto mini blade fuse (10.92 mm x 16.25 mm)	1A5778	—	—	HHM	—
C519 C520	5 mm x 15 mm	1Axxxx	—	—	HHT	—
FNM FNQ	13/32" x 1 1/2" (10 mm x 38 mm)	1A3400	—	HP	HEB	BMM603
FNQ-R KTK-R LP-CC	Class CC		—	—	—	BCM603
GBA GLD	1/4" x 1 1/4" (6 mm x 32 mm)	1Axxxx	—	HLD	—	S-4000 S-8000
GBB			HBH-I HBV-I	HTB HK HKP HMR HGA HTJ	HRK HHB HFA HHK HHN HFB HJA	
GDA GDB GDC GMA GMC GMD	5 mm x 20 mm	1Axxxx HTC-2xxM	H15 HBH-M HBV-M	HTB HTC	HHT	HTC-15M HTC-5x8M HTC-78M
KLKE KLM KTK	13/32" x 1 1/2" (10 mm x 38 mm)	1A3400	—	HP	HEB	BMM603 EVMFH
MDA MDP MDL MDQ MDH	1/4" x 1 1/4" (6 mm x 32 mm)	1Axxxx	HBH-I HBV-I	HTB HK HKP HMR HGA HTJ	HRK HVI HHB HFA HFA HHN HFB HHJ	S-4000 S-8000
PC-Tron (PCB, PCC, PCD, PCE, PCF, PCG, PCH, PCI)	Radial leaded fuse	—	BK-PCS (PCC or PCE only)	—	—	—
S500 S505H S501 S520 S505 S506	5 mm x 20 mm	1Axxxx HTC-2xxM	H15 HBH-M HBV-M	HTB	HHT	HTC-15M HTC-5x8M HTC-78M
SC-xxA	13/32" x various lengths 1.31" to 2.25"	1A3400	—	HPS-EE HPS-JJ HPS-FF	HEG HEH HEC HEJ	BG3011PQ
SFE	1/4" x various lengths (5/8" to 1 7/16")	1Axxxx	—	—	HR/HM	—
SR-5 / SR-5F / SR-5H SS-5 / SS-5F / SR-5H	Radial leaded fuse	—	BK-PCS	—	—	—
TDC10/11	1/4" x 1 1/4" (6 mm x 32 mm)		HBH-I HBV-I	HTB HK HKP HMR HGA HTJ	HRK HHB HFA HHK HHN HFB HHJ	S-4000 S-8000
TDC180 TDC600	1/4" x 1"	1Axxxx	—	HJL HJM	HRK HHB HHI	3828-1

### Tools & resources

- [Webpage](#)
- [Parametric search tool](#)
- [How to select a fuse holder white paper](#)