
3V to 80V, 7A, Current-Limiter with OV, UV, Reverse Polarity, Loss of Ground Protection, and PMBus Interface

General Description

The MAX17616EVKIT# evaluation circuit features the MAX17616 eFuse setup for 5V to 28V operation with a 7A auto-retry current limit. A 3.3V buck regulator provides a voltage for pull-ups and logic to run indicator LEDs on the board. The board provides a header to connect a DC1613A for USB connection to a computer and access to LTPowerPlay. LTPowerPlay provides a handy GUI for evaluating the PMBus capabilities. The board also includes an additional external N-channel FET for reverse conduction protection. **For easy PMBus evaluation, make sure to have the DC1613A in addition to this kit.** Visit www.analog.com to order the DC1613A. For assistance with ordering a DC1613A, contact your local ADI sales representative.

Features

- 3V to 80V Input Range
 - 3V to 75V if Reverse Protection FET Is Used
- 3% Accurate Current Monitoring
- Programmable Current-Limit Response
- Reverse Voltage/Current Protection
- Loss of GND Protection
- PMBus Feature Configuration
- PMBus Telemetry Reporting
 - Input Voltage
 - Output Voltage
 - Current
 - Temperature
- -40°C to +125°C Operation
- 23-Lead, 4.5mm x 5.75mm FC2QFN Package

Design files for this circuit board are available at www.analog.com.

[Ordering Information](#) appears at end of data sheet.

Quick Start

Configuration Diagram

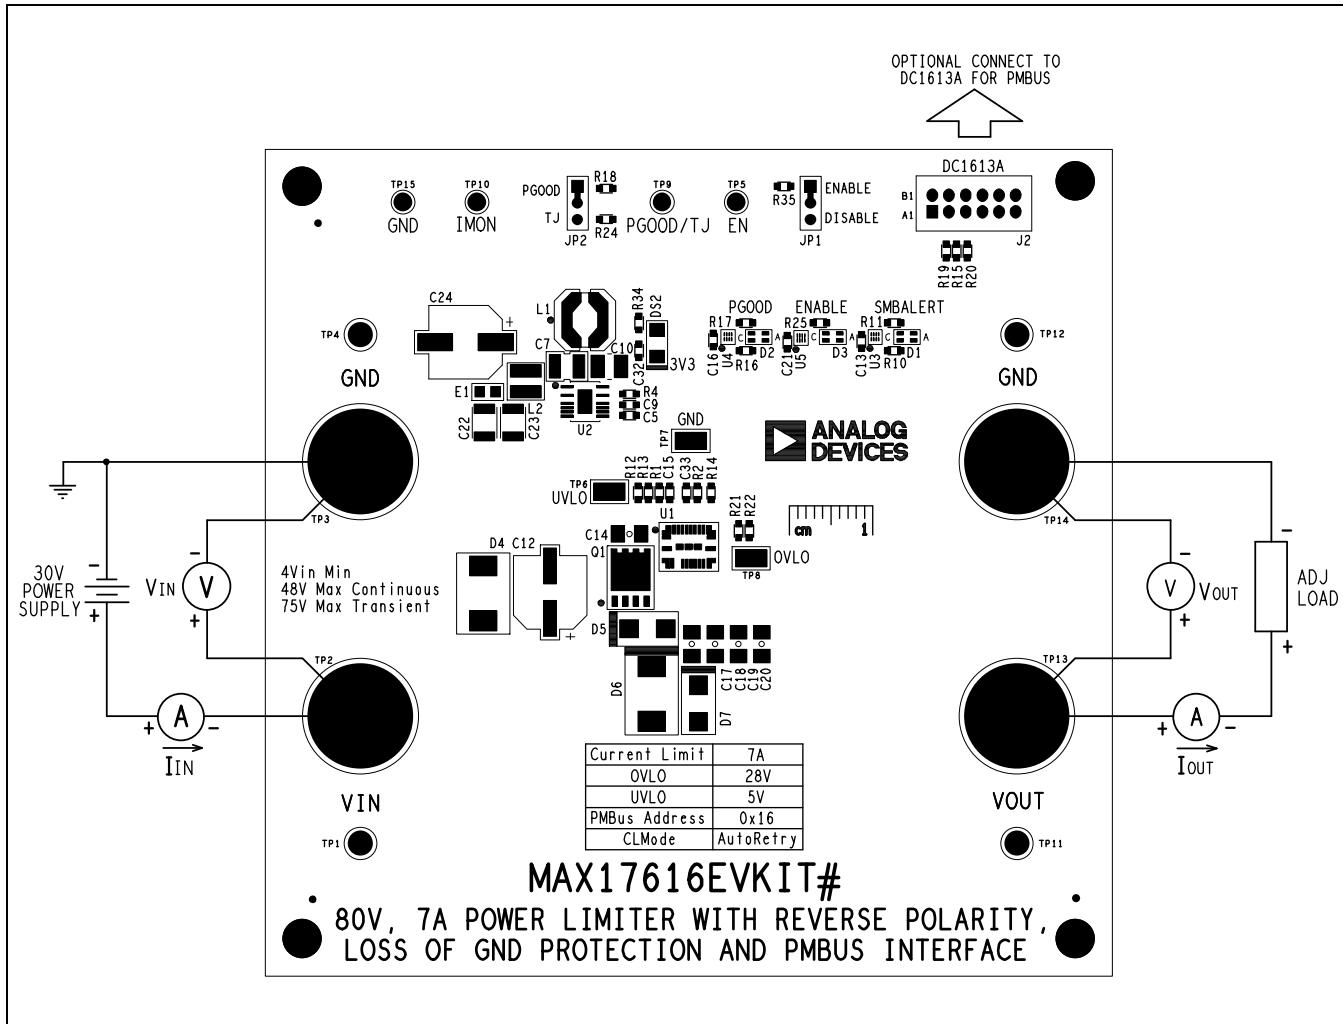


Figure 1. MAX17616EVKIT# Board Connections

Required Equipment

- 30V DC power supply with a 7A minimum capability
- Adjustable load (0 to 8A)
- Digital multimeters (DMMs)
- DC1613A and a computer

Procedure

The EV kit is fully assembled and tested. For PMBus evaluation, use LTPowerPlay and DC1613A. See the [PMBus Evaluation](#) section for more details. LTPowerPlay is not required for the basic evaluation of the MAX17616 EV kit. Follow the steps below to verify board operation.

Caution: Do not turn on the power supply until all connections are completed.

1. Verify that all jumpers are in their default positions.
2. Set the DC power supply to 12V and connect it between the V_{IN} and GND. Verify that PGOOD, ENABLE, and SMBALERT LEDs are all green.
3. Check OVLO by gradually increasing the DC power supply voltage and verify that V_{OUT} begins to drop and the PGOOD and SMBALERT LED turn red at approximately 27.7 V_{IN} .
4. Gradually decrease the DC power supply voltage and verify that V_{OUT} returns to approximately V_{IN} and the PGOOD LED turns green at around 27.0 V_{IN} .
5. Clear the SMBALERT. To clear the SMBALERT without using LTPowerPlay, use JP1 to disable MAX17616, then reset JP1 back to enable. If using LTPowerPlay, use the “Clear Faults” command. Verify that SMBALERT LED turns green.
6. Set the DC power supply voltage to 12V and slowly increase the adjustable load current. At approximately 7A, verify that V_{OUT} drops significantly and both PGOOD and SMBALERT LEDs turn red.
7. Reduce the adjustable load current and verify that V_{OUT} returns close to V_{IN} and the PGOOD LED turns green.
8. Clear the SMBALERT. Without LTPowerPlay, use JP1 to disable, then re-enable MAX17616. With LTPowerPlay, click the “Clear Faults” command. Verify the SMBALERT LED turns green.

PMBus Evaluation: Use DC1613A, a computer, and LTPowerPlay software to evaluate PMBus capabilities. Follow the steps to install the LTPowerPlay software and make the required hardware connections. The LTPowerPlay software can be run without hardware attached. Note that after communication is established, the IC must still be configured correctly for the desired operation mode.

1. Visit www.analog.com/en/lp/ltpower-play.html and follow the instructions on the webpage to download and install the latest version of the LTPowerPlay software.
2. Connect the computer to the MAX17616EVKIT# using DC1613A. Use the DC1613A supplied USB cable to connect DC1613A to the computer’s USB port. Use the DC1613A supplied ribbon cable to connect DC1613A to J2 on the MAX17616EVKIT#.
3. Apply a minimum of 4 V_{IN} to the board. Open the LTPowerPlay software and select “Detect Chip”. Use LTPowerPlay to read registers, write to registers, and poll certain registers using PMBus (refer to the MAX17616 data sheet for more details).

Table 1. Jumper Connection Guide

JUMPER	DEFAULT CONNECTION	FEATURE
JP1	ENABLE	Enable or Disable MAX17616
JP2	PGOOD	Select between PGOOD and TJ

Detailed Description of Hardware

The EV kit can be configured to evaluate user-defined input undervoltage lockout (UVLO) and overvoltage lockout (OVLO) thresholds using resistor-dividers. The output UV sensing setting can be configured using LTPowerPlay. The current-limit threshold is determined by an external resistor connected from the SET1 pin to GND. The current-limit default response is autoretry. Use LTPowerPlay to configure other current-limit responses. JP2 allows the user to select pin 20 between operating as PGOOD or monitoring the die temperature (TJ).

Input Power Supply

The EV kit is powered by a 4V to 48V power supply connected between the V_{IN} and GND. The EV kit features a 77.4V TVS at the input terminals, which limits the surge voltages and enhances protection.

Power Supply for Logic Pins

A 3.3V buck regulator provides a 3.3V rail to connect SDA, SCL, and PG pins through pull-up resistors. The 3.3V rail also supplies power for logic chips to operate LED indicators.

Enable

The MAX17616 internally pulls up to 1.5V when left floating. Use Jumper JP1 to connect the EN pin to either a pull-up resistor in the EN position or to GND in the DISABLE position.

Table 2. EN (JP1) Settings

JUMPER	SHUNT POSITION	SWITCH STATUS
JP1	ENABLE*	ON
	DISABLE	OFF

*Default Position.

PGOOD/TJ Pin 20

The MAX17616 pin 20 (PGOOD/TJ) can be configured to either operate as an open-drain power good indicator or monitor die temperature. The PGOOD position connects pin 20 through a $100\text{k}\Omega$ resistor to the 3.3V rail. The TJ position connects pin 20 through a $10\text{k}\Omega$ resistor to GND. Connecting pin 20 to GND with a $10\text{k}\Omega$ to $20\text{k}\Omega$ will monitor the internal die temperature. TJ provides 652mV at 25°C and 854mV at $+125^\circ\text{C}$, with a temperature slope of $2\text{mV}/^\circ\text{C}$. Refer to the MAX17616 data sheet for more details.

Table 3. PGOOD/TJ (JP2) Settings

JUMPER	SHUNT POSITION	SWITCH STATUS
JP2	PGOOD*	PGOOD indicator
	TJ	Die Temp

*Default Position.

Undervoltage Lockout Threshold (UVLO)

Input undervoltage lockout is set using a voltage divider (R12 and R13) connected to the UVLO pin. Output undervoltage sensing is set using the VOUT_UV_FAULT_LIMIT command through PMBus. The EV kit is set for approximately 5V input UVLO, and the default VOUT_UV_FAULT_LIMIT setting is 5V with a 10% rising threshold. Refer to the MAX17616 data sheet for more details.

Overvoltage Lockout Threshold (OVLO)

The overvoltage lockout threshold is set using a voltage divider (R21 and R22). The EV kit OVLO is set for approximately 28V. Refer to the MAX17616 data sheet for more details.

Current-Limit Threshold

The EV kit connects SETI to GND through a 2.10kΩ resistor (R1). The EV kit is set for approximately 7A current limit. Use the equation below to calculate R_{SETI} for a different current-limit threshold.

$$R_{SETI}(k\Omega) = \frac{14910}{I_{LIM}(mA)}$$

Where I_{LIM} is the desired current limit in mA. Refer to the MAX17616 data sheet for more details.

Current-Limit Type Select

The three modes of current limit are continuous, autoretry, and latch-off. Program the mode by using the SET_CLMODE PMBus command. Autoretry is the default mode for the MAX17616. Refer to the MAX17616 data sheet for more details.

Detailed Description of Software


While observing safe ESD practices, carefully remove the MAX17616 EV kit board out of its packaging. Quickly inspect the board to ensure that no damage occurred during shipment. Jumpers/shunts were preinstalled prior to testing and packaging. Connect DC1613A to a computer with LTPowerPlay installed, and connect DC1613A to J2 on MAX17616EVKIT#. Apply at least 4V across V_{IN} and GND. Open LTPowerPlay and click “Detect Chip”. LTPowerPlay provides a handy GUI experience to read registers, write to registers, and poll certain registers to display graphically. Refer to the MAX17616 data sheet to see all of the telemetry and configurations possible with the MAX17616.

Ordering Information


PART	TYPE
MAX17616EVKIT#	EV Kit

#Denotes RoHS-compliance.

MAX17616EVKIT# Schematic

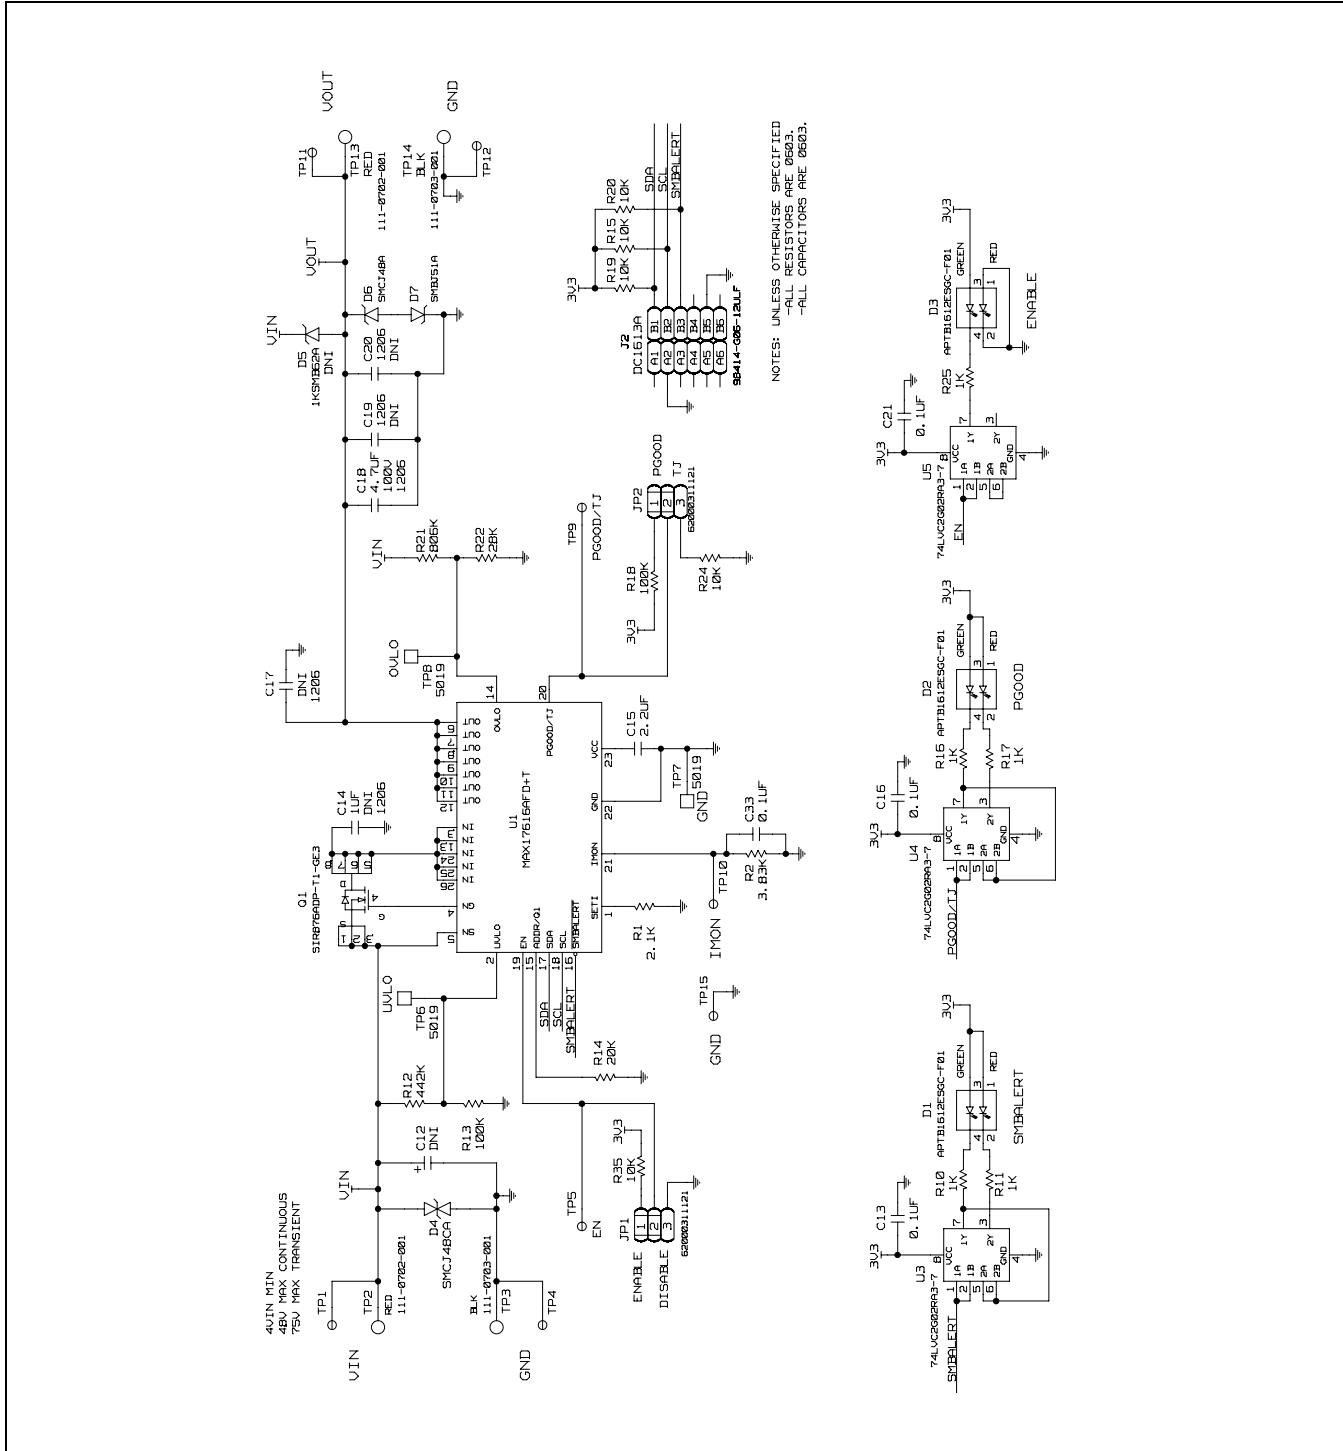

MAX17616EVKIT# Schematic (continued)

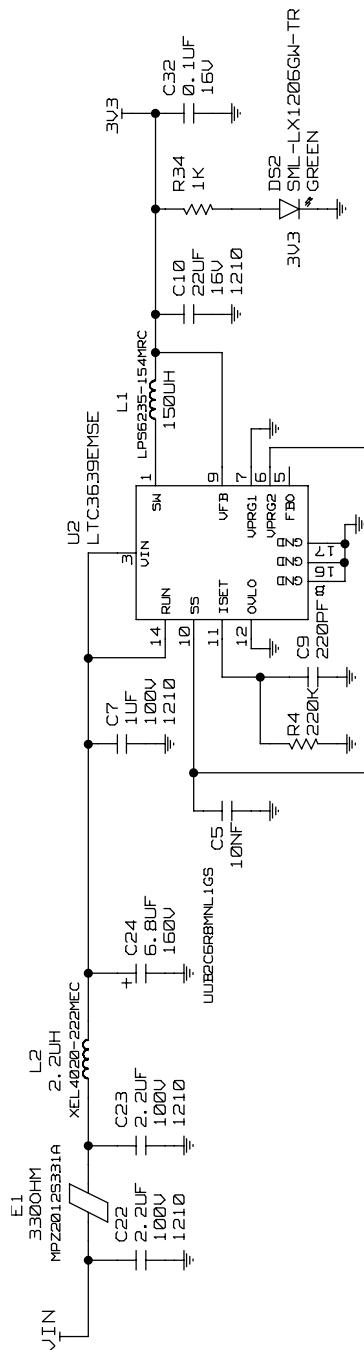

Revision History

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	09/24	Initial release	—

Notes

ALL INFORMATION CONTAINED HEREIN IS PROVIDED “AS IS” WITHOUT REPRESENTATION OR WARRANTY. NO RESPONSIBILITY IS ASSUMED BY ANALOG DEVICES FOR ITS USE, NOR FOR ANY INFRINGEMENTS OF PATENTS OR OTHER RIGHTS OF THIRD PARTIES THAT MAY RESULT FROM ITS USE. SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE. NO LICENSE, EITHER EXPRESSED OR IMPLIED, IS GRANTED UNDER ANY ADI PATENT RIGHT, COPYRIGHT, MASK WORK RIGHT, OR ANY OTHER ADI INTELLECTUAL PROPERTY RIGHT RELATING TO ANY COMBINATION, MACHINE, OR PROCESS, IN WHICH ADI PRODUCTS OR SERVICES ARE USED. TRADEMARKS AND REGISTERED TRADEMARKS ARE THE PROPERTY OF THEIR RESPECTIVE OWNERS. ALL ANALOG DEVICES PRODUCTS CONTAINED HEREIN ARE SUBJECT TO RELEASE AND AVAILABILITY.