


**Murata Type ABR
mikroBUS™ EVB**

Quick Start Guide

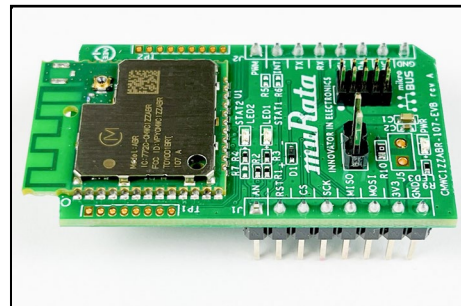

Revision History

Revision	Date	Author	Change Description
1.0	April 23, 2021	TF	Initial Release
1.1	April 28, 2021	TF	Updated for newer MCUXpresso SDK 2.9.1 release.
1.2	April 30, 2021	TF	Updated to reflect additional LPC EVK's supported.

Table of Contents

REVISION HISTORY	1
1 INTRODUCTION	3
2 REFERENCES	4
2.1 Murata Type ABR mikroBUS EVB Flashing Guide	4
2.2 Murata Type ABR mikroBUS EVB Datasheet.....	4
2.3 Murata Type ABR Module Webpage	4
2.4 Murata Type ABR Module Datasheet	4
2.5 Murata Community Forum Support.....	4
2.6 NXP 88MW32X Landing Page.....	4
3 HARDWARE SETUP	5
4 SOFTWARE SETUP	6
5 SAMPLE DEMO DESCRIPTION	7
5.1 wifi_serial_iperf3 from LPCXpresso:	7
5.2 serial_mwm_demo on the module:	7
6 RUN WIFI_SERIAL_IPERF3 EXAMPLE:.....	7
7 TYPE ABR EVB LED STATUS	12

List of Figures

Figure 1: NXP LPC55S69-EVK and Murata Type ABR EVB.....	3
Figure 2: Connecting Type ABR EVB to NXP LPC55S69-EVK.....	5
Figure 3: LED1/LED2 Status Flow Diagram during “serial_mwm_demo” execution	12

List of Tables

Table 1: NXP LPC Dev Kits Supported with links to MCUXpresso SDK	4
Table 2: LED1/LED2 Status during “serial_mwm_demo” execution.....	12


1 Introduction

Murata has partnered closely with [Embedded Artists AB](#) to provide a flexible evaluation board solution for Murata's Type ABR module (based on NXP's 88MW320 chipset). Murata's Type ABR EVB is designed with mikroBUS™ interconnect. Type ABR EVB **is currently supported** on NXP's [LPCXpresso55S16](#), [LPCXpresso55S28](#), and [LPCXpresso55S69](#) Development Boards. It can also connect to NXP's i.MX RT EVK family (like [MIMXRT1010-EVK](#)) with an Arduino adapter - see MIKROE's Arduino UNO click shield ([MIKROE-1581](#)). However, this configuration is not yet supported in software.

Type ABR is a small module (integrated PCB antenna) based on NXP 88MW320 (wireless microcontroller), supporting Wi-Fi® 802.11 b/g/n up to 72.2 Mbps PHY data rate; with an integrated 200MHz ARM Cortex-M4F MCU for host-side applications. For more information on Type ABR, please refer to [this link](#).

This document steps the user through configuring and running an iPerf example in the MCUXpresso SDK for NXP's LPCXpresso55S69 Development Board with Murata's Type ABR mikroBUS™ EVB. The hardware configuration is shown in **Figure 1**. Murata's Type ABR EVB comes pre-flashed with a customized version of NXP's WMSDKA "*serial_mwm_demo*" image. This customized WMSDKA firmware interface allows the LPC55 MCU to configure Type ABR into various wireless modes. The ones of immediate relevance include Wi-Fi® Client/Station, and Access Point.

Figure 1: NXP LPC55S69-EVK and Murata Type ABR EVB

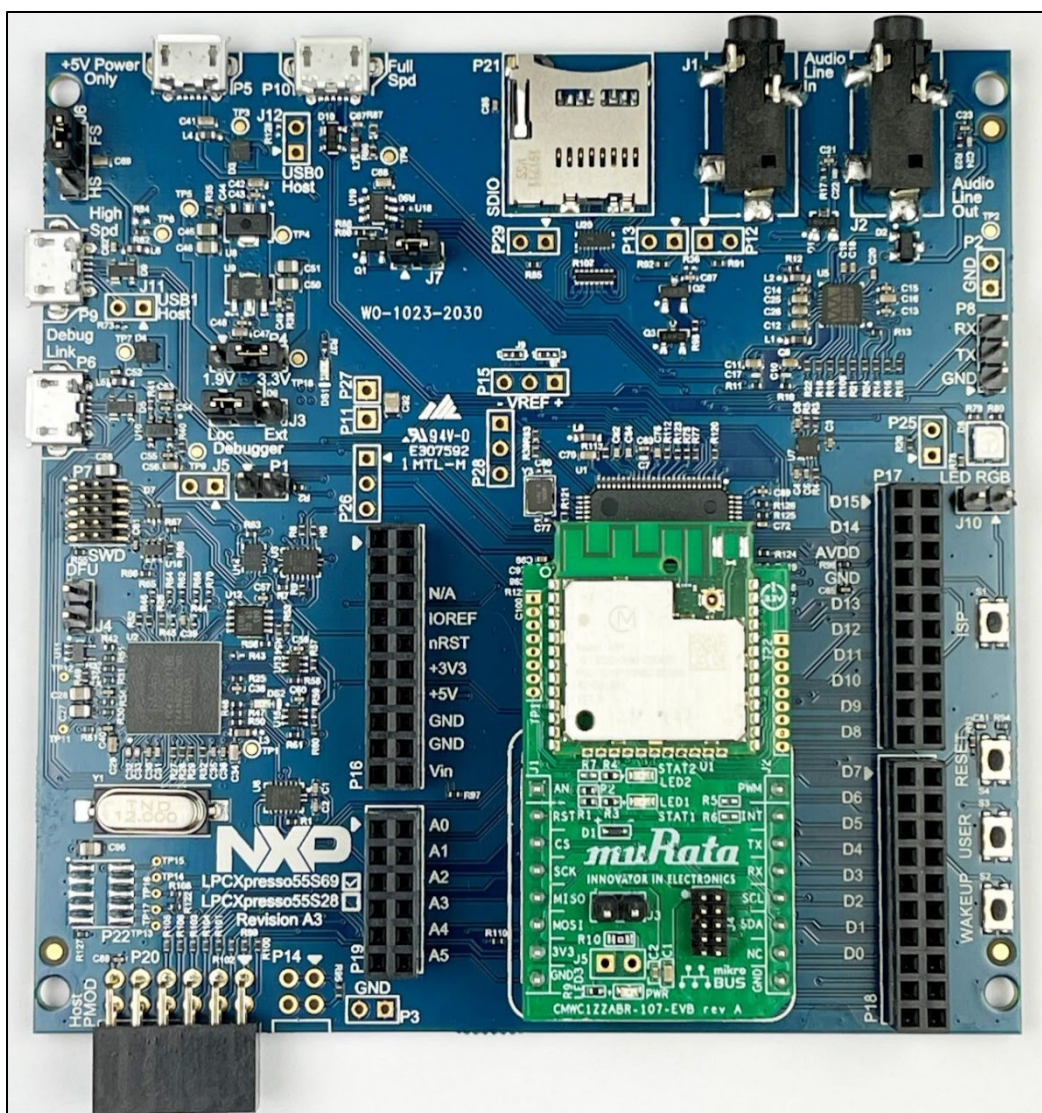

NOTE: Although this document details steps using the [LPCXpresso55S69](#) Development Board, the **same steps apply** to [LPCXpresso55S16](#), and [LPCXpresso55S28](#). However, the MCUXpresso SDK (version 2.9.1) imported into the MCUXpresso IDE (version 11.3) **is specific** to each of these platforms.

Table 1 lists the different LPCXpresso boards currently supported with links to the MCUXpresso **2.9.1 SDK**. The MCUXpresso IDE currently supported is version **11.3**. User **must be registered** on NXP website to download both the MCUXpresso IDE and SDK's.

Table 1: NXP LPC Dev Kits Supported with links to MCUXpresso SDK

NXP LPC Dev Kit	MCUXpresso SDK Link
LPCXpresso55S16	https://mcuxpresso.nxp.com/en/builder?hw=LPCXpresso55S16
LPCXpresso55S28	https://mcuxpresso.nxp.com/en/builder?hw=LPCXpresso55S28
LPCXpresso55S69	https://mcuxpresso.nxp.com/en/builder?hw=LPCXpresso55S69

2 References

2.1 Murata Type ABR mikroBUS EVB Flashing Guide

[This flashing guide](#) provides detailed steps on how to flash Murata's Type ABR EVB using NXP's LPC-Link2 debug probe.

2.2 Murata Type ABR mikroBUS EVB Datasheet

[This datasheet](#) documents the Murata Type ABR mikroBUS EVB including details on interconnect, features, schematics, and component layout.

2.3 Murata Type ABR Module Webpage

This [website landing page](#) provides latest/comprehensive information on Murata's Type ABR module.

2.4 Murata Type ABR Module Datasheet

The ABR module datasheet is included on the ABR module webpage. You can also access it easily from [this link](#).

2.5 Murata Community Forum Support

Murata's Community provides online support for Murata's Type ABR module and Type ABR mikroBUS EVB. Refer to [this link](#) for all Forum threads on Type ABR.


2.6 NXP 88MW32X Landing Page

NXP provides extensive documentation and WMSDKA source code at [this link](#).

3 Hardware Setup

The Murata Type ABR mikroBUS™ module plugs directly into the LPC55S69-EVK as shown in **Figure 2**. No additional cabling is required. Note the orientation of the ABR EVB with the slanted key on both LPC55S69-EVK's silkscreen and Murata ABR EVB (bottom-right of EVB as shown).

Figure 2: Connecting Type ABR EVB to NXP LPC55S69-EVK

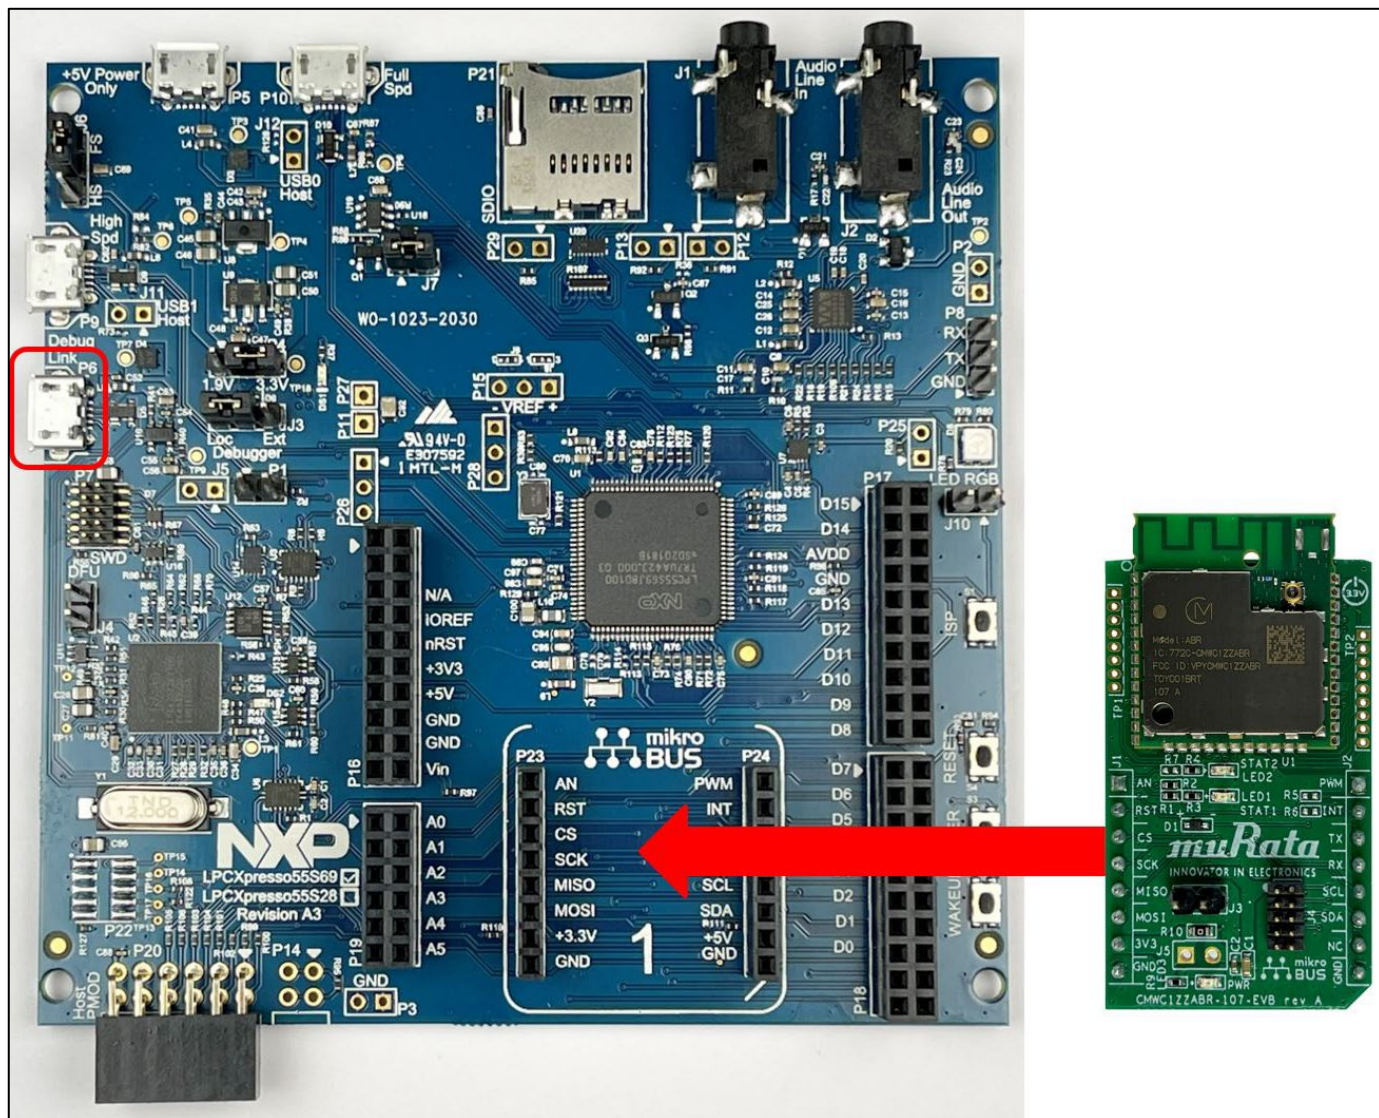


Now, plug one end of the USB cable to laptop and the other end into LPC55S69-EVK's P6: USB connector (Debug Probe) – see **red rectangle** in **Figure 2**. In addition to this USB connection powering both the LPC55 EVK and the Murata ABR EVB, it provides two FTDI COM ports to the LPC55 EVK.


NOTE: The orientation of Type ABR EVB is same for [LPCXpresso55S28](#). However, it is rotated 180 degrees on the [LPCXpresso55S16](#), thereby allowing better RF reception.

4 Software Setup

1. Ensure that Type ABR EVB is flashed with Murata's ***serial_mwm_demo*** binary. Type ABR EVB ships pre-flashed with this customized image. Refer to [Murata Type ABR mikroBUS™ flashing guide](#) for more specifics.
2. Download and install NXP's MCUXpresso IDE 11.3 [from this link](#).
3. Obtain NXP's LPC55S69 MCUXpresso 2.9.1 SDK [from this link](#). Click "Select All" button (or click on "MW320 Wi-Fi co-processor support") to ensure the **Wi-Fi examples** are included.

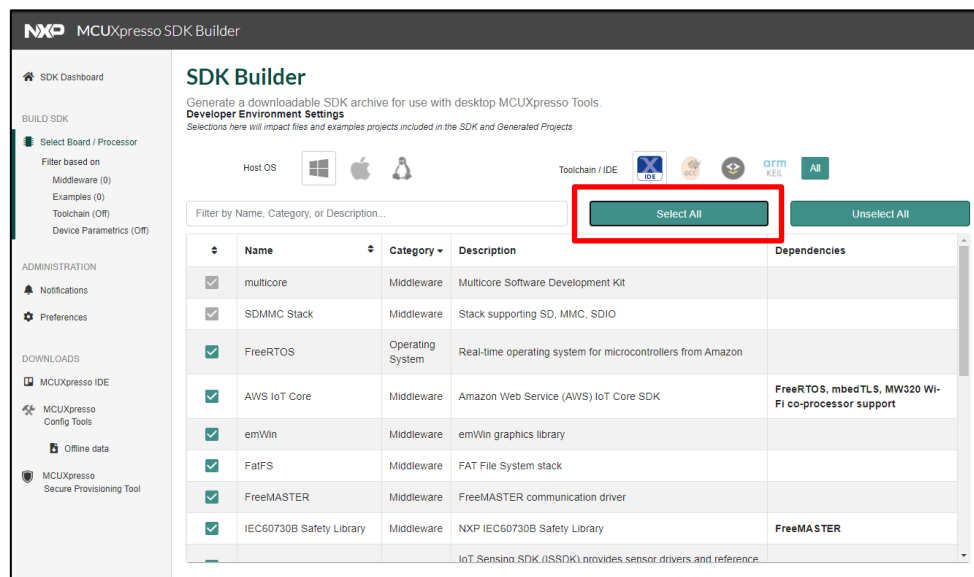

4. Drag and drop the downloaded SDK in the IDE to install.

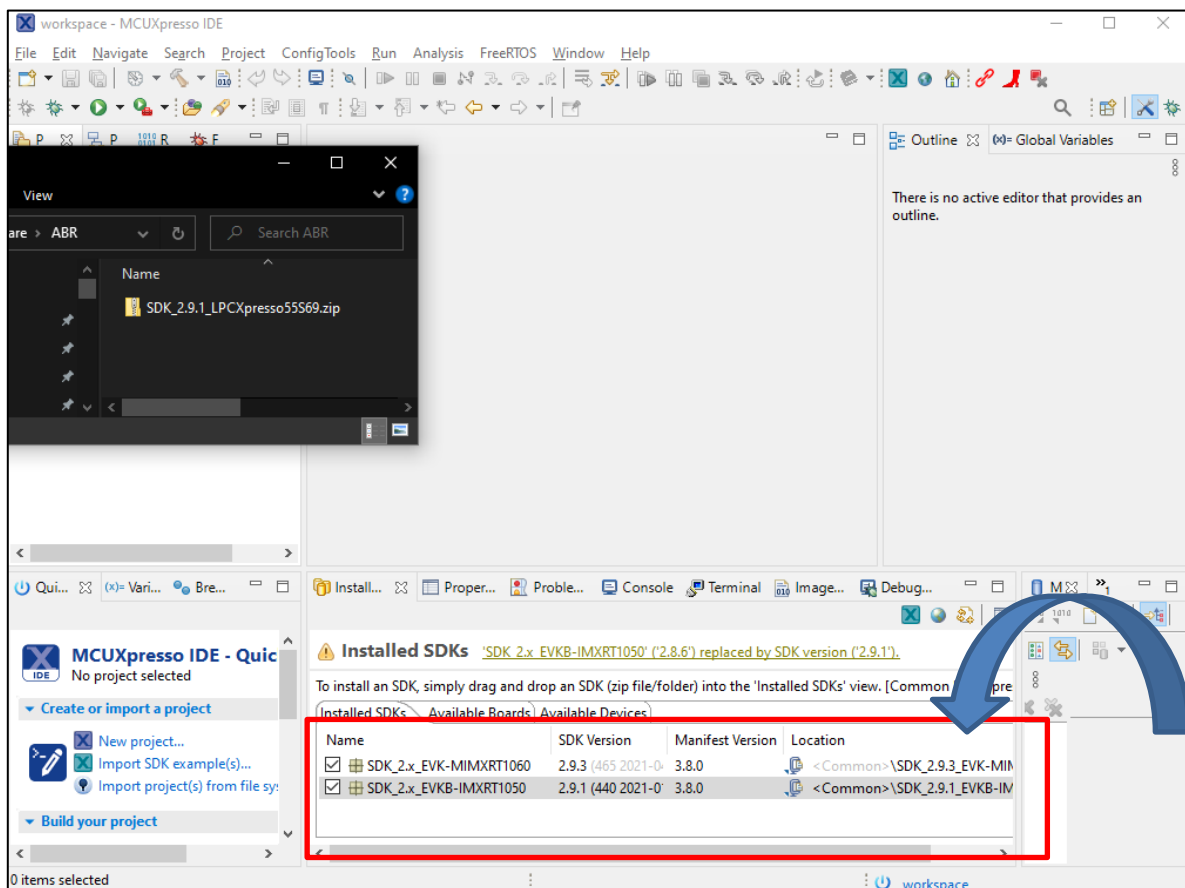

5 Sample Demo Description

5.1 wifi_serial_iperf3 from LPCXpresso:


The iperf3 example provides basic commands to measure performance of network stack. Results will be shown on your iperf server. In the case of 'R' mode, server shows the amount of sent data, check the terminal output in this case for the total amount of payload in bytes received over UDP, which marks the device's throughput.

5.2 serial_mwm_demo on the module:

Type ABR module initially starts as a micro-AP before starting provisioning service. During provisioning, module authenticates the client for the security and passphrase. Once provisioning is completed, the module switches to Wi-Fi® station mode, it connects to a Wi-Fi® network in the vicinity.


6 Run wifi_serial_iperf3 example:

1. The testing for the ABR is done using the example “wifi_serial_iperf3” provided in the SDK. Import example wifi_serial_iperf3 under the wifi_examples.

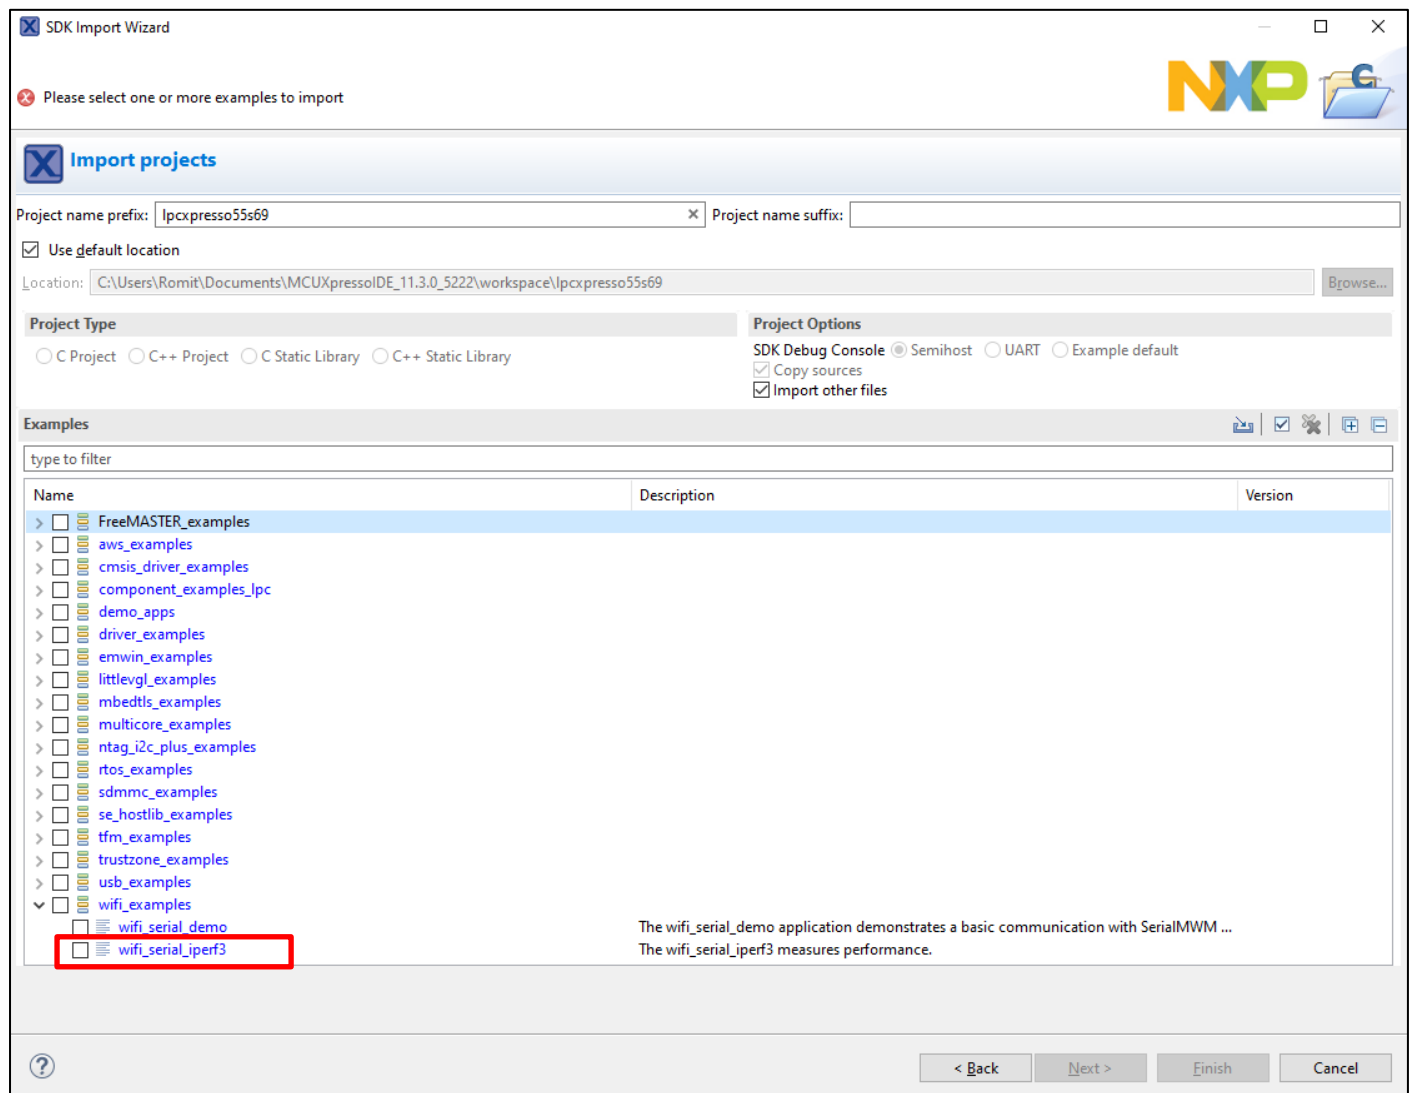


2. Open a terminal application (e.g., [Tera Term](#)) on the appropriate COM port (the port number can be checked in Windows Device Manager, under Ports (COM & LPT)). Configure port for 115200 bps, 8 bits data, no parity, and 1 stop bit (115200/8/N/1).


3. Run debug in the IDE. Then click on resume debug. You will see below logs on the terminal.

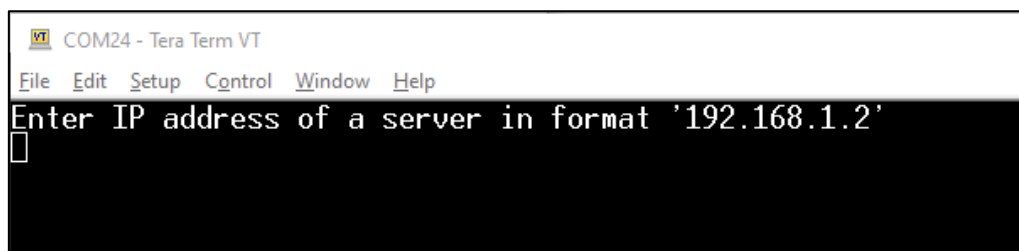




4. Run server in another laptop and enter the IP address of server in the terminal window. You will see below logs in the terminal window:

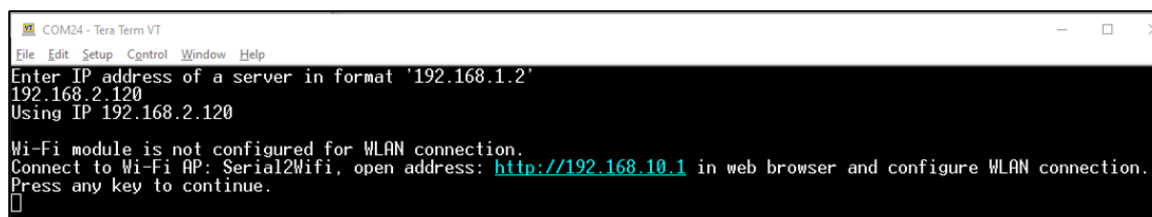

5. Use your mobile phone to connect to the SSID (i.e., Serial2Wifi). Please use password "nxp12345" to connect to the SSID.
6. Open address <http://192.168.10.1> in web browser, select "Provisioning".

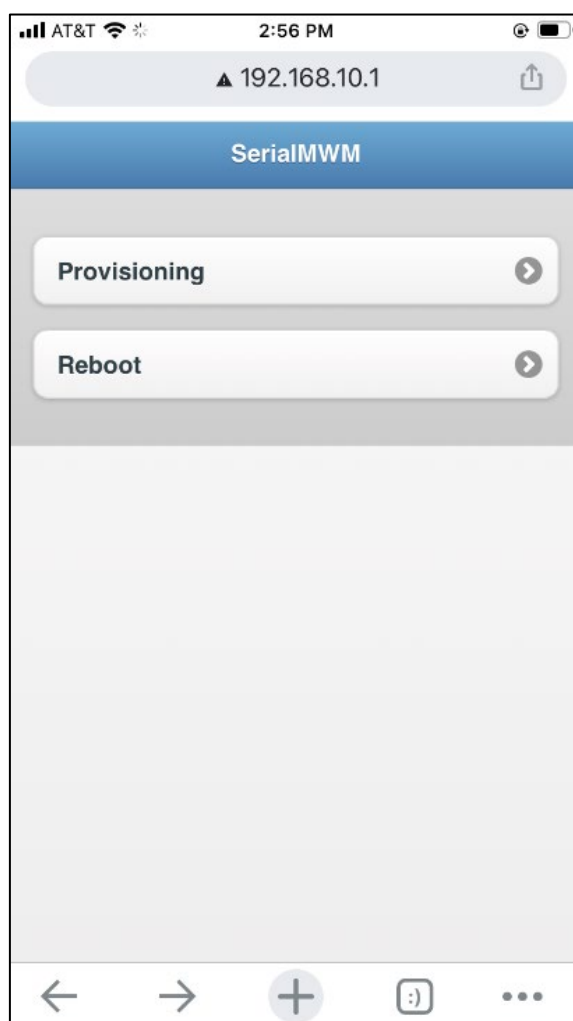

7. Select WLAN (i.e."TC2_2G" in this example) for connection.

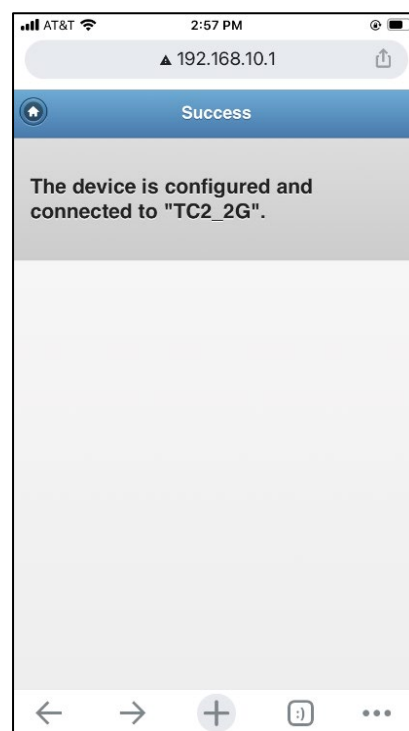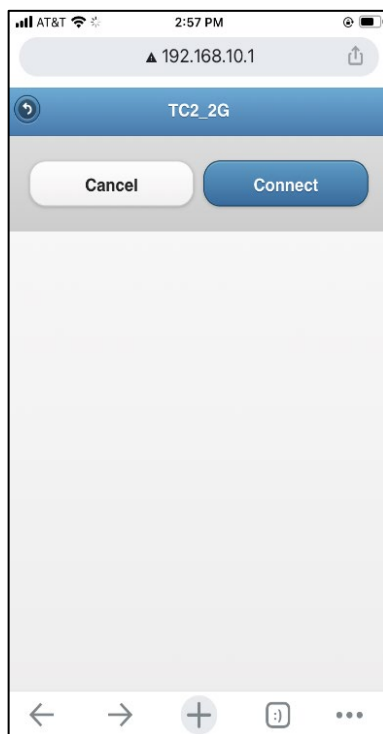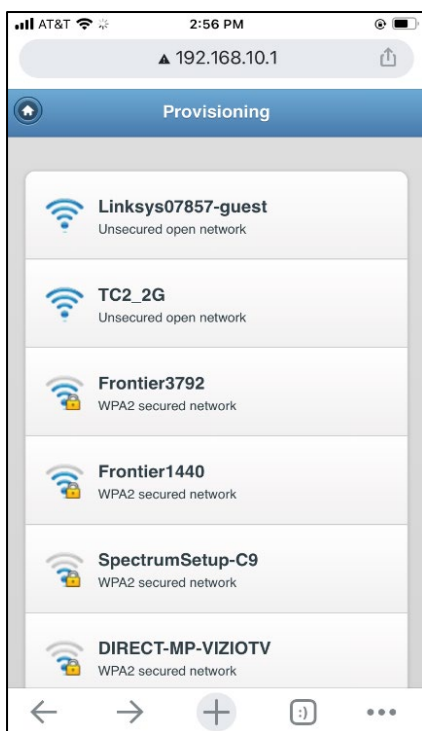

8. Hit return in Tera Term and you will see below logs.

```
COM24 - Tera Term VT
File Edit Setup Control Window Help
Enter IP address of a server in format '192.168.1.2'
192.168.2.120
Using IP 192.168.2.120

Wi-Fi module is not configured for WLAN connection.
Connect to Wi-Fi AP: Serial2Wifi, open address: http://192.168.10.1 in web browser and configure WLAN connection.
Press any key to continue.

Wi-Fi is connected to: TC2_2G, IP Address: 192.168.2.123

To reset Wi-Fi module to provisioning mode connect to WLAN: TC2_2G, open address: http://192.168.2.123 in web browser and select "Reset to Provisioning".
Then restart this application.

Menu:
Press 's' to start client Tx mode
Press 'r' to start client Rx mode
Press 'S' to start client Tx UDP mode
Press 'R' to start client Rx UDP mode
```

9. Select one of the options to run iperf. TCP TX mode is selected first in this example. You will see following logs if the example runs successfully.

```
COM24 - Tera Term VT
File Edit Setup Control Window Help
Enter IP address of a server in format '192.168.1.2'
192.168.2.120
Using IP 192.168.2.120

Wi-Fi module is not configured for WLAN connection.
Connect to Wi-Fi AP: Serial2Wifi, open address: http://192.168.10.1 in web browser and configure WLAN connection.
Press any key to continue.

Wi-Fi is connected to: TC2_2G, IP Address: 192.168.2.123

To reset Wi-Fi module to provisioning mode connect to WLAN: TC2_2G, open address: http://192.168.2.123 in web browser and select "Reset to Provisioning".
Then restart this application.

Menu:
Press 's' to start client Tx mode
Press 'r' to start client Rx mode
Press 'S' to start client Tx UDP mode
Press 'R' to start client Rx UDP mode
s
Tx mode!
Connecting to the server...
Sending cookie!!...
Exchanging parameters
Creating streams
Starting test
Ending test
Exchanging results

=====
Server Results
{"cpu_util_total":0.0019242,
"cpu_util_user":0.000946247,
"cpu_util_system":0.000977953,
"sender_has_retransmits":-1,
"streams":[{"id":1,
"bytes":121856,
"retransmits":-1,
"jitter":0,
"errors":0,
"packets":0}]}
=====
IPERF finished, supposed to send 121 kB (119 KiB)(121856 bytes)!
Transmitted 121 kB (119 KiB)(121856 bytes).

=====
PRESS "F" to restart...
```

10. Select UDP RX mode for second test. You will see below logs.

```
COM24 - Tera Term VT
File Edit Setup Control Window Help
Enter IP address of a server in format '192.168.1.2'
192.168.2.120
Using IP 192.168.2.120

Wi-Fi module is not configured for WLAN connection.
Connect to Wi-Fi AP: Serial2Wifi, open address: http://192.168.10.1 in web browser and configure WLAN connection.
Press any key to continue.

Wi-Fi is connected to: TC2_2G, IP Address: 192.168.2.125

To reset Wi-Fi module to provisioning mode connect to WLAN: TC2_2G, open address: http://192.168.2.125 in web browser and select "Reset to Provisioning".
Then restart this application.

Menu:
Press 's' to start client Tx mode
Press 'r' to start client Rx mode
Press 'S' to start client Tx UDP mode
Press 'R' to start client Rx UDP mode
R
Rx UDP mode!
Connecting to the server...
Sending cookie!!...
Exchanging parameters
Creating streams
Ending test
Exchanging results

=====
Server Results
{"cpu_util_total":0.00534445,
"cpu_util_user":0.00585266,
"cpu_util_system":0,
"sender_has_retransmits":0,
"streams":[{"id":1,
"bytes":126976,
"retransmits":-1,
"jitter":0,
"errors":0,
"packets":0}]}
=====
IPERF finished, Received 110 kB (108 KiB)!

=====
PRESS "F" to restart...
```




11. If you are running the same example (wifi_serial_iperf3) second time, it might start with already associated with WLAN (i.e. "TC2_2G") without giving you option to join the AP SSID. If you want to repeat same process from connecting to AP SSID from phone and then connecting to WLAN via browser, please follow the steps below.

```
Enter IP address of a server in format '192.168.1.2'
192.168.2.120
Using IP 192.168.2.120
Wi-Fi is connecting...
Wi-Fi is connecting...
Wi-Fi is connecting...
Wi-Fi is connected to: TC2_2G, IP Address: 192.168.2.125

To reset Wi-Fi module to provisioning mode connect to WLAN: TC2_2G, open address: http://192.168.2.125 in web browser and select "Reset to Provisioning".
Then restart this application.

Menu:
Press 's' to start client Tx mode
Press 'r' to start client Rx mode
Press 'S' to start client Tx UDP mode
Press 'R' to start client Rx UDP mode
```

- a) Connect to the WLAN SSID (i.e. "TC2_2G" in this example) from your phone. Open address <http://192.168.2.125> in web browser, select "Reset to Provisioning".

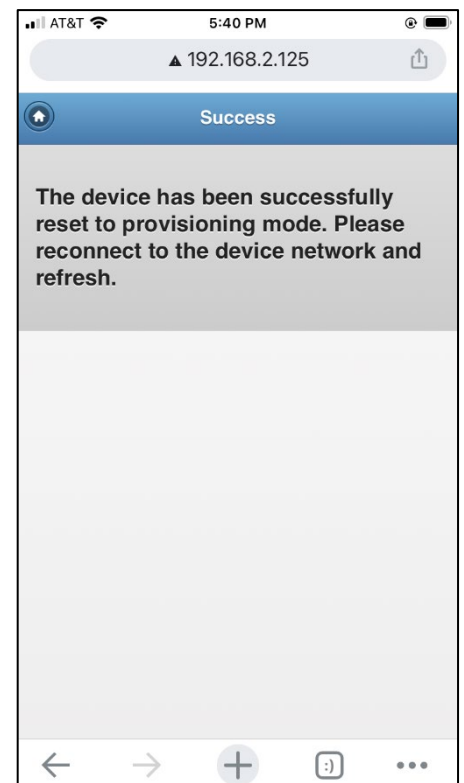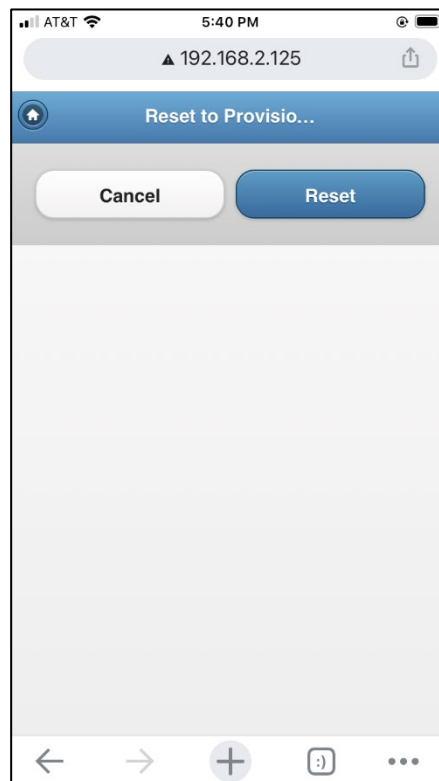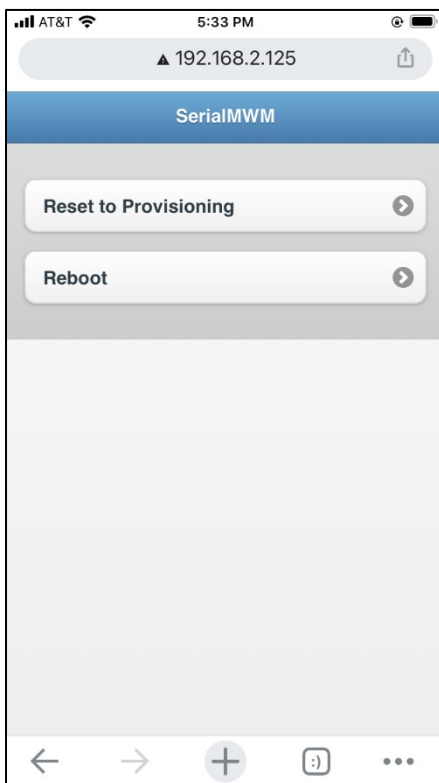

- b) Run the example (wifi_serial_iperf3) again. You will see the option to connect to Wi-Fi® AP this time.

7 Type ABR EVB LED Status

Murata customizes LED1/LED2 functionality in the “*serial_mwm_demo*” firmware which Type ABR EVB executes. **Table 2** and **Figure 3** provide comprehensive details below.

Table 2: LED1/LED2 Status during “serial_mwm_demo” execution

State	LED1 (Red) - READY	LED2 (Yellow) - LINK
Initial power on reset	ON	ON
Corrupted Flash Image	Fast Blink	ON
Provisioning Mode	OFF	Slow Blink
Associating to Access Point	OFF	Fast Blink
Associated to Access Point	OFF	OFF

Figure 3: LED1/LED2 Status Flow Diagram during “serial_mwm_demo” execution

