


## Gimbal controller firmware and GUI for drones and handheld applications

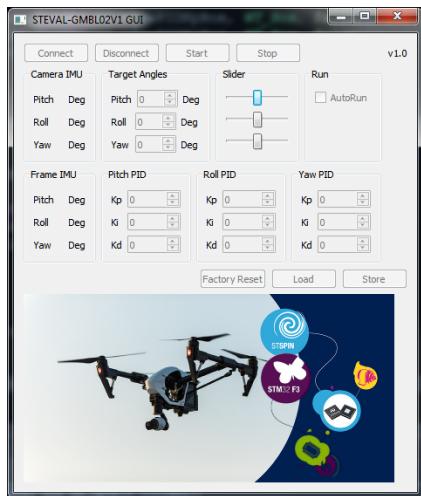

### Features

- **Firmware:**
  - firmware to drive three motors with field-oriented control (FOC)
  - support for position sensors on three Gimbal motors (PWM inputs)
  - accurate position control algorithm
  - support for triple single shunt current sensing network
  - decoding of on-board inertial measurement unit [LSM6DSL](#) (frame IMU)
  - decoding of the external SPI inertial measurement units based on [LSM6DSL](#) on [STEVAL-MKI178V1](#) or [STEVAL-MKI178V2](#) board (for camera IMU)
  - USB communication for real-time data exchange with the Gimbal GUI
  - application data stored in the on-board 2 Kbit serial I2C bus EEPROM
  - auto-start control when not connected to the GUI
- **STSW-GMBL02V1 GUI**
  - start/stop Gimbal control
  - real time setting of the PID regulators for pitch, roll and yaw
  - set target angles for pitch, roll and yaw
  - display measured camera and frame IMU angles
  - save and load application data in flash
  - restore factory settings

Product summary	
Gimbal controller firmware and GUI for drones and handheld applications	<a href="#">STSW-GMBL02V1</a>
Reference design kit for Gimbal controller	<a href="#">STEVAL-GMBL02V1</a>
INEMO inertial module, 3-axis accelerometer, 3-axis gyroscope, always-on, smart FIFO buffer, free-fall, wakeup, 6D/4D orientation, I2C, SPI	<a href="#">LSM6DSL</a>
LSM6DSL adapter board for a standard DIL24 socket	<a href="#">STEVAL-MKI178V1</a> / <a href="#">STEVAL-MKI178V2</a>

### Description

The [STSW-GMBL02V1](#) firmware for the [STEVAL-GMBL02V1](#) reference kit runs in the on-board STM32 microcontroller and is able to drive three motors in field-oriented control, to decode the three position sensor signals coming from the motors and implement an accurate position control algorithm regulating the camera orientation.



The firmware decodes simultaneously two different inertial measurement unit (Camera IMU and Frame IMU) to get the current orientation of the camera and of the frame where the board is mounted, respectively.

The [STSW-GMBL02V1](#) GUI is able to communicate with the board via USB sending commands and getting feedbacks from the firmware. The GUI also reads the Camera and Frame IMU angle information, starts or stops the Gimbal control and changes the PID regulators for pitch, roll and yaw axes.

Any setting modified in the GUI can be then stored in the board EEPROM non-volatile memory. The GUI can program the auto-start feature to control the Gimbal, when the board is no more connected with the GUI, and restore the factory settings.

## 1 Block diagram

Figure 1. STSW-GMBL02V1 block diagram

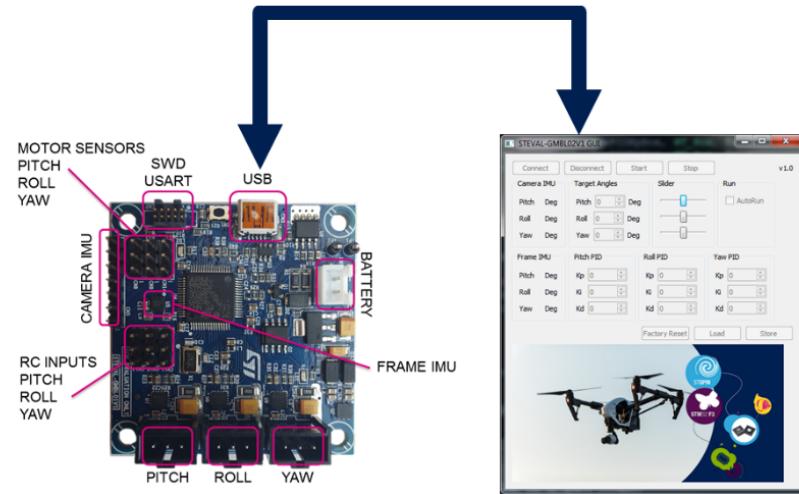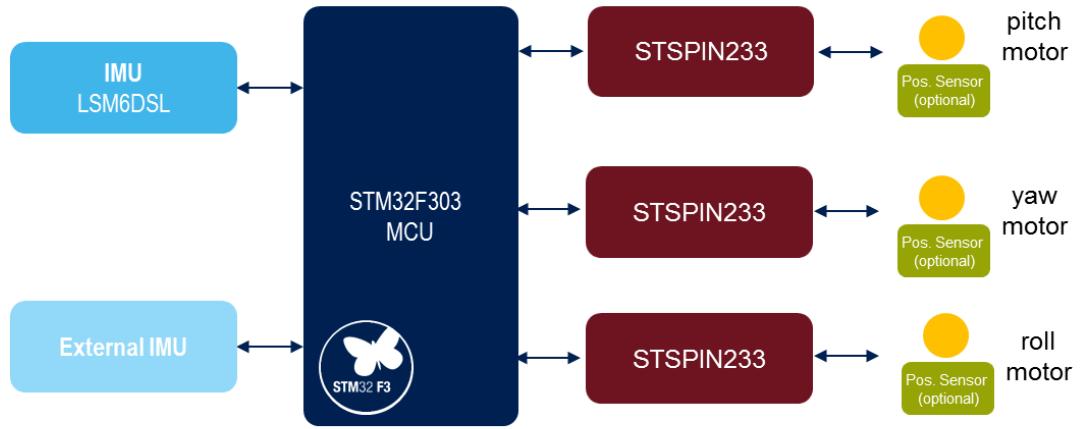

## Revision history

**Table 1. Document revision history**

Date	Version	Changes
21-Aug-2018	1	Initial release.

**IMPORTANT NOTICE – PLEASE READ CAREFULLY**

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgement.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of Purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2018 STMicroelectronics – All rights reserved