

# Modbus pH Sensor Adapter Datasheet



## 1 Introduction

The Modbus pH Sensor Adapter is designed to work with pH probes to form a complete pH sensor. The adapter consists of a built-in BNC connector used to attach pH probes. The adapter and probe are calibrated using a 2-point calibration algorithm and supports measurement of pH ranging from 0 to 14 pH with a 0.01 pH resolution. The adapter and probe combination are suitable for use in applications such as nutrient tanks, water treatment plants, sewage treatment plants, swimming pools. Real time monitoring, alert notifications and control automation can be achieved.

### 1.1 Features

- pH Sensor Adapter to integrate with any pH probe with a BNC connector
- Measures pH range of 0 to 14pH with linearized output and 0.01 pH resolution
- 2 Point calibration guided step-by-step
- Implements Modbus RTU protocol
- High report rate of 1 report every 5 seconds
- Low power consumption 5V-108mW
- Operating temperature range: 0°C to +70°C
- Flush mount and DIN Rail Mount options



Neither the whole nor any part of the information contained in, or the product described in this manual, may be adapted, or reproduced in any material or electronic form without the prior written consent of the copyright holder. This product and its documentation are supplied on an as-is basis and no warranty as to their suitability for any particular purpose is either made or implied. Bridgetek Pte Ltd will not accept any claim for damages howsoever arising as a result of use or failure of this product. Your statutory rights are not affected. This product or any variant of it is not intended for use in any medical appliance, device, or system in which the failure of the product might reasonably be expected to result in personal injury. This document provides preliminary information that may be subject to change without notice. No freedom to use patents or other intellectual property rights is implied by the publication of this document. Bridgetek Pte Ltd, 1 Tai Seng Avenue, Tower A, #03-05, Singapore 536464. Singapore Registered Company Number: 201542387H

## 2 Part Numbers / Ordering Information

Part Number	Description
MS-0401-01A	Modbus pH Sensor Adapter
MA-0102-01A	Modbus RS485-RJ11 Cable (30cm)
LA-1201-01A	LDSBus DIN Rail Mount Set

**Table 1 - Part Numbers / Ordering Information**

## **Table of Contents**

<b>1 Introduction .....</b>	<b>1</b>
<b>1.1 Features .....</b>	<b>1</b>
<b>2 Part Numbers / Ordering Information .....</b>	<b>2</b>
<b>3 Specifications .....</b>	<b>4</b>
<b>4 FCC Compliance Statement.....</b>	<b>5</b>
<b>5 Hardware Features .....</b>	<b>6</b>
<b>6 Sensor Adapter Configuration and Installation.....</b>	<b>8</b>
<b>6.1 Connection Diagram .....</b>	<b>8</b>
<b>6.2 RS485-RJ11 Cable(30cm) .....</b>	<b>9</b>
<b>7 Mounting Instructions .....</b>	<b>10</b>
<b>7.1 Flush Mount.....</b>	<b>10</b>
<b>7.2 DIN Rail Mount.....</b>	<b>10</b>
<b>8 Modbus Registers .....</b>	<b>11</b>
<b>9 Mechanical Dimensions .....</b>	<b>12</b>
<b>10 System Status LED Indicators.....</b>	<b>13</b>
<b>11 Probe Selection .....</b>	<b>14</b>
<b>12 Contact Information .....</b>	<b>15</b>
<b>Appendix A – References .....</b>	<b>16</b>
Document References .....	16
Acronyms and Abbreviations.....	16
<b>Appendix B – List of Figures and Tables.....</b>	<b>17</b>
List of Figures .....	17
List of Tables.....	17
<b>Appendix C – Revision History .....</b>	<b>18</b>

### 3 Specifications

<b>Features</b>	Interface	BNC - Connect to pH probe RS485 Modbus RTU
	LED Indicator (RGB)	System Status Indicator (Please refer to <a href="#">LED section</a> )
	Mounting	Flush Mount DIN Rail Mount
<b>Power</b>	Modbus Voltage	9-24V DC Bus Power
	Device Input Voltage	5V DC Bus Power
	Typical Power	108mW
	Max. Power	218mW
<b>pH Sensor input module</b>	Range	0 – 14pH
	Resolution	0.01pH
	Response Time	<1Minute
	Calibration	2 Point Calibration
<b>Physical Characteristics</b>	Color	White
	Housing	Polycarbonate
	Dimensions	L117.6mm x W42.9mm x H29.7mm
<b>Environmental Limits</b>	Operating Temperature	0 to 70°C
	Storage Temperature	-20 to 85°C
	Ambient Relative Humidity	5 to 95% (non-condensing)
<b>Package Contents</b>	Device	1x Modbus pH Sensor Adapter
	Wire Assembly	1x Modbus RS485-RJ11 Cable(30cm)
<b>Optional</b>	Mounting Accessories	1x LDSBus DIN Rail Mount set

**Table 2 - Modbus pH Sensor Adapter Specifications**

## 4 FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) These devices may not cause harmful interference, and
- (2) These devices must accept any interference received, including interference that may cause undesired operation.

**NOTE:** The equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF exposure guidelines, at least 20cm of separation distance between the device and the user's body must be always maintained.

### FCC Radiation Exposure Statement


This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with the instructions provided, and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

### Caution

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



## 5 Hardware Features

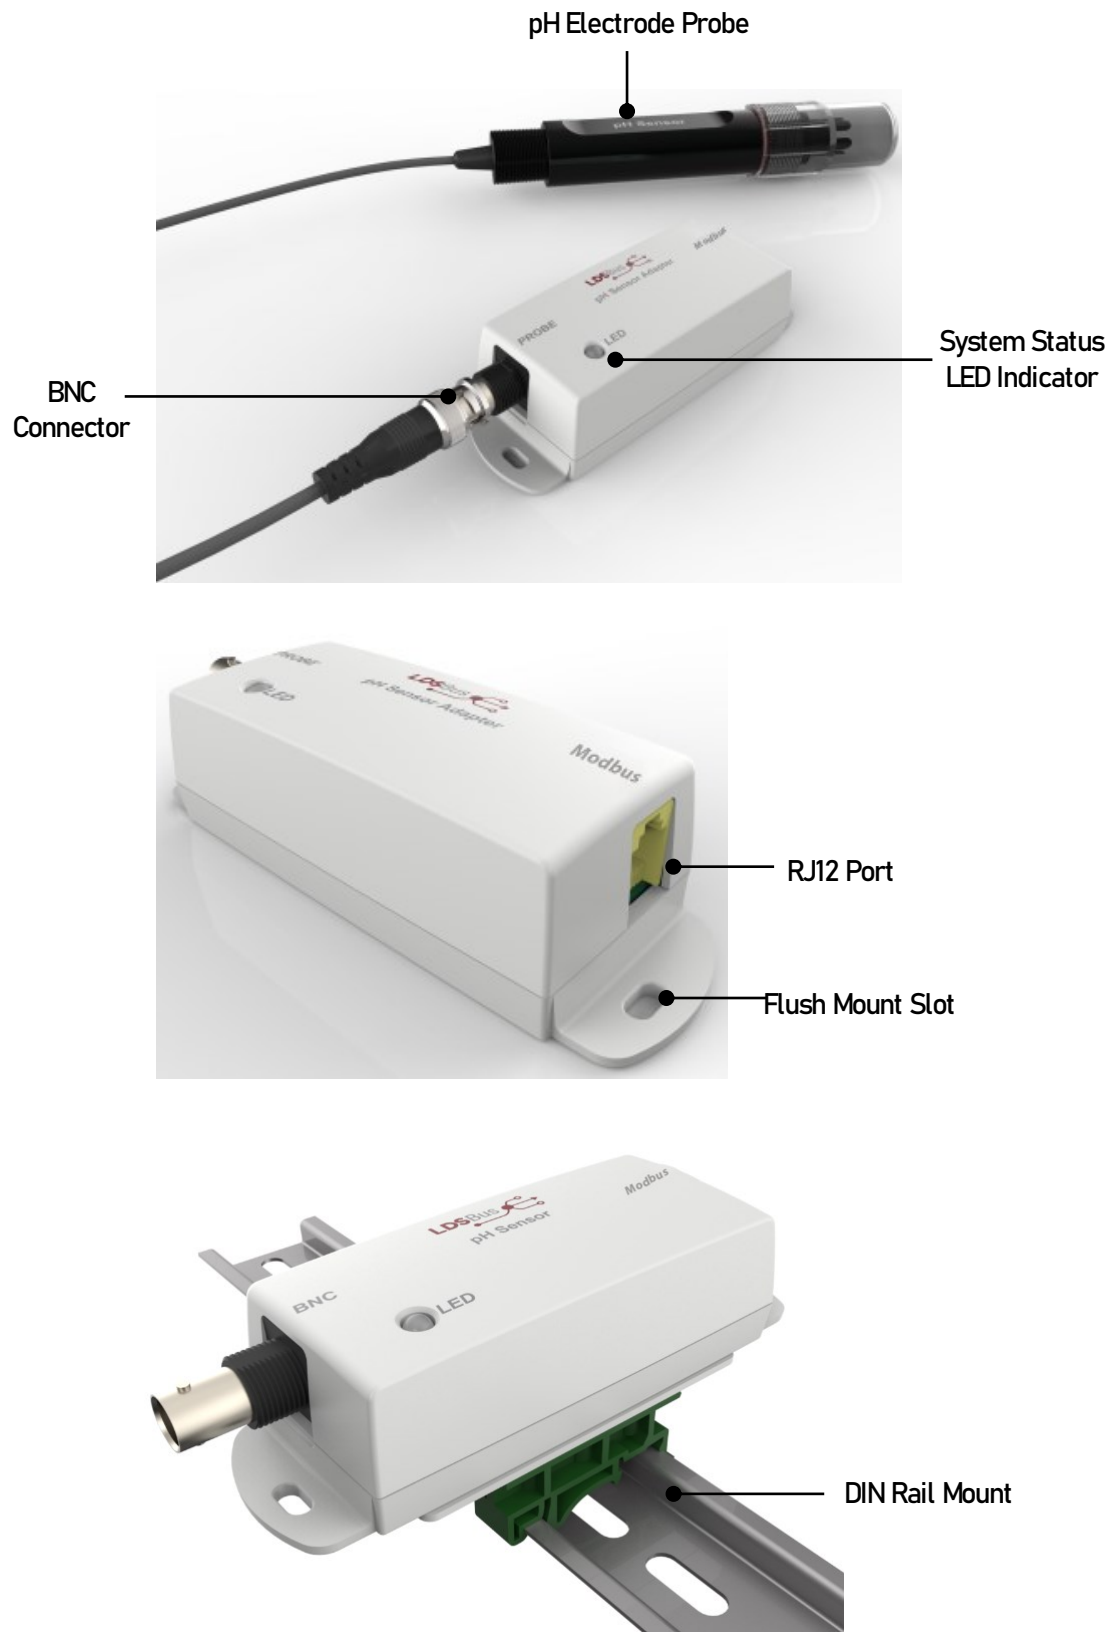

**Figure 1 - Modbus pH Sensor Adapter Hardware Features**


Function	Labels	Description
BNC Connector	Probe	Probe Interface
pH Electrode Probe	-	Sensing probe
System Status LED Indicator	LED	Modbus status LED
RJ12 Port	Modbus	Modbus data and power interface port. The physical port is RJ12. The connection interface can be RJ11/RJ12.

**Table 3 - Modbus pH Sensor Adapter Hardware Features**

## 6 Sensor Adapter Configuration and Installation

Please visit <https://brtsys.com/resources> to access the Modbus Configuration Utility guide on how to configure the device name, device address and termination settings before using it for your specific application.

### 6.1 Connection Diagram

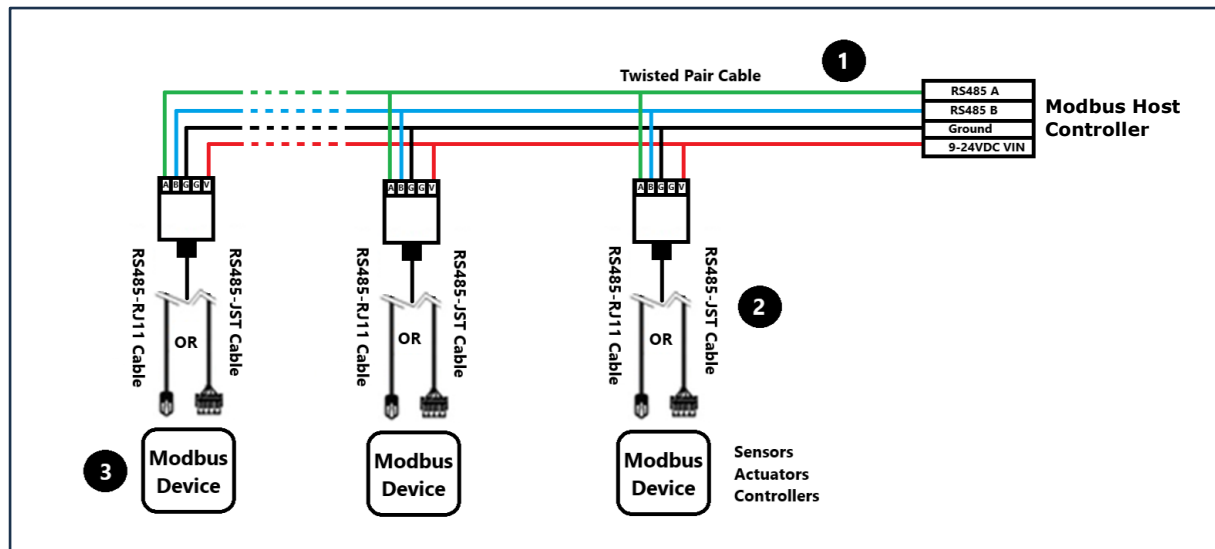


**Figure 2 - Modbus pH Sensor Adapter Connection Diagram**

#### **Setup Instructions:**

1. Use a Cat5e/Cat6e RJ45 Twisted Pair Cable to connect the Modbus controller (Host) to the network for RS485 communication and power.
2. Connect each Modbus device to the network using either an RS485-JST cable or an RS485-RJ11 cable, as provided with the device.
3. Modbus devices have built-in bus termination resistors. These resistors can be enabled or disabled by using the [Modbus Configuration Utility](#). When installing the device as the last device on the bus, these terminations may be used to terminate the bus.



## 6.2 RS485-RJ11 Cable(30cm)

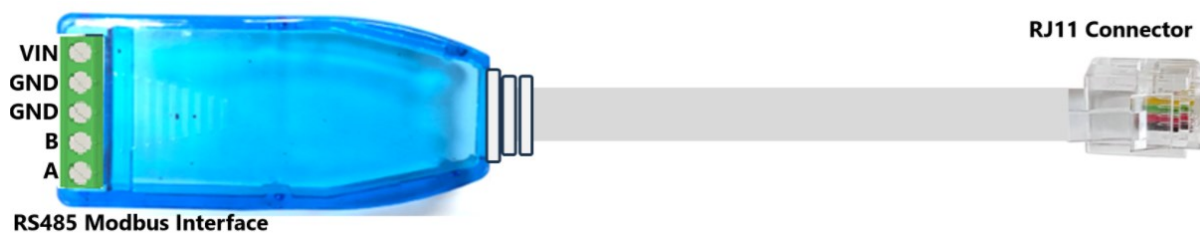

**Figure 3 - RS485-RJ11 Cable(30cm)**


PIN Legend	Function
VIN	Modbus Input Voltage 9-24VDC
GND	Ground
GND	Ground
B	RS485-B
A	RS485-A

**Table 4 - RS485-RJ11 Cable(30cm) Pin Configuration**

## 7 Mounting Instructions

### 7.1 Flush Mount

The device can be flush mounted directly on a wall or any flat surface using 2 M3.5\*16mm (thread) screws.

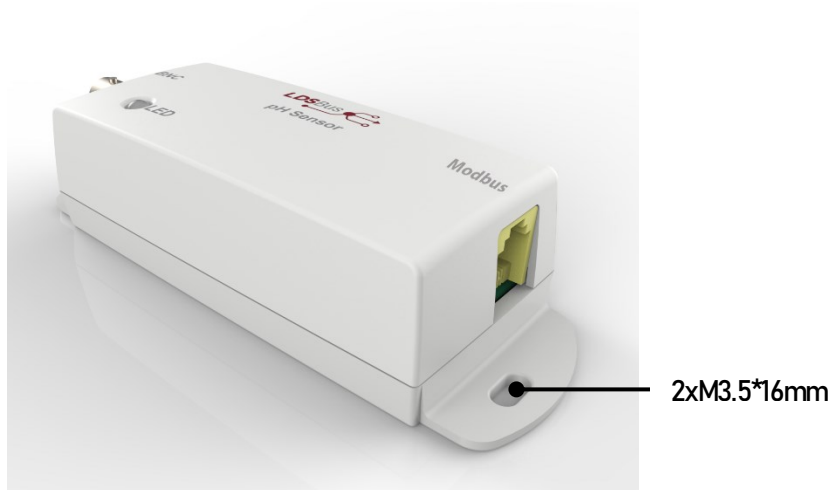

**Figure 4 - Modbus pH Sensor Adapter Flush Mount**

### 7.2 DIN Rail Mount

The device can be mounted on a DIN Rail using the LDSBus DIN Rail Mount set. This set is optional and includes the bracket and mounting screws.



**Figure 5 - Modbus pH Sensor Adapter DIN Rail Mount**


## 8 Modbus Registers

Parameter	Starting Address	Quantity of Registers	Supported Function Code	Parameter Range and Description	Default
<b>Address<sup>(1)</sup></b>	0000H	1	0x03/0x10	1 to 126	126
<b>RS485 Termination<sup>(1)</sup></b>	0001H	1	0x03/0x10	0 - Termination OFF 1 - Termination ON	Termination OFF
<b>Baud Rate<sup>(1)</sup></b>	0002H	1	0x03/0x10	0 - 1200 bps 1 - 2400 bps 2 - 4800 bps 3 - 9600 bps 4 - 19200 bps 5 - 38400 bps 6 - 115200 bps	9600 bps
<b>Parity<sup>(1)</sup></b>	0003H	1	0x03/0x10	0 - None 1 - Odd 2 - Even	Even
<b>Status LED Enable<sup>(1)</sup></b>	0004H	1	0x03/0x10	0 - LED OFF 1 - LED ON	LED ON
<b>Measuring Temperature</b>	0005H	1	0x03/0x10	0 - 70°C	25°C
<b>Sensor Calibration Version</b>	0006H	1	0x03/0x10	Calibration version 0x0090 - Calibrated 0xFFFF - Not calibrated	N/A
<b>Sensor Calibrated Date</b>	0007H	2	0x03/0x10	Calibration date YYYYMMDD 0x20221203	N/A
<b>Sensor Calibrated Constant</b>	0009H	1	0x03/0x10	Constant value = 0x000A	0xFFFF
<b>Sensor Calibrated pH ADC Value</b>	000AH	1	0x03/0x10	0 to 1023	N/A
<b>Sensor Calibrated Gain</b>	000BH	1	0x03/0x10	Gain x 1024	0x0939
<b>Sensor Calibrated Offset</b>	000CH	2	0x03/0x10	Offset value x 1024	0x00000000
<b>Sensor Calibrated Temperature</b>	000EH	1	0x03/0x10	Temperature 0 - 70°C	25°C
<b>Calibration XOR Checksum</b>	000FH	1	0x03/0x10	XOR Checksum registers 06H to 0EH	N/A
<b>Device UUID</b>	0026H	8	0x03	MSxxxxxxxxxxxxyy where x is ASCII character and yy is 16-bit running number	N/A
<b>Device Firmware Version</b>	002EH	1	0x03	0xXXMN XX - Not concerned M - Major N - Minor	N/A
<b>Device Part Number</b>	002FH	1	0x03	Device ID	0x8008
<b>Reserved</b>	0030H	N/A	N/A	Reserved	N/A
<b>pH</b>	0031H	1	0x03	0 - 14 pH x 100	N/A
<b>Sensor ADC data</b>	0032H	1	0x03	0 - 1023	N/A
<b>Reset</b>	0150H	1	0x06	Write 1 to reset	N/A
<b>Reserved</b>	0151H	N/A	N/A	Reserved	N/A
<b>Identify</b>	0152H	1	0x06	Write 1 to start blinking the device @1Hz for 10 seconds	N/A

**Table 5 - Modbus Registers**

<sup>(1)</sup>This indicates that any updates to these communication/status register(s) will only take effect after the device has been rebooted.


## 9 Mechanical Dimensions

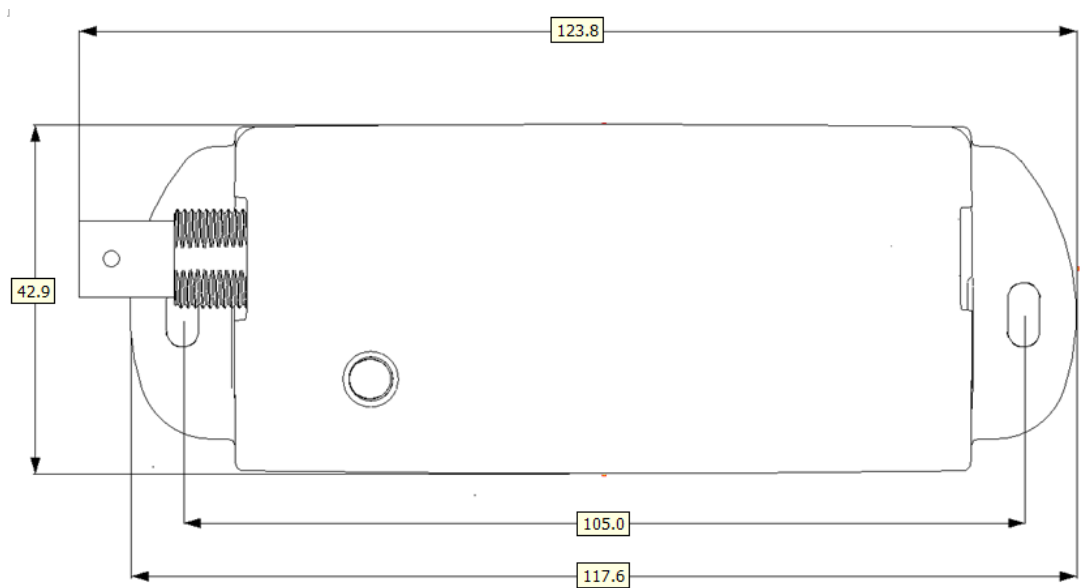

**Figure 6 - Modbus pH Sensor Adapter Dimension – Top View**





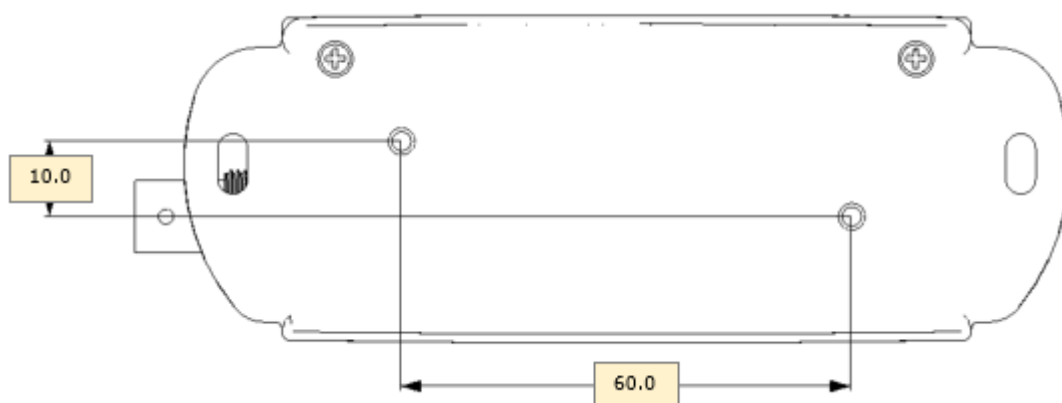

**Figure 7 - Modbus pH Sensor Adapter Dimension – Side View**



**Figure 8 - Modbus pH Sensor Adapter Dimension – Bottom View**

**Note:** All dimensions are in millimetres.

## 10 System Status LED Indicators

Device Status	LED Color		Flashing Frequency	Description
Termination ON	BLUE		Steady – Non- flashing	
Termination OFF	GREEN		Steady – Non- flashing	
Device Configuration Error	RED		Steady – Non- flashing	Device configuration error
Communication	RED/GREEN/ BLUE/YELLOW	-	Blink twice (Short blink)	Device in communication
Firmware update	YELLOW		Steady – Non- flashing	Device firmware update

**Table 6 - System Status LED Indicators**

**Note:**

1. For reliable communication, ensure that the power supply and the RS485 termination settings are correct.
2. Ensure that the Modbus address and baud rate are configured correctly before deployment.

## 11 Probe Selection

The following specifications are recommended for selecting a Probe -

pH Range	:	0~14pH
Connector Interface	:	BNC
Zero Point	:	Max. $7 \pm 0.5$ pH
Theoretical slope %	:	$\geq 90\%$ and $\leq 105\%$
Internal Resistance	:	$\leq 250\text{M}\Omega$

For more information on calibration, please refer to  
[Modbus Configuration Utility User Guide](#)

For information related to probes recommendation and selection criteria, please refer to [LDSBus Probe Specifications](#).

## 12 Contact Information

Refer to <https://brtchip.com/contact-us/> for contact information.

### **Distributor and Sales Representatives**

Please visit the Distribution Network – IC & Module (brtchip.com) page for the contact details of our distributor(s) and sales representative(s) in your country.

System and equipment manufacturers and designers are responsible to ensure that their systems, and any Bridgetek Pte Ltd (BRTChip) devices incorporated in their systems, meet all applicable safety, regulatory and system-level performance requirements. All application-related information in this document (including application descriptions, suggested Bridgetek devices and other materials) is provided for reference only. While Bridgetek has taken care to assure it is accurate, this information is subject to customer confirmation, and Bridgetek disclaims all liability for system designs and for any applications assistance provided by Bridgetek. Use of Bridgetek devices in life support and/or safety applications is entirely at the user's risk, and the user agrees to defend, indemnify and hold harmless Bridgetek from any and all damages, claims, suits, or expense resulting from such use. This document is subject to change without notice. No freedom to use patents or other intellectual property rights is implied by the publication of this document. Neither the whole nor any part of the information contained in, or the product described in this document, may be adapted, or reproduced in any material or electronic form without the prior written consent of the copyright holder. Bridgetek Pte Ltd, 1 Tai Seng Avenue, Tower A, #03-05, Singapore 536464. Singapore Registered Company Number: 201542387H.

## Appendix A – References

### Document References

[Modbus Configuration Utility User Guide](#)

[LDSBus Probe Specifications](#)

### Acronyms and Abbreviations

Terms	Description
DC	Direct Current
IoT	Internet of Things
LED	Light Emitting Diode



## **Appendix B – List of Figures and Tables**

### **List of Figures**

Figure 1 - Modbus pH Sensor Adapter Hardware Features .....	6
Figure 2 - Modbus pH Sensor Adapter Connection Diagram .....	8
Figure 3 - RS485-RJ11 Cable(30cm).....	9
Figure 4 - Modbus pH Sensor Adapter Flush Mount.....	10
Figure 5 - Modbus pH Sensor Adapter DIN Rail Mount.....	10
Figure 6 - Modbus pH Sensor Adapter Dimension – Top View.....	12
Figure 7 - Modbus pH Sensor Adapter Dimension – Side View.....	12
Figure 8 - Modbus pH Sensor Adapter Dimension – Bottom View .....	12

### **List of Tables**

Table 1 - Part Numbers / Ordering Information .....	2
Table 2 - Modbus pH Sensor Adapter Specifications.....	4
Table 3 - Modbus pH Sensor Adapter Hardware Features .....	7
Table 4 - RS485-RJ11 Cable(30cm) Pin Configuration .....	9
Table 5 - Modbus Registers .....	11
Table 6 - System Status LED Indicators .....	13

## Appendix C – Revision History

Document Title: Modbus pH Sensor Adapter Datasheet

Document Reference No.: BRT\_000493

Clearance No.: BRT#257

Product Page: <https://brtchip.com/product/modbus-ph-sensor-adapter/>

Document Feedback: [Send Feedback](#)

Revision	Changes	Date
Version 1.0	Initial release under Bridgetek	13-10-2025