


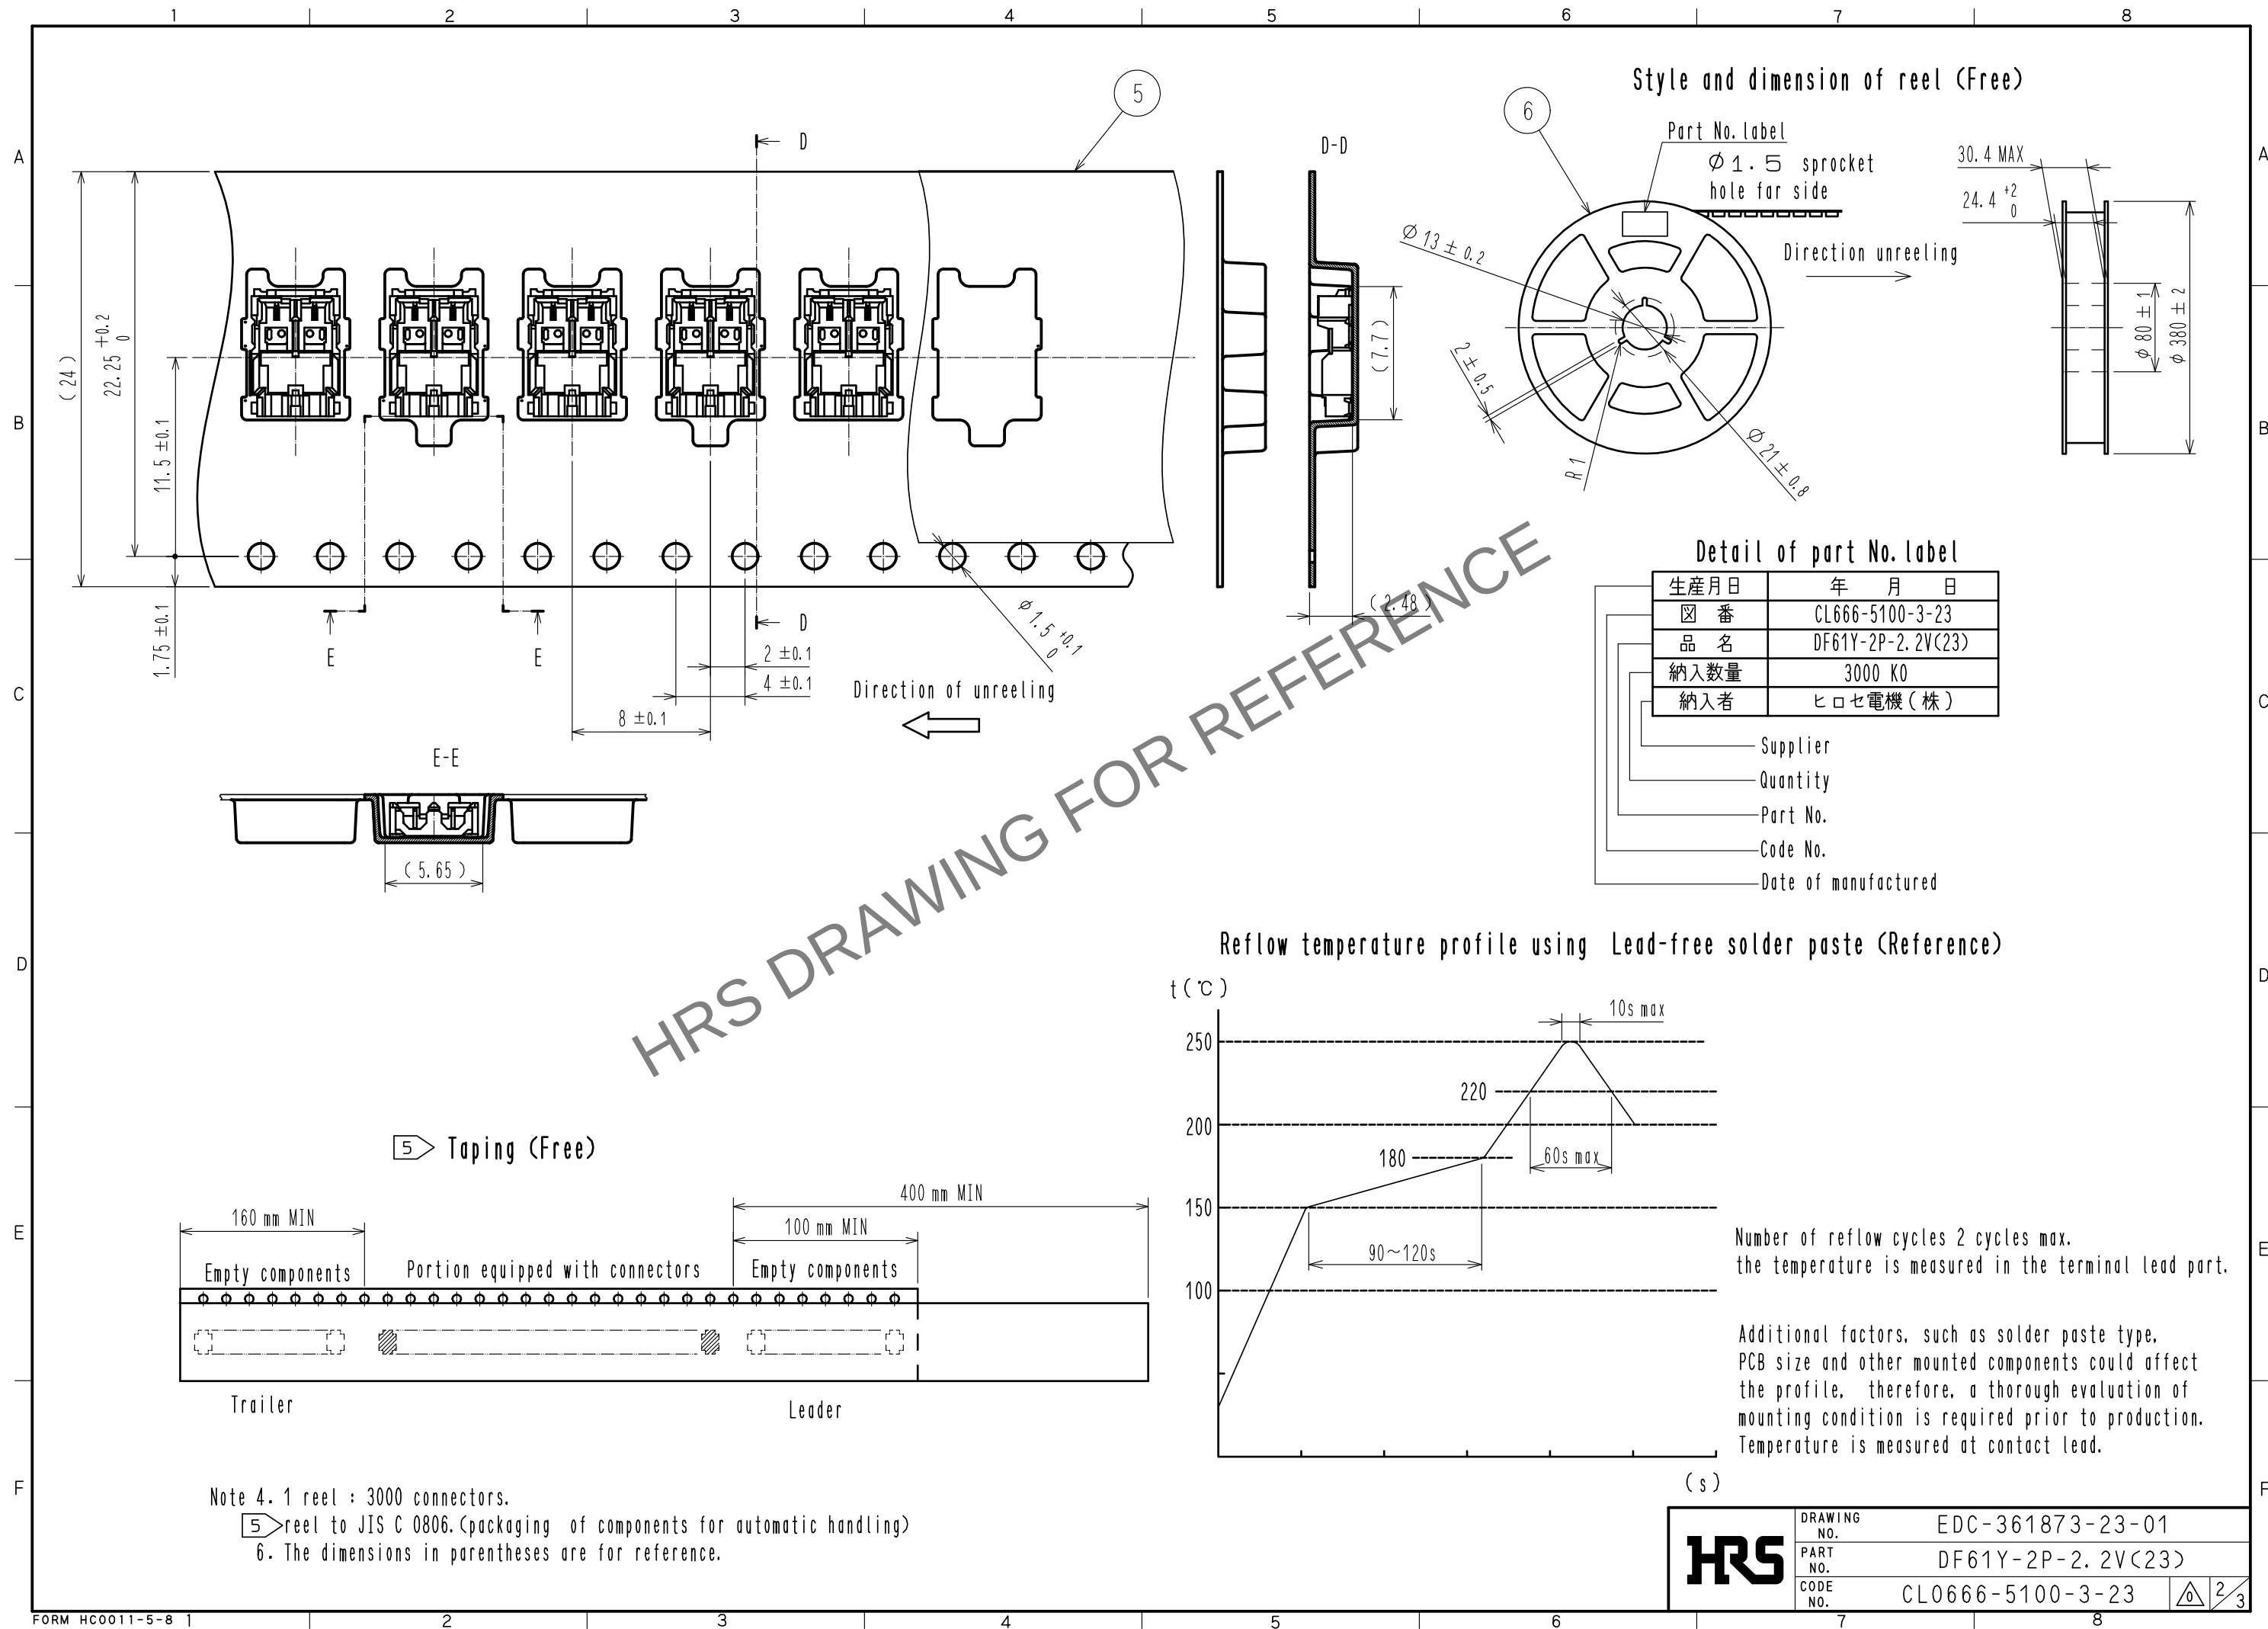

Jan.1.2026 Copyright 2026 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case of consideration for using Automotive equipment / device which demand high reliability, kindly contact our sales window correspondents.




Jan.1.2026 Copyright 2026 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case of consideration for using Automotive equipment / device which demand high reliability, kindly contact our sales window correspondents.


DF61Y Series Mating / Unmating Operation Instruction

Mating


- ① By positioning the convexity of the socket sides to the header concavity, align the centers of the socket and the header in pitch direction.

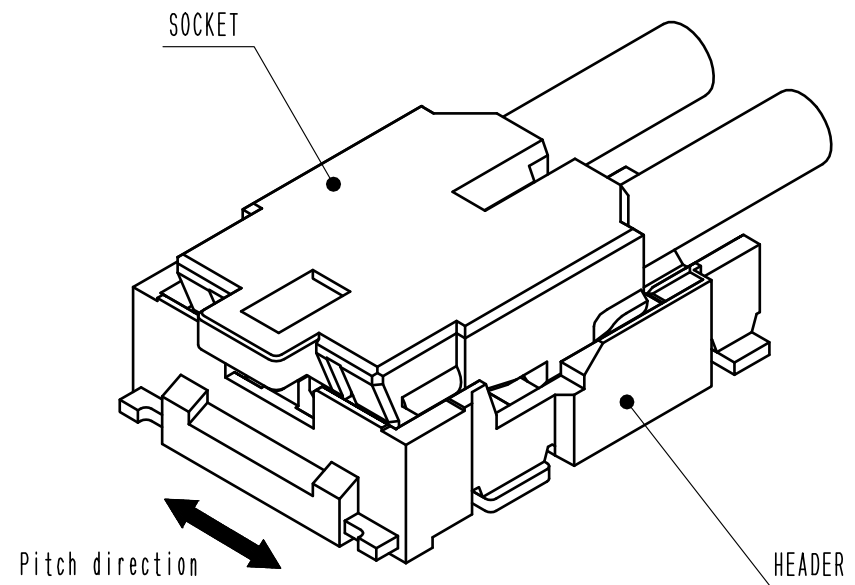

- ② Slightly press the socket down at the center of the socket.

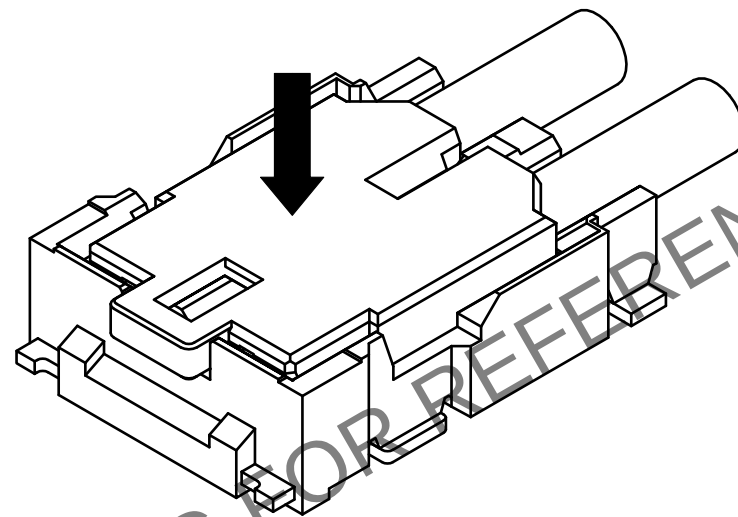


- ③ Press down at the lever side with stabilizing the cable side to insert. Mating completes.

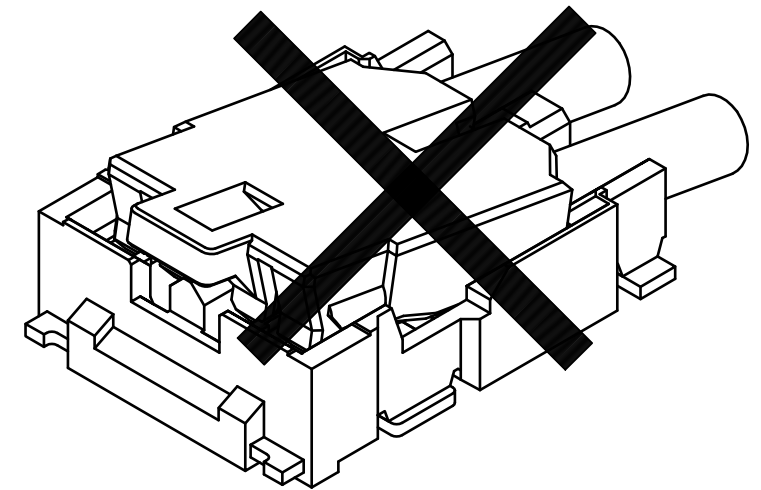


Unmating


- ① Hook the lever with finger nail.

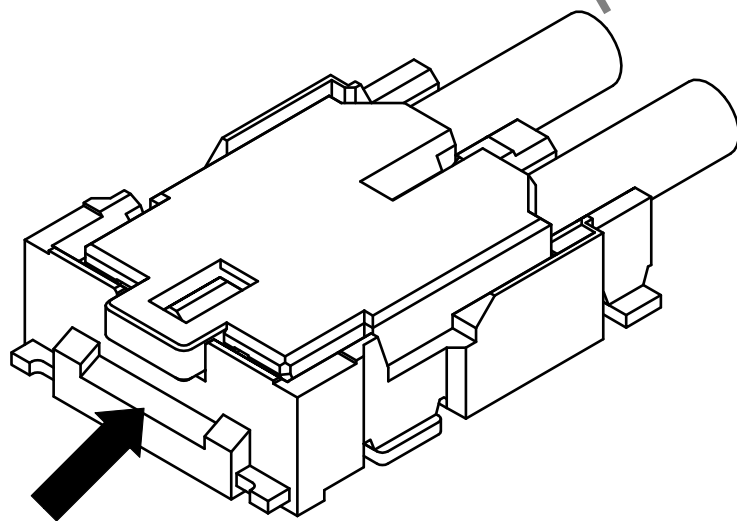

- ② Lift up to the upper direction and friction lock is released.

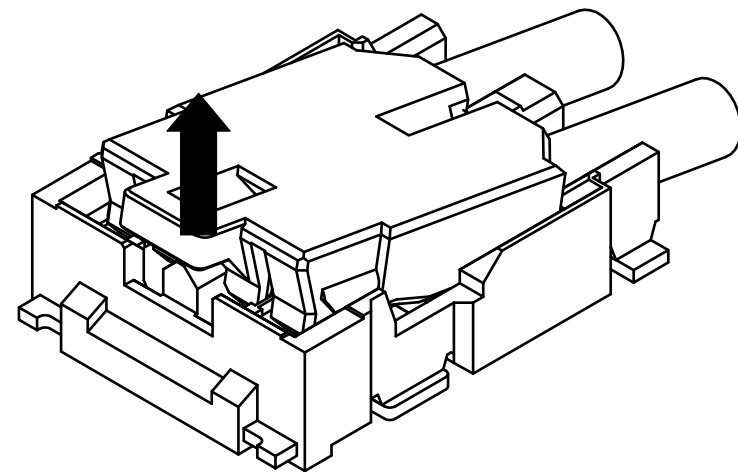

- ③ Lift it up to the upper direction more, and removal completes.

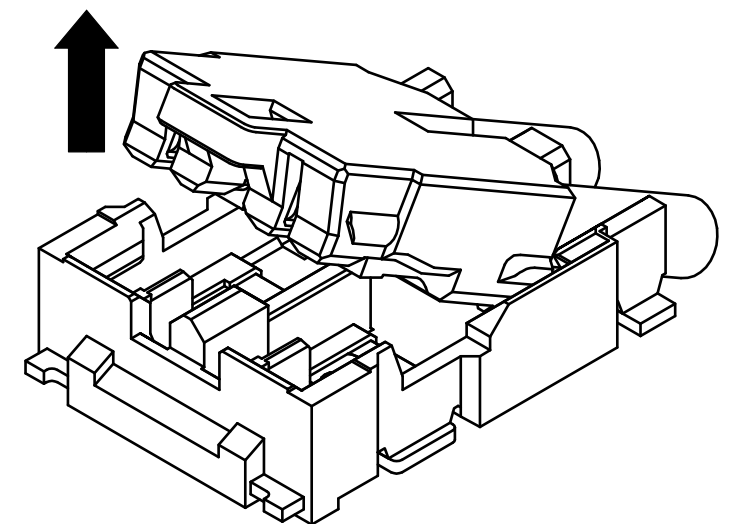

HRS

DRAWING NO.	EDC-361873-23-01
PART NO.	DF61Y-2P-2.2V(23)
CODE NO.	CL0666-5100-3-23

3/3