


Mbed RC oscillator configuration for nRF5 open CPU modules

Bluetooth Low Energy

Application note

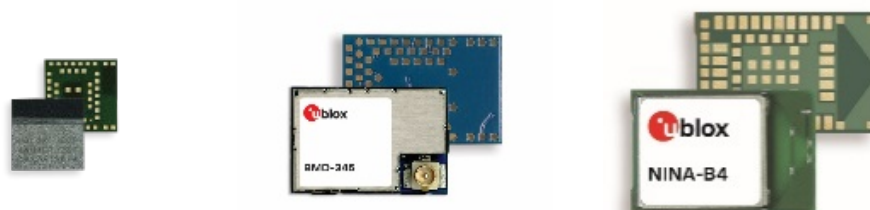

Abstract

The ANNA-B1, NINA-B4, and BMD-3xx modules are not supplied with a low frequency crystal. This document describes how to enable the internal RC oscillator for the Arm® Mbed™ OS.

Document information

Title	Mbed RC oscillator configuration for nRF5 open CPU modules	
Subtitle	Bluetooth Low Energy	
Document type	Application note	
Document number	UBX-20009617	
Revision and date	R01	20-Mar-2020
Disclosure restriction		

This document applies to the following products:

Product name
ANNA-B112
BMD-300
BMD-301
BMD-340
BMD-341
BMD-345
BMD-350
BMD-360
BMD-380
NINA-B400
NINA-B406

u-blox or third parties may hold intellectual property rights in the products, names, logos and designs included in this document. Copying, reproduction, modification or disclosure to third parties of this document or any part thereof is only permitted with the express written permission of u-blox.

The information contained herein is provided "as is" and u-blox assumes no liability for its use. No warranty, either express or implied, is given, including but not limited to, with respect to the accuracy, correctness, reliability and fitness for a particular purpose of the information. This document may be revised by u-blox at any time without notice. For the most recent documents, visit www.u-blox.com.

Copyright © u-blox AG.

Contents

Document information.....	2
Contents	3
1 Mbed configuration changes	4
Related documents	5
Revision history	5
Contact.....	6

1 Mbed configuration changes

u-blox standalone module series ANNA-B1, BMD-3xx, and NINA-B4 are not supplied with a low frequency crystal. A low frequency crystal can be physically added to the host PCB, or the internal RC oscillator in the module can be used.

To use the module with the internal RC oscillator in an Arm® Mbed™ configuration, the clock source `NRF_LF_SRC_RC` needs to be selected and the clock parameters `lf_clock_rc_calib_timer_interval`, `lf_clock_rc_calib_mode_config`, and `lf_clock_xtal_accuracy`, must all be updated in the JSON configuration file, `mbed_app.json`, like this:

```
...
lf_clock_rc_calib_timer_interval
{
    "target_overrides": {
        "**": {
            "target.lf_clock_src": "NRF_LF_SRC_RC"
        }
    }
}
{
    "config": {
        "lf_clock_rc_calib_timer_interval": {
            "value": 16,
            "macro_name": "MBED_CONF_NORDIC_NRF_LF_CLOCK_CALIB_TIMER_INTERVAL"
        },
        "lf_clock_rc_calib_mode_config": {
            "value": 2,
            "macro_name": "MBED_CONF_NORDIC_NRF_LF_CLOCK_CALIB_MODE_CONFIG"
        }
    }
}
}
```

The clock accuracy value also needs to be set:

```
...
{
    "config": {
        "lf_clock_xtal_accuracy": {
            "value": "NRF_CLOCK_LF_XTAL_ACCURACY_250_PPM",
            "macro_name": "MBED_CONF_NORDIC_LF_CLOCK_XTAL_ACCURACY"
        }
    }
}
...
```

If a later version of the software protocol stack is used for these modules (all based on nRF52 chips), especially the BMD-34 and BMD-38 series (based on nRF52840) and NINA-B4 (based on nRF52833), then this value might need to be set to `NRF_CLOCK_LF_XTAL_ACCURACY_500_PPM`.

Related documents

[1] [Mbed website](#)

 For product change notifications and regular updates of u-blox documentation, register at www.u-blox.com.

Revision history

Revision	Date	Name	Comments
R01	18-mar-2020	brec	Initial release

Contact

For complete contact information, visit us at www.u-blox.com.

u-blox Offices

North, Central and South America

u-blox America, Inc.

Phone: +1 703 483 3180

E-mail: info_us@u-blox.com

Regional Office West Coast:

Phone: +1 408 573 3640

E-mail: info_us@u-blox.com

Technical Support:

Phone: +1 703 483 3185

E-mail: support@u-blox.com

Headquarters

Europe, Middle East, Africa

u-blox AG

Phone: +41 44 722 74 44

E-mail: info@u-blox.com

Support: support@u-blox.com

Asia, Australia, Pacific

u-blox Singapore Pte. Ltd.

Phone: +65 6734 3811

E-mail: info_ap@u-blox.com

Support: support_ap@u-blox.com

Regional Office Australia:

Phone: +61 2 8448 2016

E-mail: info_au@u-blox.com

Support: support_ap@u-blox.com

Regional Office China (Beijing):

Phone: +86 10 68 133 545

E-mail: info_cn@u-blox.com

Support: support_cn@u-blox.com

Regional Office China (Chongqing):

Phone: +86 23 6815 1588

E-mail: info_cn@u-blox.com

Support: support_cn@u-blox.com

Regional Office China (Shanghai):

Phone: +86 21 6090 4832

E-mail: info_cn@u-blox.com

Support: support_cn@u-blox.com

Regional Office China (Shenzhen):

Phone: +86 755 8627 1083

E-mail: info_cn@u-blox.com

Support: support_cn@u-blox.com

Regional Office India:

Phone: +91 80 405 092 00

E-mail: info_in@u-blox.com

Support: support_in@u-blox.com

Regional Office Japan (Osaka):

Phone: +81 6 6941 3660

E-mail: info_jp@u-blox.com

Support: support_jp@u-blox.com

Regional Office Japan (Tokyo):

Phone: +81 3 5775 3850

E-mail: info_jp@u-blox.com

Support: support_jp@u-blox.com

Regional Office Korea:

Phone: +82 2 542 0861

E-mail: info_kr@u-blox.com

Support: support_kr@u-blox.com

Regional Office Taiwan:

Phone: +886 2 2657 1090

E-mail: info_tw@u-blox.com

Support: support_tw@u-blox.com