

## IPM67 SERIES

### 3-PHASE AC OUTPUT PANEL MOUNT SOLID STATE RELAYS

PM67 Series 3-Phase Solid State Relays offer the advantages of semiconductor switching technology in a compact 67.5 mm industrial package. Read all installation instructions before using your panel mount Solid State Relay (SSR) and refer to the product datasheet for more information. For assistance, please contact Tech Support.



### INSTALLATION INSTRUCTIONS

#### Mounting on Heat Sink

- Select adequate heat sink (see thermal derating curves in product series datasheet).
- Be sure to use a thermal pad (part no. HSP-8) or equivalent thermal compound between the SSR and the selected heat sink.
- SSR housing mounting holes have a diameter of 0.341in (8.66mm). Two screws are needed to mount the SSR onto a heat sink (See fig.1). Mounting screws are sold separately as HK8. Otherwise, recommended screw size is 8-32 (socket) using an allen wrench (9/64 in) for the installation. Choose screw length considering mounting surface hole depth and SSR baseplate thickness of 0.125 in (3.2 mm).
- Before applying full torque tighten down both screws until they contact the baseplate. Then, tighten them to 20 lb-in (2.2 Nm) min.
- For optimal thermal performance heat sink fins should be oriented vertically to promote natural convection airflow

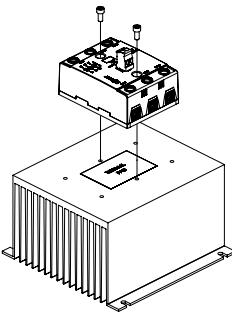


fig.1 SSR mounted on HS053 heat sink

#### Mounting on Panel

- Locate the panel section on which the SSR will be mounted. Panel mount surface must provide adequate heat sinking capability, uncoated, clean, flat (0.004 in/in recommended) and preferably aluminum.
- Be sure to use thermal pad HSP-8 or equivalent thermal compound between the SSR and the panel.
- SSR housing mounting slots have a diameter of 0.341 in (8.66 mm). Two screws are needed (not included) to mount the SSR onto a panel. Mounting screws are sold separately as HK8. Otherwise, recommended screw size is 8-32 (socket) using allen wrench (9/64 in) for the installation. Choose screw length considering the mounting surface and that the SSR baseplate thickness is 0.125 in (3.2 mm).
- Before applying full torque tighten down both screws until they contact the baseplate. Then, tighten them to 20 lb-in (2.2 Nm) min

#### Wiring Instructions

- Recommended wire sizes as shown in TABLE 1
- Maximum terminal screw torque input terminal 5 lb-in (0.5 Nm) (screw terminal only)
- Maximum terminal screw torque load terminal 18-20 lb-in (2.0-2.2 Nm)
- Strip length for input terminals: Per manufacturer specifications
- Strip length for load terminals: 10mm min.
- Use only copper conductors rated for 75°C or higher

Table 1. Wire Size & Pull Out Strength		
Terminal Configuration	Recommended Wire Size (Solid/Stranded)	Wire Pull-Out Strength (lb[N]*
Output	1 x 18 AWG (1 mm <sup>2</sup> ) [minimum]	20 [88]
	1 x 8 AWG (10 mm <sup>2</sup> )	75 [333]
	2 x 8 AWG (10 mm <sup>2</sup> )	65 [289]
	1 x 3 AWG (26.67 mm <sup>2</sup> ) <sup>(1)</sup>	90 [400]
Input	30 AWG (0.05 mm <sup>2</sup> ) [minimum]	4.5 [20]
	12 AWG (3.3 mm <sup>2</sup> ) [maximum]	30 [133]
	26 AWG (0.13 mm <sup>2</sup> ) [minimum]	5 [22]
	12 AWG (3.3 mm <sup>2</sup> ) [maximum]	5 [22]

\*Tests performed on Stranded wire.

<sup>(1)</sup> Maximum wire size 1 x 2 AWG (35mm<sup>2</sup>)

<sup>(2)</sup> Applicable when using CP202 connector instead of supplied connector


#### Important Considerations

- Be sure to use input and output voltages within operating ranges.
- On models without overtemperature protection LED indicates only input status. It does not represent output status.




### DERATING CURVES


#### PM6760x25

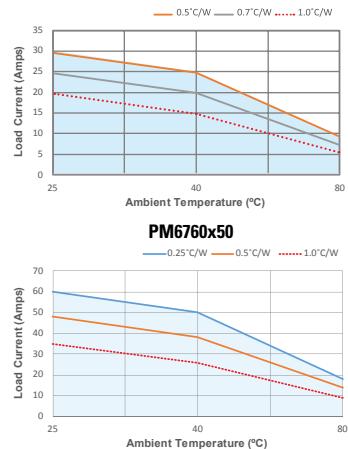

#### PM6760x50

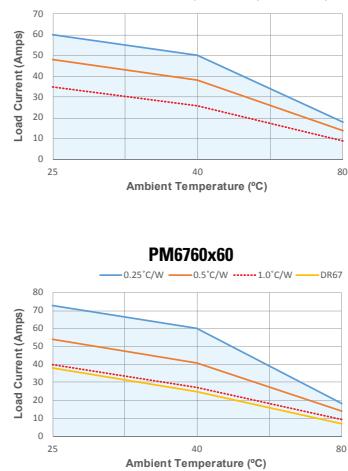

#### PM6760x60

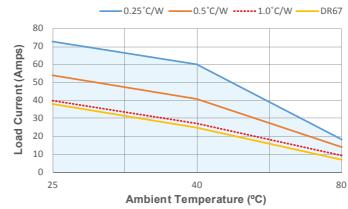


#### WIRING DIAGRAM



#### WIRING DIAGRAM


#### PM6760XXXA

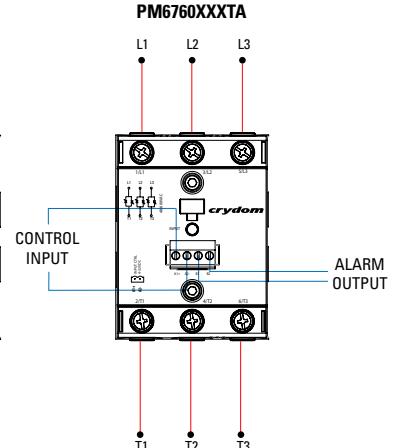

#### 2 CONTROLLED LEGS MAIN CIRCUIT




#### 3 CONTROLLED LEGS MAIN CIRCUIT

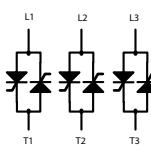



## FUNCTIONAL DIAGRAMS

(only for models with overtemperature protection)

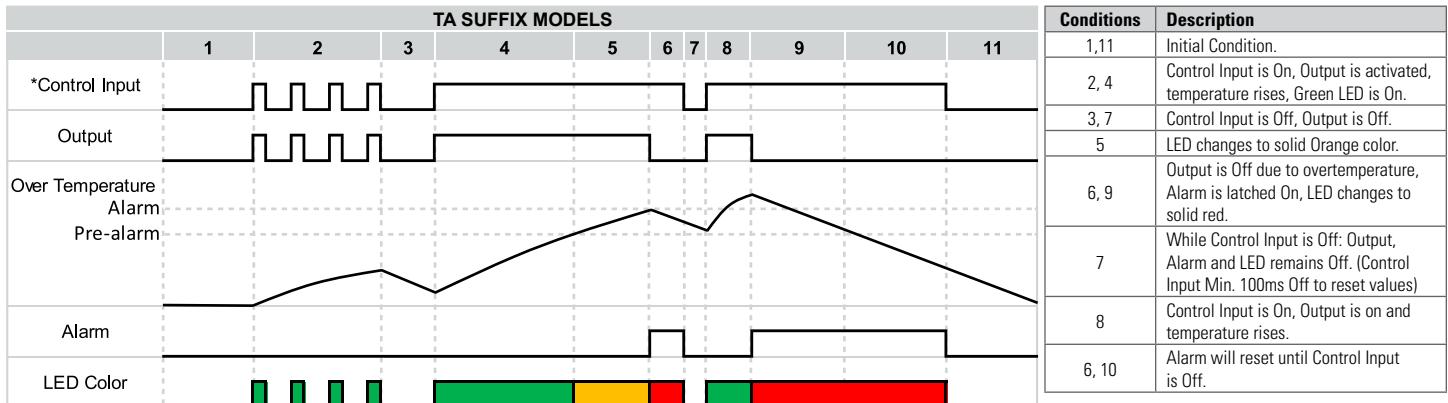

\* Max. 60 ms OFF when applying PWM on Control Input.

LED Color	Green	Output On
	Red	Alarm
	Yellow	Pre-Alarm



## ACCESSORIES

TABLE 2. Recommended Accessories						
Connectors	ID Marker	Hardware Kit	Heat Sink Part No		Thermal Pad	
			HS073	HS053		
CP201 CP202	CNLB CNLN CNL2	HK8	HS033 HS023	HS023	0.7 0.5 0.36 0.25	HSP-8



## WARNINGS



**RISK OF MATERIAL DAMAGE AND HOT ENCLOSURE**

- The product's side panels may be hot, allow the product to cool before touching
- Follow proper mounting instructions including torque values
- Do not allow liquids or foreign objects to enter this product

**Failure to follow these instructions can result in serious injury, or equipment damage.**



**HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH**

- Disconnect all power before installing or working with this equipment
- Verify all connections and replace all covers before turning on power

**Failure to follow these instructions will result in death or serious injury.**

Page 2

Sensata Technologies, Inc. ("Sensata") installation sheet are solely intended to assist designers ("Buyers") who are developing systems that incorporate Sensata products (also referred to herein as "components"). Buyer understands and agrees that Buyer remains responsible for using its independent analysis, evaluation and judgment in designing Buyer's systems and products. Sensata data sheets have been created using standard laboratory conditions and engineering practices. Sensata has not conducted any testing other than that specifically described in the published documentation for a particular data sheet. Sensata may make corrections, enhancements, improvements and other changes to its data sheets or components without notice. Buyers are authorized to use Sensata data sheets with the Sensata component(s) identified in each particular data sheet. **HOWEVER, NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER SENSATA INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY THIRD PARTY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT, IS GRANTED HEREIN.** SENSATA INSTALLATION SHEET ARE PROVIDED "AS IS". SENSATA MAKES NO WARRANTIES OR REPRESENTATIONS WITH REGARD TO THE INSTALLATION SHEET OR USE OF THE INSTALLATION SHEET, EXPRESS, IMPLIED OR STATUTORY, INCLUDING ACCURACY OR COMPLETENESS. SENSATA DISCLAIMS ANY WARRANTY OF TITLE AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUIET ENJOYMENT, QUIET POSSESSION, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS WITH REGARD TO SENSATA DATA SHEETS OR USE THEREOF. All products are sold subject to Sensata's terms and conditions of sale supplied at [www.sensata.com](http://www.sensata.com). SENSATA ASSUMES NO LIABILITY FOR APPLICATIONS ASSISTANCE OR THE DESIGN OF BUYERS' PRODUCTS. BUYER ACKNOWLEDGES AND AGREES THAT IT IS SOLELY RESPONSIBLE FOR COMPLIANCE WITH ALL LEGAL, REGULATORY AND SAFETY-RELATED REQUIREMENTS CONCERNING ITS PRODUCTS, AND ANY USE OF SENSATA COMPONENTS IN ITS APPLICATIONS, NOTWITHSTANDING ANY APPLICATIONS-RELATED INFORMATION OR SUPPORT THAT MAY BE PROVIDED BY SENSATA. Mailing Address: Sensata Technologies, Inc., 529 Pleasant Street, Attleboro, MA 02703, USA.

## CONTACT US

### Americas

+1 (877) 502 5500  
[sales.crydom@sensata.com](mailto:sales.crydom@sensata.com)

**Europe, Middle East & Africa**  
+44 (1202) 416170  
[ssr-info.eu@sensata.com](mailto:ssr-info.eu@sensata.com)

### Asia Pacific

[sales.isasia@list.sensata.com](mailto:sales.isasia@list.sensata.com)  
China +86 (21) 2306 1500  
Japan +81 (45) 277 7117  
Korea +82 (31) 601 2004  
India +91 (80) 67920890  
Rest of Asia +86 (2) 27602006 ext 2808