
USB-to-UART Bridging with Microchip USB7002, USB7050, USB7051, and USB7052 Hubs

Author: **Mick Davis**
Microchip Technology, Inc.

INTRODUCTION

The USB-to-UART bridging feature of Microchip hubs provides system designers with expanded system control and potential BOM reductions. When using Microchip's USB hubs, a separate USB-to-Universal-Asynchronous-Receiver-Transmitter (UART) device is no longer required and a downstream USB port is not lost as occurs when a standalone USB-to-UART device is implemented. This feature is available on the Microchip USB7002, USB7050, USB7051, and USB7052 hubs.

Commands may be sent from the USB Host to the internal Hub Feature Controller (HFC) device in the Microchip hub to perform the following functions:

- Enable/Disable UART Interface
- Set UART Interface Baud Rate
- UART Write
- UART Read

SECTIONS

[General Information](#)

[Part Number-Specific Information](#)

[Software Implementation](#)

REFERENCES

Consult the following documents for details on the specific parts referred to in this document:

- [Microchip USB7002 Data Sheet](#)
- [Microchip USB7050 Data Sheet](#)
- [Microchip USB7051 Data Sheet](#)
- [Microchip USB7052 Data Sheet](#)

GENERAL INFORMATION

Microchip hub USB Bridging features work via host commands sent to an embedded Hub Feature Controller within the device located on an additional internal USB port. In order for the bridging features to work correctly, this internal Hub Feature Controller must be enabled by default. [Table 1](#) provides details on default Hub Feature Controller settings per device.

TABLE 1: DEFAULT SETTINGS FOR HUB FEATURE CONTROLLER ENABLE

Part Number	Part Summary	Hub Feature Controller Default Setting
USB7002	4-Port USB3.1G1 hub – 2xUSB-C with cc pin i/f, 2 x Type A DFP (2.0), No PD	Enabled by default
USB7050	4-Port USB3.1G1 hub – 2xUSB-C with UPD350, 2 x Type A DFP (2.0/3.1), PD FW	Enabled by default
USB7051	4-Port USB3.1G1 hub – 2xUSB-C with cc pin/350, 2 x Type A DFP (2.0/3.1), PD FW	Enabled by default
USB7052	4-Port USB3.1G1 hub – 2xUSB-C with cc pin i/f, 2 x Type A DFP (2.0/3.1), PD FW	Enabled by default

The Hub Feature Controller is connected to an extra internal port in the hub. It is mapped to the highest numbered port on the hub by default.

The internal block diagrams of the USB7002, USB7050, USB7051, and USB7052 in an upstream Type-C application are shown in [Figure 1](#), [Figure 2](#), [Figure 3](#), and [Figure 4](#), respectively.

FIGURE 1: USB7002 INTERNAL BLOCK DIAGRAM – UPSTREAM TYPE-C APPLICATION

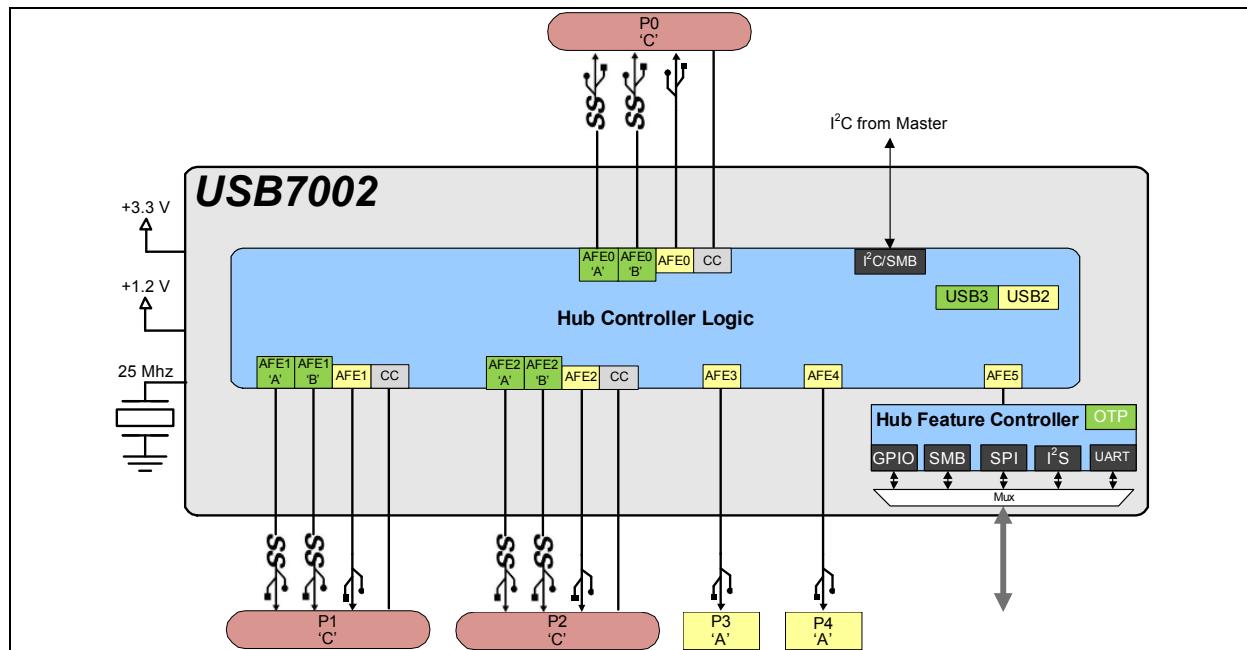


FIGURE 2: USB7050 INTERNAL BLOCK DIAGRAM – UPSTREAM TYPE-C APPLICATION

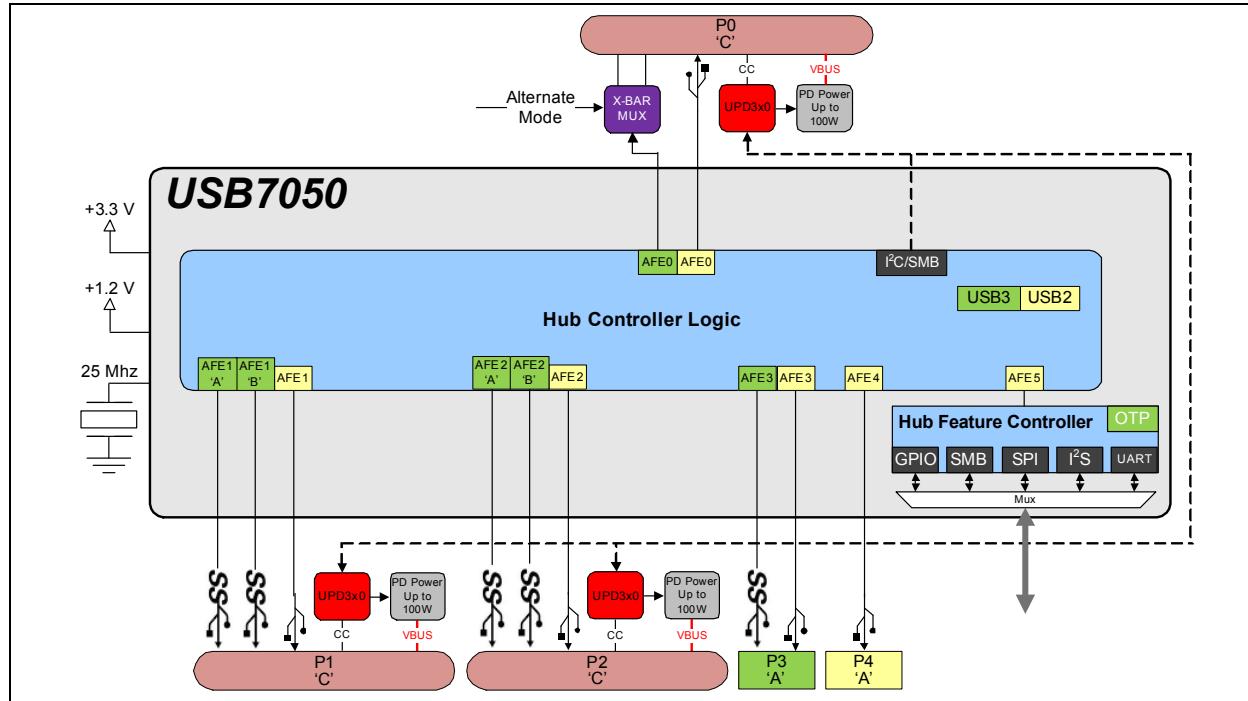


FIGURE 3: USB7051 INTERNAL BLOCK DIAGRAM – UPSTREAM TYPE-C APPLICATION


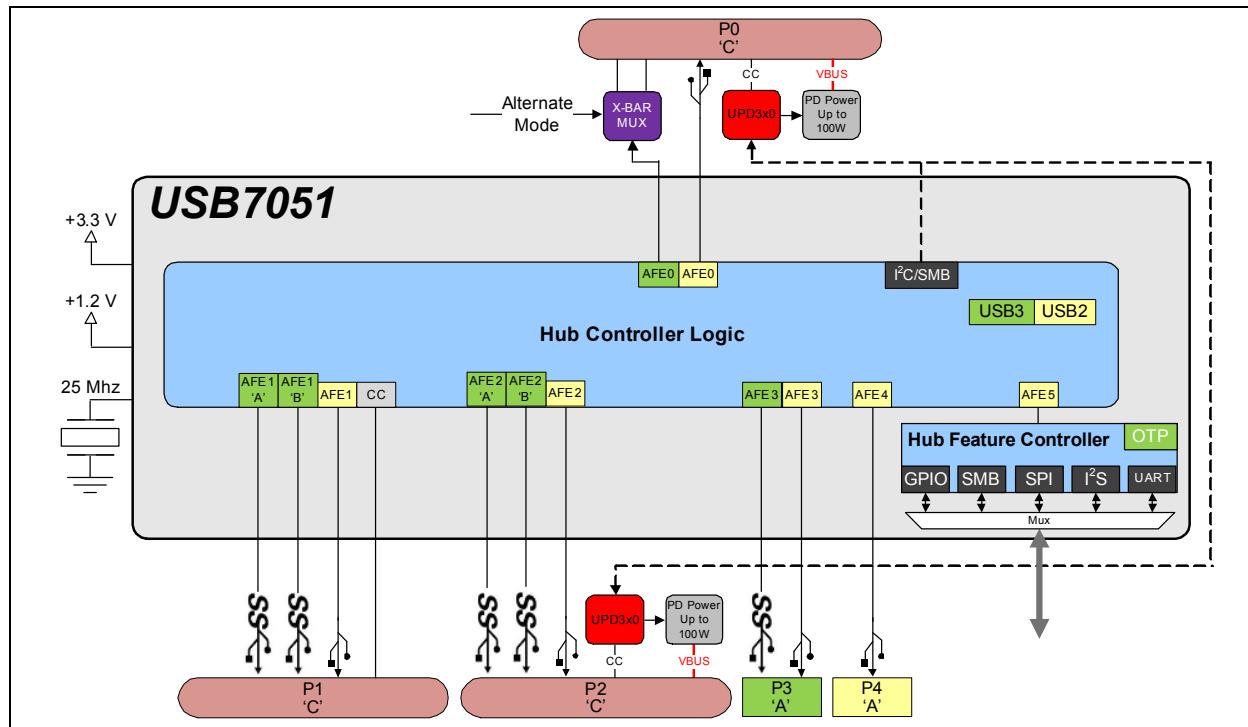


FIGURE 4: USB7052 INTERNAL BLOCK DIAGRAM – UPSTREAM TYPE-C APPLICATION

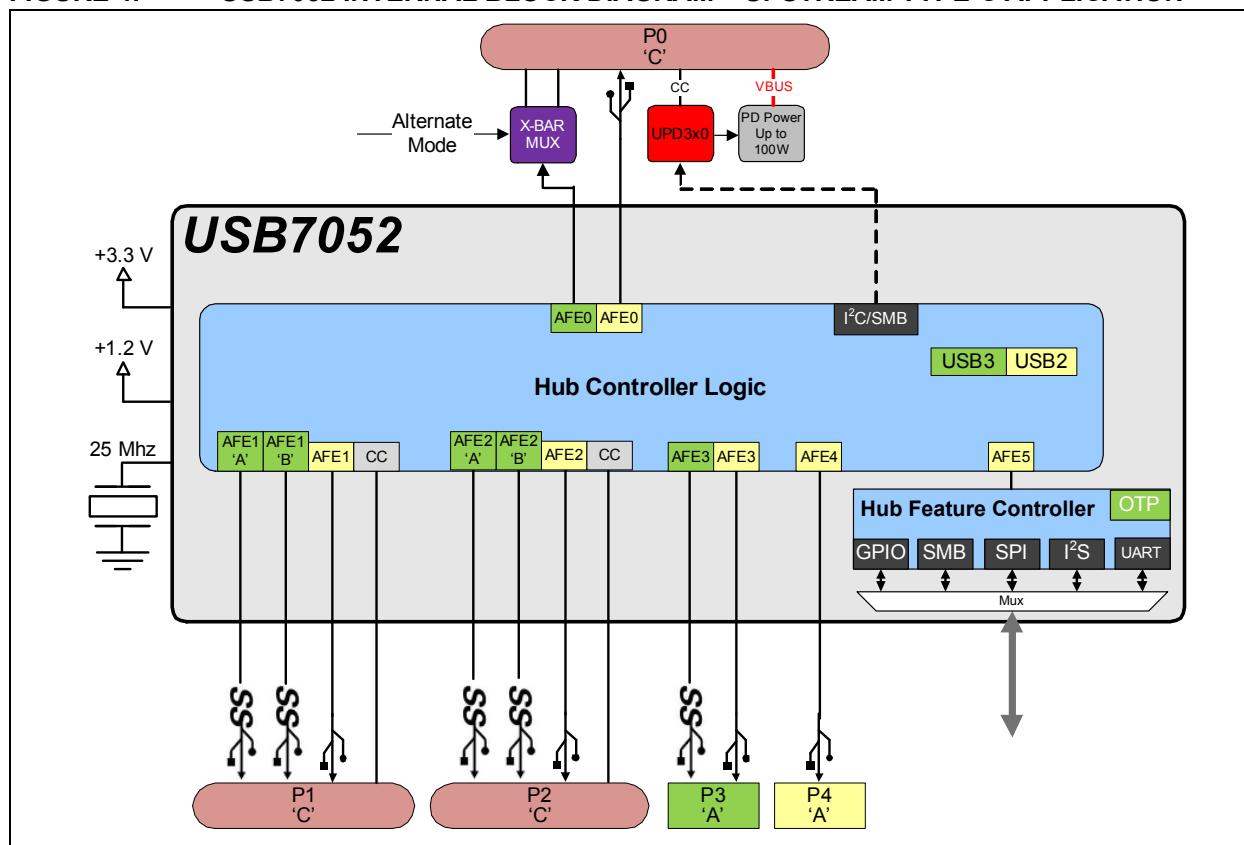

UART Bridging Commands

The following UART functions are supported:

- Enable/Disable UART Pass-Through Interface
- Set UART Baud Rate
- UART Write
- UART Read

ENABLE/DISABLE THE UART INTERFACE

A single command to enable the UART interface is required before performing any UART Write or Read commands. The UART interface has a variable baud rate which can be adjusted via a bridging command. The UART interface may be disabled after writing/reading to the device is complete.

Note: The maximum possible UART baud rate in both HS and FS without flow control is 115.2 kHz.

SET UART BAUD RATE

The UART baud rate may be adjusted via a bridging command. The suggested standard baud rate values are 600 Hz, 1.2 kHz, 2.4 kHz, 4.8 kHz, 9.6 kHz, 19.2 kHz, 38.4 kHz, 57.6 kHz, and 115.2 kHz.

UART WRITE

Transfer data through the UART serial port to a connected serial peripheral.

UART READ

Synchronously receive data through a serial port from a connected serial peripheral.

UART Interface Details

UART INTERFACE

The device incorporates a fully programmable UART that is functionally compatible with the NS 16550AF, 16450, 16450 ACE registers, and the 16C550A. The UART performs serial-to-parallel conversion on received characters and parallel-to-serial conversion on transmit characters. Two sets of baud rates are provided: 24 MHz and 16 MHz. When the 24 MHz source clock is selected, standard baud rates from 50K to 115.2K are available. When the source clock is 16 MHz, baud rates from 125K to 1,000K are available. The character options are programmable for the transmission of data for the following:

- Word lengths ranging from five to eight
- One Start bit
- One, 1.5, or 2 Stop bits
- Even, odd, sticky or no parity
- Prioritized interrupts

The UART contains a programmable baud rate generator that is capable of dividing the input clock or crystal by a number from one to 65535. The UART is also capable of supporting the MIDI data rate.

TRANSMIT OPERATION

Transmission is initiated by writing the data to be sent to the TX Holding register or TX FIFO (if enabled). The data is then transferred to the TX Shift register together with a Start bit and parity and Stop bits as determined by settings in the Line Control register. The bits to be transmitted are then shifted out of the TX Shift register in the following order: Start bit, Data bits (LSB first), Parity bit, and Stop bit. This can be done using the output from the Baud Rate Generator (divided by 16) as the clock.

If enabled, a TX Holding register Empty interrupt is generated when the TX Holding register or the TX FIFO (if enabled) becomes empty.

When FIFOs are enabled (i.e. bit 0 of the FIFO Control register is set), the UART can store up to 16 bytes of data for transmission at a time. Transmission continues until the TX FIFO is empty. The FIFO's readiness to accept more data is indicated by interrupt.

RECEIVE OPERATION

Data is sampled into the RX Shift register using the Receive clock, divided by 16. The Receive clock is provided by the Baud Rate Generator. A filter is used to remove spurious inputs that last for less than two periods of the Receive clock. When the complete word has been clocked into the receiver, the data bits are transferred to the RX Buffer register or to the RX FIFO (if enabled) to be read by the CPU. (The first bit of the data to be received is placed in bit 0 of this register.) The receiver also checks that the Parity bit and Stop bits are as specified by the Line Control register.

If enabled, an RX Data Received interrupt is generated when the data has been transferred to the RX Buffer register or when the RX Trigger Level has been reached provided that FIFOs are enabled. Interrupts can also be generated to signal RX FIFO Character Timeout, incorrect parity, a missing Stop bit (frame error), or other line status errors.

When FIFOs are enabled (i.e. bit 0 of the FIFO Control register is set), the UART can store up to 16 bytes of received data at a time. Depending on the selected RX Trigger Level, interrupt goes active to indicate that data is available when the RX FIFO contains 1, 4, 8, or 14 bytes of data.

PART NUMBER-SPECIFIC INFORMATION

Part Summary

Table 2 to Table 5 show the UART interface pins by part number and notes on those pins:

TABLE 2: USB7002 UART PINS

	CONFIG1	CONFIG2	CONFIG3	CONFIG4
PF6	UART NOT AVAILABLE	UART NOT AVAILABLE	UART_RX	UART NOT AVAILABLE
PF7			UART_TX	
PF14			UART_nCTS	
PF18			UART_nDCD	
PF19			UART_nRTS	
PF26			UART_nDSR	
PF27			UART_nDTR	

TABLE 3: USB7050 UART PINS

	CONFIG1	CONFIG2	CONFIG3	CONFIG4
PF2	UART NOT AVAILABLE	UART NOT AVAILABLE	UART_nCTS	UART NOT AVAILABLE
PF3			UART_nRTS	
PF4			UART_nDSR	
PF5			UART_nDTR	
PF6			UART_RX	
PF7			UART_TX	
PF28			UART_nDCD	

TABLE 4: USB7051 UART PINS

	CONFIG1	CONFIG2	CONFIG3	CONFIG4
PF6	UART NOT AVAILABLE	UART NOT AVAILABLE	UART_RX	UART NOT AVAILABLE
PF7			UART_TX	
PF14			UART_nCTS	
PF19			UART_nRTS	
PF26			UART_nDSR	
PF27			UART_nDRT	
PF28			UART_nDCD	

Note 1: Typo DOS Page 506 Table 25.7 PF28 = UART_nDSD (should be DCD)

TABLE 5: USB7052 UART PINS

	CONFIG1	CONFIG2	CONFIG3	CONFIG4
PF6	UART NOT AVAILABLE	UART NOT AVAILABLE	UART_RX	UART NOT AVAILABLE
PF7			UART_TX	
PF14			UART_nCTS	
PF19			UART_nRTS	
PF26			UART_nDSR	
PF27			UART_nDRT	
PF28			UART_nDCD	

Note 1: Typo DOS Page 506 Table 25.8 PF28 = UART_nDSD (should be DCD)

SOFTWARE IMPLEMENTATION

The UART Bridge interface automatically appears as a standard serial COM port when the UART interface is enabled via pin correct CFG_SEL pins strapping. The USB-to-UART bridge may be sent commands using the standard COM port drivers that are native to most operating systems. No special drivers or USB commands are required. Thus, the USB-to-UART interface does not require any special software development or the use of the ProTouch2 DLL library.

APPENDIX A: APPLICATION NOTE REVISION HISTORY**TABLE A-1: REVISION HISTORY**

Revision Level & Date	Section/Figure/Entry	Correction
DS00002726A (07-03-18)	All	Initial release

THE MICROCHIP WEBSITE

Microchip provides Online support via our WWW site at www.microchip.com. This website is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the website contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQ), technical support requests, online discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives

CUSTOMER CHANGE NOTIFICATION SERVICE

Microchip's customer notification service helps keep customers current on Microchip products. Subscribers will receive e-mail notification whenever there are changes, updates, revisions or errata related to a specified product family or development tool of interest.

To register, access the Microchip website at www.microchip.com. Under "Support", click on "Customer Change Notification" and follow the registration instructions.

CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or Field Application Engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the website at: <http://microchip.com/support>

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

Trademarks

The Microchip name and logo, the Microchip logo, AnyRate, AVR, AVR logo, AVR Freaks, BitCloud, CryptoMemory, CryptoRF, dsPIC, FlashFlex, flexPWR, Heldo, JukeBlox, KeeLog, Kleer, LANCheck, LINK MD, maXStylus, maXTouch, MediaLB, megaAVR, MOST, MOST logo, MPLAB, OptoLyzr, PIC, picoPower, PICSTART, PIC32 logo, Prochip Designer, QTouch, SAM-BA, SpyNIC, SST, SST Logo, SuperFlash, tinyAVR, UNI/O, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

ClockWorks, The Embedded Control Solutions Company, EtherSynch, Hyper Speed Control, HyperLight Load, IntelliMOS, mTouch, Precision Edge, and Quiet-Wire are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, AnyIn, AnyOut, BodyCom, chipKIT, chipKIT logo, CodeGuard, CryptoAuthentication, CryptoAutomotive, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, EtherGREEN, In-Circuit Serial Programming, ICSP, INICnet, Inter-Chip Connectivity, JitterBlocker, KleerNet, KleerNet logo, memBrain, Mindi, MiWi, motorBench, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, PowerSmart, PureSilicon, QMatrix, REAL ICE, Ripple Blocker, SAM-ICE, Serial Quad I/O, SMART-I.S., SQI, SuperSwitcher, SuperSwitcher II, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

Silicon Storage Technology is a registered trademark of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2018, Microchip Technology Incorporated, All Rights Reserved.

ISBN: 978-1-5224-3291-3

**QUALITY MANAGEMENT SYSTEM
CERTIFIED BY DNV
= ISO/TS 16949 =**

Microchip received ISO/TS-16949:2009 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELOQ® code hopping devices, Serial EEPROMS, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.



MICROCHIP

Worldwide Sales and Service

AMERICAS

Corporate Office
2355 West Chandler Blvd.
Chandler, AZ 85224-6199
Tel: 480-792-7200
Fax: 480-792-7277
Technical Support:
<http://www.microchip.com/support>
Web Address:
www.microchip.com

Atlanta

Duluth, GA
Tel: 678-957-9614
Fax: 678-957-1455

Austin, TX

Tel: 512-257-3370

Boston

Westborough, MA
Tel: 774-760-0087
Fax: 774-760-0088

Chicago

Itasca, IL
Tel: 630-285-0071
Fax: 630-285-0075

Dallas

Addison, TX
Tel: 972-818-7423
Fax: 972-818-2924

Detroit

Novi, MI
Tel: 248-848-4000

Houston, TX

Tel: 281-894-5983

Indianapolis

Noblesville, IN
Tel: 317-773-8323
Fax: 317-773-5453
Tel: 317-536-2380

Los Angeles

Mission Viejo, CA
Tel: 949-462-9523
Fax: 949-462-9608
Tel: 951-273-7800

Raleigh, NC

Tel: 919-844-7510

New York, NY

Tel: 631-435-6000

San Jose, CA

Tel: 408-735-9110
Tel: 408-436-4270

Canada - Toronto

Tel: 905-695-1980
Fax: 905-695-2078

ASIA/PACIFIC

Australia - Sydney
Tel: 61-2-9868-6733
China - Beijing
Tel: 86-10-8569-7000
China - Chengdu
Tel: 86-28-8665-5511
China - Chongqing
Tel: 86-23-8980-9588
China - Dongguan
Tel: 86-769-8702-9880
China - Guangzhou
Tel: 86-20-8755-8029
China - Hangzhou
Tel: 86-571-8792-8115
China - Hong Kong SAR
Tel: 852-2943-5100
China - Nanjing
Tel: 86-25-8473-2460
China - Qingdao
Tel: 86-532-8502-7355
China - Shanghai
Tel: 86-21-3326-8000
China - Shenyang
Tel: 86-24-2334-2829
China - Shenzhen
Tel: 86-755-8864-2200
China - Suzhou
Tel: 86-186-6233-1526
China - Wuhan
Tel: 86-27-5980-5300
China - Xian
Tel: 86-29-8833-7252
China - Xiamen
Tel: 86-592-2388138
China - Zhuhai
Tel: 86-756-3210040

ASIA/PACIFIC

India - Bangalore
Tel: 91-80-3090-4444
India - New Delhi
Tel: 91-11-4160-8631
India - Pune
Tel: 91-20-4121-0141
Japan - Osaka
Tel: 81-6-6152-7160
Japan - Tokyo
Tel: 81-3-6880- 3770
Korea - Daegu
Tel: 82-53-744-4301
Korea - Seoul
Tel: 82-2-554-7200
Malaysia - Kuala Lumpur
Tel: 60-3-7651-7906
Malaysia - Penang
Tel: 60-4-227-8870
Philippines - Manila
Tel: 63-2-634-9065
Singapore
Tel: 65-6334-8870
Taiwan - Hsin Chu
Tel: 886-3-577-8366
Taiwan - Kaohsiung
Tel: 886-7-213-7830
Taiwan - Taipei
Tel: 886-2-2508-8600
Thailand - Bangkok
Tel: 66-2-694-1351
Vietnam - Ho Chi Minh
Tel: 84-28-5448-2100

EUROPE

Austria - Wels
Tel: 43-7242-2244-39
Fax: 43-7242-2244-393
Denmark - Copenhagen
Tel: 45-4450-2828
Fax: 45-4485-2829
Finland - Espoo
Tel: 358-9-4520-820
France - Paris
Tel: 33-1-69-53-63-20
Fax: 33-1-69-30-90-79
Germany - Garching
Tel: 49-8931-9700
Germany - Haan
Tel: 49-2129-3766400
Germany - Heilbronn
Tel: 49-7131-67-3636
Germany - Karlsruhe
Tel: 49-721-625370
Germany - Munich
Tel: 49-89-627-144-0
Fax: 49-89-627-144-44
Germany - Rosenheim
Tel: 49-8031-354-560
Israel - Ra'anana
Tel: 972-9-744-7705
Italy - Milan
Tel: 39-0331-742611
Fax: 39-0331-466781
Italy - Padova
Tel: 39-049-7625286
Netherlands - Drunen
Tel: 31-416-690399
Fax: 31-416-690340
Norway - Trondheim
Tel: 47-7289-7561
Poland - Warsaw
Tel: 48-22-3325737
Romania - Bucharest
Tel: 40-21-407-87-50
Spain - Madrid
Tel: 34-91-708-08-90
Fax: 34-91-708-08-91
Sweden - Gothenberg
Tel: 46-31-704-60-40
Sweden - Stockholm
Tel: 46-8-5090-4654
UK - Wokingham
Tel: 44-118-921-5800
Fax: 44-118-921-5820