




1. ATTACH FRONT AND REAR PANELS.

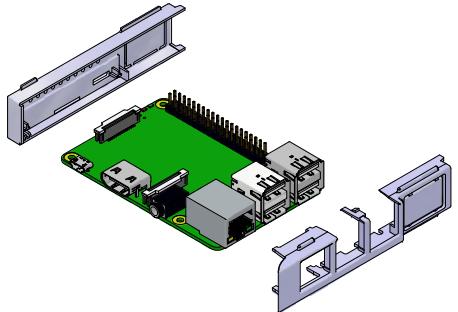


2. PLACE BOARD ONTO BASE
[BASE HAS NO HOOKS]

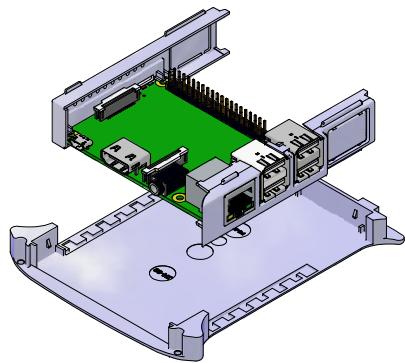



3. INSTALL SIDE PANEL

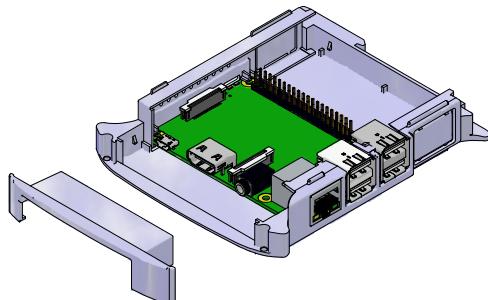

4. SNAP TOGETHER TOP
[TOP HAS HOOKS]


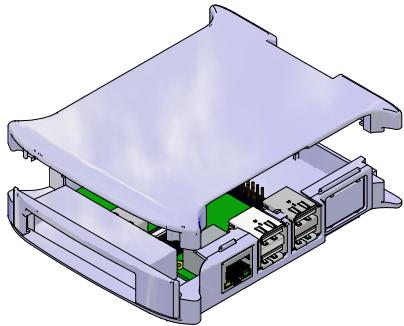


5. PLACE SPRING INTO DIN RAIL CLIP

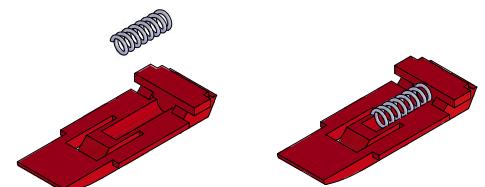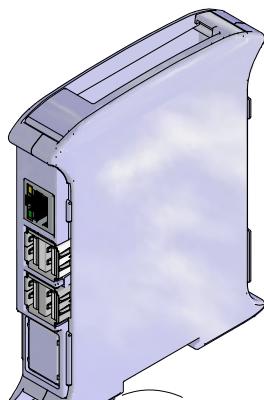


DETAIL A

6. ALIGN DIN RAIL CLIP SIDE TABS WITH ENCLOSURE SLOTS.

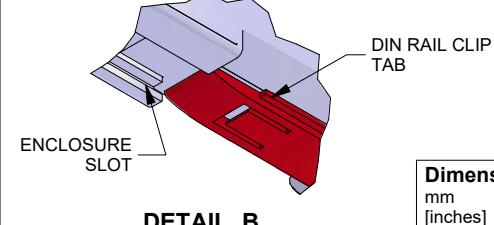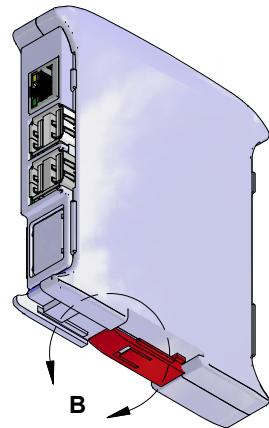

DETAIL B

7. SLIDE DIN RAIL CLIP INTO POSITION [SHOULD HEAR A CLICK]

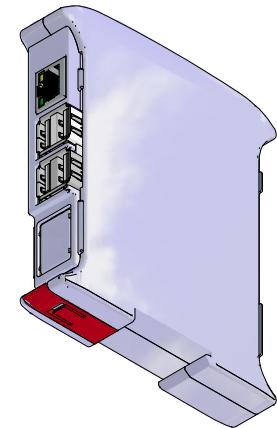

Dimensions:
mm
[inches]



HAMMOND
MANUFACTURING.
INSTRUCTIONS
1597KIT RAIL BOX
www.hammondmfg.com