




ASSEMBLY INSTRUCTION

NP2RX-ULTIMATE | 1/4" Guitar - ultimatePLUG


A

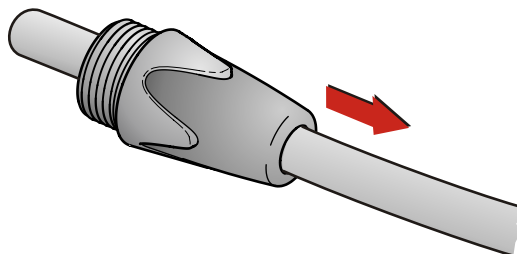

Slide the boot onto the cable.


B

Cable O.D. 4.0 - 7.0 mm [0.16 - 0.27"]

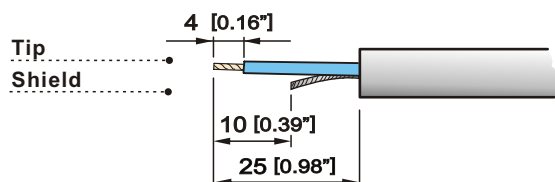

Prepare cable as shown.


C

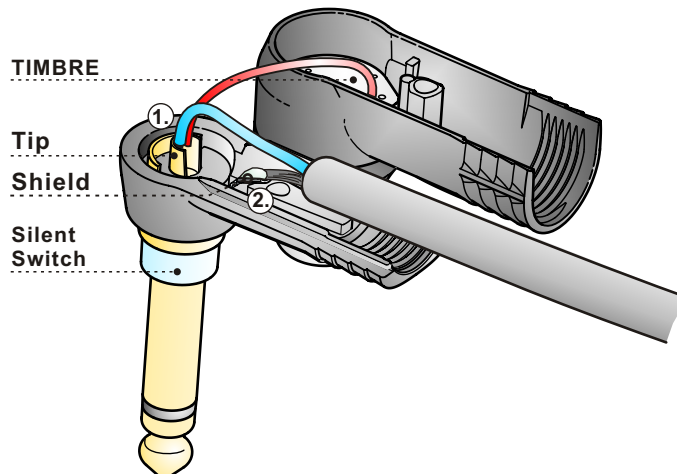

Position the red cover next to the shell:


- ① Solder the red cable (TIMBRE) combined with the hot wire to the TIP lug.
- ② Solder the SHIELD to the ground lug.


D

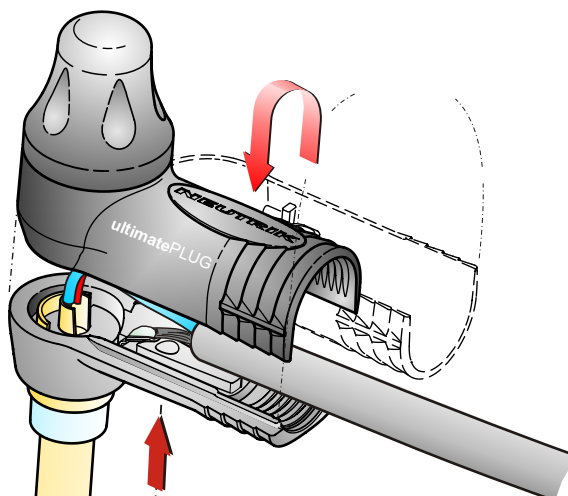

Position the cover on the shell (D) and fix it with with a screw driver (Pozidrive® #1) the screw (E).


E

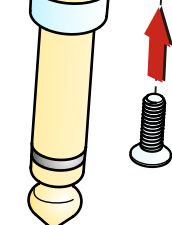

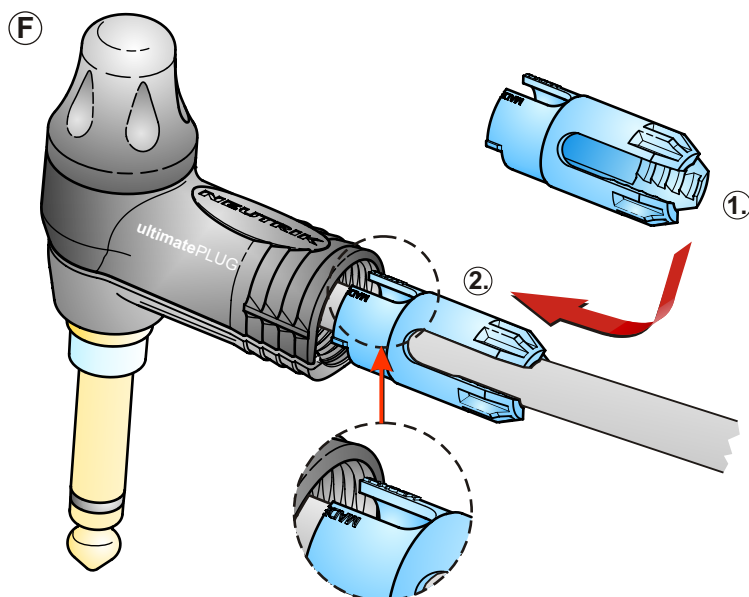


Position the chuck on to the cable and move it into the housing.

Attention: Pay attention to the guiding key of the chuck.

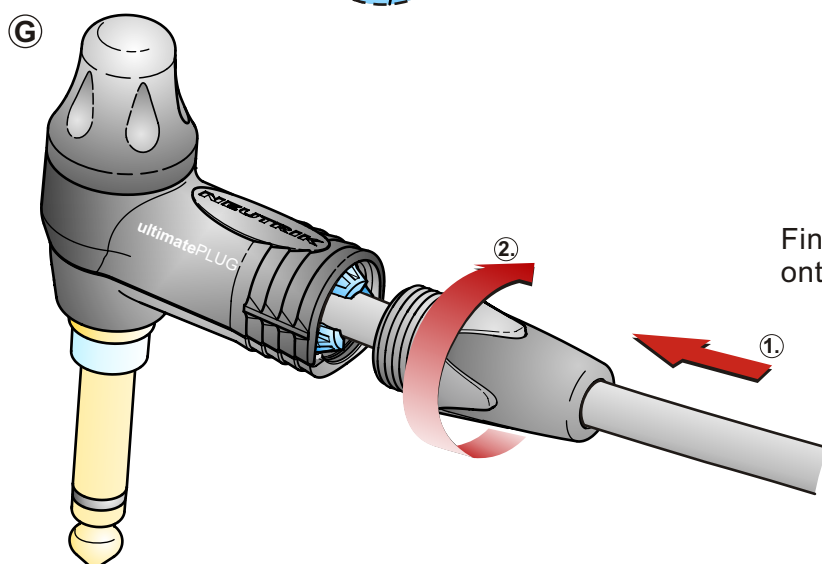

Finish the installation by tighten the bushing onto the connector.

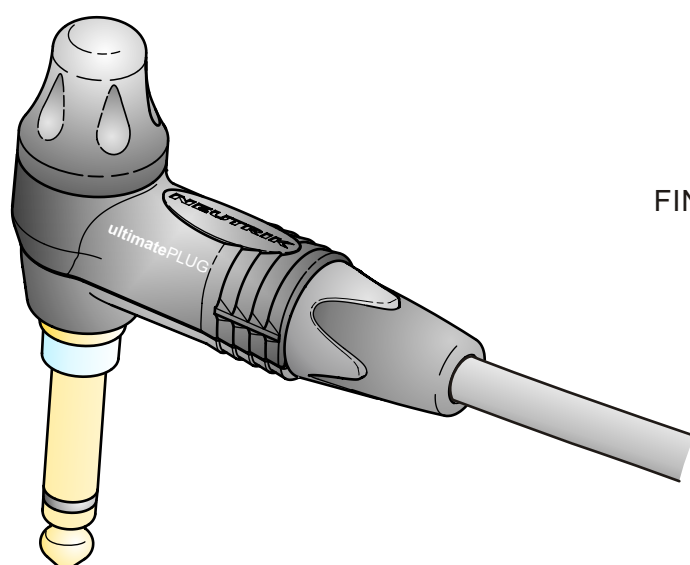

FINISH

NEUTRIK AG LI T: +423 / 237 24 24 F: +423/232 53 93
NEUTRIK USA Inc. USA T: +1 704 / 972 3050 F: +1 704/438 9202
NEUTRIK (UK) Ltd. UK T: +44 1983 / 811 441 F: +44 1983/811 439
NEUTRIK Vertriebs GmbH DE/NL/AT/DK T: +49 8131 / 280 890 F: +49 8131/280 830

NEUTRIK France FR T: +33 1/4131 6750 F: +33 1/4131 0511
NEUTRIK Tokyo Ltd. JP T: +81 3/3663 4733 F: +81 3/3663 4796
NEUTRIK Hong Kong Ltd. HK T: +852/2687 6055 F: +852/2687 6052
NEUTRIK India Pvt. Ltd. IND T: +91/982 05 43 424 F: +91/22 26163 540