

Evaluating the 5.7 kV RMS **ADM2867E** Signal and Power Isolated RS-485 Transceiver with ± 15 kV IEC ESD

FEATURES

- Simplified evaluation of the 25 Mbps **ADM2867E**
 - RS-485 transceiver
- 2-layer PCB compliant to EN 55032 Class B radiated emissions
- Footprint for 10.15 mm \times 10.05 mm, 28-lead SOIC_W_FP package with >8.0 mm creepage and clearance
- On-board **ADP7104** LDO regulator with jumper options for simplified evaluation in 5 V or 3.3 V configuration
- Flexible, low voltage V_{IO} supply rail to interface with I/O nodes as low as 1.7 V
- Selectable 3.3 V or 5 V isolated supply voltage options available
- IEC 61000-4-2 ESD protection on the A, B, Y, and Z pins
- ± 12 kV contact discharge and ± 15 kV air discharge
- SMA connector for high speed 25 Mbps Tx/D input signal
- Optional on-board **LTC6900** oscillator to provide Tx/D input signal
- Screw terminal blocks for power connections, digital signals, and RS-485 signals
- Jumper-selectable enable and disable for digital input signals
- Resistors and footprints for termination and loopback test
- Test points to measure all signals

EVALUATION KIT CONTENTS

EVAL-ADM2867EEBZ

EQUIPMENT NEEDED

- Oscilloscope
- Signal generator
- 3.0 V to 5.5 V supply
- 1.62 V to 5.5 V supply

DOCUMENTS NEEDED

ADM2867E data sheet

GENERAL DESCRIPTION

The EVAL-ADM2867EEBZ allows the simplified, efficient evaluation of the 5.7 kV rms **ADM2867E** signal and power isolated RS-485 transceiver.

The **ADM2867E** features an integrated, isolated, dc-to-dc converter that provides power to the isolated side of the device with no additional ICs required.

An on-board **ADP7104** low dropout (LDO) regulator accepts an input voltage of 3.3 V to 20 V and regulates the voltage to a selectable 3.3 V or 5 V supply for the V_{CC} pin of the **ADM2867E**. The LDO regulator can be bypassed to power the V_{CC} pin of the **ADM2867E** directly.

A flexible logic V_{IO} supply allows the device to operate with a digital input/output (I/O) voltage from 1.7 V to 5.5 V, which enables communication with modern nodes using either a 1.8 V or 2.5 V power supply. The V_{IO} pin can also be supplied from the **ADP7104** regulated supply.

The EVAL-ADM2867EEBZ comes with options to evaluate the **ADM2867E** in an individual system. Digital and RS-485 bus signals are accessible via the screw terminal blocks on the EVAL-ADM2867EEBZ. Each digital input can be configured via the on-board jumper options.

Alternative methods can provide the transmit data input (Tx/D) signal to the device. An optional **LTC6900** oscillator is included on the EVAL-ADM2867EEBZ and can be configured to provide a clock signal as the Tx/D digital input within a 1 kHz to 20 MHz range. For optimal signal integrity, use the on-board Subminiature Version A (SMA) connector to connect an external Tx/D signal at high data rates up to 25 Mbps.

The EVAL-ADM2867EEBZ has a footprint for the full duplex, isolated, RS-485 transceiver in a 10.15 mm \times 10.05 mm, 28-lead, small outline, wide body with fine pitch (SOIC_W_FP) package. The EVAL-ADM2867EEBZ is populated with the **ADM2867E** 5.7 kV rms, isolated RS-485 transceiver.

For full details on the **ADM2867E**, see the **ADM2867E** data sheet, which must be used in conjunction with this user guide when using the EVAL-ADM2867EEBZ.

TABLE OF CONTENTS

Features	1	Radiated Emissions	4
Evaluation Kit Contents.....	1	EN 55032 Radiated Emissions Test Results.....	5
Equipment Needed.....	1	Other Board Components.....	6
Documents Needed.....	1	Full Duplex RS-485 Transceivers Loopback Test.....	7
General Description	1	IEC 61000-4-2 Electrostatic Discharge (ESD) Protection	7
Revision History	2	Evaluation Board Schematic and Artwork.....	9
Evaluation Board Photograph.....	3	Ordering Information.....	11
Evaluation Board Hardware.....	4	Bill of Materials.....	11
Setting Up the Evaluation Board	4		
Input and Output Connections	4		

REVISION HISTORY

5/2020—Revision 0: Initial Version

EVALUATION BOARD PHOTOGRAPH

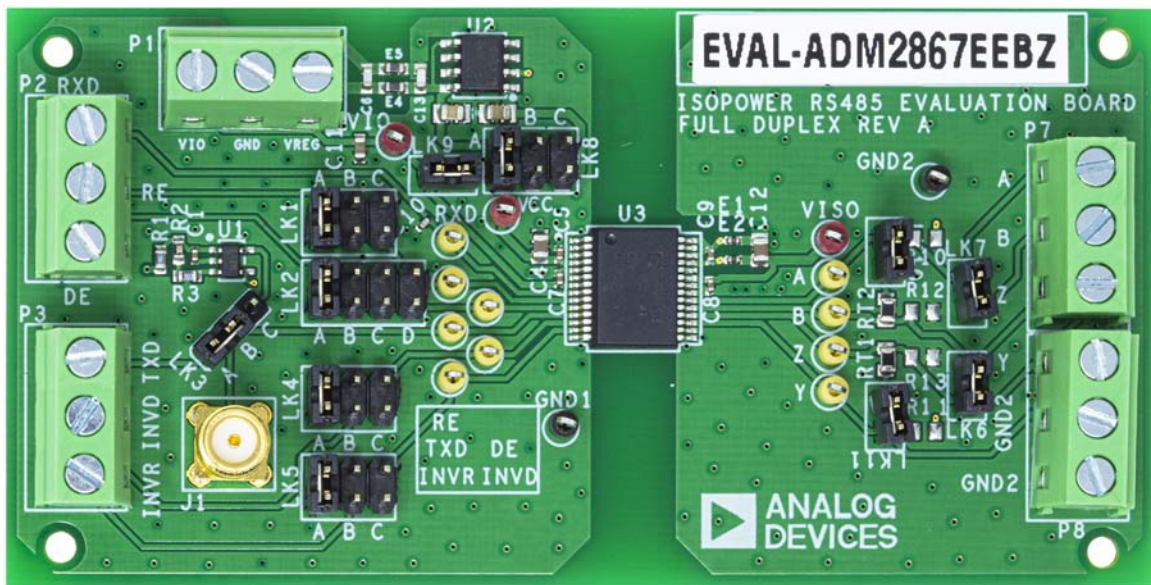


Figure 1.

EVALUATION BOARD HARDWARE

SETTING UP THE EVALUATION BOARD

The EVAL-ADM2867EEBZ is powered via the VREG_IN connection on the P1 screw terminal connector. The voltage connected to VREG_IN on the P1 screw connector can either be regulated or connected directly to the V_{CC} pin of the [ADM2867E](#). Insert the LK8 jumper into Position A to power the [ADM2867E](#) directly from the VREG_IN terminal.

The on-board [ADP7104](#) voltage regulator accepts a voltage from 3 V to 20 V on the VREG_IN terminal and can supply either a 3.3 V or a 5 V regulated supply to the V_{CC} pin of the [ADM2867E](#). Select the regulated voltage via the LK8 jumper. Insert the LK8 jumper into Position B to operate the device with a regulated V_{CC} supply of 3.3 V. Insert the LK8 jumper into Position C to operate the device with a regulated V_{CC} supply of 5.5 V. The V_{CC} pin is fitted with a 10 μ F decoupling capacitor (C4) and a 0.1 μ F decoupling capacitor (C5).

To power the V_{IO} supply pin of the [ADM2867E](#) from the VCC terminal block and operate the V_{IO} and V_{CC} supply pins at the same voltage, insert Jumper LK9. To power the V_{IO} supply pin from a separate VIO terminal block, remove Jumper LK9. In this configuration, the VIO input of the P1 terminal block can be connected to a separate, low voltage logic supply between 1.7 V and 5.5 V. A 0.1 μ F decoupling capacitor (C7) is fitted at the connector between the V_{IO} pin and GND_I pins of the [ADM2867E](#). A footprint for a second 10 μ F capacitor (C11) can provide additional decoupling capacitance to the V_{IO} pin.

Use the V_{SEL} pin of the [ADM2867E](#) to select the isolated supply voltage for the RS-485 transceiver. To configure the device to output a 3.3 V isolated supply voltage, connect the V_{SEL} pin of the [ADM2867E](#) to the GND_{ISO} pins. To configure the device to output a 5 V isolated supply voltage, connect the V_{SEL} pin of the [ADM2867E](#) to the V_{ISOOUT} pin. The R6 and R7 resistors can be inserted or removed as needed to make these connections. Avoid inserting the R6 and R7 resistors together because this connection shorts the power and ground pins together.

See Table 2 and Table 3 for more details on the jumper and power supply connections. The corresponding labeled test points allow power supply monitoring on the EVAL-ADM2867EEBZ with the probe referenced to ground.

INPUT AND OUTPUT CONNECTIONS

Digital input and output signals are connected via the P2 and P3 screw terminal blocks to allow wire connections from the EVAL-ADM2867EEBZ to a signal generator. The EVAL-ADM2867EEBZ includes screw terminals for the Tx_D signal, receiver data output (Rx_D) signal, receiver enable (\overline{RE}), and driver enable (DE) test points. Screw terminals for the driver inversion function (INVD) and receiver inversion function (INVR) are also available on P3. Alternatively, jumper connections can connect these signals to the V_{IO} pin or GND_I pins of the [ADM2867E](#) (see Table 2).

Connections to the RS-485 bus are made via the P7 and P8 screw terminal blocks. The EVAL-ADM2867EEBZ has four bus input and output signals: Signal A for noninverting input signals, Signal B for inverting input signals, Signal Y for noninverting output signals, and Signal Z for inverting output signals. The bus cables also include a common ground connection and can be connected to the P8 screw terminal block of the EVAL-ADM2867EEBZ. Test points are available on the EVAL-ADM2867EEBZ and are appropriately labeled for all digital and bus input and output signals.

RADIATED EMISSIONS

The EVAL-ADM2867EEBZ is a 2-layer printed circuit board (PCB) that meets the EN 55032 Class B radiated emissions requirements under full load while operating at the maximum data rate. Advances in the isolated dc-to-dc converter eliminate the need for complex mitigation techniques, such as edge guarding and embedded stitching capacitance. Two 0402, surface-mount ferrite beads are used to suppress high frequency noise and minimize the amount of noise radiated by the [ADM2867E](#). The recommended ferrite beads have a high impedance in the 100 MHz to 1 GHz frequency range (see Table 1). The EVAL-ADM2867EEBZ is populated with the BLM15HD182SN1 ferrite beads on E1 and E2.

Table 1. Recommended Surface-Mount Ferrite Beads

Manufacturer	Part Number
Murata Electronics	BLM15HD182SN1
Taiyo Yuden	BKH1005LM182-T

To maximize the margin to the EN 55032 Class B specification, adhere to the following guidelines:

- Ensure that the decoupling capacitors are placed as close to the corresponding [ADM2867E](#) pins as possible.
- Place a 10 μF capacitor (C4) and a 0.1 μF capacitor (C5) between the V_{CC} pin and GND_1 pins of the [ADM2867E](#).
- Place a 0.1 μF capacitor (C7) between the V_{IO} pin and GND_1 pins of the [ADM2867E](#).
- Connect Pin 24, Pin 26, and Pin 28 of the [ADM2867E](#) together to form a single GND_{ISO} net. Connect this net to the GND_2 pins through the E1 ferrite bead.
- Place a 0.1 μF capacitor (C9) between the V_{ISOOUT} supply pin and the GND_{ISO} net of the [ADM2867E](#).
- Connect the V_{ISOOUT} pin to the V_{ISOIN} pin of the [ADM2867E](#) through the E2 ferrite bead.
- Place a 10 μF capacitor (C12) and a 0.1 μF capacitor (C8) between the V_{ISOIN} supply pin (Pin 23) and the GND_2 pins (Pin 22) of the [ADM2867E](#).
- Remove any metal planes or floods from the area around or under the GND_{ISO} net and V_{ISOOUT} net.

The EVAL-ADM2867EEBZ designed according to these guidelines meets the EN 55032 Class B requirements with margin. See Figure 2, Figure 7, and Figure 8 for further details on the recommended PCB layout.

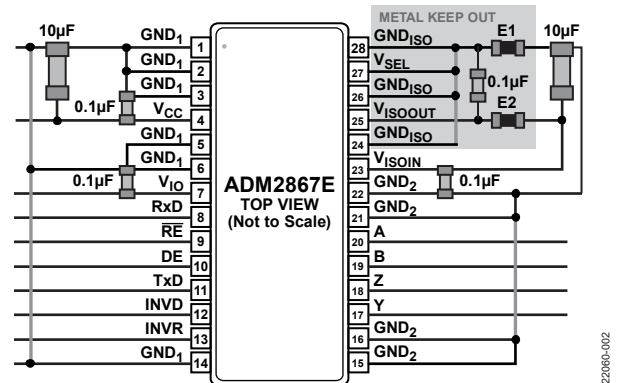


Figure 2. Layout Guidelines to Achieve EN 55032 Class B

EN 55032 RADIATED EMISSIONS TEST RESULTS

The EVAL-ADM2867EEBZ meets the EN 55032 and CISPR32 Class B requirements for radiated emissions with margin. The testing was performed in worst case conditions under a full 54 Ω load with both the transceiver and receiver transmitting at 25 Mbps. Figure 3 shows the results obtained in a 10 meter, semianechoic chamber, which are below the Class B limit.

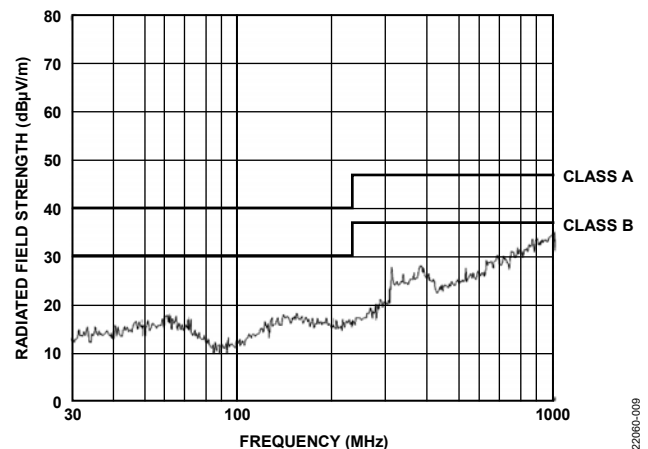


Figure 3. CISPR32/EN 55032 Radiated Emissions Test

Table 2. Jumper Configurations

Link	Jumper Connection	Description
LK1	A	Connects the $\overline{\text{RE}}$ input of the ADM2867E to the V_{IO} pin. This setting disables the receiver.
	B	Connects the $\overline{\text{RE}}$ input of the ADM2867E to the $\overline{\text{RE}}$ terminal on the P2 connector.
	C	Connects the $\overline{\text{RE}}$ input of the ADM2867E to the GND_1 pins. This setting enables the receiver.
LK2	A	Connects the DE input of the ADM2867E to the V_{IO} pin. This setting enables the driver.
	B	Connects the DE input of the ADM2867E to the DE terminal on the P2 connector.
	C	Connects the DE input of the ADM2867E to the GND_1 pins. This setting disables the driver.
	D	Connects the DE input of the ADM2867E to the $\overline{\text{RE}}$ input signal. Therefore, the input for both $\overline{\text{RE}}$ and DE is set by the LK1 jumper. This setting ensures that when the driver is enabled, the receiver is disabled, or when the driver is disabled, the receiver is enabled.
LK3	AB	Connects the TxD input of the ADM2867E and J1 SMA connector to the TxD terminal on the P3 connector.
	BC	Connects the TxD input of the ADM2867E and J1 SMA connector to the LTC6900 oscillator output. To configure the oscillator frequency to be between 1 kHz and 12.5 MHz, set the R2 and R3 resistors. Only use this option when the V_{IO} supply input is between 3 V to 5.5 V.
	Not inserted	Connects the TxD input of the ADM2867E to the J1 SMA connector.
LK4	A	Connects the INVD input of the ADM2867E to the V_{IO} pin. This setting enables the driver inversion feature.
	B	Connects the INVD input of the ADM2867E to the INVD terminal on the P3 connector.
	C	Connects the INVD input of the ADM2867E to the GND_1 pins. This setting is used for normal driver operation.

Link	Jumper Connection	Description
LK5	A	Connects the INVR input of the ADM2867E to the V _{IO} pin. This setting enables the receiver inversion feature.
	B	Connects the INVR input of the ADM2867E to the INVR terminal on the P3 connector.
	C	Connects the INVR input of the ADM2867E to the GND ₁ pins. This setting is used for normal receiver operation.
LK6	Inserted	Connects the Pin B of the ADM2867E to Pin Z.
	Not inserted	Disconnects the Pin B of the ADM2867E from Pin Z.
LK7	Inserted	Connects the Pin A of the ADM2867E to Pin Y.
	Not inserted	Disconnects the Pin A of the ADM2867E from Pin Y.
LK8	A	Connects the V _{CC} pin of the ADM2867E to the VREG_IN terminal on the P1 connector. This option bypasses the ADP7104 regulator and allows an external power supply to connect directly to the V _{CC} pin of the ADM2867E .
	B	Powers the V _{CC} pin of the ADM2867E with a regulated 3.3 V power supply from the ADP7104 . The ADP7104 must be supplied with at least 4 V through the VREG_IN terminal on the P1 connector.
	C	Powers the V _{CC} pin of the ADM2867E with a regulated 5 V power supply from the ADP7104 . The ADP7104 must be supplied with at least 6 V through the VREG_IN terminal on the P1 connector.
LK9	Inserted	Connects the V _{CC} pin of the ADM2867E to the V _{IO} pin.
	Not inserted	Disconnects the V _{CC} pin of the ADM2867E from the V _{IO} pin. The V _{IO} pin is powered from the VIO terminal on the P1 connector.
LK10	Inserted	Connects the 120 Ω RT2 termination resistor across the Pin A and Pin B of the ADM2867E .
	Not inserted	Disconnects the 120 Ω RT2 termination resistor across the Pin A and Pin B of the ADM2867E .
LK11	Inserted	Connects the 120 Ω RT1 termination resistor across the Pin Y and Pin Z of the ADM2867E .
	Not inserted	Disconnects the 120 Ω RT1 termination resistor across the Pin Y and Pin Z of the ADM2867E .

OTHER BOARD COMPONENTS

The EVAL-ADM2867EEBZ has footprints for the RT1 and RT2 termination resistors. Two 120 Ω termination resistors are fitted to the EVAL-ADM2867EEBZ, but these resistors can be removed or replaced with a resistor of a different value as needed. Insert the LK11 jumper to add a 120 Ω load to the RS-485 driver. When LK6, LK7, and LK10 are inserted, an additional 120 Ω termination resistor is connected, resulting in a 60 Ω load on the RS-485 driver.

Biasing Resistors for Bus Idle Fail-Safe

The [ADM2867E](#) has a built in receiver fail-safe for the bus idle condition, but there are footprints on the EVAL-ADM2867EEBZ for fitting the R10 and R11 pull-up resistors to the V_{ISO} supply on Pin A and Pin Y of the [ADM2867E](#), as well as the R12 and R13 pull-down resistors to the GND₂ supply pins on Pin B and Pin Z. These resistors can be fitted if the user is connecting to other devices that require external biasing resistors on the bus. The exact value required for a 200 mV minimum differential voltage in bus idle condition depends on the minimum supply voltage and the termination scheme. For 5 V transceiver operation, 1140 Ω is recommended. For 3.3 V transceiver operation, 900 Ω is recommended.

See the [AN-960 Application Note, RS-485/RS-422 Circuit Implementation Guide](#) for more information about the bus idle fail-safe.

On-Board LTC6900 Oscillator

An [LTC6900](#) clock oscillator is provided on the EVAL-ADM2867EEBZ to allow efficient evaluation of the device without the need for an external signal source.

To use the [LTC6900](#) oscillator for evaluation, insert the LK3 jumper into Position BC. This setting connects the clock oscillator output to the TxD input pin of the [ADM2867E](#).

The R2 and R3 resistors can be used to configure the switching frequency of the clock oscillator within the 100 kHz to 12.5 MHz range. Calculate the frequency using the following equation:

$$f_{osc} = 10 \text{ MHz} \left(\frac{20 \text{ k}\Omega}{(R2 + R3)} \right) \quad 16 \text{ k}\Omega \leq (R2 + R3) \leq 2 \text{ M}\Omega$$

where f_{osc} is the output frequency of the [LTC6900](#) oscillator.

The [LTC6900](#) oscillator is powered from the V_{IO} supply, and must only be used when the V_{IO} supply voltage is between 2.7 V and 5.5 V.

ADP7104 LDO Regulator

The EVAL-ADM2867EEBZ features an on-board [ADP7104](#) LDO regulator that allows flexible power supply configurations during evaluation.

To use the on-board regulator, insert the LK8 jumper into Position B or Position C. This setting connects the regulator output to the V_{CC} pin of the [ADM2867E](#). In this configuration, power must be supplied to the VREG_IN input on the P1 connector.

The [ADP7104](#) LDO regulator can be configured to provide regulated 3.3 V or 5 V power to the V_{CC} pin of the [ADM2867E](#) via the LK8 jumper. When using the [ADP7104](#) regulator, insert the LK8 jumper at Position C to provide a regulated 5 V power supply to the V_{CC} pin of the [ADM2867E](#). Insert the LK8 jumper at Position B to provide a 3.3 V power supply to the V_{CC} pin of the [ADM2867E](#). Note that when LK8 is inserted at Position B, 5 V transceiver operation is not supported.

Insert the LK8 jumper into Position A to bypass the regulator and power of the [ADM2867E](#) directly from the VREG_IN input on the P1 connector. In this configuration, the VREG_IN input on the P1 connector supports a voltage range of 3 V to 5.5 V.

Table 3 lists the supported power supply configurations and the associated jumper configurations.

FULL DUPLEX RS-485 TRANSCEIVERS LOOPBACK TEST

To set up a loopback test with the EVAL-ADM2867EEBZ, close the LK6 and LK7 jumpers. The test details are shown in Table 3 and in Figure 5. A signal generator is connected to the TxD pin, which allows verification of the bus signals and the receiver output. Note that the jumper position for LK1 is Position C, LK2 is Position A, LK4 is Position C, and LK5 is Position C on the EVAL-ADM2867EEBZ. See Table 3 for the jumper configurations required for different power supply configurations. The LK11 and LK12 jumpers can be inserted to terminate the transmitter and the receiver with 120 Ω resistors. Connect both these jumpers while the EVAL-ADM2867EEBZ is configured for the loopback test to ensure that the driver is terminated with a standard RS-485 load of 60 Ω (bus terminated at both ends by 120 Ω).

IEC 61000-4-2 ELECTROSTATIC DISCHARGE (ESD) PROTECTION

The EVAL-ADM2867EEBZ is tested to achieve protection against IEC 61000-4-2 ESD to ± 12 kV (contact) and ± 15 kV (air) on Pin A, Pin B, Pin Y, and Pin Z of the [ADM2867E](#).

The IEC 61000-4-2 ESD standard describes testing using two coupling methods known as contact discharge and air discharge. Contact discharge implies direct contact between the discharge gun and the equipment under test (EUT).

During air discharge testing, the charged electrode of the discharge gun is moved toward the EUT until a discharge occurs as an arc across the air gap. The discharge gun does not make direct contact with the EUT.

During testing, Pin A, Pin B, Pin Y, and Pin Z of the [ADM2867E](#) are subjected to at least 10 positive and 10 negative single discharges with a 1 sec interval between each pulse. The highest specified IEC 61000-4-2 ESD test is Level 4, which defines a contact discharge voltage of ± 8 kV and an air discharge voltage of ± 15 kV.

Figure 4 shows the 8 kV contact discharge current waveform, as described in the [ADM2867E](#) data sheet, which has a peak current (I_{PEAK}) of 30 A. The IEC 61000-4-2 waveform parameters include rise times (t_R) of < 1 ns and pulse widths of ~ 60 ns.

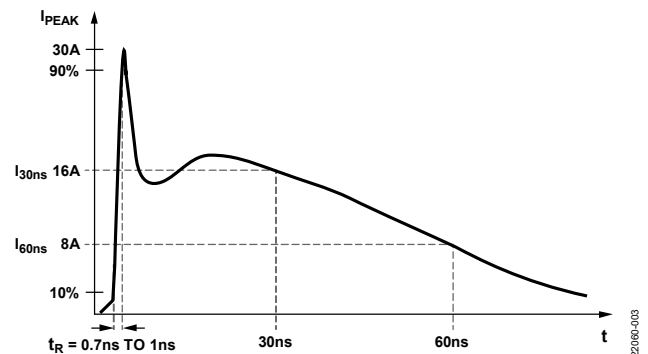


Figure 4. IEC 61000-4-2 ESD Waveform (8 kV)

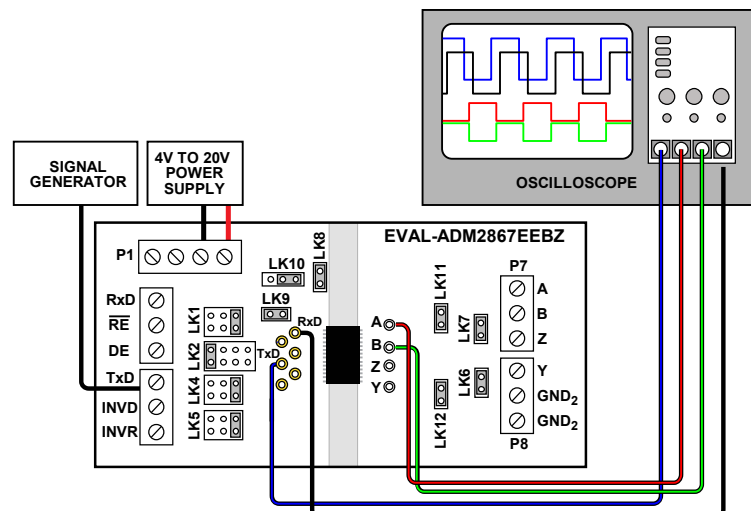


Figure 5. Full Duplex RS-485 Loopback Test

Table 3. Input Supply Configurations

Jumper LK8	V _{SEL} Pin	VREG_IN Input Voltage Range	V _{CC} Supply	V _{iso} Supply
A	Low	Not used	Power V _{CC} directly on connector P1 with a supply voltage between 3 V and 5.5 V	3.3 V isolated output
	High	Not used	Power V _{CC} directly on connector P1 with a supply voltage between 4.5 V and 5.5 V	5 V isolated output
B	Low	6 V to 20 V	Regulator provides 5 V supply to V _{CC} B	3.3 V isolated output
	High	Invalid condition, 5 V isolated output is not supported with V _{CC} < 4.5 V		High
C	Low	4 V to 20 V	Regulator provides 3.3 V supply to V _{CC} Regulator provides 5 V supply to V _{CC}	3.3 V isolated output
	High	6 V to 20 V		5 V isolated output

EVALUATION BOARD SCHEMATIC AND ARTWORK

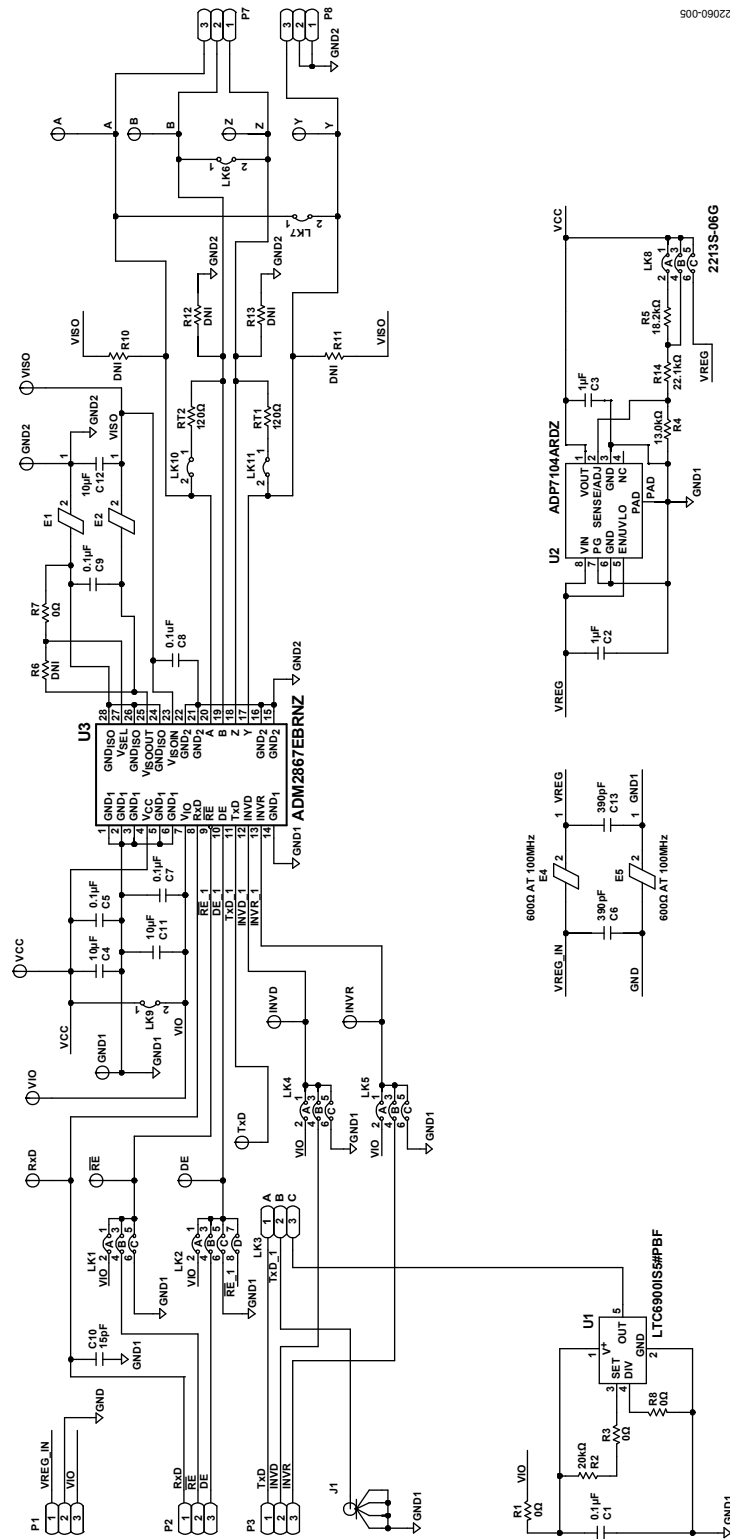


Figure 6. EVAL-ADM2867EEBZ Schematic

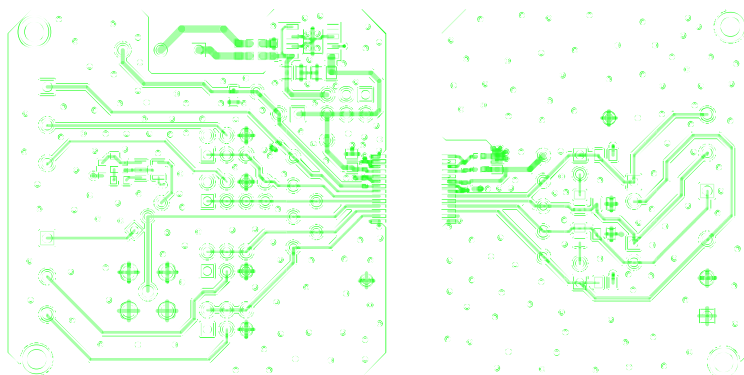


Figure 7. EVAL-ADM2867EEBZ Component Side, Layer 1

22060-008

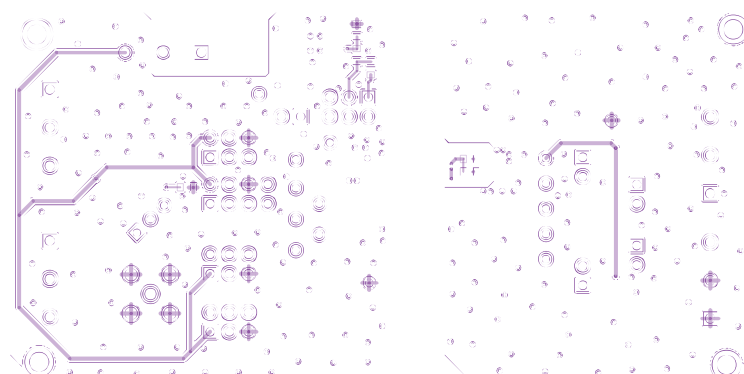


Figure 8. EVAL-ADM2867EEBZ, Layer 2

22060-007

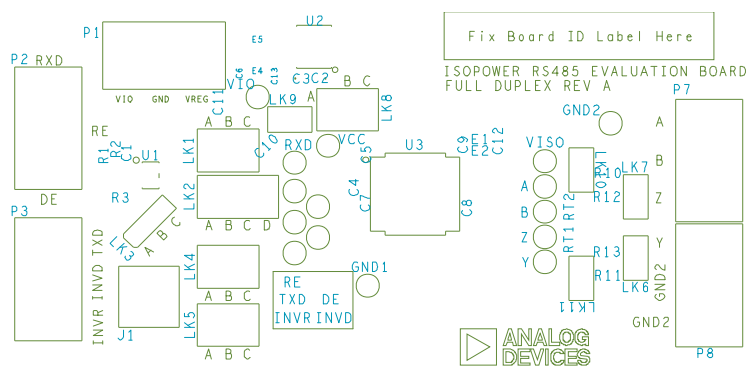


Figure 9. EVAL-ADM2867EEBZ, Silkscreen

22060-008

ORDERING INFORMATION

BILL OF MATERIALS

Table 4. EVAL-ADM2867EEBZ Bill of Materials

Qty	Reference Designator	Description	Manufacturer	Part Number
10	A, B, DE, INV D, INVR, RE, Rx D, Tx D, Y, Z	Test points, yellow	Keystone Electronics	36-5004-ND
5	C1, C5, C7 to C9	Capacitors, 0.1 μ F, 0402	Kemet	C0402C104K4RACTU
2	C2, C3	Capacitors, 1 μ F, 0805	Murata	GCM21BR71E105KA56L
2	C4, C12	Capacitors, 10 μ F, 0805	TDK	C2012X5R1E106K085AC
2	C6, C13	Capacitors, 390 pF, 0603	AVX Corporation	0603YC391KAT2A
1	C10	Capacitor, 15 pF, 0402	Murata	GCM1555C1H150FA16D
1	C11	Capacitor, 10 μ F, 0603	TDK	C1608X5R1A106M080AC
2	E1, E2	Ferrite beads, 0402	Murata	BLM15HD182SN1D
2	E4, E5	Ferrite beads, 0603, 600 Ω at 100 MHz	Murata	BLM18HE601SN1D
2	GND1, GND2	Test points, black	Components Corporation	TP-105-01-00
1	J1	Coaxial, straight SMA connector	TE Connectivity	5-1814832-1
4	LK1, LK4, LK5, LK8	6-pin (3 \times 2), 0.1 inch headers and shorting block	Multicomp	2213S-06G
1	LK2	8-pin (4 \times 2), 0.1 inch header and shorting block	Multicomp	2213S-08G
1	LK3	3-pin (3 \times 1), 0.1 inch header and shorting block	Molex	22-28-4033
5	LK6, LK7, LK9 to LK11	2-pin (1 \times 2), 0.1 inch headers and shorting block	Harwin	M20-9990246
5	P1 to P3, P7, P8	Three-way terminal blocks	Wurth Elektronik	691131710003
3	R1, R3, R7, R8	Resistors, 0 Ω , 0603	Vishay	CRCW0603000ZRT1
1	R2	Resistor, 20 k Ω , 0603	Panasonic	ERJ-3EKF2002V
1	R4	Resistor, 13 k Ω , 0603	Panasonic	ERJ-3EKF1302V
1	R5	Resistor, 18.2 k Ω , 0603	Panasonic	ERJ-3EKF1822V
1	R6	Resistor, do not install, 0603	Not applicable	Not applicable
1	R14	Resistor, 22.1 k Ω , 0603	Panasonic	ERJ-3EKF2212V
4	R10 to R13	Resistors, do not install, 0805	Not applicable	Not applicable
2	RT1, RT2	Resistors, 120 Ω , 0805	Panasonic	ERJ-P6WF1200V
1	U1	Low power, 1 kHz to 20 MHz oscillator	Analog Devices	LTC6900IS5#PBF
1	U2	Low noise CMOS LDO	Analog Devices	ADP7104ARDZ-R7
1	U3	25 Mbps, 5.7 kV signal and power isolated RS-485 transceiver	Analog Devices	ADM2867EBRNZ
3	VCC, VIO, VISO	Test points, red	Components Corporation	TP-105-01-02

NOTES

**ESD Caution**

ESD (electrostatic discharge) sensitive device. Charged devices and circuit boards can discharge without detection. Although this product features patented or proprietary protection circuitry, damage may occur on devices subjected to high energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality.

Legal Terms and Conditions

By using the evaluation board discussed herein (together with any tools, components documentation or support materials, the "Evaluation Board"), you are agreeing to be bound by the terms and conditions set forth below ("Agreement") unless you have purchased the Evaluation Board, in which case the Analog Devices Standard Terms and Conditions of Sale shall govern. Do not use the Evaluation Board until you have read and agreed to the Agreement. Your use of the Evaluation Board shall signify your acceptance of the Agreement. This Agreement is made by and between you ("Customer") and Analog Devices, Inc. ("ADI"), with its principal place of business at One Technology Way, Norwood, MA 02062, USA. Subject to the terms and conditions of the Agreement, ADI hereby grants to Customer a free, limited, personal, temporary, non-exclusive, non-sublicensable, non-transferable license to use the Evaluation Board FOR EVALUATION PURPOSES ONLY. Customer understands and agrees that the Evaluation Board is provided for the sole and exclusive purpose referenced above, and agrees not to use the Evaluation Board for any other purpose. Furthermore, the license granted is expressly made subject to the following additional limitations: Customer shall not (i) rent, lease, display, sell, transfer, assign, sublicense, or distribute the Evaluation Board; and (ii) permit any Third Party to access the Evaluation Board. As used herein, the term "Third Party" includes any entity other than ADI, Customer, their employees, affiliates and in-house consultants. The Evaluation Board is NOT sold to Customer; all rights not expressly granted herein, including ownership of the Evaluation Board, are reserved by ADI. **CONFIDENTIALITY.** This Agreement and the Evaluation Board shall all be considered the confidential and proprietary information of ADI. Customer may not disclose or transfer any portion of the Evaluation Board to any other party for any reason. Upon discontinuation of use of the Evaluation Board or termination of this Agreement, Customer agrees to promptly return the Evaluation Board to ADI. **ADDITIONAL RESTRICTIONS.** Customer may not disassemble, decompile or reverse engineer chips on the Evaluation Board. Customer shall inform ADI of any occurred damages or any modifications or alterations it makes to the Evaluation Board, including but not limited to soldering or any other activity that affects the material content of the Evaluation Board. Modifications to the Evaluation Board must comply with applicable law, including but not limited to the RoHS Directive. **TERMINATION.** ADI may terminate this Agreement at any time upon giving written notice to Customer. Customer agrees to return to ADI the Evaluation Board at that time. **LIMITATION OF LIABILITY.** THE EVALUATION BOARD PROVIDED HEREUNDER IS PROVIDED "AS IS" AND ADI MAKES NO WARRANTIES OR REPRESENTATIONS OF ANY KIND WITH RESPECT TO IT. ADI SPECIFICALLY DISCLAIMS ANY REPRESENTATIONS, ENDORSEMENTS, GUARANTEES, OR WARRANTIES, EXPRESS OR IMPLIED, RELATED TO THE EVALUATION BOARD INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, TITLE, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS. IN NO EVENT WILL ADI AND ITS LICENSORS BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES RESULTING FROM CUSTOMER'S POSSESSION OR USE OF THE EVALUATION BOARD, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DELAY COSTS, LABOR COSTS OR LOSS OF GOODWILL. ADI'S TOTAL LIABILITY FROM ANY AND ALL CAUSES SHALL BE LIMITED TO THE AMOUNT OF ONE HUNDRED US DOLLARS (\$100.00). **EXPORT.** Customer agrees that it will not directly or indirectly export the Evaluation Board to another country, and that it will comply with all applicable United States federal laws and regulations relating to exports. **GOVERNING LAW.** This Agreement shall be governed by and construed in accordance with the substantive laws of the Commonwealth of Massachusetts (excluding conflict of law rules). Any legal action regarding this Agreement will be heard in the state or federal courts having jurisdiction in Suffolk County, Massachusetts, and Customer hereby submits to the personal jurisdiction and venue of such courts. The United Nations Convention on Contracts for the International Sale of Goods shall not apply to this Agreement and is expressly disclaimed.