


3.5" HDMI IPS TFT Modules

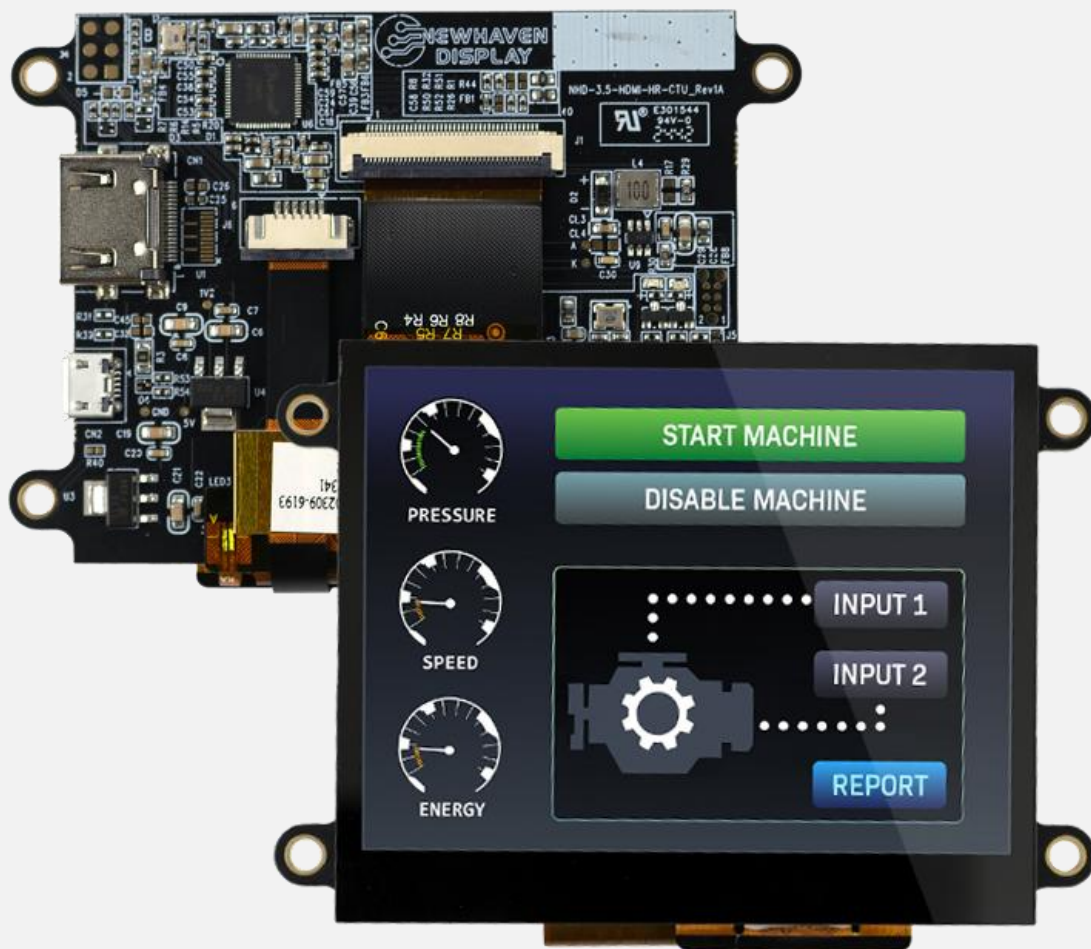

Newhaven Display International

2661 Galvin Court • Elgin IL • 60124

Phone: 847.844.8795

Fax: 847.844.8796

newhavendisplay.com

Sales:

nhsales@newhavendisplay.com

Technical Support:

nhtech@newhavendisplay.com

Table of Contents

Overview 2

Interface Description 3

Connecting with Windows 10/11 4

Connecting with Linux..... 6

Tutorial Videos..... 7

Precautions for Using LCDs/LCMs..... 7

Document Revision History 8


Overview



The HDMI interface has become the most popular video interface standard to date, and HDMI video sources are easier to come by now than ever before. Whether you need an HDMI TFT display for your Raspberry Pi/BeagleBone Black application, a Windows/Windows Embedded PC monitor, or a touch screen HMI for your Linux or other embedded system, the Newhaven Display HDMI TFT product line offers a solution.

Our HDMI TFT Modules unite our existing high-quality TFT display panels with a custom PCB engineered in the USA by Newhaven Display. Assembled to the display, our PCB provides the user an all-in-one, plug-and-play HDMI + USB Touch solution for virtually any application.

Interface Description

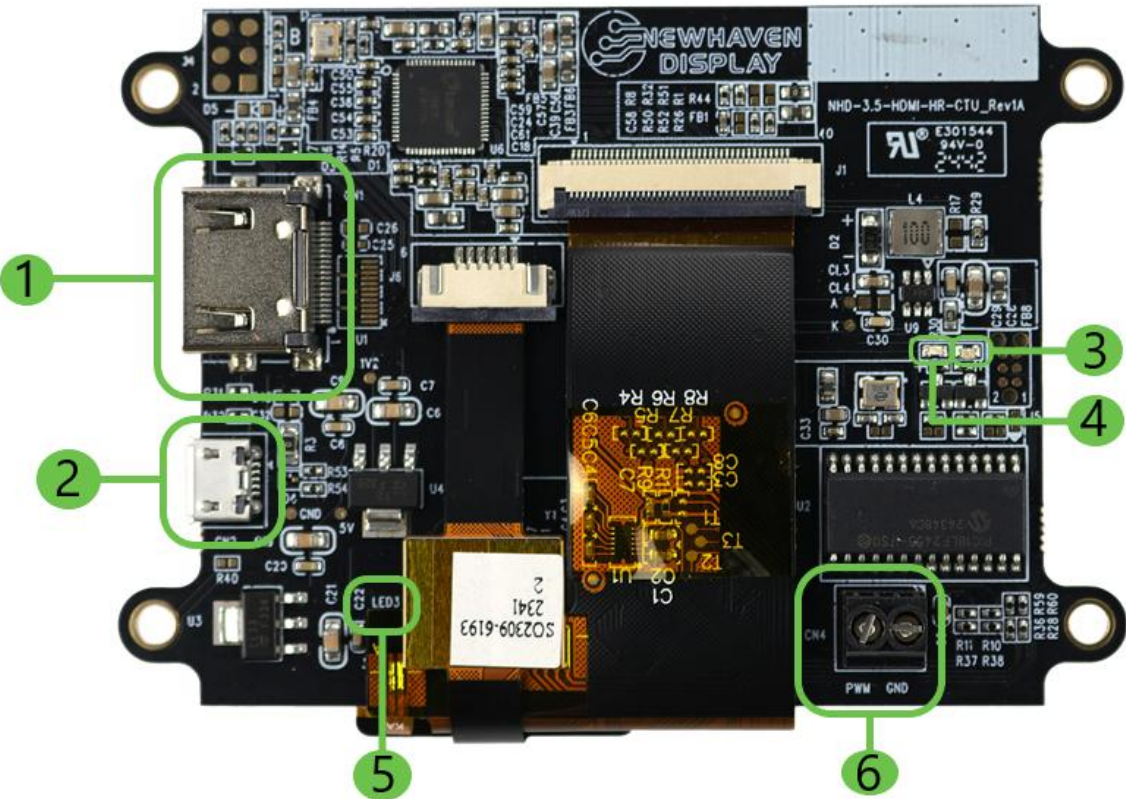


(Capacitive Touch model shown above as reference)

Num.	Description
1)	(CN1) HDMI (Type-A) Connector This is a full-size HDMI connector meant to connect the HDMI source signal (Video only) to this module.
2)	(CN2) Micro-USB (Type-B) Connector This is used to supply power to the display module and is also used to connect the Touch Panel of this module to a USB input to act as a USB-HID device.
3)	(LED1) LED Indicator for HDMI This is a Blue LED that will illuminate when HDMI power is detected.
4)	(LED2) LED Indicator for Touch – Capacitive Touch model only This is a Red LED that will illuminate when there is a touch sensed on the CTP.
5)	(LED3) LED Indicator for Power This is a Green LED that will illuminate when DC power is supplied to the module.
6)	(CN4) Terminal Block for Backlight PWM The pin labelled ‘PWM’ is connected directly to the LED driver’s CTRL pin (T.I. TPS61165). This is a multifunctional pin which can be used for enable control, PWM, and digital dimming.


Connecting with Windows 10/11

Connecting our HDMI TFT Modules to a Windows system is fully plug-and-play. Start by plugging in a micro-USB cable from the PC to the CN2 connector on the PCB. The green LED (PWR) will illuminate when the board has power supplied to it. Next, connect the display to your system via HDMI cable.

Due to the on-board EDID, the display will be detected automatically, and the system's output resolution will set itself. For Touch Panel models, once the display is connected to the system via USB, Windows will automatically detect and install the necessary drivers.

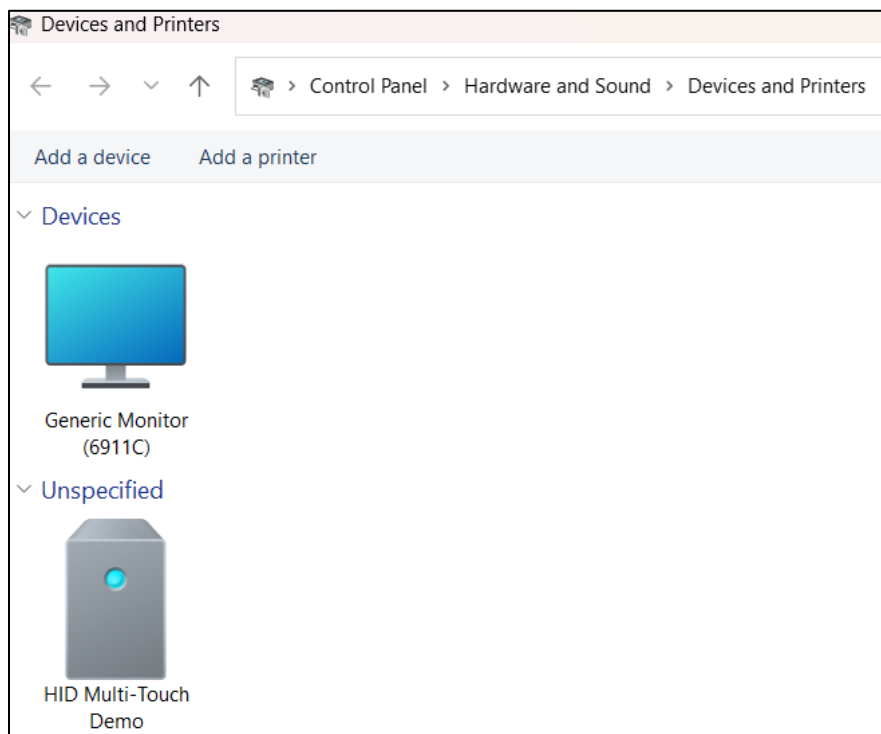

Properly connected devices will appear in “Devices and Printers” within the Control Panel.

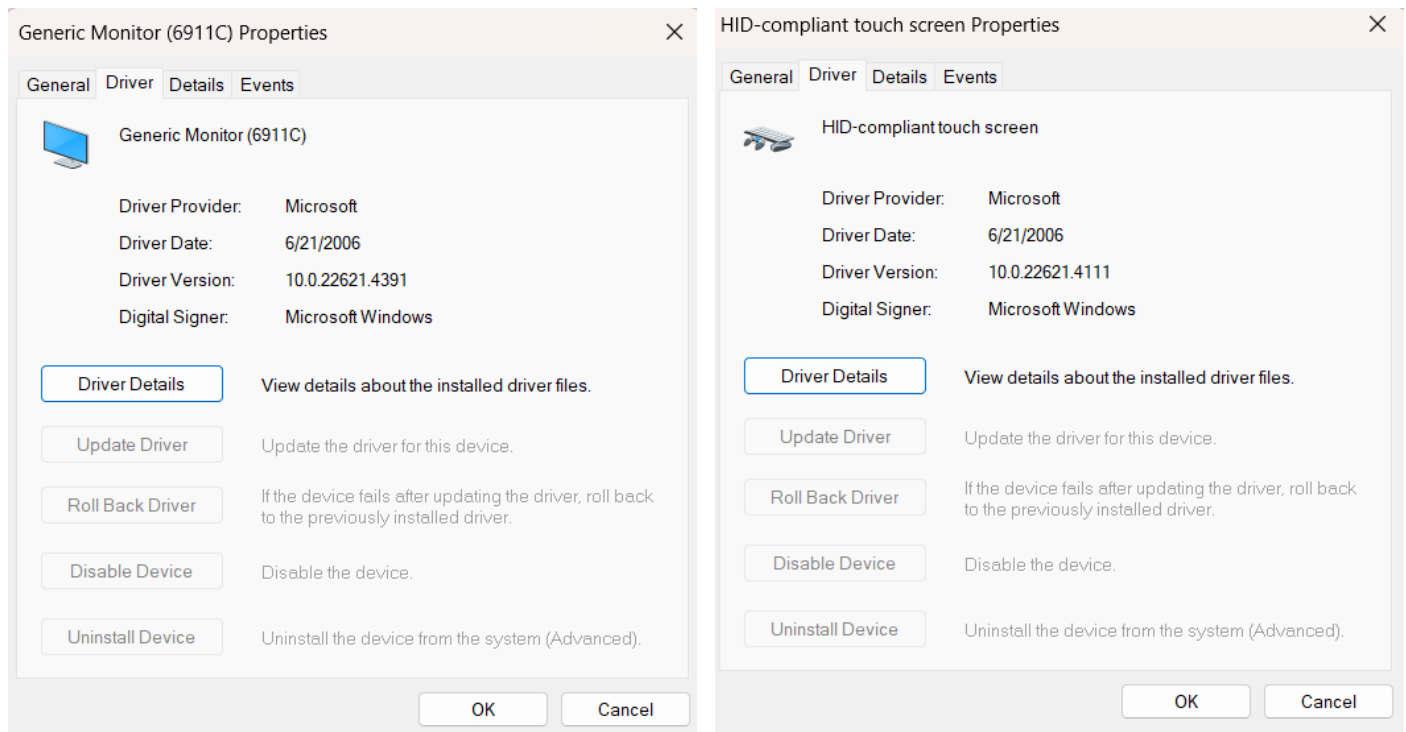

Verify Drivers for both touch and display are the most recent.



Windows Home Screen.

Connecting with Linux

Most Linux applications with an HDMI source will also be fully plug-and-play, however when using our HDMI TFT Modules with the Raspberry Pi, the config.txt file on the Pi's microSD card may need to be slightly modified by the user.

The following highlighted lines can be added in config.txt for proper display output:

```
# For more options and information see
# http://rpf.io/configtxt
# Some settings may impact device functionality. See link above for details

# uncomment if you get no picture on HDMI for a default "safe" mode
#hdmi_safe=1

# uncomment this if your display has a black border of unused pixels visible
# and your display can output without overscan
#disable_overscan=1

# uncomment the following to adjust overscan. Use positive numbers if console
# goes off screen, and negative if there is too much border
#overscan_left=16
#overscan_right=16
#overscan_top=16
#overscan_bottom=16

# uncomment to force a console size. By default it will be display's size minus
# overscan.
#framebuffer_width=1280
#framebuffer_height=720

# uncomment if hdmi display is not detected and composite is being output
#hdmi_force_hotplug=1

# uncomment to force a specific HDMI mode (this will force VGA)
#hdmi_group=1
#hdmi_mode=1

hdmi_group=2
hdmi_mode=87

hdmi_cvt=640 480 60 1 0 0 0

# uncomment to force a HDMI mode rather than DVI. This can make audio work in
# DMT (computer monitor) modes
#hdmi_drive=2

# uncomment to increase signal to HDMI, if you have interference, blanking, or
# no display
#config_hdmi_boost=4

# uncomment for composite PAL
#sdtv_mode=2


#uncomment to overclock the arm. 700 MHz is the default.
#arm_freq=800

# Uncomment some or all of these to enable the optional hardware interfaces
#dtparam=i2c_arm=on
#dtparam=i2s=on
#dtparam=spi=on

# Uncomment this to enable the lirc-rpi module
#dtoverlay=lirc-rpi

# Additional overlays and parameters are documented /boot/overlays/README

# Enable audio (loads snd_bcm2835)
dtparam=audio=on
```

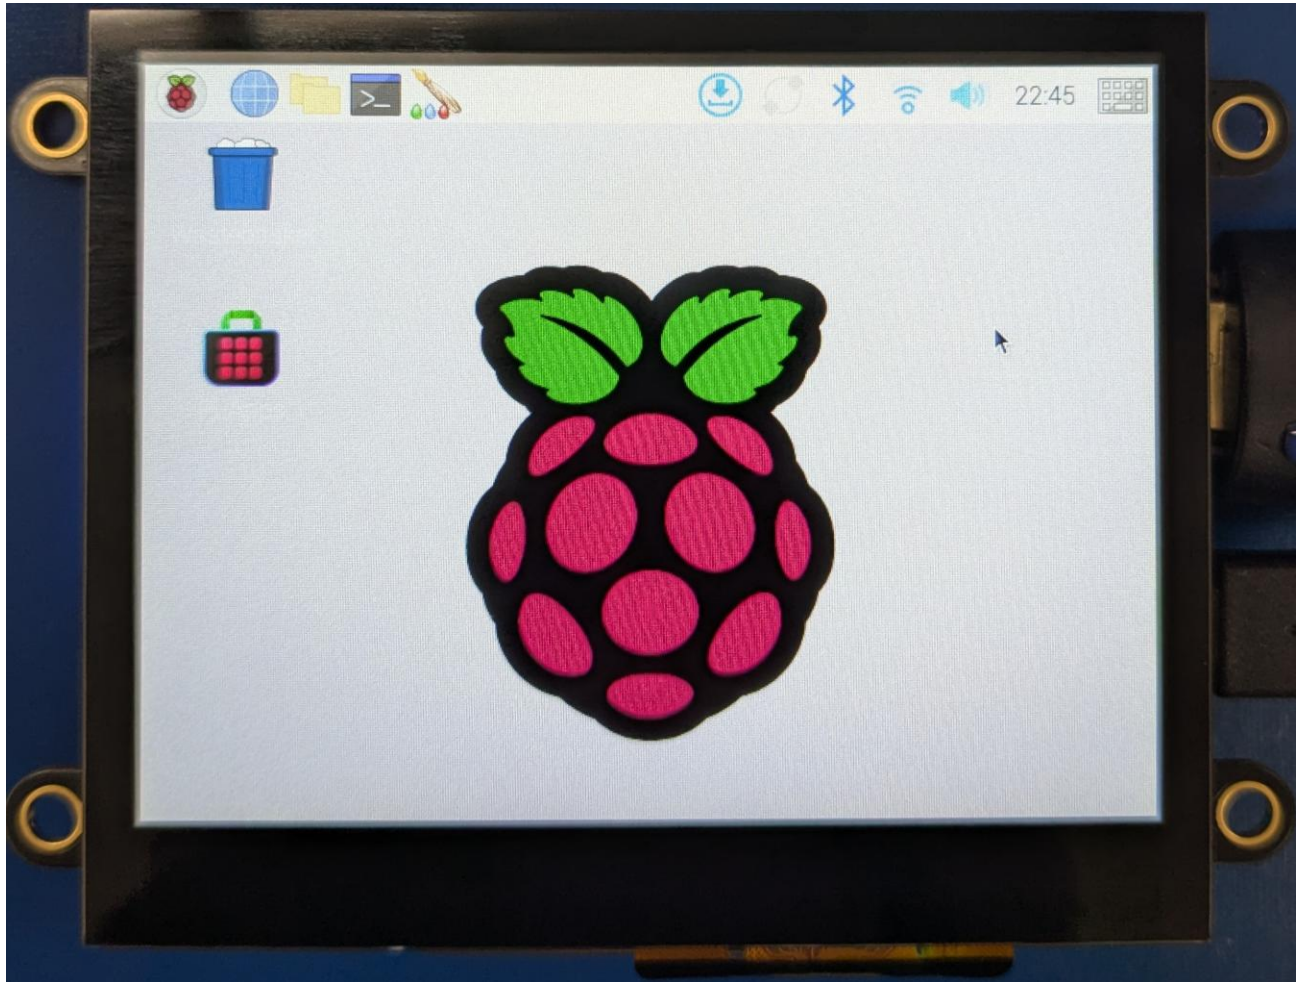

Raspberry Pi Home Screen.

Tutorial Videos

HDMI: https://www.youtube.com/watch?v=6p2pMpa2c5Y&list=PLV6MQRlaoTx4WZBxy_fgYI4fxNI7pAsNo&index=6

PWM: https://www.youtube.com/watch?v=xE5RPdkxyvE&list=PLV6MQRlaoTx6hdIA6g_GdkUwEoGpMwin_&index=13

Precautions for Using LCDs/LCMs

See Precautions at <https://newhavendisplay.com/specs/precautions.pdf>

Document Revision History

Revision	Date	Comments
1.0	3/14/2025	Initial release