



123456785114478561532658974102150015462035981
123456975511447854451



Embedded Vision

511447 D E V E L O P M E N T K I T 56012458796
0215001546203598704156012458796320148778

This document provides a brief introduction and instructions to install and demonstrate the Embedded Vision Development Kit.


This kit is pre-programmed to demonstrate the Dual CSI-2 to HDMI demo. The dual camera inputs are received by the CrossLink pASSP, which merges into a single video stream fed to the ECP5 FPGA. The ECP5 converts the incoming image into parallel data and also performs basic image processing, and then passes it to the HDMI VIP Output Bridge Board which converts the data to HDMI format. The output can be observed on a standard HDMI monitor.

1

Check the Kit Contents

The Embedded Vision Development Kit contains the following items

- Three-board connected kit consisting of:
 - Crosslink VIP Bridge Board
 - ECP5 VIP Processor Board
 - HDMI VIP Output Bridge Board
- USB mini cable for programming
- 12V AC adaptor Power Supply
- QuickStart Guide
- Lattice Diamond software license request letter with unique serial number.

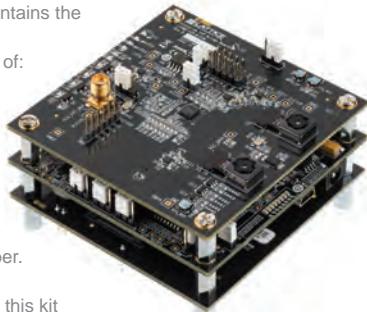

The following hardware is not included with this kit but required to complete this demo

- HDMI-capable monitor
- HDMI cable

Static electricity can shorten the lifespan of electronic components. Please observe these tips to prevent any damage that could occur from electro-static discharge:

- Use anti-static precautions such as operating on an anti-static mat and wearing an anti-static wristband.
- Store the board in anti-static packaging.
- Touch the metal housing to equalize voltage potential between you and the board.

2**Run the Demonstration**

- Verify the boards are properly connected. Mount the Crosslink VIP Input Bridge Board on top of ECP5 VIP Processor Board. The connectors J10 and J11 of ECP5 VIP processor board should be connected to J3 and J1 connectors of Crosslink VIP Bridge Board. The HDMI VIP Output Bridge Board connects to the bottom of the ECP5 VIP Processor Board. Be sure to secure the boards with the supplied stand-offs and screws to ensure the boards remain connected.
- Connect 12V adapter to the ECP5 VIP Processor Board. This supplies power to the entire kit when all boards are properly connected.
- Check the following jumper settings:

CrossLink Jumper Settings	
Jumper	Pins to Connect
J2	1-2
J4	1-2
J30	Open
All other headers should be kept open	

ECP5 Jumper Settings	
Jumper	Pins to Connect
J6	1-2
J9	1-2
J5	1-2
J51	1-2
J52	2-3
J7	1-2
J53	1-2
J55	1-2
J50	1-2, 3-5
J3	1-2, 5-6
All other headers should be kept open	

- Connect the HDMI cable between the HDMI VIP Output Board and monitor.
- Set power switch SW2 on the ECP5 VIP Processor Board to ON.
- The output of the dual cameras will be observed on the monitor as a single video stream.



3

Done!

Congratulations! You have successfully demonstrated the Dual CSI-2 to HDMI demo on the Embedded Vision Development Kit. This demo is intended to show basic functionality of the kit as shipped. This kit can be reprogrammed and/or connected to additional hardware (available separately) to demonstrate a number of bridging solutions. To learn more about these solutions and download full documentation for this kit, including schematics for all the boards, visit the Lattice website at: www.latticesemi.com/evdkit.

Development with the Lattice CrossLink pASSP and ECP5 FPGA is supported by the Lattice Diamond software. You can learn more and download the latest version from the Lattice website at www.latticesemi.com/diamond.

Access to design with the ECP5 FPGA requires a subscription license to the Diamond software. If you do not have a Diamond software subscription license, follow the instructions on the letter included in this kit to request a license.

The CrossLink and ECP5 devices can be programmed using Diamond Programmer software. This is included with the Diamond software, or can be downloaded as a stand-alone tool from the Lattice website at www.latticesemi.com/programmer.

Additional Terms and Conditions Applicable to Lattice Programming and Development Hardware

Lattice device programmers, programming cables, socket adapters, and other hardware sold for use in conjunction with Lattice software ("Programming Hardware") and Lattice evaluation boards and development kits sold for use in conjunction with evaluating Lattice products ("Development Hardware") are designed and intended for use solely with semiconductor components manufactured by Lattice Semiconductor Corporation. Programming and Development Hardware is warranted to meet Lattice specifications only for a period of ninety (90) days; in all other respects the terms and conditions of sale of Programming and Development Hardware shall be Lattice's standard terms and conditions set forth in Lattice's Sales Order Acknowledgment. Additionally, Lattice specifications for Programming and Development Hardware limit their use to low-volume engineering applications only, and not for volume production use. The warranty for Programming and Development Hardware will not apply to any Programming or Development Hardware used in production, used with worn or improperly installed hardware, or used with incompatible systems or components.

Technical Support

www.latticesemi.com

Copyright © 2017 Lattice Semiconductor Corporation. Lattice Semiconductor, L (stylized) Lattice Semiconductor Corp., Lattice (design), Lattice Diamond, ECP5 and CrossLink are either registered trademarks or trademarks of Lattice Semiconductor Corporation in the United States and/or other countries. Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.