

RX130 Group

RX Capacitive Touch Evaluation System CPU Board

User's Manual

Renesas 32-bit Microcontroller

RX Family/RX100 Series

Renesas Solution Starter Kit

RX Capacitance Touch Evaluation System

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (<http://www.renesas.com>).

Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation of these circuits, software, and information in the design of your equipment. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics has used reasonable care in preparing the information included in this document, but Renesas Electronics does not warrant that such information is error free. Renesas Electronics assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein.
3. Renesas Electronics does not assume any liability for infringement of patents, copyrights, or other intellectual property rights of third parties by or arising from the use of Renesas Electronics products or technical information described in this document. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You should not alter, modify, copy, or otherwise misappropriate any Renesas Electronics product, whether in whole or in part. Renesas Electronics assumes no responsibility for any losses incurred by you or third parties arising from such alteration, modification, copy or otherwise misappropriation of Renesas Electronics product.
5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The recommended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.
"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; and industrial robots etc.
"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control systems; anti-disaster systems; anti-crime systems; and safety equipment etc.

Renesas Electronics products are neither intended nor authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems, surgical implantations etc.), or may cause serious property damages (nuclear reactor control systems, military equipment etc.). You must check the quality grade of each Renesas Electronics product before using it in a particular application. You may not use any Renesas Electronics product for any application for which it is not intended. Renesas Electronics shall not be in any way liable for any damages or losses incurred by you or third parties arising from the use of any Renesas Electronics product for which the product is not intended by Renesas Electronics.

6. You should use the Renesas Electronics products described in this document within the range specified by Renesas Electronics, especially with respect to the maximum rating, operating supply voltage range, movement power voltage range, heat radiation characteristics, installation and other product characteristics. Renesas Electronics shall have no liability for malfunctions or damages arising out of the use of Renesas Electronics products beyond such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of its products, semiconductor products have specific characteristics such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Further, Renesas Electronics products are not subject to radiation resistance design. Please be sure to implement safety measures to guard them against the possibility of physical injury, and injury or damage caused by fire in the event of the failure of a Renesas Electronics product, such as safety design for hardware and software including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult, please evaluate the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. Please use Renesas Electronics products in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive. Renesas Electronics assumes no liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technology may not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You should not use Renesas Electronics products or technology described in this document for any purpose relating to military applications or use by the military, including but not limited to the development of weapons of mass destruction. When exporting the Renesas Electronics products or technology described in this document, you should comply with the applicable export control laws and regulations and follow the procedures required by such laws and regulations.
10. It is the responsibility of the buyer or distributor of Renesas Electronics products, who distributes, disposes of, or otherwise places the product with a third party, to notify such third party in advance of the contents and conditions set forth in this document, Renesas Electronics assumes no responsibility for any losses incurred by you or third parties as a result of unauthorized use of Renesas Electronics products.
11. This document may not be reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products, or if you have any other inquiries.

(Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its majority-owned subsidiaries.

(Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

1. Handling of Unused Pins

Handle unused pins in accordance with the directions given under Handling of Unused Pins in the manual.

The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible. Unused pins should be handled as described under Handling of Unused Pins in the manual.

2. Processing at Power-on

The state of the product is undefined at the moment when power is supplied.

The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the moment when power is supplied.

In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the moment when power is supplied until the reset process is completed.

In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the moment when power is supplied until the power reaches the level at which resetting has been specified.

3. Prohibition of Access to Reserved Addresses

Access to reserved addresses is prohibited.

The reserved addresses are provided for the possible future expansion of functions. Do not access these addresses; the correct operation of LSI is not guaranteed if they are accessed.

4. Clock Signals

After applying a reset, only release the reset line after the operating clock signal has become stable. When switching the clock signal during program execution, wait until the target clock signal has stabilized.

When the clock signal is generated with an external resonator (or from an external oscillator) during a reset, ensure that the reset line is only released after full stabilization of the clock signal.

Moreover, when switching to a clock signal produced with an external resonator (or by an external oscillator) while program execution is in progress, wait until the target clock signal is stable.

5. Differences between Products

Before changing from one product to another, i.e. to a product with a different part number, confirm that the change will not lead to problems.

The characteristics of Microprocessing unit or Microcontroller unit products in the same group but having a different part number may differ in terms of the internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

How to Use This Manual

1. Purpose and Target Readers

This manual is designed to provide the user with a general understanding of the Capacitive Touch CPU Board and its electrical characteristics. It is intended for users designing sample code on the RSSK platform, using the many different incorporated peripheral devices.

The manual includes an overview of the Capacitive Touch CPU Board functions, but does not serve as a guide for embedded programming or hardware design. A basic knowledge of electric circuits, logical circuits, and MCUs is necessary in order to use this manual.

Particular attention should be paid to the precautionary notes when using the manual. These notes occur within the body of the text, at the end of each section, and in the Usage Notes section.

The revision history summarizes the locations of revisions and additions. It does not list all revisions. Refer to the text of the manual for details.

The following documents apply to the RX130 Group, RX Capacitive Touch CPU Board included in the Renesas Capacitive Touch Evaluation System. Make sure to refer to the latest versions of these documents. The newest versions of the documents listed may be obtained from the Renesas Electronics Web site.

Document Type	Description	Document Title	Document No.
User's manual	Description of hardware (pin assignments, memory map, peripheral functions, electrical characteristics, timing) and operations. *Refer to corresponding application notes for descriptions on how to use peripheral functions.	RX130 Group RX Capacitive Touch Evaluation System CPU Board User's Manual	This User's Manual
Quick Start Guide	Quick and easy setup guide	RX Capacitive Touch Evaluation System Quick Start Guide	R12UZ0007EJ

The following documents are also available for the RX130 Group. The latest versions of all documents are available for download from the Renesas Electronics website.

Document Type	Description	Document Title	Document No.
Application Note	Peripheral function usage instructions, sample applications Reference programs Programming instructions for Assembler language and C language	Available on the Renesas Electronics website	
Renesas Technical Update	Updates concerning product specifications, documentation, etc.		

2. List of Abbreviations and Acronyms

Abbreviation	Full Form
ACIA	Asynchronous Communications Interface Adapter
bps	bits per second
CRC	Cyclic Redundancy Check
DMA	Direct Memory Access
DMAC	Direct Memory Access Controller
GSM	Global System for Mobile Communications
Hi-Z	High Impedance
IEBus	Inter Equipment Bus
I/O	Input/Output
IrDA	Infrared Data Association
LSB	Least Significant Bit
MSB	Most Significant Bit
NC	Non-Connect
PLL	Phase Locked Loop
PWM	Pulse Width Modulation
SFR	Special Function Register
SIM	Subscriber Identity Module
UART	Universal Asynchronous Receiver/Transmitter
VCO	Voltage Controlled Oscillator

Table of Contents

1. Overview.....	1
1.1 Purpose	1
1.2 Features.....	1
1.3 Board Specifications.....	2
2. Power Supply	3
2.1 Requirements	3
2.2 Power-up Behavior	3
3. Board Layout	4
3.1 Component Layout	4
3.2 Component Placement	5
4. Connectivity	6
4.1 System Block Diagrams.....	6
4.2 Debugger Connections.....	6
5. User Circuitry.....	7
5.1 Reset Circuit	7
5.2 Clock Circuit.....	7
5.3 Switches.....	7
5.4 LEDs.....	7
5.5 USB Serial Conversion.....	8
6. Configuration	9
6.1 Modifying the CPU Board.....	9
6.2 MCU Settings	9
6.3 Power Supply Configuration	9
6.4 Clock Configuration	10
6.5 Serial Configuration.....	10
7. Headers	11
7.1 Application Headers	11

8. Circuit Diagram.....	12
9. PCB Layout Diagram.....	13
10. Parts List.....	14
11. Code Development.....	15
11.1 Overview	15
11.2 Software Project.....	15
11.3 Compiler Restrictions	15
11.4 Mode Support	15
11.5 Debugging Support.....	15
11.6 Address Space.....	15
12. Additional Information.....	16

1. Overview

1.1 Purpose

This CPU board is an evaluation tool for Renesas microcontrollers. This manual explains the technical components of the hardware in detail.

1.2 Features

This CPU board offers the following features:

- Renesas microcontroller programming
- User code debugging
- User circuits for switches, LEDs, etc.
- Sample application
- Capacitive Touch Sensing Control Unit (CTSU)
 - 36 channels available
- RX Capacitive Touch Evaluation System Application Board (option)

1.3 Board Specifications

The CPU board specifications are shown in Table 1.1.

Table 1.1 CPU Board Specifications

Item	Specification
Microcontroller	Part No: R5F5130ADFN
	Package: 80-pin LFQFP
	On-chip memory: ROM 128KB+8KB、RAM16KB
Input Clock	Main clock: 16MHz (option)
	Subclock: 32.768KHz (option)
Power Supply	DC power jack: 5.0 to 3.3V input
	USB bus-powered (VBUS): 5V
Debug Interface	E1 14-pin box header
DIP Switch	Mod configuration: 2-pole x 1
Push Switch	Reset switch x 1
	User switch x 3
LED	Power indicator: red x 1
	User: green x 1, orange x 1, red x 1
USB to Serial Conversion Interface	Connector: USB-MiniB
	Driver: FT232R USB serial IC (manufactured by FTDI)
Application Board Interface (GPIO)	2.54-mm pitch, 16-pin x 1 (CN1)
Application Board Interface(CTSU)	2.54-mm pitch, 40-pin x 1 (CN2)
Low-power Consumption Current	500mA or less
Operating Temperature Range	When operating: 10 to 35°C, in storage: -10 to 50°C no condensation

2. Power Supply

2.1 Requirements

Although the CPU board does not come with an E1 debugger, the debugger can be used to power the board by connecting it to CN5. When not using an E1 debugger, the USB cable included with the CPU board can be connected to CN6 to supply power. Finally, by changing the board settings, it can be powered using a center positive 2.1-mm barrel power jack.

Details of the external power supply connection and settings are shown in Table 2.1. The default configuration and initial settings of the CPU board are shown in **bold, blue text**.

Table 2.1 Power Supply Requirements

JP1	Supply Source	Supply Source	Supply Voltage
Pin 1-2 shorted	USB Cable (CN6)	USB VBUS	5.0 VDC
Pin 2-3 shorted	Barrel Jack (CN3)	External Supply	5.0 – 3.3VDC
	Battery (V1) ^{*1} _{*2}	Battery	3.0 VDC

Notes *1: Option

*2: When barrel power jack is not connected

2.2 Power-up Behavior

At the time of purchase, the microcontroller on the CPU board is pre-programmed with sample software. This software automatically recognizes what type of Renesas Capacitive Touch Evaluation System application board is connected to the CPU board and runs the corresponding demo program. Refer to the RX Capacitive Touch Evaluation System Quick Start Guide for more information.

3. Board Layout

3.1 Component Layout

Figure 3.1 shows the component layout of the RX130CPU board.

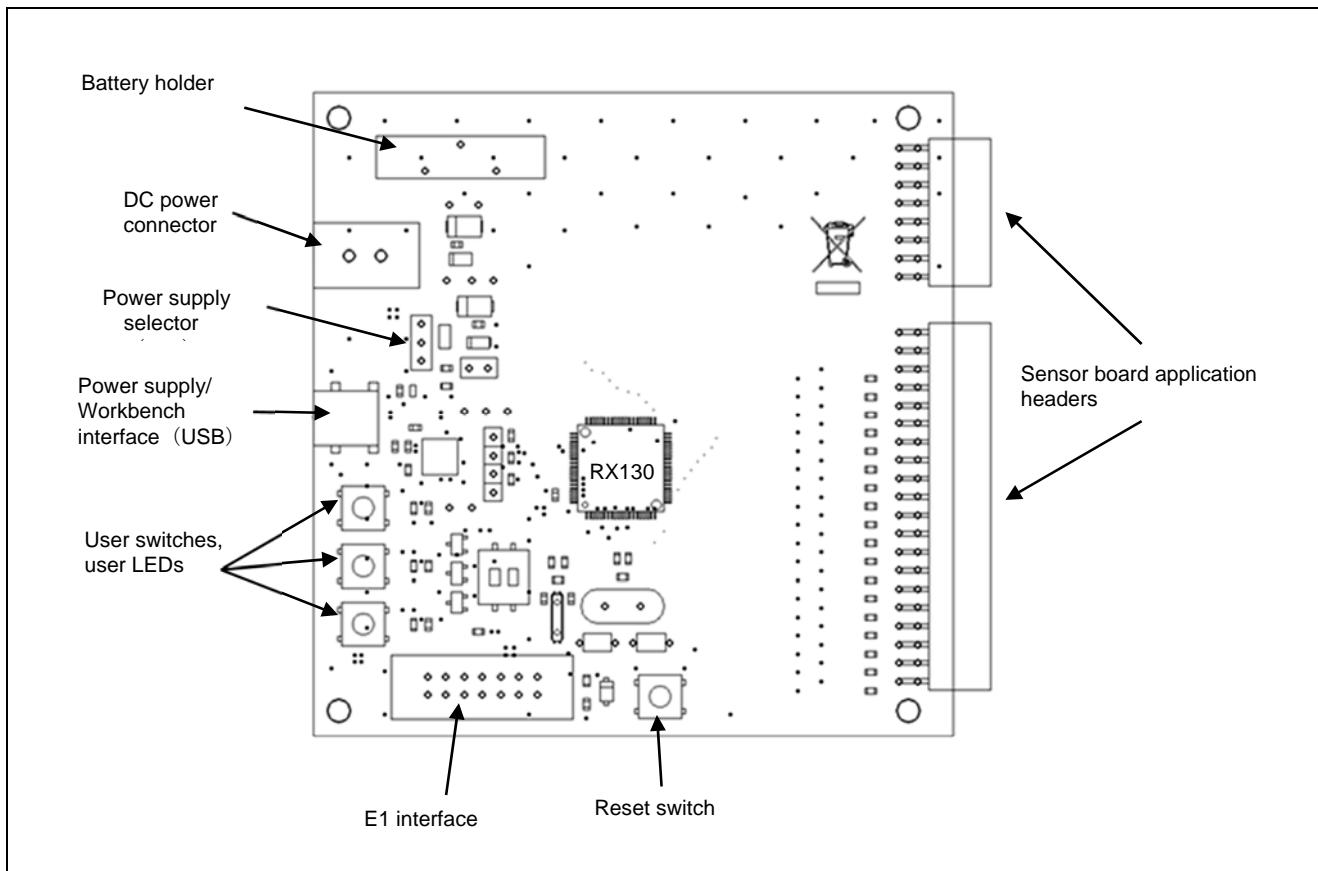


Figure 3.1 Component Layout

3.2 Component Placement

Figure 3.2 shows placement of individual components on the RX130 CPU board. Component numbers and values are also shown on the board schematics.

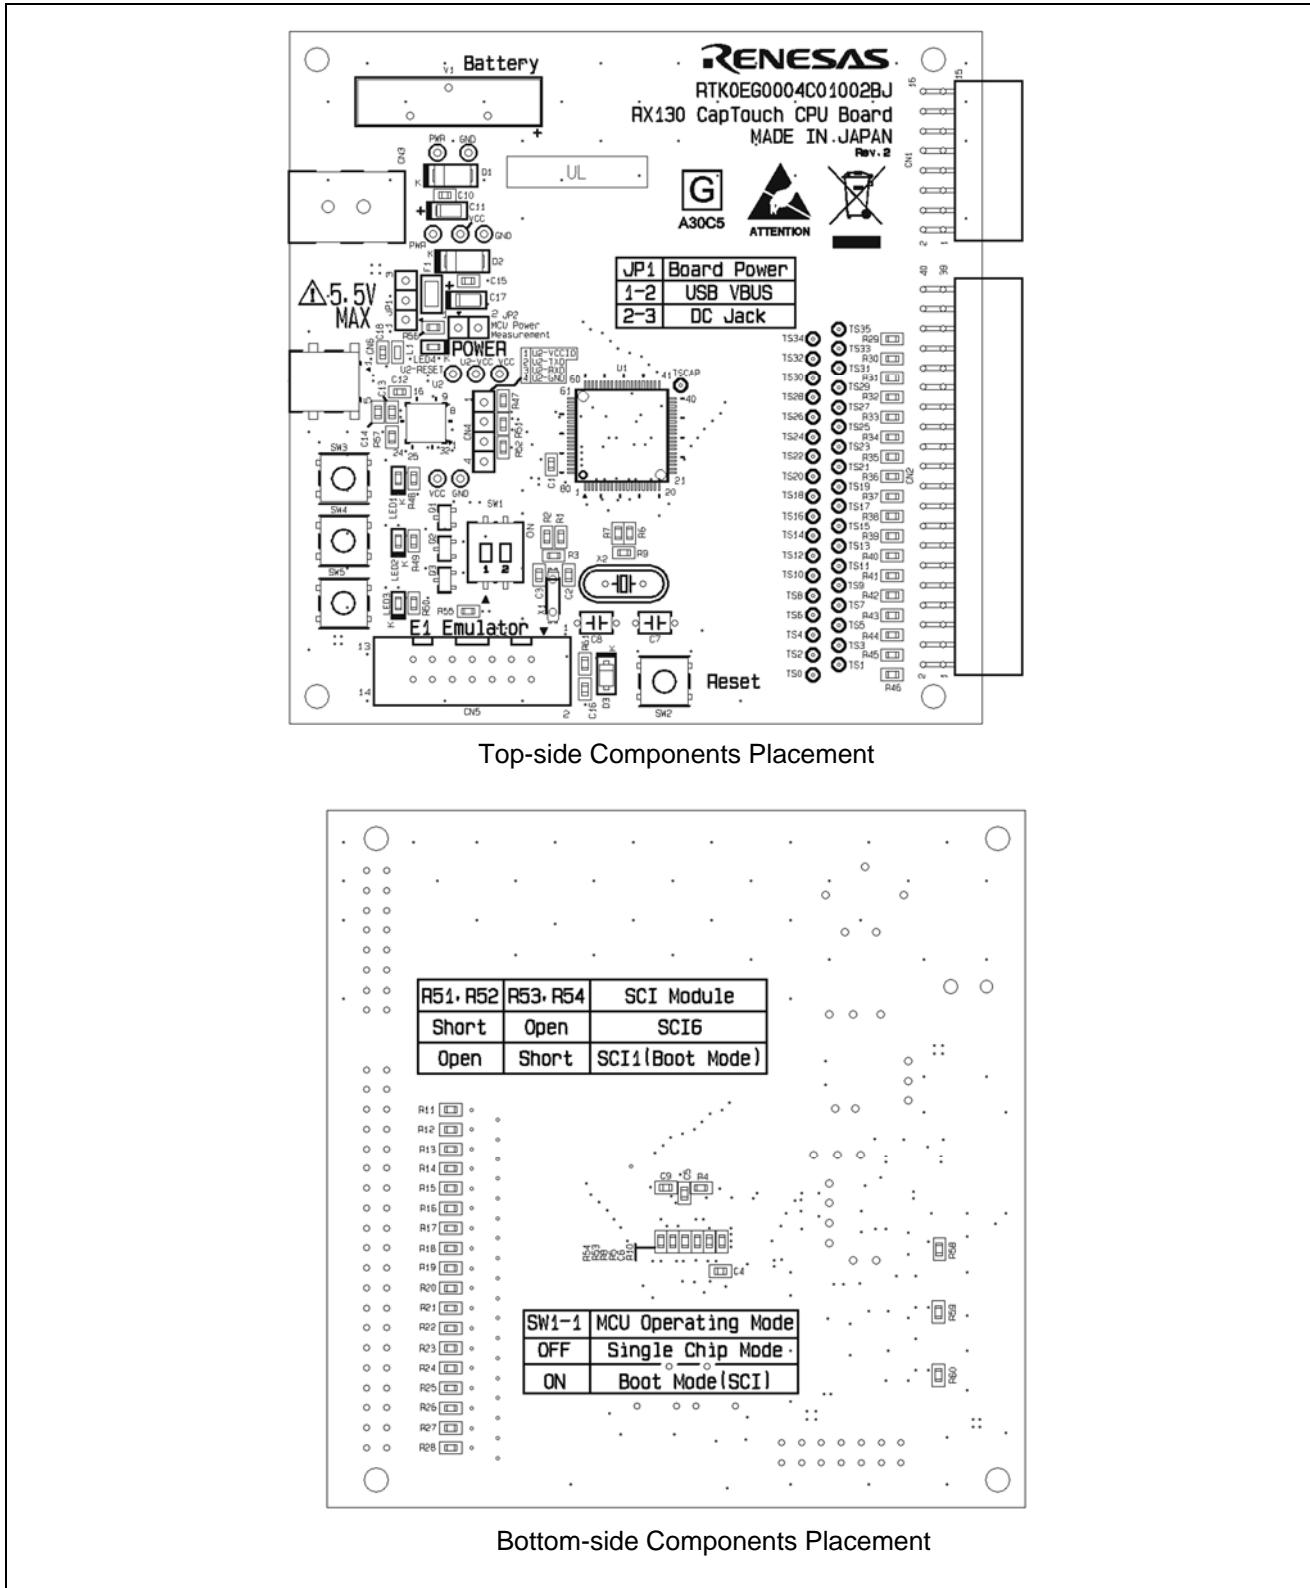


Figure 3.2 RX130CPU Board Component Placement Schematics

4. Connectivity

4.1 System Block Diagrams

Figure 4.1 provides a system block diagram for the CPU board.

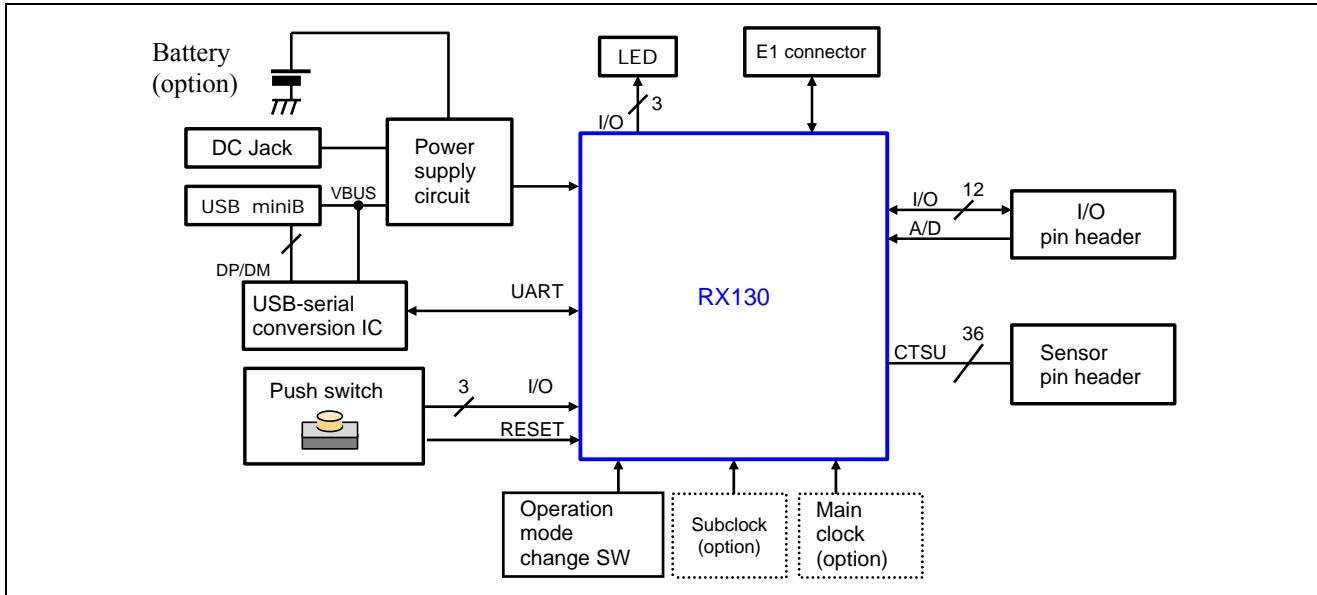


Figure 4.1 System Block Diagram

4.2 Debugger Connections

Figure 4.2 shows the connections between the CPU board, E1 emulator (option) and host machine.

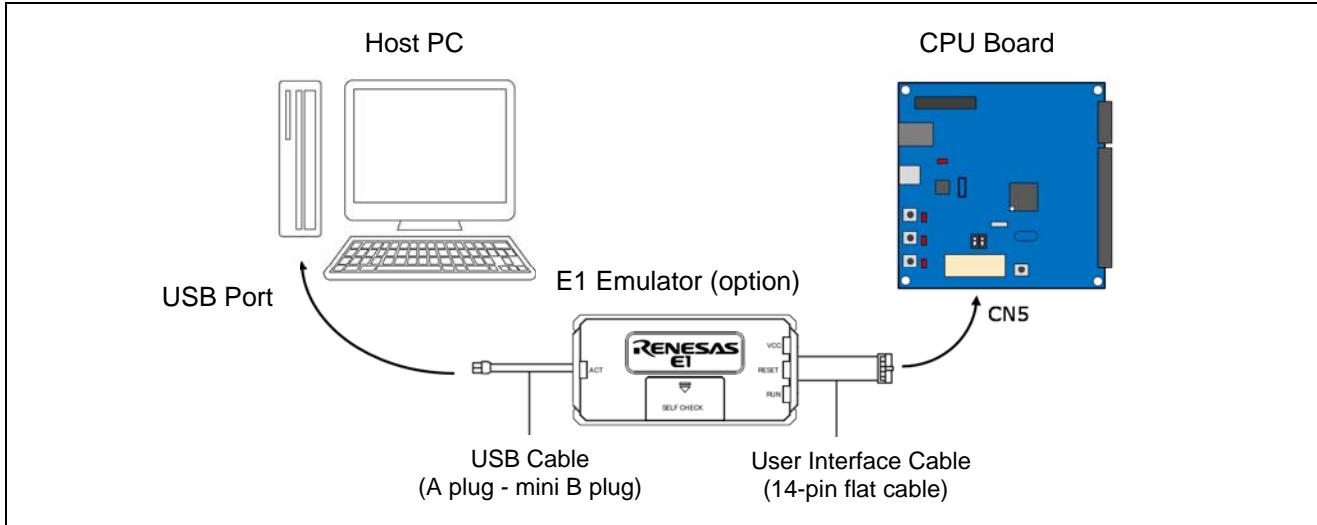


Figure 4.2 Debugger Connection Diagram

5. User Circuitry

5.1 Reset Circuit

The CPU board uses the MCU's built-in power-on reset circuit. In addition, a reset signal can be generated from the board's RES switch. Refer to the RX130 Group hardware manual for details regarding the microcontroller reset requirements and the CPU board circuit diagrams for information regarding the reset circuitry in use on the CPU board.

5.2 Clock Circuit

A clock circuit is fitted to the CPU board as the clock source for the MCU. Refer to the RX130 Group user's manual for details regarding the MCU clock specifications and the CPU board circuit diagram for information regarding the CPU board clock circuit. Details of the clocks fitted to the board are listed in Table 5.1.

Table 5.1 CPU Board Clocks

Clock	Function	Default Placement	Frequency	Device Package
X1	Main clock	Not fitted	-	HC49/US
X2	Subclock	Not fitted	-	Encapsulated, SMT

5.3 Switches

The CPU board is fitted with four push switches. Table 5.2 shows the function and connection of each switch.

Table 5.2 Switch Functions and Connections

Switch	Function	Signal (Port)	MCU
SW2 (Reset)	When pressed, the microcontroller is reset.	RES#	9
SW3	Connects to an NMI input for user controls	NMI (P35)	14
SW4	Connects to an IRQ input for user controls	IRQ2 (P12)	28
SW5	Connects to an IRQ input for user controls	IRQ3 (P13)	27

5.4 LEDs

The CPU board is fitted with four LEDs. Table 5.3 shows the function, color, and connection of each LED.

Table 5.3 LED Functions, Colors, and Connections

LED	Color	Function	Port	MCU
LED4 (Power)	Red	Indicates the status of the Board_VCC power rail	-	-
LED1	Green	User operated LED	P03	2
LED2	Orange	User operated LED	P04	3
LED3	Red	User operated LED	P06	1

5.5 USB Serial Conversion

For USB-serial conversion, USB serial IC FT232 (manufactured by FTDI) is mounted on the CPU board and connected to the RX130 Serial Communications Interface (SCI) module. Functions differ according to which SCI pin is connected to the board. Table 5.4 provides details of the USB serial IC and microcontroller connection.

Table 5.4 USB Serial Port Connections

Signal Name	Function	MCU	
		Port	Signal Name
TXD6	SCI6 transmit signal	PD0	TXD6
RXD6	SCI6 receive signal	PD1	RXD6
TXD1 *1	SCI1 transmit signal	P26	TXD1 *1
RXD1 *1	SCI1 receive signal	P30	RXD1 *1

Note *1 :Not connected as the default. To modify, refer to section 6.

6. Configuration

6.1 Modifying the CPU Board

This section lists the option links that are used to modify the way the CPU board operates in order to access different configurations. Configurations can be modified using option link resistors, jumpers or DIP switches.

A link resistor is a 0Ω surface mount resistor, which is used to connect or isolate parts of a circuit. Option links are listed in the following subsections, detailing their function when fitted or removed. Connection details for ICs other than the MCU as well as headers is also provided. **Bold, blue text** indicates the default configuration that the CPU board is supplied with. Refer to the component placement diagram (Section 3) to locate the option links, jumpers and DIP switches.

6.2 MCU Settings

Table 6.1 details the option links associated with configuring the MCU operating modes.

Table 6.1 MCU Operating Mode Option Links

Reference	Pin1	Pin2	Explanation	Related Ref.
SW1	OFF	-	Single Chip Mode	-
	ON		Boot Mode(SCI)	R53,R54, R44, R55

6.3 Power Supply Configuration

Table 6.2 lists the function of the option links associated with the power supply configuration.

Table 6.2 Power Supply Option Links

Reference	Jumper Position	Explanation	Related Ref.
JP1	Shorted Pin 1-2	Connects USB_VBUS to VCC.	U2 (VCCIO)
	Shorted Pin 2-3	Connects PWR (CN3) to VCC.	U2 (VCCIO)
		Connects V1 to VCC (when CN3 is not connected).	U2 (VCCIO)
	All open	Disconnects USB_VBUS and PWR from VCC rail.	-
JP2	Shorted Pin 1-2	Connects VCC to MCU_VCC.	U1(VCC)
	All open	Enables current probe for MCU current consumption (connect current meter between JP2 and MCU).	-

6.4 Clock Configuration

Table 6.3 details the option link functions associated with the clock configuration.

Table 6.3 Clock Option Links

Reference	Explanation	Fit	Not Fitted	Related Ref.
P36/EXTAL, P37/XTAL	Connects crystal oscillator X1 to RX130.	R6,R7	-	U1 (EXTAL, XTAL)
	Disconnects X1 from RX130.	-	R6,R7	
XCOUT, XCIN	Connects 32.768kHz crystal(X2) to RX130.	R1, R2	-	U1 (XCOUT, XCIN)
	Disconnects X2 from RX130.	-	R1, R2	

*Items shown in **bold** are the Fit / Not Fitted default configuration in which the CPU board is supplied.

6.5 Serial Configuration

Table 6.4 lists the option links associated to the serial configuration.

Table 6.4 Serial Option Links

Signal Name	MCU		Destination Selection		
	Port	Pin	Function	Fit	Not Fitted
PD1/RXD6	PD1	65	RXD6	R51	R53
PD0/TXD6	PD0	66	TXD6	R52	R54
TS2/RXD1	P30	118	RXD1	R53	R51, R44
			TS2	R44 (560Ohm)	R53
TS4/TXD1	P26	20	TXD1	R54	R52, R45
			TS4	R45 (560Ohm)	R54

*Items shown in **bold** are the Fit / Not Fitted default configuration in which the CPU board is supplied.

7. Headers

7.1 Application Headers

Table 7.1 Application Headers (CN1) Connections

Application Header CN1		MCU		Application Header CN1		MCU	
Pin	Header Name	Port	Pin	Pin	Header Name	Port	Pin
1	PE1	PE1	62	2	PE0	PE0	63
3	PD2	PD2	64	4	P47	P47	67
5	P46	P46	68	6	P45	P45	69
7	P44	P44	70	8	P43	P43	71
9	P42	P42	72	10	P41	P41	73
11	P40	P40	75	12	PJ6	PJ6	76
13	NC	-	-	14	PE5/AN021	PE5	58
15	VCC	-	-	16	GND	-	-

- : Non Connection

Table 7.2 Application Headers (CN2) Connections

Application Header CN2		MCU		Application Header CN2		MCU	
Pin	Header Name	Port	Pin	Pin	Header Name	Port	Pin
1	TS0	P32	16	2	TS1	P31	17
3	TS2	P30	18	4	TS3	P27	19
5	TS4	P26	20	6	TS5	P15	25
7	TS6	P14	26	8	TS7	PH3	29
9	TS8	PH2	30	10	TS9	PH1	31
11	TS10	PH0	32	12	TS11	P55	33
13	TS12	P54	34	14	TS13	PC7	35
15	TS14	PC6	36	16	TS15	PC5	37
17	TS16	PC3	39	18	TS17	PC2	40
19	TS18	PB7	41	20	TS19	PB6	42
21	TS20	PB5	43	22	TS21	PB4	44
23	TS22	PB3	45	24	TS23	PB2	46
25	TS24	PB1	47	26	TS25	PB0	49
27	TS26	PA6	51	28	TS27	PA5	52
29	TS28	PA4	53	30	TS29	PA3	54
31	TS30	PA2	55	32	TS31	PA1	56
33	TS32	PA0	57	34	TS33	PE4	59
35	TS34	PE3	60	36	TS35	PE2	61
37	NC	-	-	38	NC	-	-
39	NC	-	-	40	NC	-	-

- : Non Connection

8. Circuit Diagram

The circuit diagram is shown on the Appendix 1.

9. PCB Layout Diagram

The PCB layout diagram is shown on the Appendix 2.

10. Parts List

The Parts list is shown on the Appendix 3.

11. Code Development

11.1 Overview

For all code debugging using Renesas software tools, the CPU board must be connected to a PC via an E1 emulator debugger. An E1 debugger is not supplied with this product and must be procured separately.

For further information regarding the debugging capabilities of the E1 debugger, refer to RX Family E1/E20 Emulator User's Manual (R20UT0399EJ).

11.2 Software Project

Renesas offers a software project to be used with the Capacitive Touch Evaluation System application board. The project software can be downloaded from the product website, as detailed in section 12.

11.3 Compiler Restrictions

The compiler supplied with this product is fully functional for a period of 60 days from installation and first use. After the first 60 days of use have expired, the compiler will default to a maximum of 128k code and data. To use the compiler with programs greater than this size you need to purchase the license for the full version from your distributor.

Note: The protection software for the compiler will detect changes to the system clock. Changes to the system clock back in time may cause the trial period to expire prematurely.

11.4 Mode Support

The MCU supports single chip and boot (SCI) modes, which are configured on the CPU board. Details of the modifications required can be found in section 6.2. All other MCU operating modes are configured within the MCU's registers, which are listed in the RX130 Group Hardware Manual.

To avoid damage to the MCU, modify the mode configuration after cutting power supply to the CPU board or when the MCU reset signal is low.

11.5 Debugging Support

The E1 emulator supports software break points, hardware event points and basic trace functionality. It is limited to a maximum of 8 on-chip event points, 256 software breaks and 256-trace functionality (branches/cycles). For further details, refer to the RX Family E1/E20 Emulator User's Manual (R20UT0398EJ).

11.6 Address Space

For the MCU address space details corresponding to each MCU operating mode, refer to the "Address Space" section of the RX130 Group Hardware Manual

12. Additional Information

Technical Support

For more information about how to use the Integrated Development Environment (IDE), refer to the IDE help menu.

For information about the RX130 Group microcontrollers, refer to the RX130 Group User's Hardware Manual.

For information about Assembler language, refer to the RX Family User's Software Manual.

For information about Workbench6, refer to the Workbench6 Capacitive Touch Integrated Development Environment User's Manual.

Online tech support and other information is available at the following website:

<http://www.renesas.com/>

You can also send technical inquiries to the following email addresses:

csc@renesas.com

General information on Renesas Microcontrollers can be found on the Renesas website at:

<http://www.renesas.com/>

Trademarks

All brand or product names used in this manual are trademarks or registered trademarks of their respective companies or organisations.

Copyright


This document may be, wholly or partially, subject to change without notice. All rights reserved. Duplication of this document, either in whole or part is prohibited without the written permission of Renesas Electronics Limited.

© 2016 Renesas Electronics Europe Limited. All rights reserved.


© 2016 Renesas Electronics Corporation. All rights reserved.

© 2016 Renesas System Design Co., Ltd. All rights reserved.


Appendix 1.

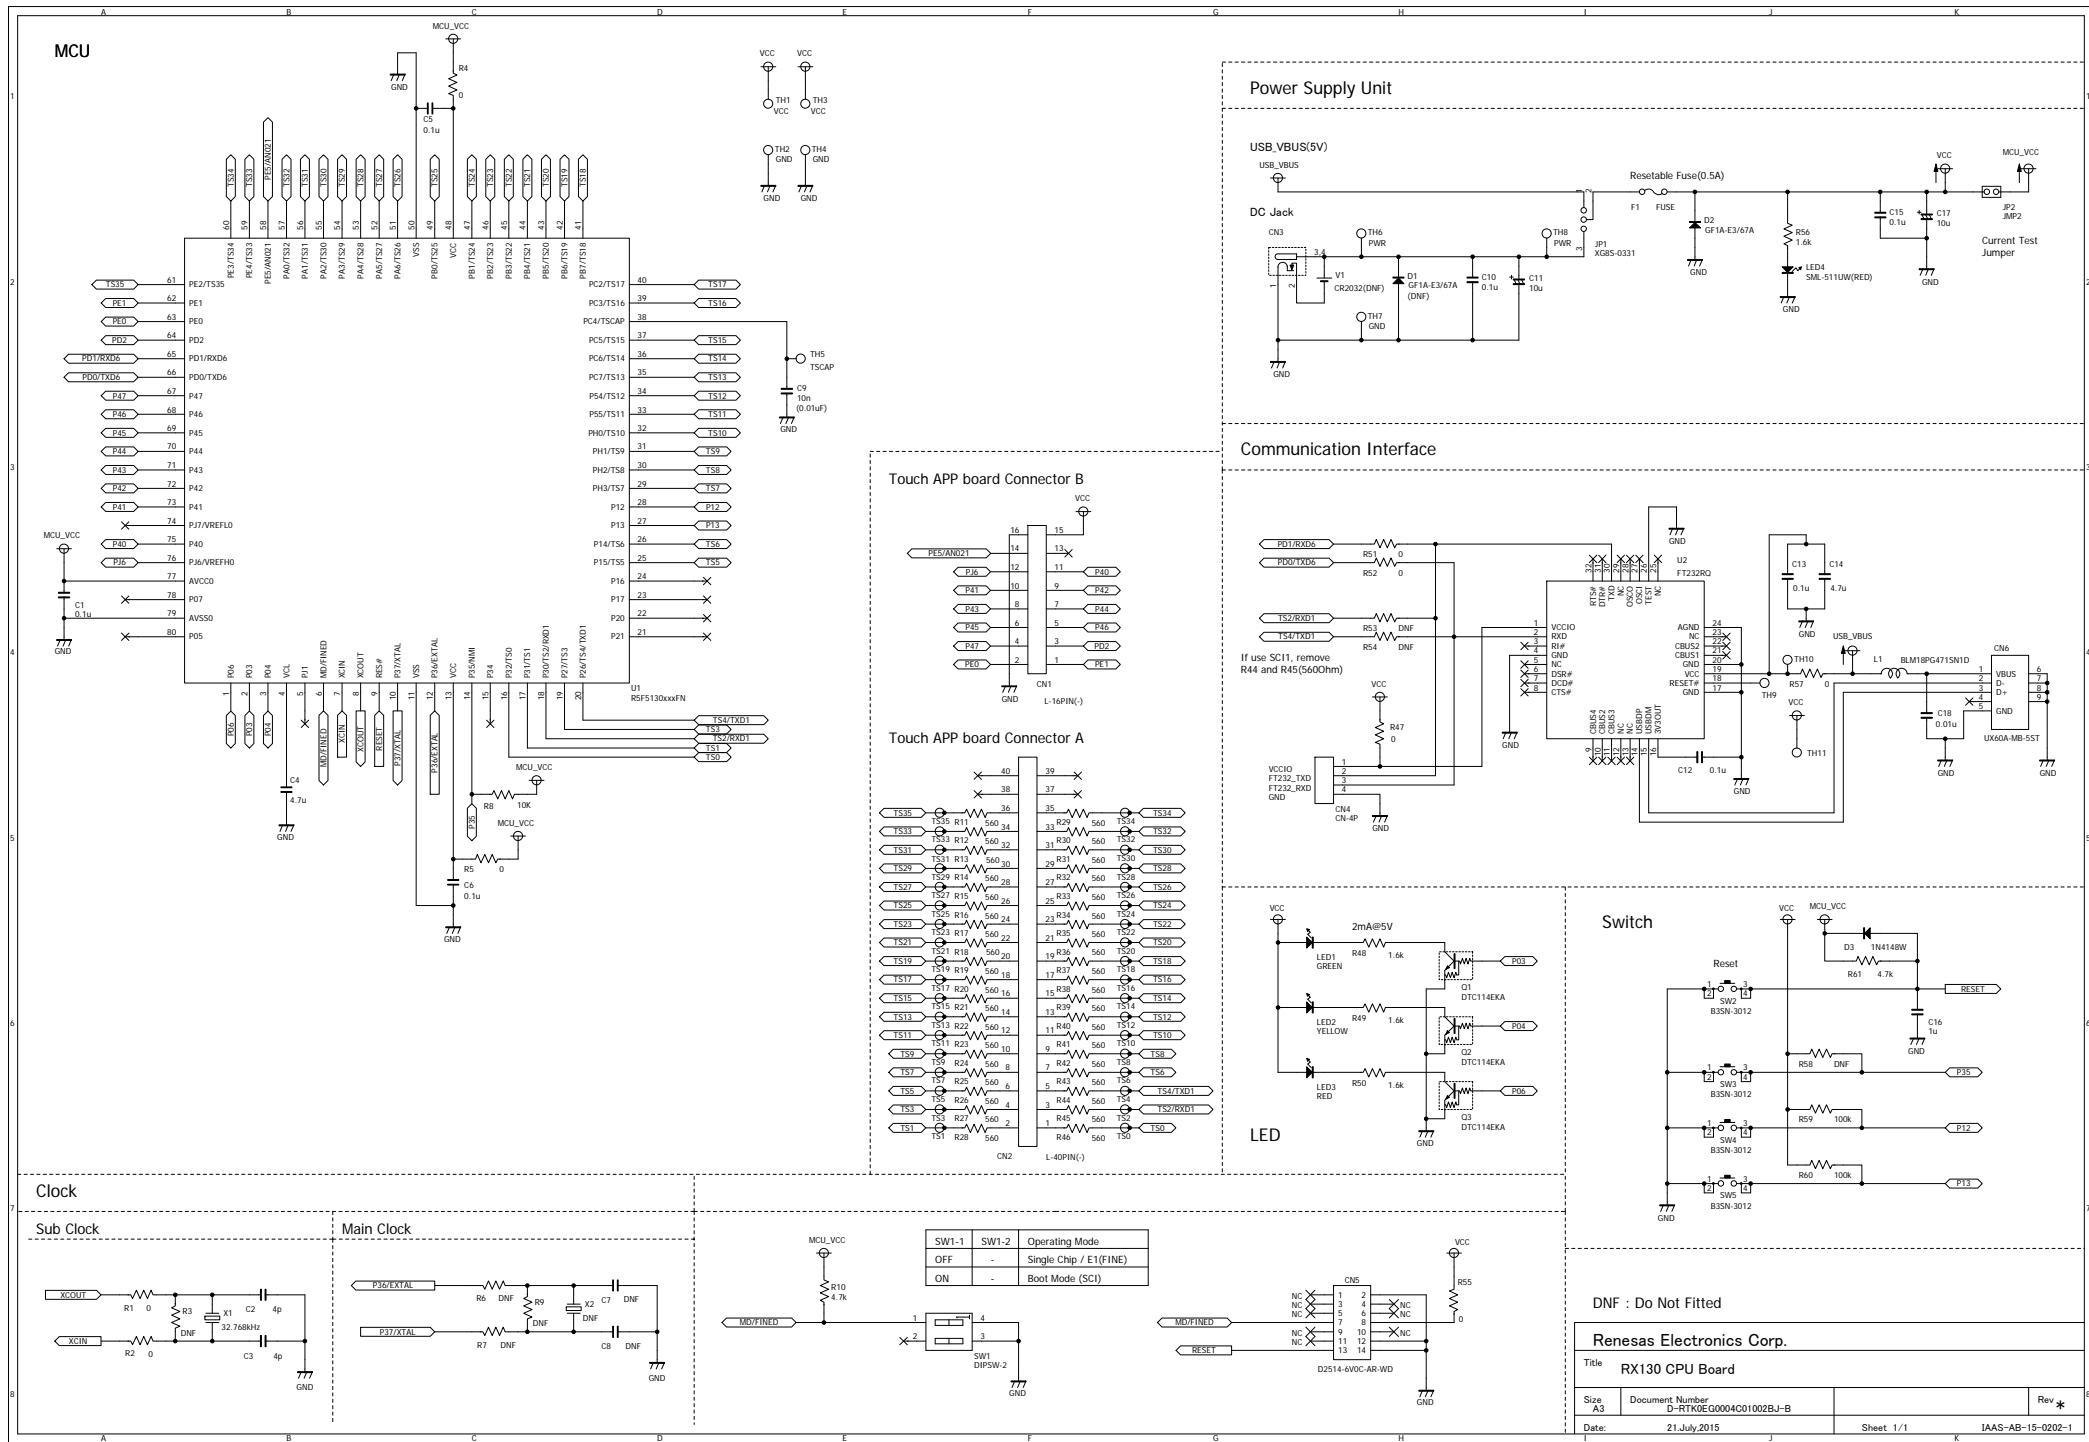

Appendix 2.

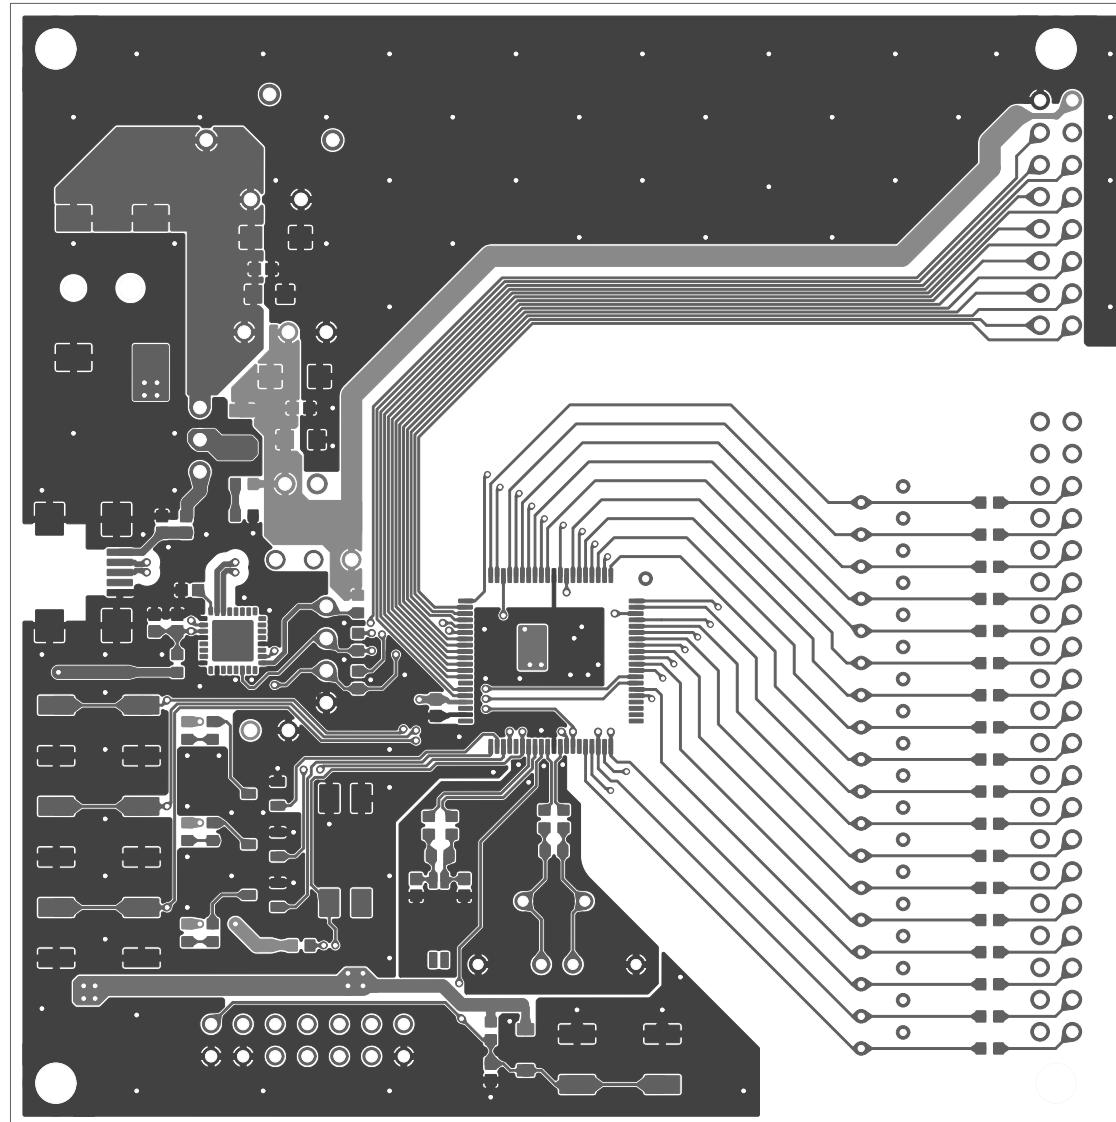

PCB Top-side Layout

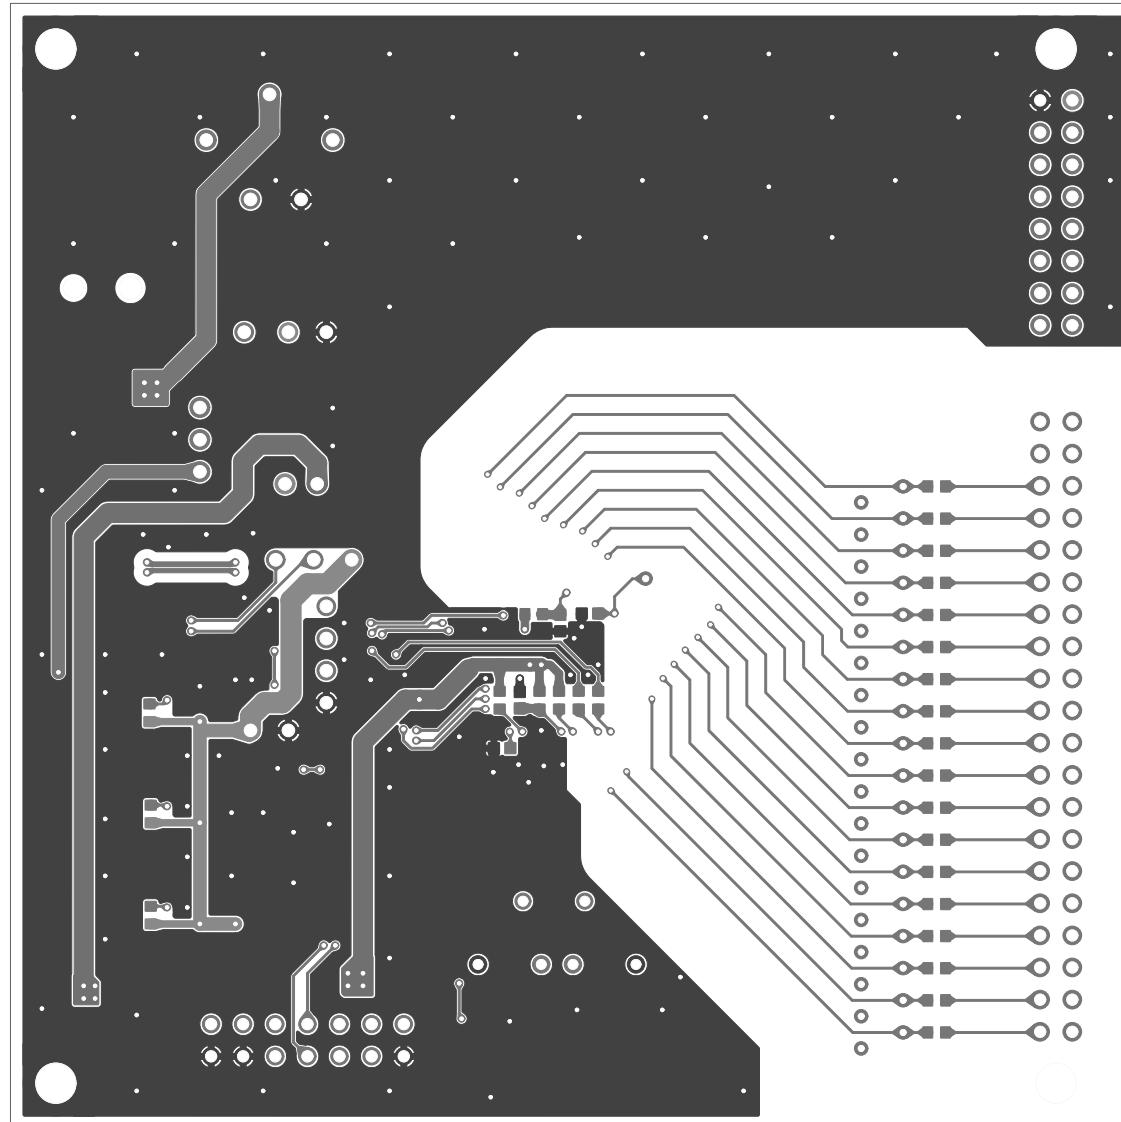

PCB Bottom-side Layout

No	Component Name		Component Specification			Qty/Set	Remarks
	Type	Reference	Product Number (Specification)	Manufacture	Mount/Umount		
1	Microcomputer	U1	R5F51305ADFN	Renesas	Mount	1	
2	USB-Serial Converter IC	U2	FT232RQ	FTDI	Mount	1	
3	Chip Capacitor	C9, C18	GRM188B11H103KA01D	Murata	Mount	2	0.01u(10n)
4	Chip Capacitor	C1, C5, C6, C10, C12, C13, C15	GRM188B11E104KA01D	Murata	Mount	7	0.1u
5	Chip Capacitor	C11, C17	F931C106MAA	AVX	Mount	2	10u
6	Chip Capacitor	C16	GRM188B31E105KA75D	Murata	Mount	1	1u
7	Chip Capacitor	C4, C14	GRM188B31A475KE15D	Murata	Mount	2	4.7u
8	Chip Capacitor	C2, C3	GRM1885C1H4R0CA01D	Murata	Unmount	0	4p
9	Ceramic Capacitor	C7, C8	—	—	Unmount	0	
10	Right Angle Pin Socket	CN1	FSR-42085-08	Hirosugi-Keiki	Mount	1	16-pin(2x8), 2.54mm-pitch
11	Right Angle Pin Socket	CN2	FSR-42085-20	Hirosugi-Keiki	Mount	1	40-pin(2x20), 2.54mm-pitch
12	DC Jack	CN3	PJ-002AH-SMT	CUI inc	Mount	1	
13	Pin Socket	CN4	—	—	Unmount	0	4-pin(1x4), 2.54mm-pitch
14	E1 Connector	CN5	7614-6002PL	3M	Mount	1	
15	USB mini-B Receptacle	CN6	UX60A-MB-5ST	HIROSE ELECTRIC	Mount	1	
16	Diode	D1	GF1A-E3/67A	Vishay	Unmount	0	
17	Diode	D2	GF1A-E3/67A	Vishay	Mount	1	
18	Diode	D3	1N4148W-E3-18	Vishay	Mount	1	
19	リセッタブルヒューズ	F1	0ZCJ0050FF2G	Bel Fuse Inc	Mount	1	
20	Jumper	JP1	XG8S-0331	OMRON	Mount	1	3-pin
21	Jumper	JP2	XG8S-0231	OMRON	Mount	1	3-pin
22	Chip Ferrite Bead	L1	BLM18PG471SN1D	Murata	Mount	1	
23	LED	LED1	SML-512MWT86	ROHM	Mount	1	Green
24	LED	LED2	SML-511WWT86	ROHM	Mount	1	Yellow
25	LED	LED3, LED4	SML-511UWT86	ROHM	Mount	2	Red
26	Transistor	Q1, Q2, Q3	DTC114EKAT146	ROHM	Mount	3	
27	Chip Resistor	R1, R2, R4, R5, R47, R51, R52, R55, R57	MCR03EZPJ000	ROHM	Mount	9	0
28	Chip Resistor	R11-R46	MCR03ERTJ561	ROHM	Mount	36	560
29	Chip Resistor	R48, R49, R50, R56	MCR03ERTJ162	ROHM	Mount	4	1.6k
30	Chip Resistor	R59, R60	MCR03ERTJ104	ROHM	Mount	2	100k

Renesas Electronics Corp.

No	Component Name		Component Specification			Qty/Set	Remarks
	Type	Reference	Product Number (Specification)	Manufacture	Mount/Unmount		
31	Chip Resistor	R8	MCR03ERTJ103	ROHM	Mount	1	10k
32	Chip Resistor	R10, R61	MCR03ERTJ472	ROHM	Mount	2	4.7k
33	Chip Resistor	R3, R6, R7, R9, R53, R54, R58	—	ROHM	Unmount	0	
34	DIP Switch	SW1	SBS9102TK	KNITTER-SWITCH	Mount	1	2-position
35	Tact Switch	SW2-5	EVQQ2K02W	Panasonic	Mount	4	
36	CR2032 Battery Holder	V1	BK-5058	MPD	Unmount	0	
37	Crystal Oscillator	X1	SSP-T7-FL	SSI	Unmount	0	32.768kHz, CL=3.7pF, 20ppm
38	Crystal Unit	X2	—	—	Unmount	0	HC-49
39	Through Hole (Φ1mm)	TH1-4, TH6-TH11	—	—	Mount	10	
41	Through Hole (Φ0.5mm)	TH5, TH12-47	—	—	Mount	37	
40	PCB		RTK0EG0004C01002BJ REV. A		Mount	1	

Revision History	RX130 Group RX Capacitive Touch Evaluation System CPU Board User's Manual		
------------------	--	--	--

Rev.	Date	Description	
		Page	
1.00	Feb 17, 2016	—	First Edition issued

RX130 Group RX Capacitive Touch Evaluation System
CPU Board User's Manual

Publication Date: Rev.1.00 Feb 17, 2016

Published by:Renesas Electronics Corporation
3-2-24 Toyosu, Koto Ward, Tokyo, 135-0061, Japan



SALES OFFICES

Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

Renesas Electronics America Inc.

2801 Scott Boulevard Santa Clara, CA 95050-2549, U.S.A.
Tel: +1-408-588-6000, Fax: +1-408-588-6130

Renesas Electronics Canada Limited

9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3
Tel: +1-905-237-2004

Renesas Electronics Europe Limited

Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K
Tel: +44-1628-585-100, Fax: +44-1628-585-900

Renesas Electronics Europe GmbH

Arcadiastrasse 10, 40472 Düsseldorf, Germany
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

Renesas Electronics (China) Co., Ltd.

Room 1709, Quantum Plaza, No.27 ZhiChunLu Haidian District, Beijing 100191, P.R.China
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

Renesas Electronics (Shanghai) Co., Ltd.

Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, P. R. China 200333
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

Renesas Electronics Hong Kong Limited

Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong
Tel: +852-2265-6688, Fax: +852-2886-9022

Renesas Electronics Taiwan Co., Ltd.

13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan
Tel: +886-2-8175-9600, Fax: +886-2-8175-9670

Renesas Electronics Singapore Pte. Ltd.

80 Bendermeir Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949
Tel: +65-6213-0200, Fax: +65-6213-0300

Renesas Electronics Malaysia Sdn.Bhd.

Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

Renesas Electronics India Pvt. Ltd.

No.777C, 100 Feet Road, HALII Stage, Indiranagar, Bangalore, India
Tel: +91-80-67208700, Fax: +91-80-67208777

Renesas Electronics Korea Co., Ltd.

12F., 234 Teheran-ro, Gangnam-Gu, Seoul, 135-080, Korea
Tel: +82-2-558-3737, Fax: +82-2-558-5141

RX130 Group

RX Capacitive Touch Evaluation System CPU Board
User's Manual



Renesas Electronics Corporation

R01UH0001EJ0100